

Spare Parts List

Model AB


Mounted Plough

No 733026



Notes

GB Model	GB Interbody clearance	GB Headstock
D Modell	D Körperlängsabstand	D Drehwerk
F Modèle	F Dégagement sous age	F Type de tête
E Modelo	E Separación entre cuerpos	E Tipo de cabezal

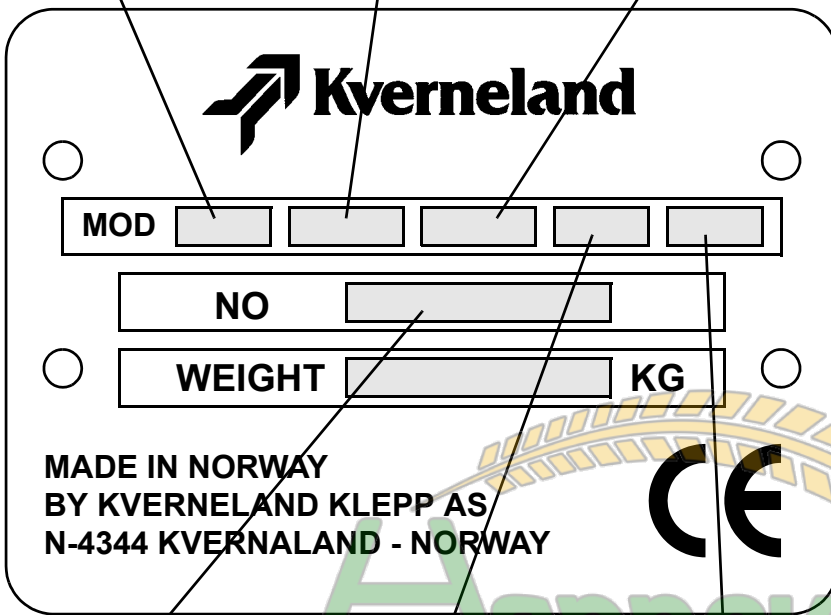

GB Serial number	Type of beam:	GB Type of body
D Seriennummer	Heavy Duty	D Körperform
F Numéro de série	Vibromat	F Type de corps
E Numero de serie	On-land	E Tipo de cuerpo

Замовлення запчастин

(GB) Complete model code and serial number must be stated to avoid mistakes when ordering spare parts and misunderstandings regarding service consultations. The identification plate is located on the headstock.

(F) Le code complet et le numéro de série doivent être indiqués pour éviter des erreurs lors de la commande de pièces de rechange et des malentendus concernant des demandes de Service-Après-Vente. La plaque d'identité est située sur la tête.

(D) Um bei Ersatzteilbestellungen und Serviceleistungen Fehler und Mißverständnisse zu vermeiden ist es erforderlich, daß die genaue Bezeichnung und die Seriennummer angegeben werden. Die Plakette befindet sich am Drehwerk.

(E) Debe figura el código completo del modelo y el número de serie para evitar errores al pedir las piezas de recambio y al hacer consultas técnicas. La placa de identificación esta situada en el cabezal.

Plate		Page
244	Bodies no 6, 7, 8, 9 and 28	4
367	Bodies no 12, 15 and 19	8
494	Body no 14 (Plastic mouldboard)	12
414	Body no 20 (Finger Body) (Before 01.03.99)	14
1089	Bodies no. 29 and no. 30.....	16
176	Disc coulter 18" and 20" (Before 01.02.99)	20
1071	Disc coulter 18" and 20", conventional plough (From 01.02.99).....	22
177	Spring loaded disc coulter 18" and 20" (Before 01.01.99)	24
1072	Springloaded disc coulter 18" and 20", conventional plough (From 01.01.99).....	26
301	Beam w/automatic reset.....	28
341	Manure skimmer / Maize skimmer	30
565	Cross shaft.....	32
332	Parts for additional bodies	34
304	Frame	36
566	Hydraulic layout	40
1091	Hydraulic cylinder D75 x 130 mm.....	42
473	Cylinder for furrow adjustment D50 x 200 mm without stop (Before 01.08.96)	44
525	Hydraulic cylinder D50 x 200 mm (353701 - 353703) (From 01.08.96) (Before	
01.04.01) 46		
1192	Hydraulic cylinder D50 x 200 mm (353901 - 353903) (From 01.04.01)	48
180	Depth wheel 500 x 165 and 6.00 x 9.....	50
1077	Transfers.....	52
	Index.....	54




1	KK 07 30 00	Share 12" R (30 cm)	KK 07 38 03	Stay R + L for body no. 6, 7 and 8 A - saddle, L = 560 (And no. 9 before 01.12.95)	KK 07 06 41	Trashboard, L cpl.		
	KK 07 30 01	Share 12" L (30 cm)			KK 07 06 42	Trashboard, R + L cpl.		
	KK 07 30 02	Share 14" R (35 cm)	KK 07 38 31	Stay R + L for body no. 9 E - saddle, L = 725 (From 01.12.95)	17	KK 03 33 32	Cone screw M14 x 34 mm w/nut	
	KK 07 30 03	Share 14" L (35 cm)			18	KK 03 27 25	Hex screw M16 x 27 mm w/nut	
	KK 07 30 04	Share 16" R (40 cm)	KK 07 38 30	Stay R + L for body no. 9 A - saddle, L = 710 (From 01.12.95)	19	KK 03 31 07	Oval screw M12 x 35 mm w/nut	
	KK 07 30 05	Share 16" L (40 cm)			20	KK 01 32 34	Cone screw M12 x 38 mm w/nut	
	KK 07 30 06	Share 18" R (45 cm)	KK 06 38 01	Extra stay R + L, no. 9 E - saddle L = 550 (From 01.12.95)	21	KK 07 30 91	Share knife, R	
	KK 07 30 07	Share 18" L (45 cm)				KK 07 30 92	Share knife, L	
	KK 07 30 08	Share 20" R (50 cm)	KK 07 03 94	Extra stay R for body no. 9 E - saddle, cpl. w. bracket (pos. 12) (From 01.12.95)		KK 06 30 91	Share knife, R (for Sweden)	
	KK 07 30 09	Share 20" L (50 cm)	KK 07 03 95	Extra stay L for body no. 9 E - saddle, cpl. w. bracket (pos. 12) (From 01.12.95)		KK 06 30 92	Share knife, L (for Sweden)	
2	KK 05 30 90	Reversible point, R			23	KK 07 36 09	Landside, long R + L	
	KK 06 30 90	Reversible point, L	KK 07 38 03	Extra stay R + L, no. 9 A - saddle L = 560 (From 01.12.95)	24	KK 07 32 66	Bracket for stay, body no. 6 and 9, R	
3	KK 07 34 06	Saddle, R (for E-saddle)				KK 07 32 67	Bracket for stay, body no. 6 and 9, L	
	KK 07 34 07	Saddle, L (for E-saddle)	KK 07 03 90	Extra stay R for body no. 9 A - saddle, cpl. w. bracket (pos. 12) (From 01.12.95)	25	KK 07 34 14	Connecting plate, 16" - 20", R	
	KK 07 34 11	Saddle, R (for A-saddle)				KK 07 34 15	Connecting plate, 16" - 20", L	
	KK 07 34 12	Saddle, L (for A-saddle)	KK 07 03 91	Extra stay L for body no. 9 A - saddle, cpl. w. bracket (pos. 12) (From 01.12.95)	26	KK 07 30 40	Flush fit share 12", R	
4	KK 01 33 32	Cone screw M14 x 34 mm w/nut				KK 07 30 41	Flush fit share 12", L	
5	KK 03 31 00	Oval screw M12 x 30 mm w/nut	KK 08 38 09	Stay R + L for body no. 28 A - saddle (From 01.03.03)		KK 07 30 42	Flush fit share 14", R	
6	KK 07 32 60	Mouldboard 12" - 16" no. 6, R	KK 08 38 10	Stay R + L for body no. 28 E - saddle (From 01.03.03)		KK 07 30 43	Flush fit share 14", L	
	KK 07 32 61	Mouldboard 12" - 16" no. 6, L				KK 07 30 44	Flush fit share 16", R	
	KK 07 32 63	Mouldboard 12" - 14" no. 7, R	10	KK 07 36 08	Landside, R and L, short		KK 07 30 45	Flush fit share 16", L
	KK 07 32 64	Mouldboard 12" - 14" no. 7, L	11	KK 01 58 32	Nut M20 mm	27	KK 07 30 30	Flush point, R
	KK 07 32 80	Mouldboard 12" no. 8, R	12	KK 07 38 00	Bracket for stay, R for body no. 6, 7, 8 (And no. 9 before 01.12.95)		KK 07 30 31	Flush point, L
	KK 07 32 81	Mouldboard 12" no. 8, L				28	KK 01 29 27	Washer 17 x 30 x 3 mm (for use with two stays)
	KK 07 32 86	Mouldboard 14" - 18" no. 8, R	KK 07 38 01	Bracket for stay, L for body no. 6, 7, 8 (And no. 9 before 01.12.95)	30	KK 07 36 15	Furrow widener, R	
	KK 07 32 87	Mouldboard 14" - 18" no. 8, L				KK 07 36 16	Furrow widener, L	
	KK 07 32 90	Mouldboard 14" - 20" no. 9, R	KK 07 38 07	Bracket for stay, R for body no. 9 (From 01.12.95)	31	KK 07 30 88	Landside knife w/screw, R	
	KK 07 32 91	Mouldboard 14" - 20" no. 9, L				KK 07 30 89	Landside knife w/screw, L	
	KK 08 32 28	Mouldboard no. 28, R (From 01.03.03)	KK 07 38 08	Bracket for stay, L for body no. 9 (From 01.12.95)	32	KK 03 32 51	Screw M16 x 50 mm w/nut (for E-saddle) (Before 01.02.00)	
	KK 08 32 29	Mouldboard no. 28, L (From 01.03.03)				KK 03 32 56	Screw M16 x 55 mm w/ nut (for E-saddle) (From 01.02.00)	
7	KK 07 32 50	Shinpiece for no. 8, R	13	KK 01 29 19	Washer 12.5 x 23 x 3.2 mm		KK 03 32 86	Screw M16 x 85 mm w/nut (for A-saddle) (Before 01.02.00)
	KK 07 32 51	Shinpiece for no. 8, L	14	KK 05 33 87	Mouldboard extension, R		KK 03 32 95	Screw M16 x 95 mm w/nut (for A-saddle) (From 01.02.00)
	KK 07 32 56	Shinpiece for no. 6 and 9, R		KK 06 33 88	Mouldboard extension, L			
	KK 07 32 57	Shinpiece for no. 6 and 9, L	15	KK 07 33 10	Bracket for trashboard, R			
8	KK 03 27 35	Hex screw M16 x 35 mm w/nut		KK 07 33 11	Bracket for trashboard, L			
9	KK 06 38 01	Stay R + L for body no. 6, 7 and 8 E - saddle, L = 550 (And no. 9 before 01.12.95)	16	KK 07 33 00	Trashboard, R			
				KK 07 33 01	Trashboard L	33	KK 03 31 75	Screw M14 x 50 mm w/nut
				KK 07 06 40	Trashboard, R cpl.	34	KK 01 29 22	Washer 17 x 40 x 4.58 mm




35	KK 06 36 07	Plate
	KK 07 36 07	Plate cpl.
36	KK 01 33 46	Screw M14 x 45 mm w/nut
37	KK 07 36 14	Wearing plate
38	KK 01 33 33	Cone screw M14 x 34 mm
39	KK 08 32 35	Mouldboard knife R and L (From 01.12.01)
Pos. 100 - 107 Eco-share from 01.04.00		
100	KK 05 30 90	Reversible point, R
	KK 06 30 90	Reversible point, L
101	KK 01 32 28	Cone screw M12 x 34 mm w/nut
102	KK 07 36 34	Eco-share, R
	KK 07 36 35	Eco-share, L
103	KK 01 01 55	Bushing (for ploughs w/share bolt beam)
	KK 01 01 56	Bushing (for ploughs w/A-beam)
104	KK 03 27 40	Hex screw M16 x 40 mm w/nut (for ploughs w/E-saddle) (Before 01.03.00)
	KK 03 27 50	Hex screw M16 x 50 mm w/nut (for ploughs w/E-saddle) (From 01.03.00)
	KK 03 27 65	Hex screw M16 x 65 mm w/nut (for ploughs w/share bolt beam)
	KK 03 27 75	Hex screw M16 x 75 mm w/nut (for ploughs w/A-beam)
105	KK 01 33 46	Cone screw M14 x 45 mm w/flange nut (for ploughs w/E-saddle) (Before 01.03.00)
	KK 01 33 61	Cone screw M14 x 60 mm w/flange nut (for ploughs w/E-saddle) (From 01.03.00)
	KK 01 33 85	Cone screw M14 x 85 mm w/flange nut (for ploughs w/share bolt beam and A-beam)
106	KK 01 60 15	Flange nut M14
107	KK 01 29 29	Washer (for ploughs w/E-saddle) (From 01.03.00)



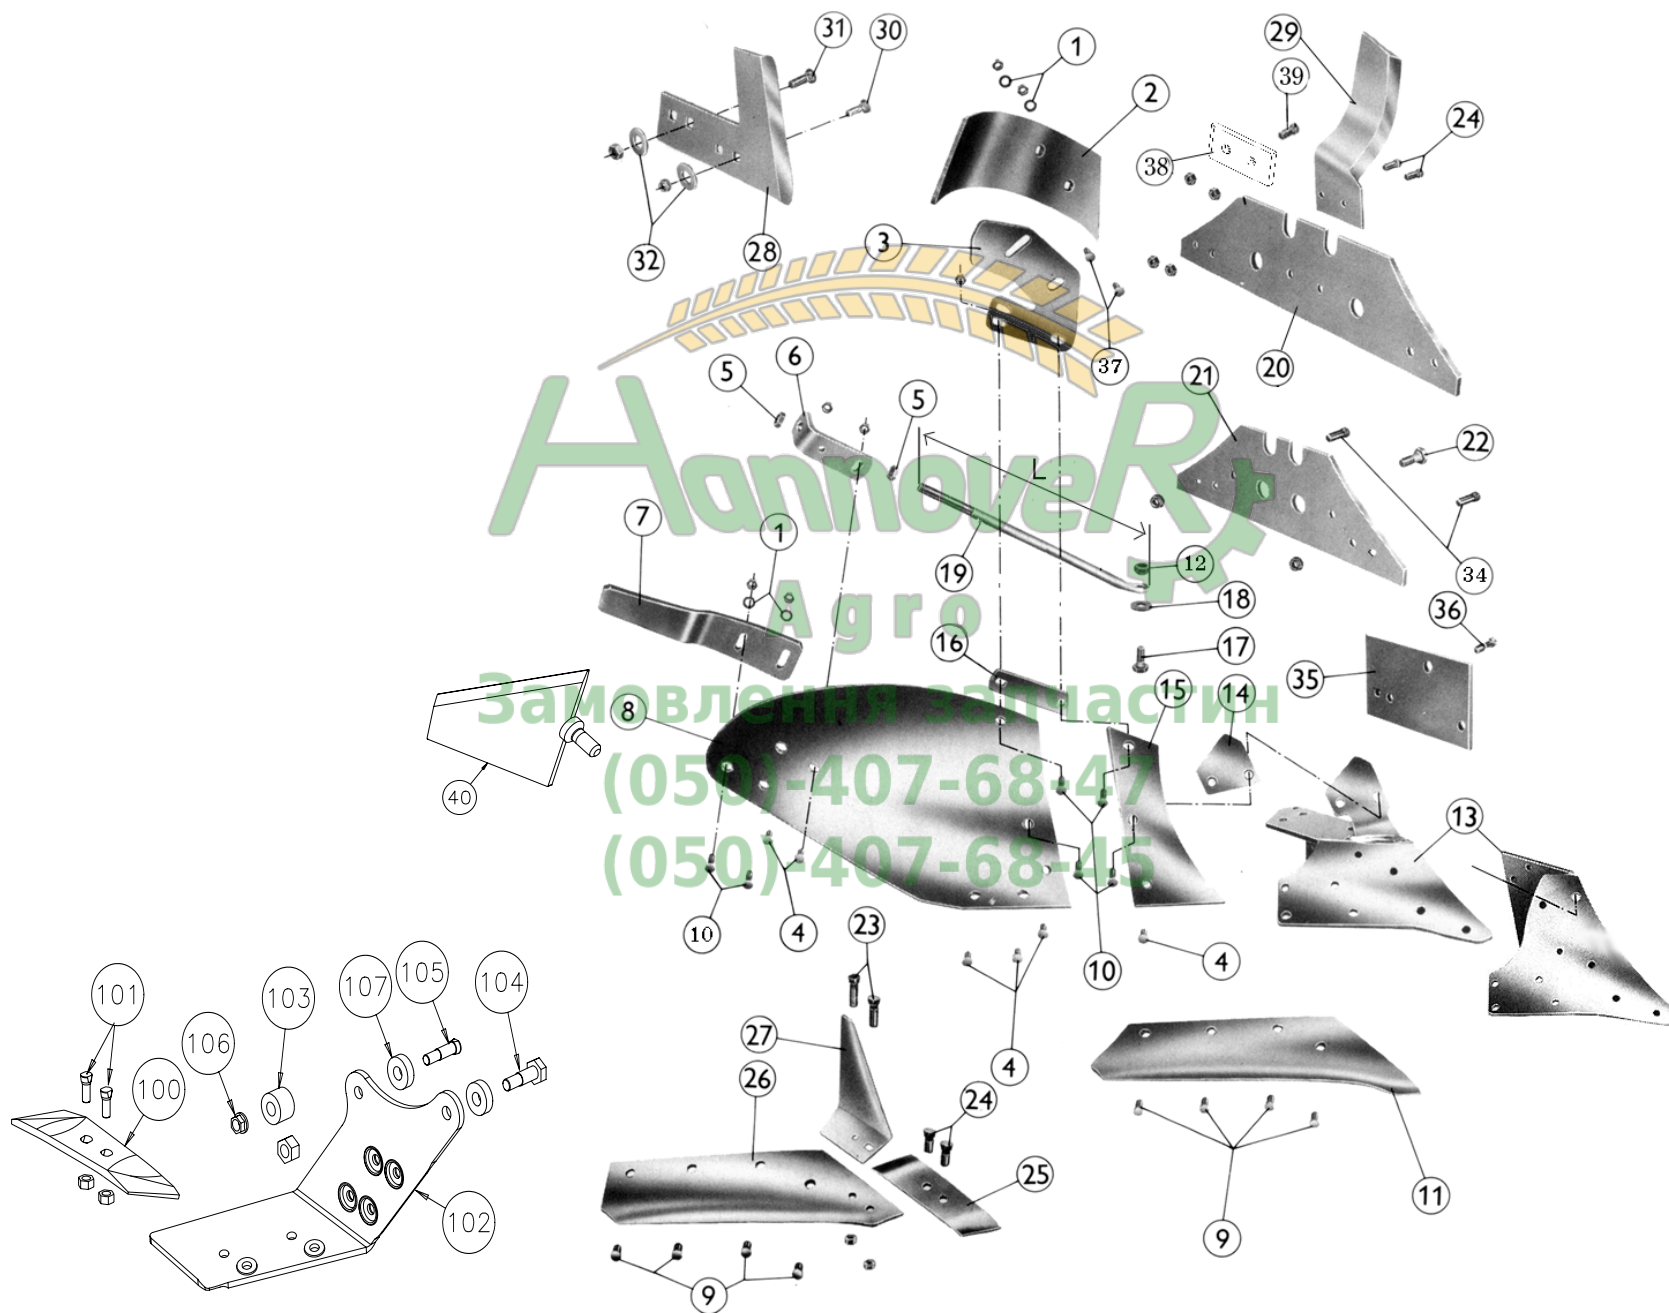


1	KK 01 29 19	Washer	KK 07 32 31	Shinpiece no. 19, L	KK 07 03 93	Extra stay L for body no. 19 A - saddle cpl.		
2	KK 07 33 00	Trashboard, R	16	KK 07 32 39	Connecting piece no. 12 and 15, R	w. bracket (pos. 6) (From 01.12.95)		
	KK 07 33 01	Trashboard, L		KK 07 32 40	Connecting piece no. 12 and 15, L	20	KK 07 36 09	Landside, long, R + L
	KK 07 06 40	Trashboard, R cpl.		KK 07 32 66	Connecting piece no. 19, R	21	KK 07 36 08	Landside, short, R + L
	KK 07 06 41	Trashboard, L cpl.		KK 07 32 67	Connecting piece no. 19, L	22	KK 03 27 25	Hex screw M16 x 27 mm
	KK 07 06 42	Trashboard, R + L cpl.	17	KK 03 27 50	Hex screw M16 x 50 mm w/nut (for use with two stays)	23	KK 01 32 34	Cone screw M12 x 38 mm w/nut
3	KK 07 33 10	Bracket, R		KK 03 27 35	Hex screw M16 x 35 mm w/nut (for use with one stay only)	24	KK 01 32 28	Cone screw M12 x 34 mm w/nut
	KK 07 33 11	Bracket, L				25	KK 05 30 90	Reversible point, R
4	KK 03 31 00	Oval screw M12 x 30 mm w/nut	18	KK 01 29 27	Washer 17 x 30 x 3 mm (for use with two stays)	26	KK 06 30 90	Reversible point, L
5	KK 01 58 34	Nut M20 mm					KK 07 30 54	Share 14", R
6	KK 07 38 00	Bracket, R	19	KK 07 38 05	Stay R + L for body no. 12 and 15 E - saddle, L = 540 (And no. 19 before 12.01.95)		KK 07 30 55	Share 14", L
	KK 07 38 01	Bracket, L		KK 07 38 31	Stay R + L for body no. 19 E - saddle, L = 730 (From 12.01.95)		KK 07 30 56	Share 16", R
7	KK 05 33 87	Mouldboard extention, R		KK 07 38 04	Stay R + L for body no. 12 and 15 A - saddle, L = 550 (And no. 19 before 12.01.95)		KK 07 30 57	Share 16", L
	KK 06 33 88	Mouldboard extention, L		KK 07 38 26	Stay R + L for body no. 19 A - saddle, L = 770 (From 12.01.95)		KK 07 30 80	Share 18", R
8	KK 07 32 36	Mouldboard no. 12, R		KK 07 38 26	Extra stay R + L, no. 15 E - saddle L = 770 (From 01.12.96)	27	KK 07 30 81	Share 18", L
	KK 07 32 37	Mouldboard no. 12, L		KK 07 03 88	Extra stay R for body no. 15 E - saddle cpl. w. bracket (pos. 6) (From 01.12.96)		KK 07 30 91	Share knife, R
	KK 07 32 24	Mouldboard no. 15, R		KK 07 03 89	Extra stay L for body no. 15 E - saddle cpl. w. bracket (pos. 6) (From 01.12.96)		KK 07 30 92	Share knife, L
	KK 07 32 25	Mouldboard no. 15, L		KK 07 38 29	Extra stay R + L, no. 15 A - saddle L = 785 (From 01.12.96)	28	KK 07 30 88	Landside knife, R w/nuts
	KK 07 32 90	Mouldboard no. 19, R		KK 07 03 98	Extra stay R for body no. 15 A - saddle cpl. w. bracket (pos. 6) (From 01.12.96)		KK 07 30 89	Landside knife, L w/nuts
	KK 07 32 91	Mouldboard no. 19, L		KK 07 03 99	Extra stay L for body no. 15 A - saddle cpl. w. bracket (pos. 6) (From 01.12.96)	29	KK 07 36 15	Furrow widener, R
9	KK 01 33 32	Cone screw M14 x 34 mm w/nut		KK 07 38 42	Extra stay R + L, no. 19 E - saddle L = 570 (From 01.12.95)		KK 07 36 16	Furrow widener, L
10	KK 03 31 07	Oval screw M12 x 35 mm w/nut		KK 07 03 96	Extra stay R for body no. 19 E - saddle cpl. w. bracket (pos. 6) (From 01.12.95)	30	KK 03 31 75	Screw M14 x 50 mm w/nut
11	KK 07 30 62	Share 14", R		KK 07 03 97	Extra stay L for body no. 19 E - saddle cpl. w. bracket (pos. 6) (From 01.12.95)	31	KK 03 32 51	Screw M16 x 50 mm w/nut (for E-saddle) (Before 01.02.00)
	KK 07 30 63	Share 14", L		KK 07 38 04	Extra stay R + L, no. 19 A - saddle L = 550 (From 01.12.95)		KK 03 32 56	Screw M16 x 56 mm w/nut (for E-saddle) (From 01.02.00)
	KK 07 30 64	Share 16", R		KK 07 03 92	Extra stay R for body no. 19 A - saddle cpl. w. bracket (pos. 6) (From 01.12.95)		KK 03 32 86	Screw M16 x 85 mm w/nut (for A-saddle) (Before 01.02.00)
	KK 07 30 65	Share 16", L					KK 03 32 95	Screw M16 x 95 mm w/nut (for A-saddle) (From 01.02.00)
12	KK 06 20 25	Nut M16 mm				32	KK 01 29 22	Washer 17 x 40 x 4.58 mm
13	KK 07 34 35	Saddle, R (for E-saddle)				34	KK 01 33 33	Cone screw M14 x 34 mm w/nut
	KK 07 34 36	Saddle, L (for E-saddle)				35	KK 06 36 07	Plate for On-Land ploughs
	KK 07 34 40	Saddle, R (for A-saddle)					KK 07 36 07	Plate for On-Land ploughs cpl.
	KK 07 34 41	Saddle, L (for A-saddle)				36	KK 01 33 46	Screw M14 x 45 mm w/nut
14	KK 07 34 17	Connecting plate no. 12 and 15, R				37	KK 03 31 07	Oval screw M12 x 35 mm
	KK 07 34 18	Connecting plate no. 12 and 15, L				38	KK 07 36 14	Wearing plate
15	KK 07 32 41	Shinpiece no. 12, R				39	KK 01 33 32	Cone screw M14 x 34 mm
	KK 07 32 42	Shinpiece no. 12, L						
	KK 07 32 27	Shinpiece no. 15, R						
	KK 07 32 28	Shinpiece no. 15, L						
	KK 07 32 30	Shinpiece no. 19, R						

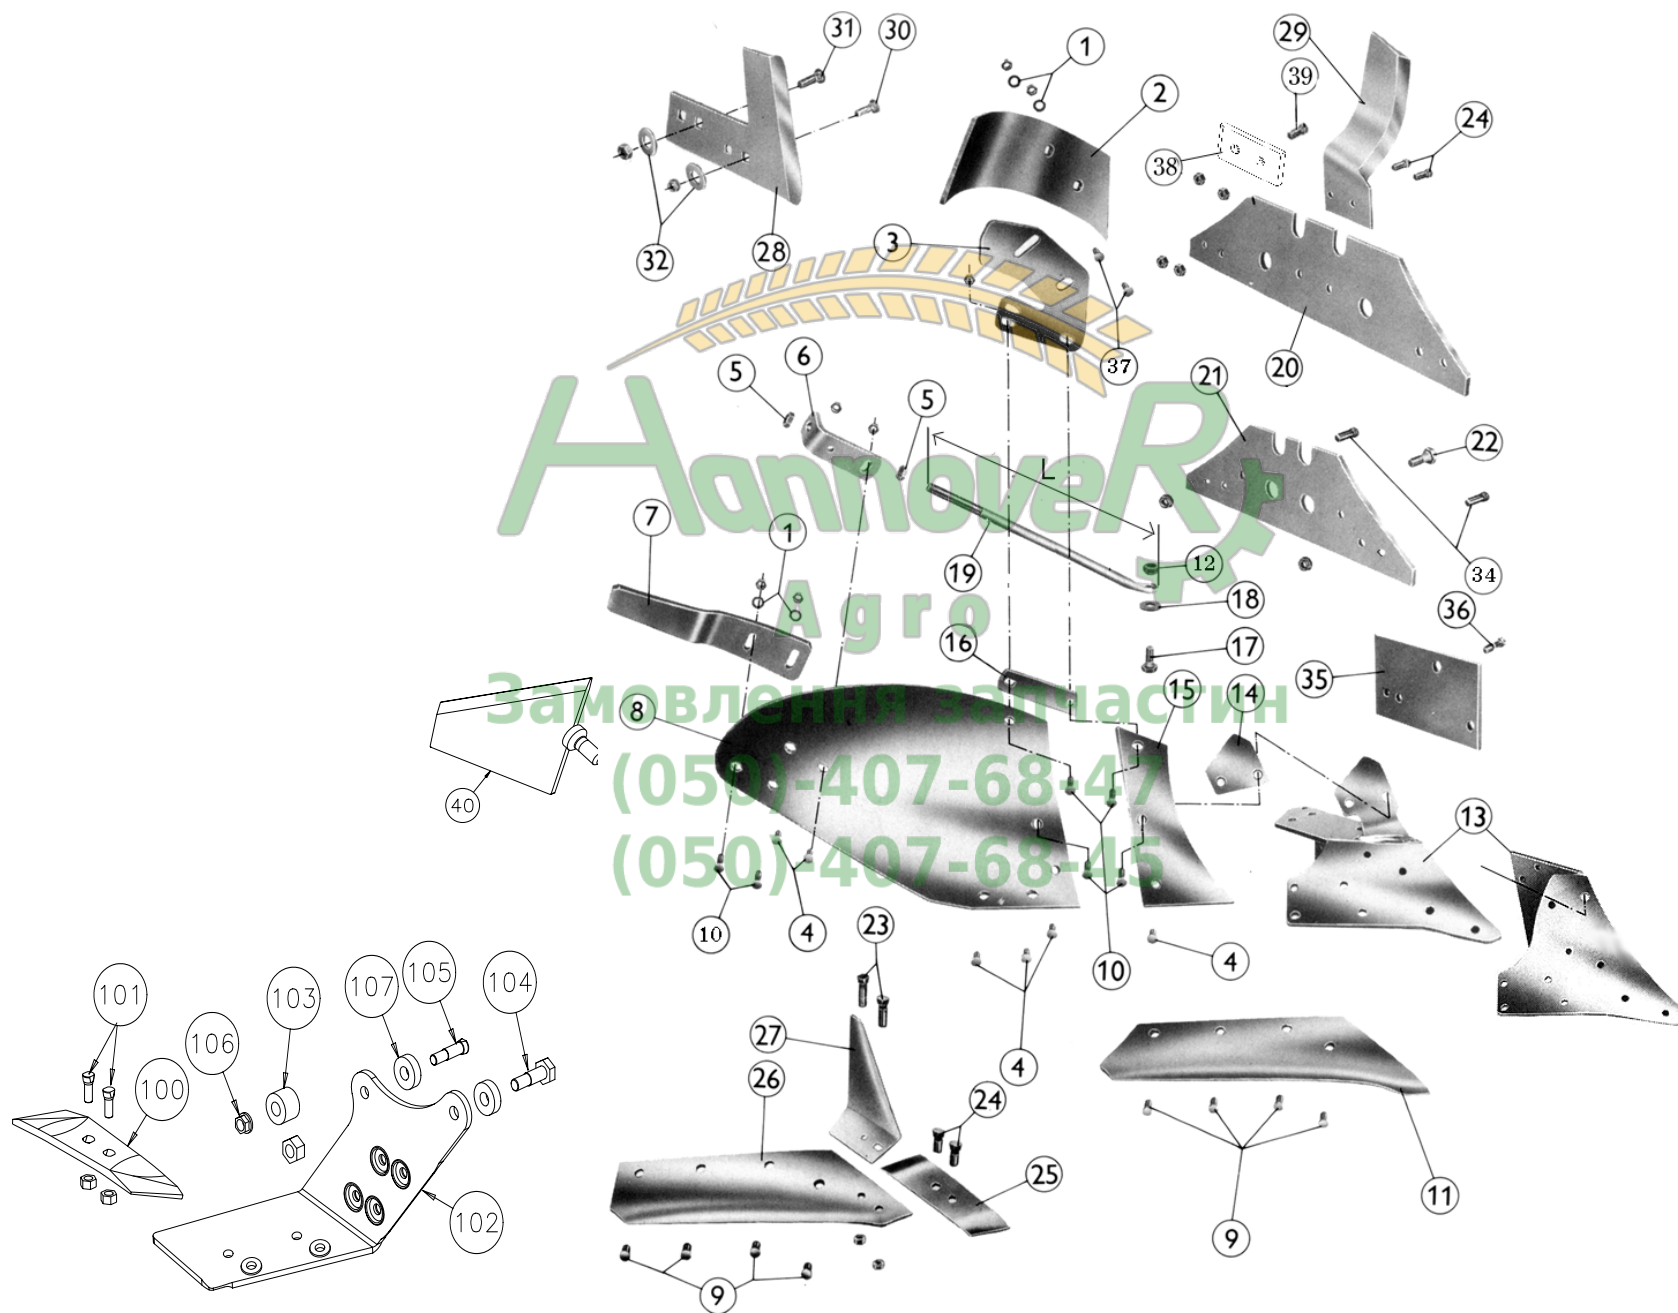

40	KK 08 32 35	Mouldboard knife R and L (From 01.12.01)
Pos. 100 - 107 Eco-share from 01.04.00		
100	KK 05 30 90	Reversible point, R
	KK 06 30 90	Reversible point, L
101	KK 01 32 28	Cone screw M12 x 34 mm w/nut
102	KK 07 36 34	Eco-share, R
	KK 07 36 35	Eco-share, L
103	KK 01 01 55	Bushing (for ploughs w/share bolt beam)
	KK 01 01 56	Bushing (for ploughs w/A-beam)
104	KK 03 27 40	Hex screw M16 x 40 mm w/nut (for ploughs w/E-saddle) (Before 01.03.00)
	KK 03 27 50	Hex screw M16 x 50 mm w/nut (for ploughs w/E-saddle) (From 01.03.00)
	KK 03 27 65	Hex screw M16 x 65 mm w/nut (for ploughs w/share bolt beam)
	KK 03 27 75	Hex screw M16 x 75 mm w/nut (for ploughs w/A-beam)
105	KK 01 33 46	Cone screw M14 x 45 mm w/flange nut (for ploughs w/E-saddle) (Before 01.03.00)
	KK 01 33 61	Cone screw M14 x 60 mm w/flange nut (for ploughs w/E-saddle) (From 01.03.00)
	KK 01 33 85	Cone screw M14 x 85 mm w/flange nut (for ploughs w/share bolt beam and A-beam)
106	KK 01 60 15	Flange nut M14
107	KK 01 29 29	Washer (for ploughs w/E-saddle) (From 01.03.00)




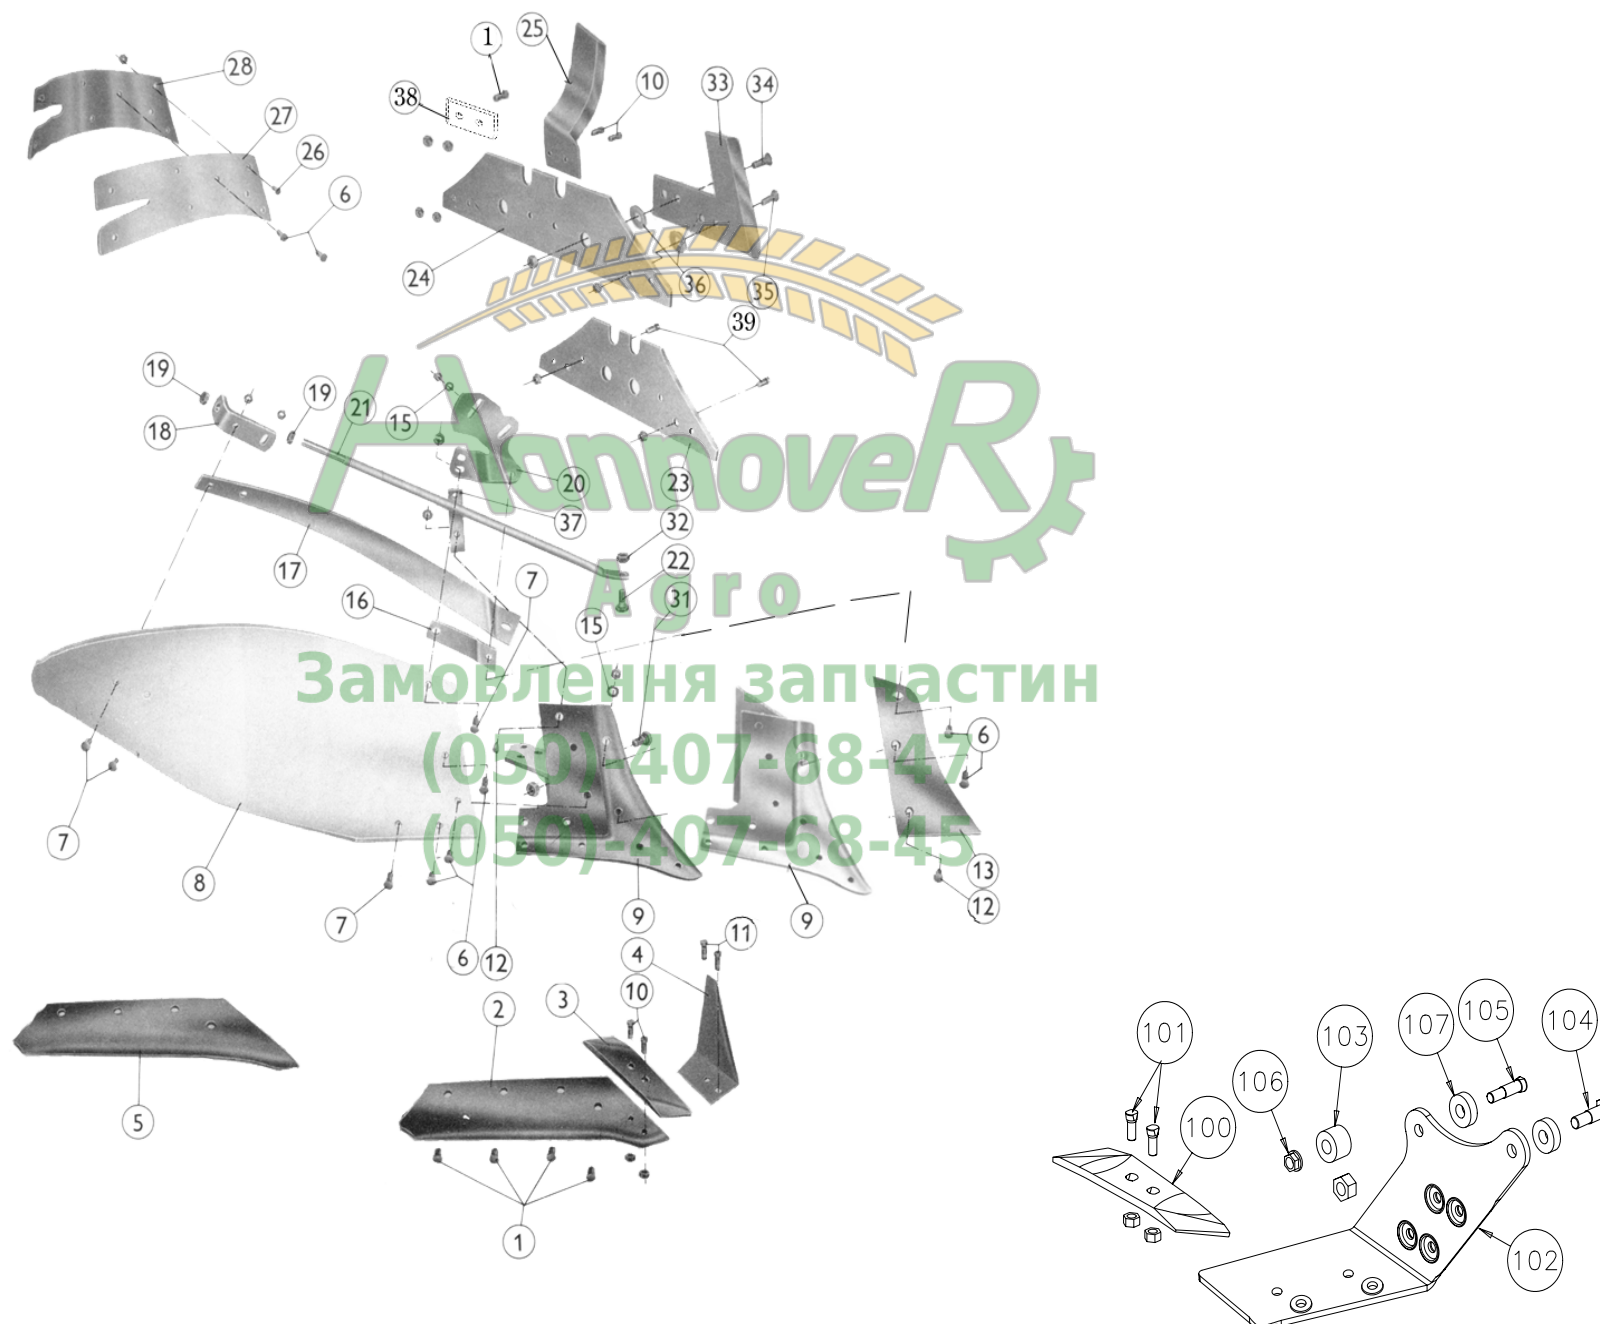


26	KK 03 30 04	Oval screw M10 x 20 mm w/nut
27	KK 07 33 50	Trashboard plastic, R
	KK 07 33 51	Trashboard plastic, L
28	KK 07 33 52	Support, R
	KK 07 33 53	Support, L
29	KK 05 33 87	Mouldboard extension, R
	KK 06 33 88	Mouldboard extension, L
31	KK 03 27 30	Hex screw M16 x 13 mm w/nut
32	KK 06 20 25	Nut M16 mm
33	KK 07 30 88	Landside knife w/nuts, R
	KK 07 30 89	Landside knife w/nuts, L
34	KK 03 32 51	Screw M16 x 50 mm w/nut (for E-sad- dle) (Before 01.02.00)
	KK 03 32 56	Screw M16 x 55 mm w/nut (for E-sad- dle) (From 01.02.00)
	KK 03 32 86	Screw M16 x 85 mm w/nut (for A-sad- dle) (Before 01.02.00)
	KK 03 32 95	Screw M16 x 95 mm w/nut (for A-sad- dle) (From 01.02.00)
35	KK 03 31 74	Screw M14 x 45 mm w/nut



1	KK 01 33 32	Cone screw M14 x 34 mm w/nut	21	KK 07 33 03	Bracket, R		KK 07 30 89	Landside knife w/nut, L
2	KK 07 30 54	Share 14", R		KK 07 33 04	Bracket, L	44	KK 01 29 22	Washer 17 x 40 x 4.58 mm
	KK 07 30 55	Share 14", L	22	KK 01 29 19	Washer 12.5 x 23 x 3.2 mm	45	KK 03 31 75	Screw M14 x 50 mm w/nut
	KK 07 30 56	Share 16", R	23	KK 03 27 40	Hex screw M16 x 40 mm w/nut	46	KK 03 32 51	Screw M16 x 50 mm w/nut (for E-saddle)
	KK 07 30 57	Share 16", L	24	KK 07 36 08	Landside, short, R + L		KK 03 32 86	Screw M16 x 85 mm w/nut (for A-saddle)
	KK 07 30 80	Share 18", R	25	KK 07 36 09	Landside, long, R + L	47	KK 06 36 07	Plate (For On-land ploughs only)
	KK 07 30 81	Share 18", L	26	KK 07 38 22	Stay front (for E-saddle)		KK 07 36 07	Plate cpl. (For On-land ploughs only)
3	KK 05 30 90	Reversible point, R		KK 07 38 16	Stay front (for A-saddle)	48	KK 01 33 46	Screw M14 x 45 mm w/nut
	KK 06 30 90	Reversible point, L	27	KK 01 58 30	Nut M20 mm (Before 01.06.93)	50	KK 07 36 14	Wearing plate
4	KK 07 32 45	Mouldboard, R	28	KK 07 38 17	Stay (Before 01.06.93)	51	KK 01 33 32	Cone screw M14 x 34 mm
	KK 07 32 46	Mouldboard, L	29	KK 07 38 15	Stay, rear (for A-saddle) (Before 01.06.93)			
5	KK 03 31 73	Oval screw M14 x 38 mm w/nut		KK 07 38 20	Stay, R cpl. (for E-saddle) (Before 01.06.93)			
7	KK 01 32 28	Cone screw M12 x 34 mm w/nut		KK 07 38 21	Stay, L cpl. (for E-saddle) (Before 01.06.93)			
8	KK 01 32 34	Cone screw M12 x 38 mm w/nut		KK 07 38 10	Stay, R cpl. (for A-saddle) (Before 01.06.93)			
9	KK 07 30 91	Share knife, R		KK 07 38 11	Stay, L cpl (for A-saddle) (Before 01.06.93)			
	KK 07 30 92	Share knife, L						
	KK 06 30 91	Share knife, R (for Sweden)						
	KK 06 30 92	Share knife, L (for Sweden)						
10	KK 07 34 70	Saddle, R (for E-saddle)	31	KK 07 15 00	Spacer			
	KK 07 34 71	Saddle, L (for E-saddle)	32	KK 03 31 81	Oval screw M14 x 85 mm w/nut			
	KK 07 34 64	Saddle, R (for A-saddle)	33	KK 07 36 15	Furrow widener, R			
	KK 07 34 65	Saddle, L (for A-saddle)		KK 07 30 16	Furrow widener, L			
11	KK 03 31 00	Oval screw M12 x 30 mm w/nut	34	KK 07 30 62	Share 14", R			
12	KK 07 32 72	Shinpiece, R		KK 07 30 63	Share 14", L			
	KK 07 32 73	Shinpiece, L		KK 07 30 64	Share 16", R			
13	KK 03 31 08	Oval screw M12 x 40 mm w/nut		KK 07 30 65	Share 16", L			
14	KK 03 27 30	Hex screw M16 x 30 mm w/nut	35	KK 07 38 05	Stay (for E-saddle) (From 01.06.93)			
16	KK 03 31 75	Oval screw M14 x 50 mm w/nut		KK 07 38 03	Stay (for A-saddle) (From 01.06.93)			
17	KK 07 32 75	Connecting piece, R	36	KK 07 38 34	Bracket for stay, R+L			
	KK 07 32 76	Connecting piece, L	37	KK 07 38 35	Spacing tube 27 x 20.5 x 80 mm			
18	KK 03 31 07	Oval screw M12 x 35 mm w/nut	38	KK 07 38 36	Spacing tube 27 x 20.5 x 69 mm			
19	KK 07 33 00	Trashboard, R	39	KK 07 38 12	Bracket for stay, R			
	KK 07 33 01	Trashboard, L		KK 07 38 13	Bracket for stay, L			
	KK 07 02 92	Trashboard, R cpl.	40	KK 01 30 01	Washer 14 x 30 x 7.5 mm			
	KK 07 02 93	Trashboard, L cpl.	41	KK 01 58 34	Nut M20 mm			
	KK 07 02 94	Trashboard, R + L cpl.	42	KK 03 31 85	Oval screw M14 x 130 mm w/flangenut			
20	KK 07 33 32	Mouldboard extension, R (extra)	43	KK 07 30 88	Landside knife w/nut, R			
	KK 07 33 33	Mouldboard extension,, L (extra)						

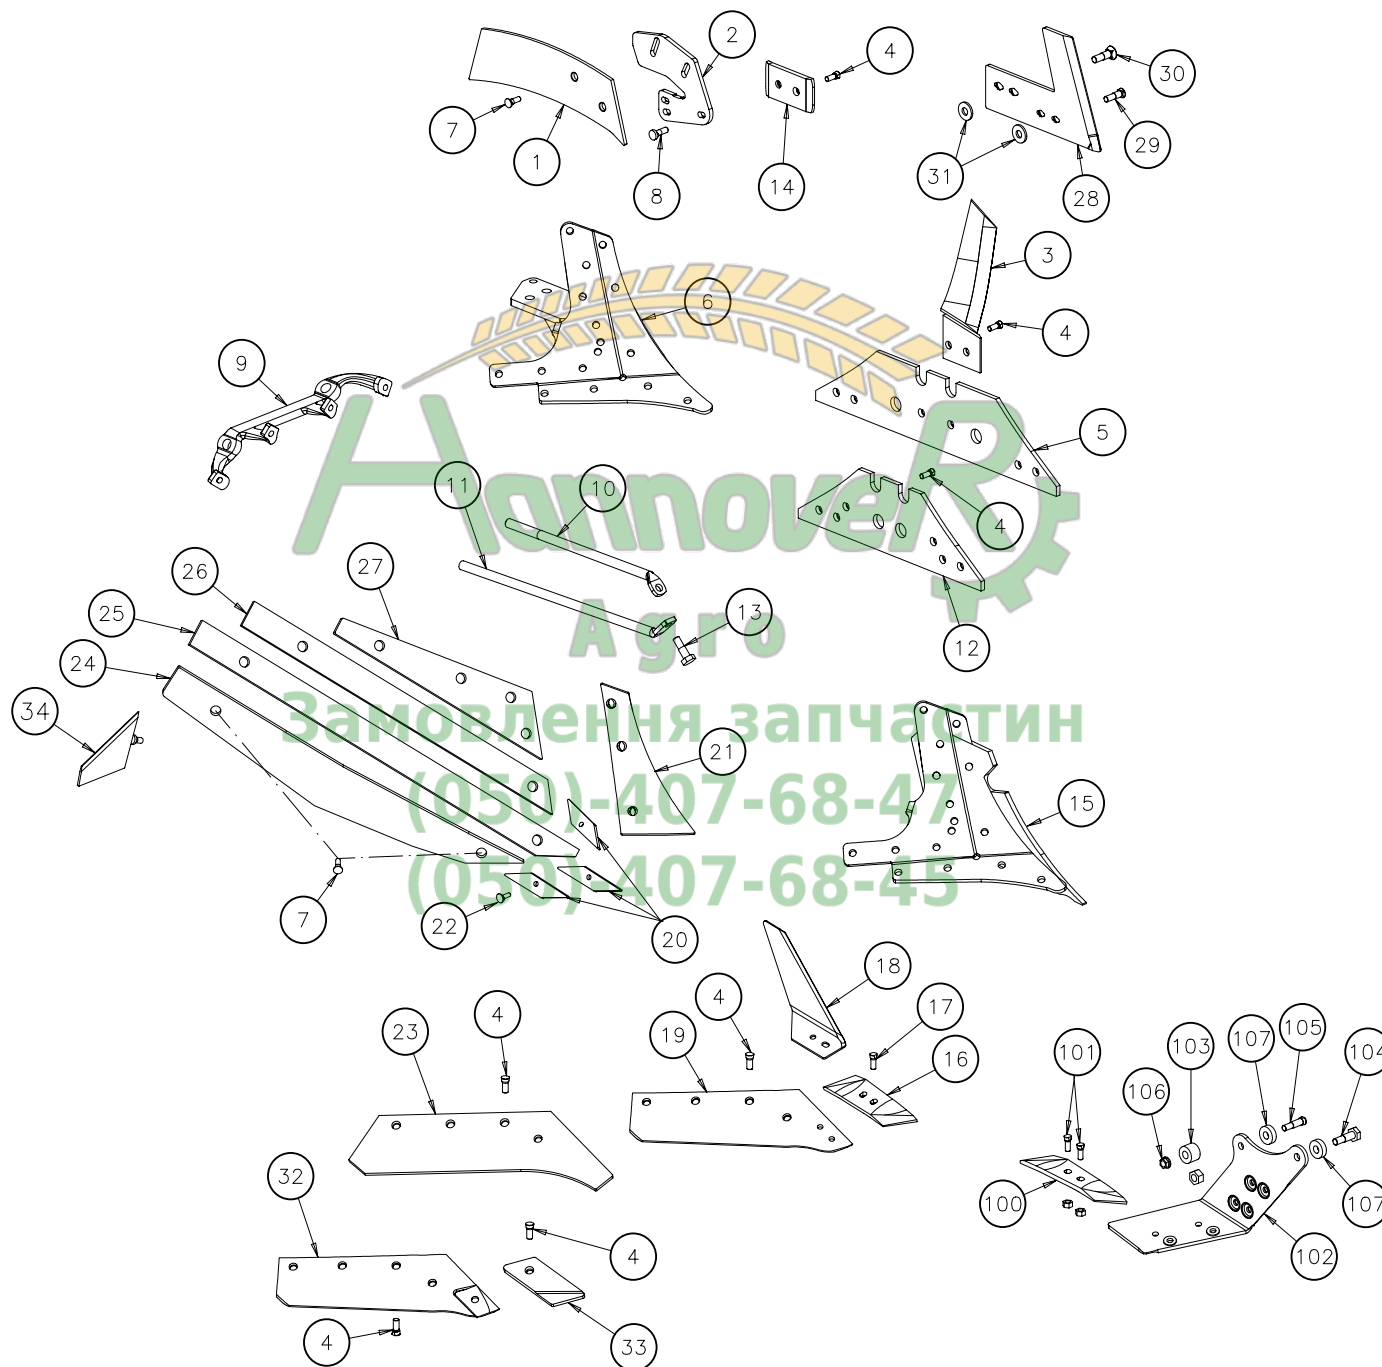

1	KK 07 33 00	Trashboard, R	15	KK 08 34 15	Saddle R, A-saddle (for body no. 29)	KK 03 30 16	Oval screw M10 x 30 mm (for body no. 30)
	KK 07 33 01	Trashboard, L		KK 08 34 16	Saddle L, A-saddle (for body no. 29)		
2	KK 08 33 00	Bracket, R		KK 08 34 06	Saddle R, A-saddle (for body no. 30)	KK 01 58 13	Nut M10
	KK 08 33 01	Bracket, L		KK 08 34 07	Saddle L, A-saddle (for body no. 30)	23	KK 07 30 62 Share 14", R (for body no. 30)
3	KK 07 36 15	Furrow widener, R	16	KK 05 30 90	Reversible point, R		KK 07 30 63 Share 14", L (for body no. 30)
	KK 07 36 16	Furrow widener, L		KK 06 30 90	Reversible point, L		KK 07 30 64 Share 16", R (for body no. 30)
4	KK 01 33 32	Cone screw M14 x 34 mm	17	KK 01 32 28	Cone screw M12 x 34 mm		KK 07 30 65 Share 16", L (for body no. 30)
	KK 01 60 13	Flange nut M14		KK 01 58 17	Nut M12	24	KK 08 32 11 Slat no 1, R
5	KK 07 36 09	Landside, long R + L	18	KK 07 30 91	Share knife, R		KK 08 32 21 Slat no 1, L
6	KK 08 34 17	Saddle R, E-saddle (for body no. 29)		KK 07 30 92	Share knife, L	25	KK 08 32 12 Slat no 2, R
	KK 08 34 18	Saddle L, E-saddle (for body no. 29)		KK 06 30 91	Share knife, R (for Sweeden)		KK 08 32 22 Slat no 2, L
	KK 08 34 08	Saddle R, E-saddle (for body no. 30)		KK 06 30 92	Share knife, L (for Sweeden)	26	KK 08 32 13 Slat no 3, R
	KK 08 34 09	Saddle L, E-saddle (for body no. 30)	19	KK 07 30 02	Share 14", R (for body no. 29)		KK 08 32 23 Slat no 3, L
7	KK 03 31 16	Oval screw M12 x 35 mm (for body no. 29 and 30)		KK 07 30 03	Share 14", L (for body no. 29)	27	KK 08 32 14 Slat no 4, R
	KK 01 58 17	Nut M12		KK 07 30 54	Share 14", R (for body no. 30)		KK 08 32 24 Slat no 4, L
	KK 03 31 07	Oval screw M12 x 35 mm (for body no. 30) (Before 01.01.01)		KK 07 30 55	Share 14", L (for body no. 30)	28	KK 07 30 88 Landside knife, R
	KK 01 58 17	Nut M12		KK 07 30 04	Share 16", R (for body no. 29)		KK 07 30 89 Landside knife, L
8	KK 03 31 17	Oval screw M12 x 45 mm (for body no. 29 and 30)		KK 07 30 05	Share 16", L (for body no. 29)	29	KK 03 31 75 Screw M14 x 50 mm
	KK 01 58 17	Nut M12		KK 07 30 56	Share 16", R (for body no. 30)		KK 01 60 15 Flange nut M14
	KK 03 31 11	Oval screw M12 x 45 mm (for body no. 30) (Before 01.01.01)		KK 07 30 57	Share 16", L (for body no. 30)	30	KK 03 32 51 Screw M16 x 50 mm (for E-saddle) (Before 01.02.00)
	KK 01 58 17	Nut M12		KK 07 30 06	Share 18", R (for body no. 29)		KK 03 32 56 Screw M16 x 56 mm (for E-saddle) (From 01.02.00)
	KK 03 31 11	Oval screw M12 x 45 mm (for body no. 30) (Before 01.01.01)		KK 07 30 07	Share 18", L (for body no. 29)		KK 01 58 25 Nut M16
	KK 01 58 17	Nut M12		KK 07 30 80	Share 18", R (for body no. 30)		KK 03 32 86 Screw M16 x 85 mm (for A-saddle) (Before 01.02.00)
9	KK 08 32 10	Slat support, R	20	KK 08 32 15	Connecting piece, plastic (for slat 1-2)		KK 03 32 95 Screw M16 x 95 mm (for A-saddle) (From 01.02.00)
	KK 08 32 20	Slat support, L		KK 08 32 18	Connecting piece, plastic (for slat 2) (for body no. 29)		KK 01 58 25 Nut M16
10	KK 08 38 03	Stay		KK 08 32 16	Connecting piece, plastic (for slat 2-3) (for body no. 30)	31	KK 01 29 22 Washer 17 x 40 x 4.58 mm
11	KK 08 38 05	Stay 1, saddle A (for body no. 29)			Connecting piece, plastic (for slat 3-4)	32	KK 07 30 42 Flush fit share 14", R (for body no. 29)
	KK 08 38 06	Stay 2, saddle A (for body no. 29)		KK 08 32 17	Connecting piece, plastic (for slat 3-4)		KK 07 30 43 Flush fit share 14", L (for body no. 29)
	KK 08 38 02	Stay, saddle A (for body no. 30)	21	KK 07 32 56	Shinpiece, R (for body no. 29)		KK 07 30 44 Flush fit share 16", R (for body no. 29)
	KK 08 38 07	Stay 1, saddle E (for body no. 29)		KK 07 32 57	Shinpiece, L (for body no. 29)		KK 07 30 45 Flush fit share 16", L (for body no. 29)
	KK 08 38 08	Stay 2, saddle E (for body no. 29)		KK 07 32 30	Shinpiece, R (for body no. 30)	33	KK 07 30 30 Flush fit point, R
	KK 08 38 04	Stay, saddle E (for body no. 30)		KK 07 32 31	Shinpiece, L (for body no. 30)		KK 07 30 31 Flush fit point, L
12	KK 07 36 08	Landside, short R + L	22	KK 03 30 06	Oval screw M10 x 30 mm (for body no. 29)	34	KK 08 32 35 Mouldboard knife R and L (From 01.12.01)
13	KK 03 27 50	Hex screw M16 x 50 mm		KK 01 58 13	Nut M10		
	KK 01 58 25	Nut M16					
14	KK 07 36 14	Wearing plate					

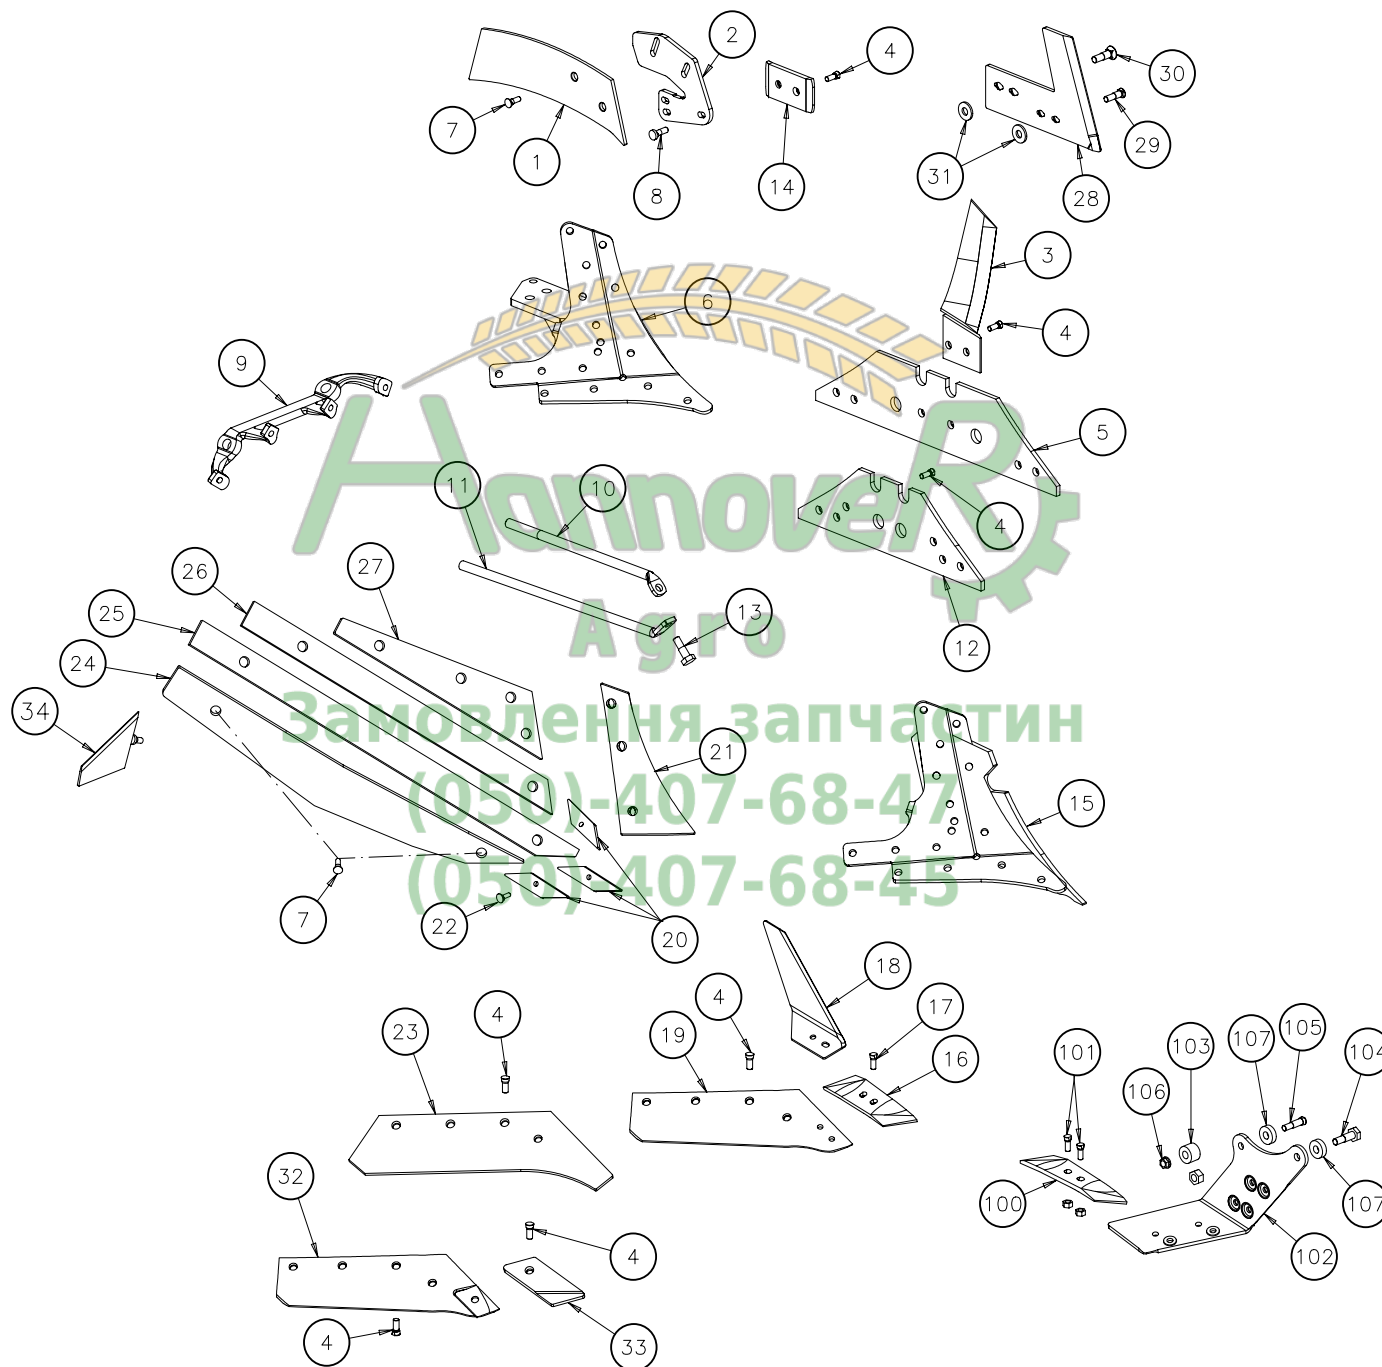

Pos. 100 - 107 Eco-share from 01.04.00		
100	KK 05 30 90	Reversible point, R
	KK 06 30 90	Reversible point, L
101	KK 01 32 28	Cone screw M12 x 34 mm
	KK 01 58 17	Nut M12
102	KK 07 36 34	Eco-share, R
	KK 07 36 35	Eco-share, L
103	KK 01 01 55	Bushing (for ploughs w/share bolt beam)
	KK 01 01 56	Bushing (for ploughs w/A-beam)
104	KK 03 27 40	Hex screw M16 x 40 (for ploughs w/E-saddle) (Before 01.03.00)
	KK 03 27 50	Hex screw M16 x 50 mm (for ploughs w/E-saddle) (From 01.03.00)
	KK 01 58 25	Nut M16
	KK 03 27 65	Hex screw M16 x 65 mm w/nut (for ploughs w/share bolt beam)
	KK 01 58 25	Nut M16
	KK 03 27 75	Hex screw M16 x 75 mm w/nut (for ploughs w/A-beam)
	KK 01 58 25	Nut ;16
105	KK 01 33 46	Cone screw M14 x 45 mm (for ploughs w/E-saddle) (Before 01.03.00)
	KK 01 33 61	Cone screw M14 x 60 mm (for ploughs w/E-saddle) (From 01.03.00)
	KK 01 33 85	Cone screw M14 x 85 mm (for ploughs w/share bolt beam and A-beam)
106	KK 01 60 15	Flange nut M14
107	KK 01 29 29	Washer (for ploughs w/E-saddle) (From 01.03.00)



Замовлення запчастин
(050)-407-68-47
(050)-407-68-45



1	KK 03 13 40	Hex screw M8 x 40 mm
2	KK 05 61 56	Cap
3	KK 01 07 75	O-ring D54.5 x 3 mm
4	KK 05 61 12	Disc 18"
	KK 05 61 15	Disc 18" Notched
5	KK 05 61 14	Disc 20"
	KK 05 61 16	Disc 20" Notched
6	KK 06 61 02	Hub w/needles
7	KK 01 07 72	Seal ring
8	KK 01 07 60	Circlip
9	KK 06 61 08	Axle D30
10	KK 02 99 20	Grease nipple
11	KK 06 06 10	Disc coulters arm 18"
	KK 06 06 17	Disc coulters arm 20"
12	KK 05 61 90	Stop collar
13	KK 05 60 03	Stem (for disc coulters Europe)
	KK 05 60 02	Stem (for disc coulters Canada and USA)
14	KK 07 61 21	Bracket
15	KK 03 27 02	Hex screw M16 x 110 mm w/nut
16	KK 07 61 20	Holder
17	KK 03 27 65	Hex screw M16 x 65 mm w/nut
18	KK 01 12 72	Circlip
19	KK 01 04 85	Axle
20	KK 03 26 70	Hex screw M12 x 70 mm w/nut
21	KK 01 12 66	Circlip
22	KK 01 12 92	Washer D30 x 45 x 2.5 mm
Not ill.	KK 06 06 24	Hub cpl.
	KK 07 06 26	Holder cpl.






1	KK 07 64 06	Disc coulters 18"
	KK 07 64 07	Disc coulters 20"
2	KK 07 64 09	Disc coulters, notched 18"
	KK 07 64 10	Disc coulters, notched 20"
3	KK 07 64 99	Plate
4	KK 03 51 14	Screw M10 x 40 mm w/lock nut
5	KK 01 17 50	O-ring 124,5 x 3 mm
6	KK 01 18 66	O-ring 67 x 3 mm
7	KK 01 12 59	Circlip I 62 x 2 mm
8	KK 01 12 66	Circlip A 30 x 1,5 mm
9	KK 01 05 72	Bearing
10	KK 01 05 32	Gasket ring
11	KK 08 60 90	Bearing housing cpl. (ill. no. 4, 5, 6, 8 and 12)
12	KK 08 61 01	Axle
	KK 08 60 86	Disc coulters arm w/bearing, A- and 3D-saddle
	KK 08 60 87	Disc coulters bearing cpl. (ill. no. 7, 9, 10 and 11)
13	KK 07 65 75	Arm
14	KK 07 64 00	Support
15	KK 03 27 02	Hex screw M16 x 110 mm w/nut
16	KK 02 99 20	Grease nipple
17	KK 08 61 02	Stem
18	KK 07 61 21	Bracket
19	KK 07 61 20	Holder
20	KK 01 04 85	Pin
21	KK 01 12 72	Circlip
22	KK 03 27 65	Hex screw M16 x 65 mm w/nut
Not ill.	KK 08 60 89	Hub without axle cpl.






1	KK 03 13 40	Hex screw M8 x 40 mm	KK 07 06 26	Holder for disc coulters cpl.
2	KK 05 61 56	Cap	KK 06 06 26	Spring loaded disc coulters 18" cpl.
3	KK 01 07 75	O-ring	KK 06 06 27	Spring loaded disc coulters 20" cpl.
4	KK 05 61 12	Disc 18"	KK 07 00 41	Spring loaded disc coulters 18", notched cpl.
5	KK 05 61 14	Disc 20"	KK 07 00 43	Spring loaded disc coulters 20", notched cpl.
6	KK 06 61 02	Bearing housing w/bearing		
7	KK 01 07 72	Gasket ring		
8	KK 01 07 60	Circlip		
9	KK 06 61 08	Axle w/circlip and washer		
10	KK 02 99 20	Grease nipple		
11	KK 01 58 35	Nut M20		
12	KK 09 63 05	Arm		
13	KK 09 63 10	Tube		
14	KK 09 63 18	Bolt		
15	KK 09 63 20	Spring		
16	KK 09 63 15	Rod for spring		
17	KK 05 61 90	Stop		
18	KK 03 26 70	Hex screw M12 x 70 mm w/nut		
19	KK 05 60 03	Axle for disc coulters		
20	KK 07 61 20	Holder for axle		
21	KK 07 61 21	Piece for holder		
22	KK 03 27 02	Hex screw M16 x 110 mm w/nut		
23	KK 03 27 65	Hex screw M16 x 65 mm w/nut		
24	KK 01 04 85	Axle		
25	KK 01 12 72	Circlip		
26	KK 09 63 22	Bushing		
27	KK 01 12 66	Circlip		
28	KK 01 12 92	Washer		
29	KK 06 61 67	U-bolt M16 x 120 x 90 mm		
30	KK 07 61 68	Angular disc coulters bracket		
31	KK 07 61 69	Angular clamp bracket		
Not ill.	KK 05 61 15	Disc 18", notched		
	KK 05 61 16	Disc 20", notched		
	KK 06 06 24	Bearing cpl.		
	KK 09 06 06	Arm w/spring cpl.		



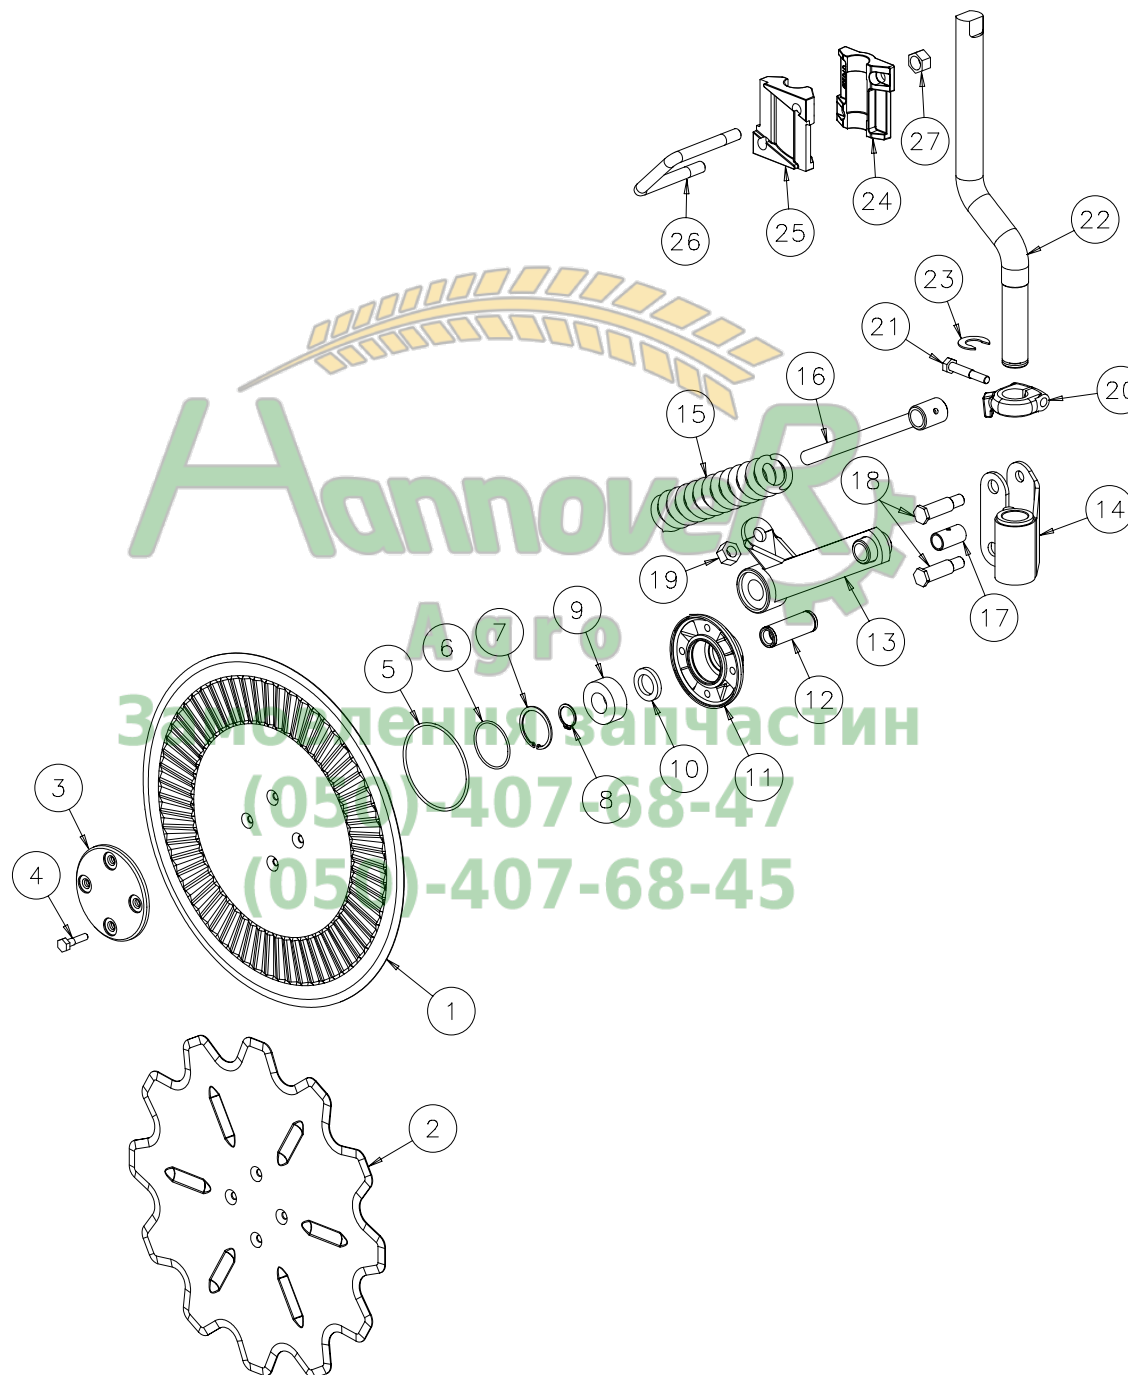


1	KK 07 64 06	Disc coulter 18"
	KK 07 64 07	Disc coulter 20"
2	KK 07 64 09	Disc coulter, notched 18"
	KK 07 64 10	Disc coulter, notched 20"
3	KK 07 64 99	Plate
4	KK 03 25 40	Screw M10 x 40 mm w/nut
5	KK 01 17 50	O-ring 124,5 x 3 mm
6	KK 01 18 66	O-ring 67 x 3 mm
7	KK 01 12 59	Circlip I 62 x 2 mm
8	KK 01 12 66	Circlip A 30 x 1,5 mm
9	KK 01 05 72	Bearing
10	KK 01 05 32	Gasket ring
11	KK 08 61 00	Bearing housing
12	KK 08 61 01	Axle
	KK 08 60 88	Disc coulter arm w/bearing, A-saddle
	KK 08 60 87	Disc coulter bearing cpl.
13	KK 09 63 05	Arm
14	KK 09 63 10	Tube
15	KK 09 63 20	Spring
16	KK 09 63 15	Rod for spring
17	KK 09 63 22	Bushing
18	KK 09 63 18	Bolt
19	KK 01 58 30	Nut M16
20	KK 05 61 90	Stop
21	KK 03 26 70	Hex screw M12 x 70 mm w/nut
22	KK 05 60 02	Stem (Before 15.11.99)
	KK 05 60 03	Stem (From 15.11.99)
23	KK 01 07 60	Circlip
24	KK 07 61 69	Angular clamp bracket
25	KK 07 61 68	Angular disc coulter bracket
26	KK 06 61 67	U-bolt M16 x 120 x 90 mm
27	KK 01 58 25	Nut M16



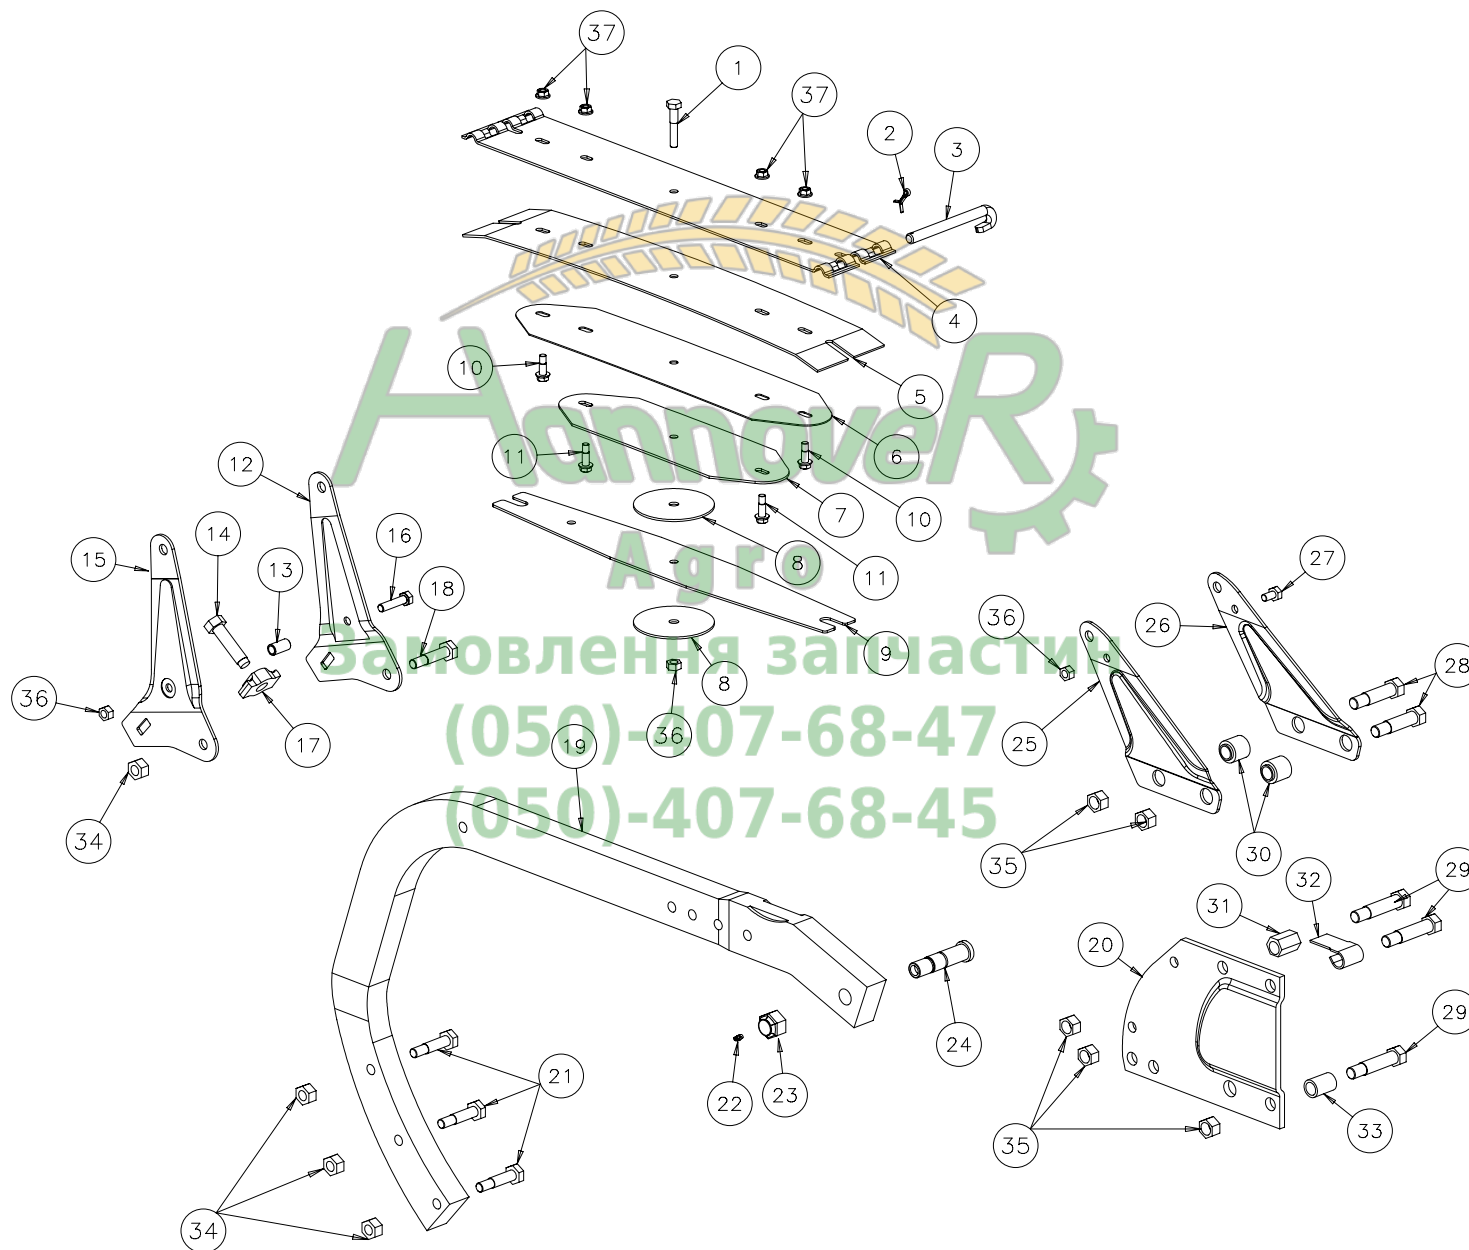


1	KK 03 26 65	Hex screw M12 x 65 mm			
2	KK 02 97 27	Roll pin D5 x 32 mm	Not ill.	KK 05 07 06	Leaf spring std. cpl.
3	KK 05 70 89	Bolt		KK 06 07 03	Leaf spring HD cpl.
4	KK 05 70 63	Main blade		KK 07 70 00	Adjustable holder for leaf spring cpl. (pos. 12 - 17)
5	KK 05 70 64	Blade no. 1		KK 07 70 05	Holder, front for leaf spring cpl. (pos. 25 - 28 and 30)
6	KK 05 70 65	Blade no. 2			
7	KK 05 70 66	Blade no. 3			
8	KK 05 70 67	Blade no. 4			
9	KK 05 70 68	Blade no. 5			
10	KK 03 50 21	Bolt M10 x 30.5 mm			
11	KK 03 50 20	Bolt M10 x 34 mm			
12	KK 06 70 64	Plate L, rear			
13	KK 07 70 12	Spacing tube			
14	KK 06 70 42	Adjustment screw M20 x 75 mm			
15	KK 06 70 63	Plate R, rear			
16	KK 03 26 50	Hex screw M12 x 50 mm			
17	KK 07 70 11	Threaded piece			
18	KK 03 27 70	Hex screw M16 x 70 mm			
19	KK 07 12 40	Beam			
20	KK 06 15 40	Plate			
21	KK 03 27 74	Hex screw M16 x 70 mm			
22	KK 02 99 18	Grease nipple			
23	KK 01 60 01	Nut M24			
24	KK 07 70 20	Bolt			
25	KK 06 70 07	Plate R, front			
26	KK 06 70 08	Plate L, front			
27	KK 03 36 20	Hex screw M12 x 20 mm			
28	KK 03 28 80	Hex screw M20 x 80 mm			
29	KK 03 28 90	Hex screw M20 x 90 mm			
30	KK 07 70 01	Spacing tube			
31	KK 07 15 04	Excenter			
32	KK 07 15 07	Spacer			
33	KK 07 15 00	Bushing			
34	KK 01 58 25	Nut M16			
35	KK 01 58 30	Nut M20			
36	KK 01 58 17	Nut M12			
37	KK 01 60 07	Flange nut M10			



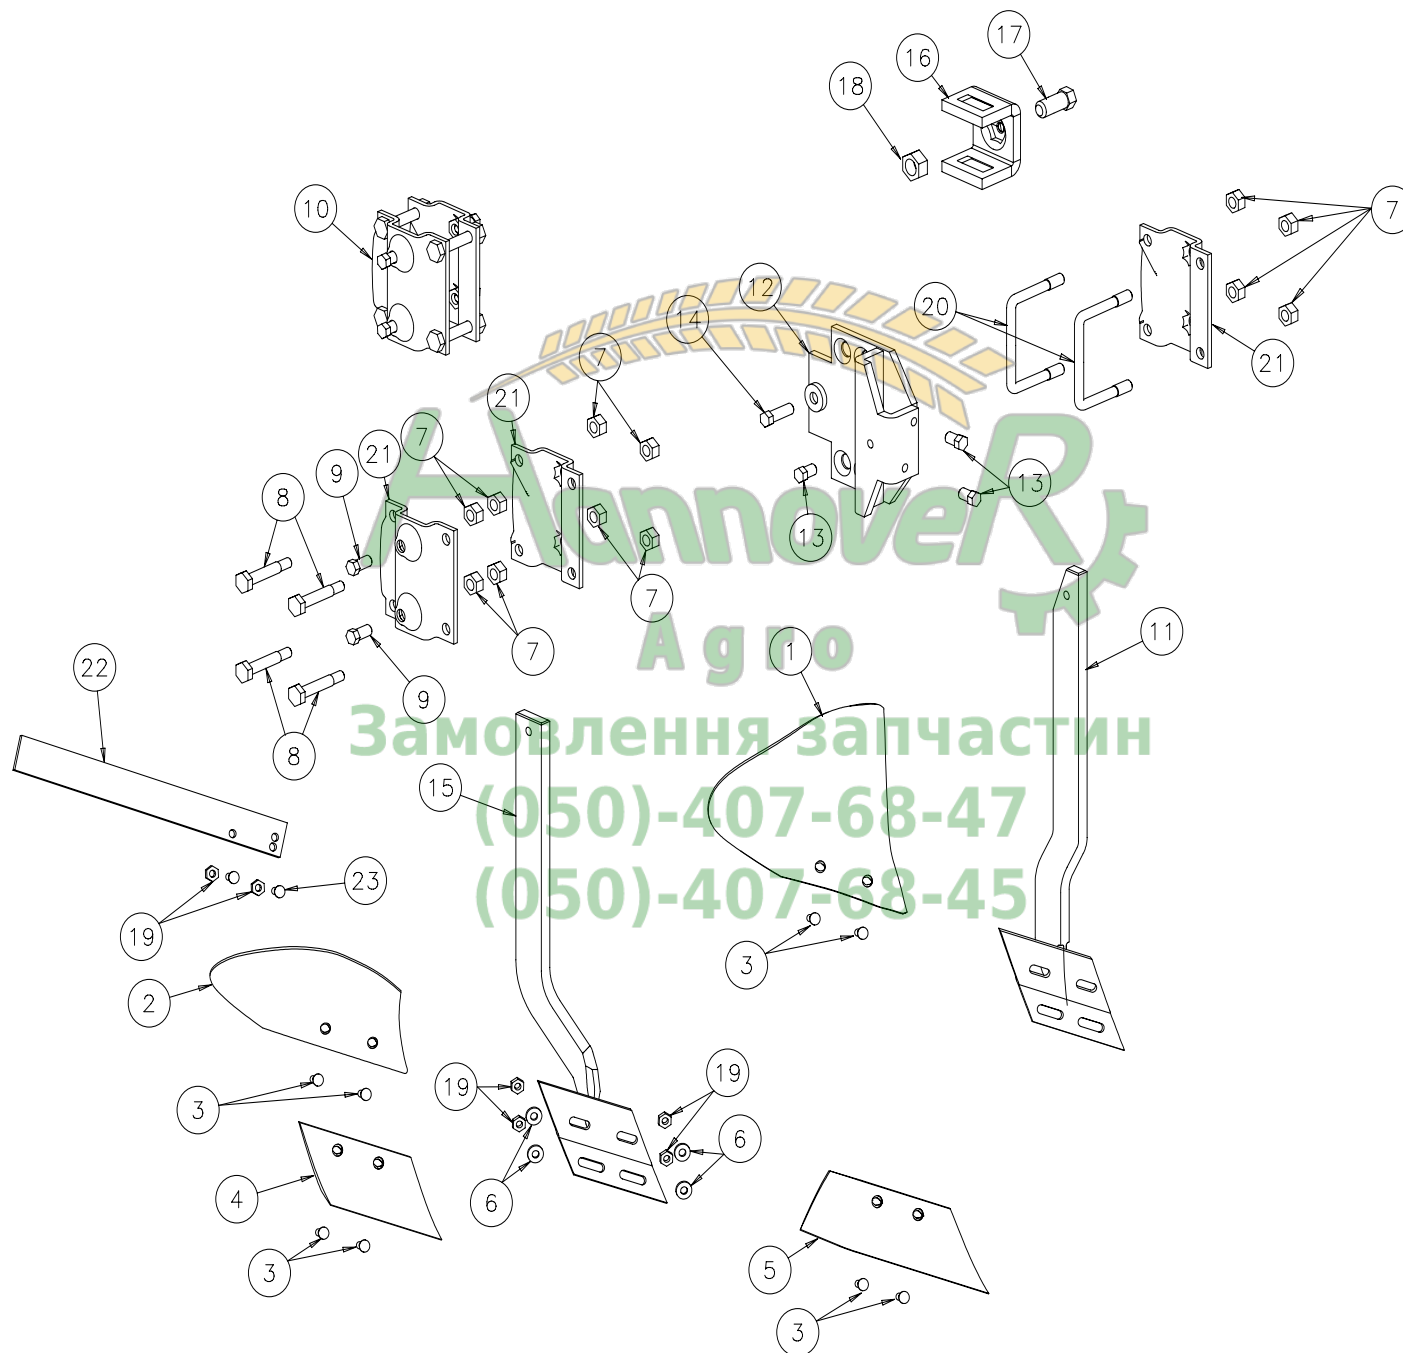


1	KK 07 68 12	Mouldboard maize R	11	KK 06 68 11	Arm R, H = 700 mm for HD beam and std. beam H700
	KK 07 68 13	Mouldboard maize L		KK 07 68 58	Arm R, H = 750 mm for std. beam H800 (From 01.12.00)
2	KK 06 68 80	Mouldboard R	16	KK 07 06 53	Fixing bracket with screw and nut (for beam 071240 and 071241)
	KK 07 69 43	Mouldboard R, plastic	17	KK 03 44 46	Setscrew M24 x 53 mm
	KK 06 68 81	Mouldboard L	18	KK 01 58 41	Nut M24
	KK 07 69 44	Mouldboard L, plastic	19	KK 01 58 16	Nut M10
3	KK 03 30 06	Oval screw M10 x 30 mm	20	KK 08 50 76	Clevis
4	KK 05 68 73	Share, short R	21	KK 06 68 61	Bracket HD beam
	KK 06 68 73	Share, short L			
5	KK 06 68 68	Share, long R			
	KK 06 68 69	Share, long L			
6	KK 01 29 06	Washer 10.5 x 25 x 3.4			
7	KK 01 58 25	Nut M16			
22	KK 08 68 01	Skimmer extension			
23	KK 03 30 07	Oval screw M10 x 35 mm			
for all turnable ploughs with Auto Reset beams:					
8	KK 03 27 95	Hex screw M16 x 95 mm			
9	KK 03 42 28	Setscrew M16 x 32 mm			
10	KK 06 06 57	Bracket cpl.			
11	KK 06 68 11	Arm R, H = 700 mm			
	KK 07 68 58	Arm R, H = 750 mm (From 01.12.00)			
	KK 06 68 12	Arm L, H = 700 mm			
	KK 07 68 59	Arm L, H = 750 mm (From 01.12.00)			
for all turnable ploughs with Shear Bolt beams:					
12	KK 07 06 39	Bracket with screws (for LB, LD, RB, RS, RX)			
	KK 07 68 72	Bracket (for LM, LS, RG, RL, RM, VD)			
13	KK 03 42 25	Setscrew M16 x 25 mm			
14	KK 03 42 50	Setscrew M16 x 50 mm			
15	KK 07 68 17	Arm R, H = 700 mm			
	KK 07 68 18	Arm L, H = 700 mm			
	KK 07 68 25	Arm R, H = 800 mm			
	KK 07 68 26	Arm L, H = 800 mm			
	KK 07 68 33	Arm R, H = 700 mm (for VD plough only) (Before 15.03.98)			
	KK 07 68 34	Arm L, H = 700 mm (for VD plough only) (Before 15.03.98)			
for beams on conventional ploughs:					



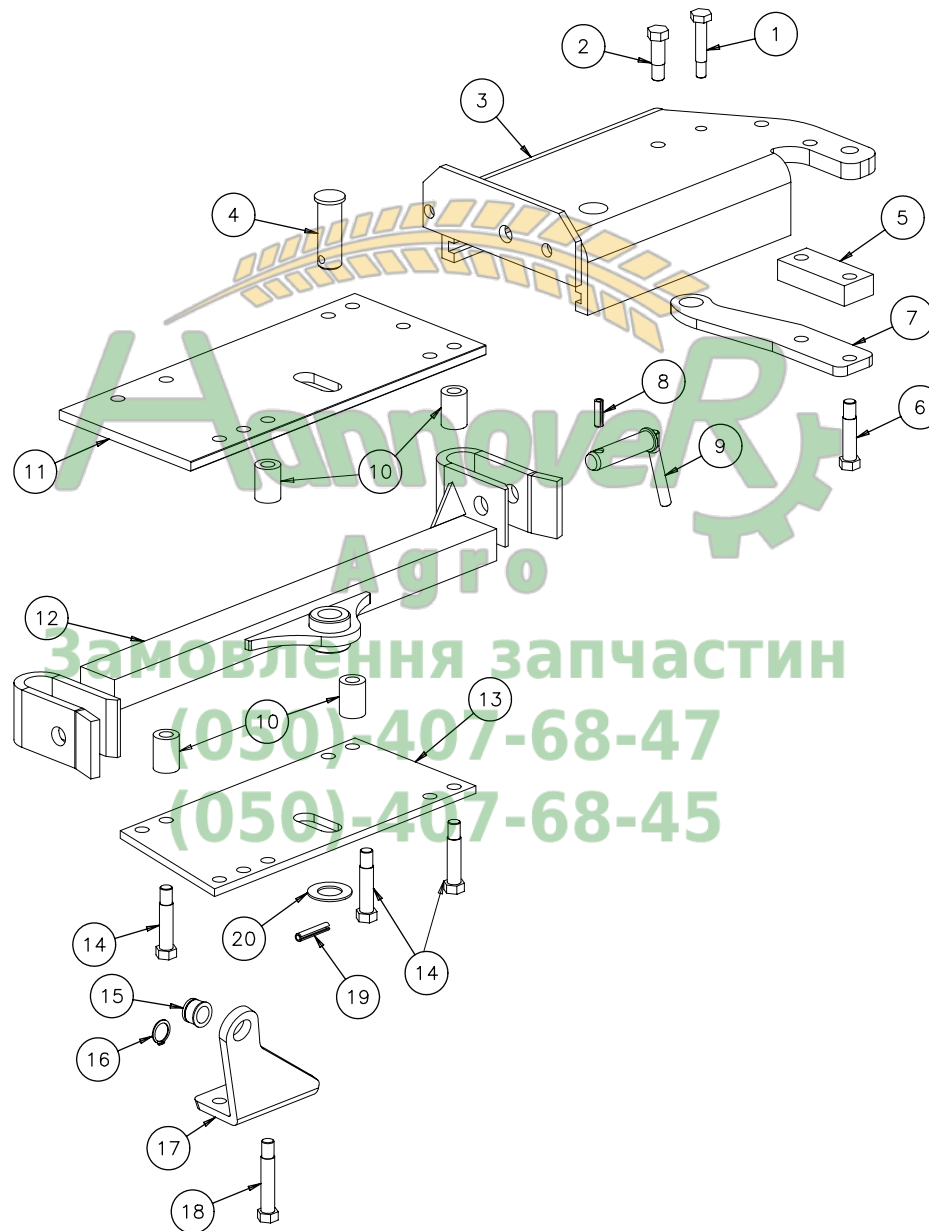

1	KK 03 27 90	Hex screw M16 x 90 mm w/nut
2	KK 03 28 65	Hex screw M20 x 65 mm w/nut
3	KK 07 47 01	Slide rail
4	KK 07 17 94	Bolt
5	KK 07 47 08	Spacing tube
6	KK 03 28 90	Hex screw M20 x 90 mm w/nut
7	KK 07 47 06	Fix for turnbuckle
8	KK 01 07 00	Pin (Before 01.08.97)
	KK 01 10 20	Roll pin D12 x 40 mm (From 01.08.97)
9	KK 01 03 43	Bolt w/handle D28 x 100 mm, H12
10	KK 07 17 93	Spacing tube
11	KK 07 47 07	Slide rail
12	KK 07 47 29	Cross shaft, Cat II
	KK 07 47 27	Cross shaft, Cat III
13	KK 07 47 05	Plate, lower
14	KK 03 28 95	Hex screw M20 x 95 mm w/nut
15	KK 07 17 68	Tube
16	KK 01 12 62	Circlip
17	KK 07 47 04	Fix for cylinder
18	KK 03 28 03	Hex screw M20 x 110 mm w/nut
19	KK 01 10 48	Roll pin D12 x 60 mm
20	KK 01 29 51	Washer




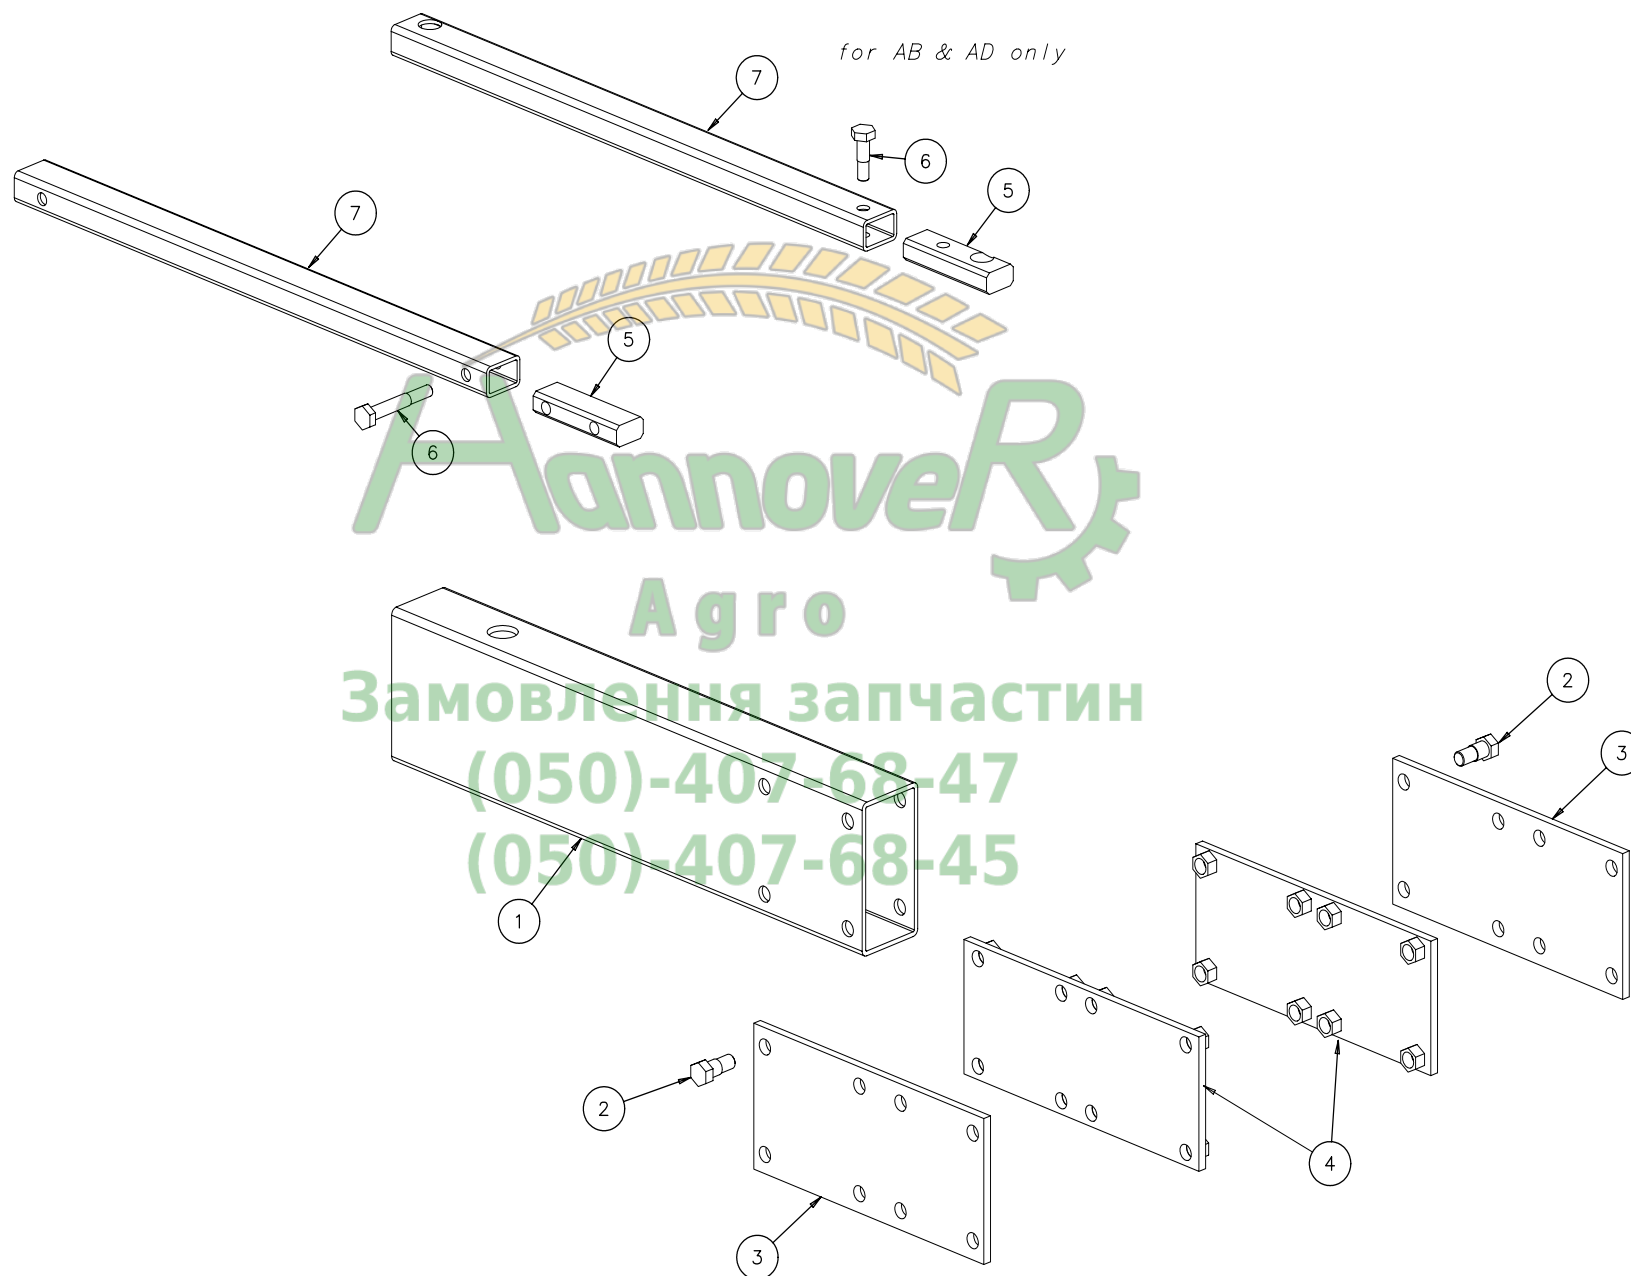


- | | | |
|---|-------------|--|
| 1 | KK 07 10 36 | Tube for -85 |
| | KK 07 10 37 | Tube for -100 |
| | KK 07 20 34 | Tube for -115 (LB only) |
| 2 | KK 03 28 50 | Hex screw M20 x 50 mm w/nut |
| 3 | KK 07 10 45 | Plate, outer |
| 4 | KK 07 10 47 | Plate, inner |
| 5 | KK 07 11 58 | Connecting piece |
| | KK 07 10 48 | Connecting piece (for AB & AD only) |
| 6 | KK 03 27 02 | Hex screw M16 x 110 mm w/nut |
| | KK 03 27 55 | Hex screw M16 x 55 mm w/nut (for AB & AD only) |
| 7 | KK 07 11 72 | Parallel rod for -85 |
| | KK 07 10 64 | Parallel rod (for AB & AD-85 only) |
| | KK 07 11 73 | Parallel rod for -100 |
| | KK 07 10 65 | Parallel rod (for AB & AD-100 only) |
| | KK 07 20 35 | Parallel rod for -115 (LB only) |



Замовлення запчастин
(050)-407-68-47
(050)-407-68-45

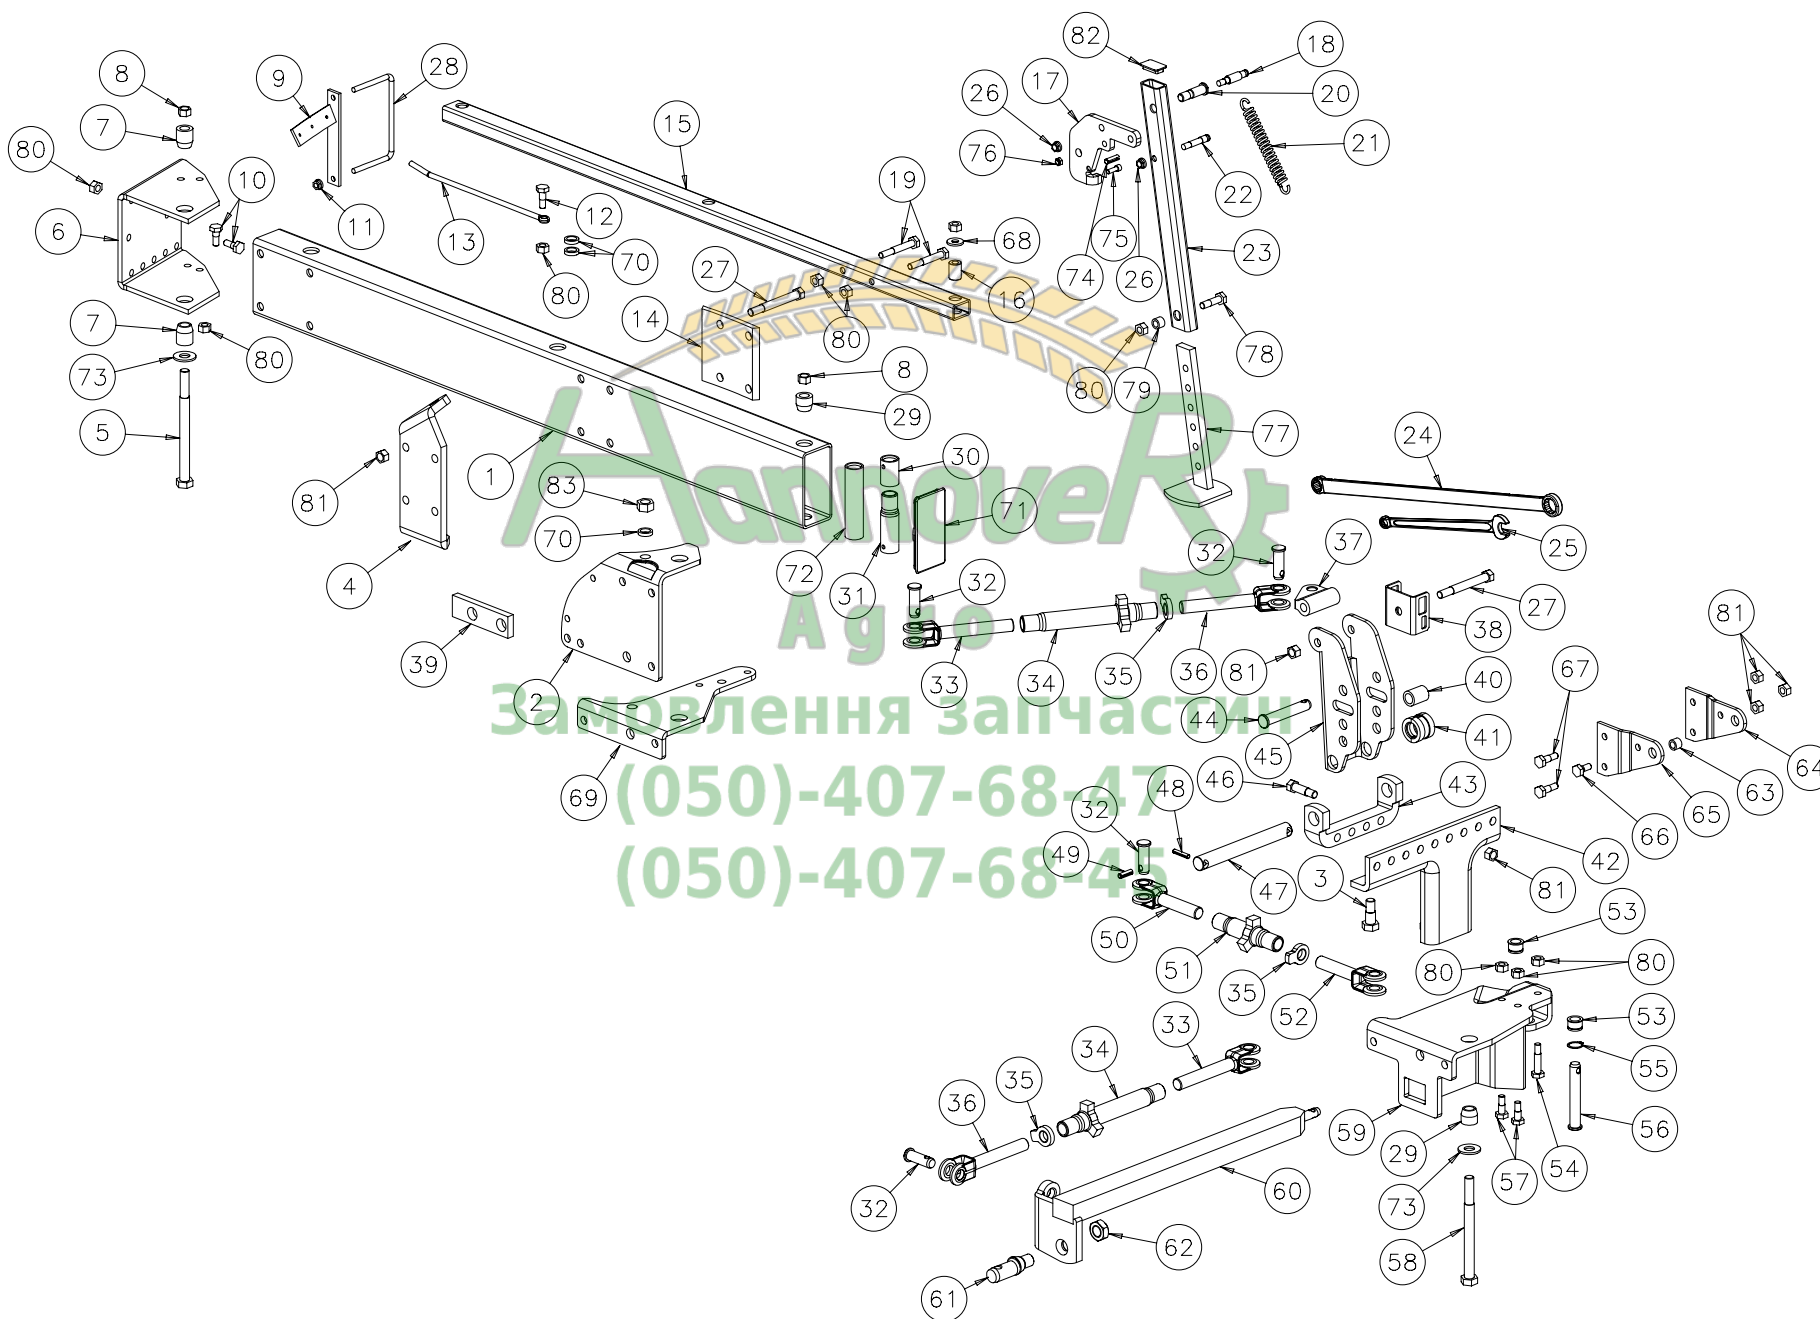


1	KK 07 10 26	Tube for AB-85, 2 furrow	24	KK 01 06 50	Spanner NV 27 - 36	58	KK 03 29 26	Hex screw M24 x 265 mm (for body in front)
	KK 07 10 27	Tube for AB-85, 3 furrow	25	KK 01 06 06	Spanner NV 19 - 27	59	KK 07 17 62	Plate, front
	KK 07 10 38	Tube for AB-85, 4 furrow	26	KK 01 60 13	Flange nut M14	60	KK 07 43 00	Cross shaft, L = 825 mm Cat I
	KK 07 10 28	Tube for AB-100, 2 furrow	27	KK 03 28 08	Hex screw M20 x 160 mm		KK 07 43 02	Cross shaft, L = 825 mm Cat II
	KK 07 10 29	Tube for AB-100, 3 furrow	28	KK 07 14 91	U-bolt M12		KK 07 43 04	Cross shaft, L = 920 mm Cat II
	KK 07 10 39	Tube for AB-100, 4 furrow	29	KK 07 14 03	Tube w/cone		KK 07 43 94	Cross shaft, L = 965 mm Cat III
2	KK 07 14 20	Plate, rear	30	KK 07 14 10	Bushing (Before 01.05.96)		KK 07 43 08	Cross shaft, L = 720 mm Cat II
3	KK 03 28 50	Hex screw M20 x 50 mm (Before 1992)	31	KK 07 14 11	Tube (Before 01.05.96)	61	KK 07 43 29	Bolt, Cat II
	KK 03 09 60	Hex screw M24 x 60 mm, rear (From 1992)	32	KK 01 03 15	Bolt w/head D25.3 x 60 mm		KK 07 43 92	Bolt, Cat III (From 01.10.95)
4	KK 07 17 67	Stay	33	KK 35 11 40	Screw, L	62	KK 01 60 34	Nut M24
5	KK 03 29 29	Hex screw M24 x 290 mm	34	KK 35 11 44	Tube		KK 01 60 54	Nut M30, Cat III (From 01.10.95)
6	KK 07 40 50	Holder for depth wheel	35	KK 35 11 48	Lock nut	63	KK 07 43 19	Spacing tube
7	KK 07 14 13	Tube w/cone	36	KK 35 11 39	Screw, R	64	KK 07 43 17	Plate, L
8	KK 01 58 41	Nut M24	37	KK 07 17 39	Fix for stay	65	KK 07 43 16	Plate, R
9	KK 07 14 94	Indicator screen	38	KK 07 17 26	Holder for spanner	66	KK 03 27 35	Hex screw M16 x 35 mm
10	KK 03 27 40	Hex screw M16 x 40 mm	39	KK 07 17 69	Stop	67	KK 03 27 50	Hex screw M16 x 50 mm
11	KK 01 60 38	Flange nut M12	40	KK 07 17 34	Bushing	68	KK 01 29 22	Washer
12	KK 03 27 45	Hex screw M16 x 45 mm	41	KK 07 02 15	Spacing tube	69	KK 07 14 22	Plate, lower
13	KK 07 18 53	Indicator (used on second furrow)	42	KK 07 17 60	Plate, front	70	KK 01 29 34	Washer (Before 1992)
14	KK 07 16 72	Plate	43	KK 07 17 02	Hinge		KK 01 29 36	Washer (used on second furrow)
15	KK 07 10 54	Parallel rod for AB-85, 2 furrow	44	KK 01 03 21	Bolt w/head D25.3 x 136 mm		KK 01 30 13	Washer D35 x d24.5 x 8 (used on first furrow)
	KK 07 10 55	Parallel rod for AB-85, 3 furrow	45	KK 07 17 00	Headstock	71	KK 01 09 10	Cover
	KK 07 11 60	Parallel rod for AB-85, 4 furrow	46	KK 03 28 70	Hex screw M20 x 70 mm	72	KK 07 14 17	Tube (From 01.05.96)
	KK 07 10 56	Parallel rod for AB-100, 2 furrow	47	KK 07 17 03	Bolt	73	KK 01 29 40	Washer
	KK 07 10 57	Parallel rod for AB-100, 3 furrow	48	KK 01 10 19	Roll pin D10 x 50 mm	74	KK 01 10 18	Pin D10 x 40 mm
	KK 07 11 61	Parallel rod for AB-100, 4 furrow	49	KK 01 07 00	Pin (Before 01.08.97)	75	KK 03 50 25	Cylinder screw M10 x 30 mm (From 01.05.99)
16	KK 07 14 04	Tube		KK 01 10 20	Roll pin D12 x 40 mm (From 01.08.97)	76	KK 01 60 06	Lock nut M10 (From 01.05.99)
17	KK 07 17 10	Fixing for machine stand	50	KK 35 11 73	Screw, L	77	KK 08 16 22	Adjustable machine stand (From 01.08.01)
18	KK 07 17 13	Bolt w/nut	51	KK 35 11 70	Tube	78	KK 03 27 60	Hex screw M16 x 60 mm (From 01.08.01)
19	KK 03 27 02	Hex screw M16 x 110 mm	52	KK 35 11 72	Screw, R	79	KK 07 43 19	Bushing (From 01.08.01)
20	KK 07 17 12	Bolt w/nut for machine stand	53	KK 07 17 68	Bushing	80	KK 01 58 25	Nut M16 (From 01.08.01)
21	KK 07 17 11	Spring	54	KK 03 27 90	Hex screw M16 x 90 mm (for body in the front)	81	KK 01 58 30	Nut M20
22	KK 07 17 14	Bolt w/nut		KK 03 27 75	Hex screw M16 x 75 mm (for 2nd., 3rd. and 4th. body)	82	KK 01 09 09	Cover
23	KK 07 17 15	Machine stand for beam H = 700 (Before 01.08.01)	55	KK 01 12 62	Circlip	83	KK 01 58 41	Nut M24
	KK 07 15 24	Machine stand for beam H = 800 (Before 01.08.01)	56	KK 01 03 23	Bolt w/head D25.3 x 150 mm			
	KK 08 16 24	Tube for machine stand (From 01.08.01)	57	KK 03 27 45	Hex screw M16 x 45 mm			

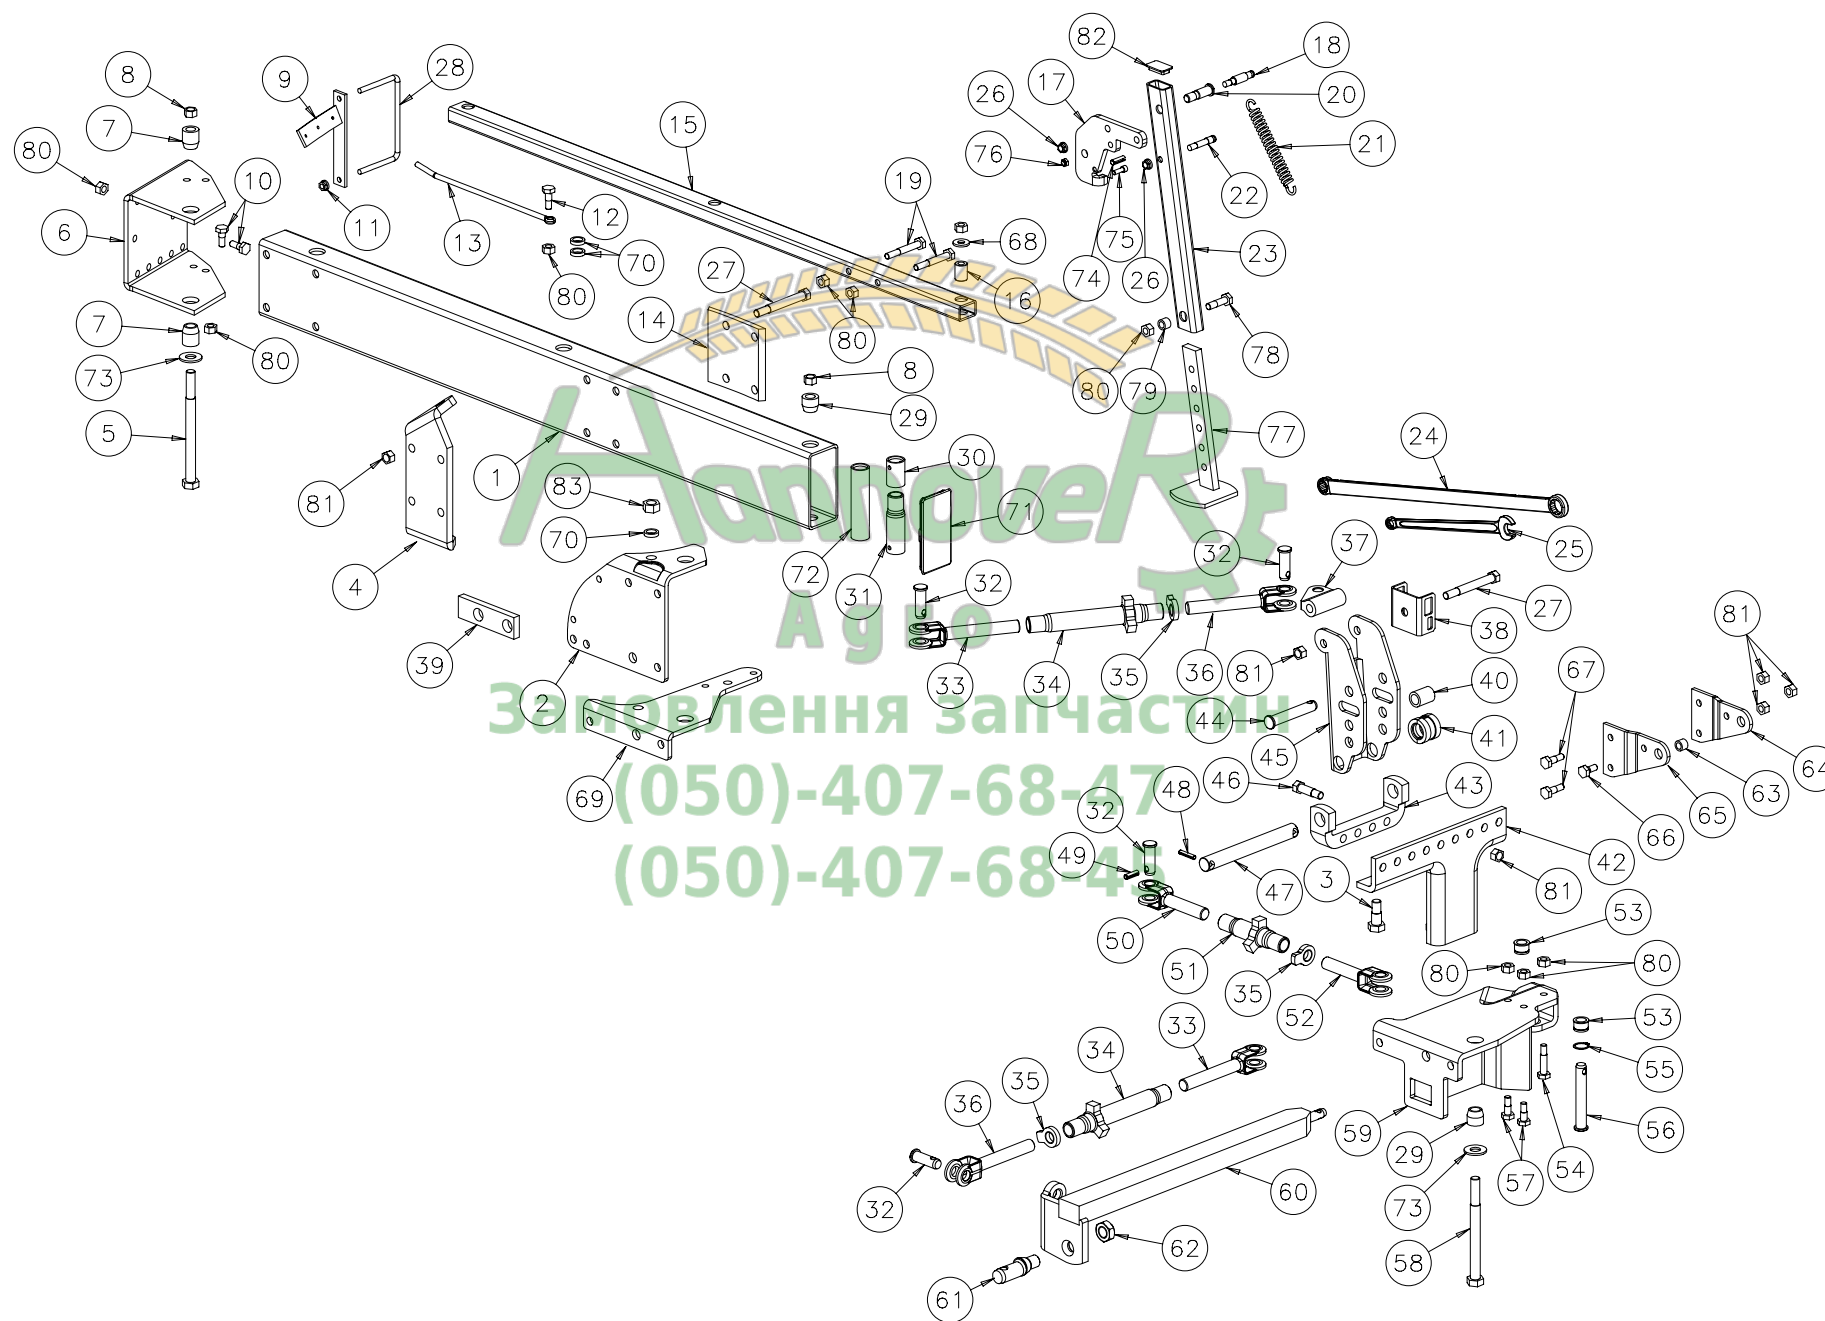

Not ill.	KK 07 14 12	Tube cpl.
	KK 36 11 16	Turnbuckle cpl. (520 - 720) (pos. 33 - 36)
	KK 36 11 20	Turnbuckle cpl. (390 - 520) (pos. 35, 50 - 52)
	KK 07 04 20	Set cpl. (pos. 63 - 67)
	KK 07 14 12	Tube cpl.
	KK 08 01 87	Machine stand cpl. (From 01.08.01)



Замовлення запчастин
(050)-407-68-47
(050)-407-68-45

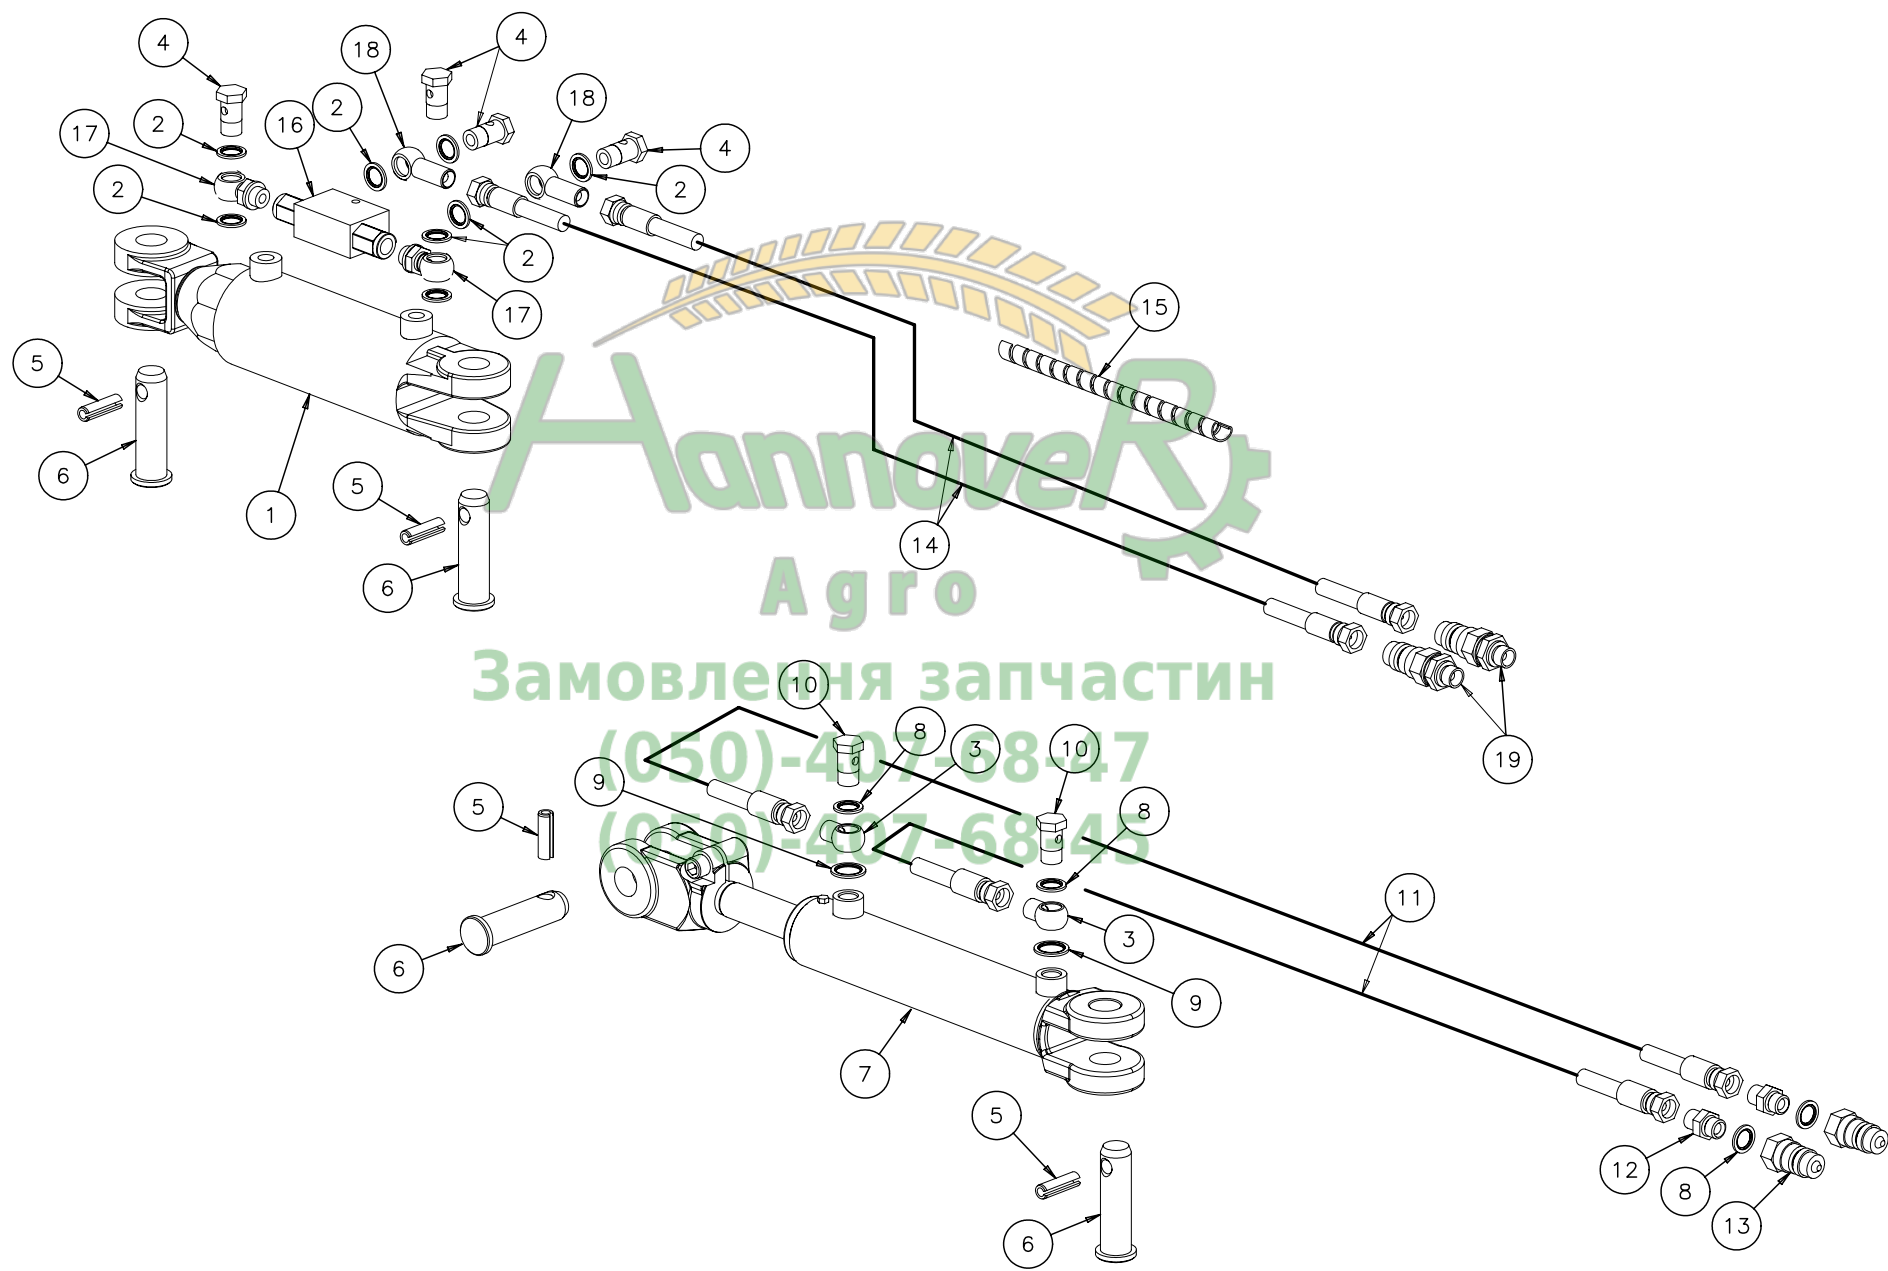

1	KK 35 24 95	Cylinder w/stop D75 x 130 mm cpl. (see plate no. 1091)
2	KK 01 15 85	Gasket ring 3/8"
3	KK 01 20 62	Banjo 3/8" - 3/8"
4	KK 01 20 59	Banjo bolt 3/8" x 31
5	KK 01 07 00	Pin (Before 01.08.97)
	KK 01 10 20	Roll pin D12 x 40 mm (From 01.08.97)
6	KK 01 03 28	Bolt w/head D25.3 x 78 mm
7	KK 35 23 50	Cylinder for alignment D50 x 200 mm without stop cpl. (see plate no. 473) (Before 01.08.96)
	KK 35 37 01	Hydraulic cylinder D50 x 200 mm cpl. (see plate no. 525) (From 01.08.96) (Before 01.04.01)
	KK 35 39 01	Hydraulic cylinder D50 x 200 mm cpl. (see plate no. 1192) (From 01.04.01)
8	KK 01 15 65	Gasket ring 1/2" (Before 01.07.97)
	KK 01 15 85	Gasket ring 3/8" (From 01.07.97)
9	KK 01 21 77	Gasket ring
10	KK 01 21 46	Banjo bolt 1/2" w/1.0 mm choke (Before 01.07.97)
	KK 01 20 81	Banjo bolt 3/8" w/1.0 mm choke (From 01.07.97)
11	KK 01 22 27	Hose 3/8", L = 1600 mm
12	KK 01 20 60	Threaded couling 3/8" - 1/2" (Before 01.07.97)
	KK 01 22 61	Threaded coupling 3/8" - 3/8" (From 01.07.97)
13	KK 01 21 14	Quick coupling
14	KK 01 27 92	Hose 1/4", L = 1750 mm
15	KK 01 15 96	Hose wrapper 12.5 x 250 mm
16	KK 01 25 08	Lock valve double 3/8" (From 15.02.00)
17	KK 01 25 48	Banjo w/adjustable end 3/8" (From 15.02.00)
18	KK 01 25 76	Banjo 3/8", H = 17 (From 15.02.00)
19	KK 01 21 58	Quick coupling 1/2" - 3/8" (From 15.02.00)
Not ill.	KK 35 19 34	Hydraulic alignment cpl.
	KK 35 25 26	Hydraulic furrow width adjustment cpl.





1	KK 35 33 53	Clevis
2	KK 01 18 78	Ring D45 x 2.5 x 1.3
3	KK 01 18 65	O - ring D40 x 4
4	KK 35 33 50	Stop
5	KK 01 19 13	Scraper D32/D44 x 7/10
6	KK 01 19 53	Piston rod packing D32/D40 x 6
7	KK 35 22 61	Endcap D75/D32 cpl.
8	KK 01 18 61	Ring Ø70 x 2.5 x 1.3
9	KK 01 18 02	O - ring D70 x 3 mm
10	KK 35 33 51	Piston rod w/piston D75/D32
11	KK 01 19 06	Piston packing D75/D55 x 22.4
12	KK 35 33 52	Cylinder tube w/clevis cap
Not ill.	KK 06 02 21	Glue 3 ml "Locktite 271"
	KK 01 20 25	Packings cpl. D75/D32
	KK 35 24 95	Cylinder D75 x 130 mm cpl.



Замовлення запчастин
(050)-407-68-47
(050)-407-68-45



1	KK 01 19 15	Packing (Before 01.11.90)
	KK 01 19 59	Packing (From 01.11.90)
2	KK 35 22 66	Piston rod w/piston (From 01.11.90)
3	KK 35 22 60	Rod clevis
4	KK 03 25 50	Hex screw M10 x 50 mm w/nut
5	KK 01 20 60	Threaded coupling
6	KK 01 15 65	Gasket ring 1/2"
7	KK 01 18 10	O-ring D44 x 3 mm
8	KK 35 22 80	Cylinder tube
9	KK 35 22 52	Clevis cap
10	KK 01 15 94	Plug
11	KK 35 22 90	Tie rod w/nut
12	KK 35 22 58	Rod cap
13	KK 01 19 52	Packing
14	KK 01 19 09	Scraper
Not ill.	KK 35 23 50	Cylinder D50 x 200 mm without threaded coupling cpl.
	KK 35 23 52	Cylinder D50 x 200 mm w/twisted end cap cpl.
	KK 01 19 69	Packings cpl. (From 01.11.90)
	KK 01 19 75	Seal kit cpl. (Before 01.11.90)



Замовлення запчастин
(050)-407-68-47
(050)-407-68-45



1	KK 35 37 30	Cylinder tube (for cylinder KK 35 37 01 and KK 35 37 02)
	KK 35 37 31	Cylinder tube (for cylinder KK 35 37 03)
2	KK 03 20 02	Screw M6 x 10 mm
3	KK 35 37 21	Piston
4	KK 01 17 30	Piston packing
5	KK 01 17 29	O-ring
6	KK 35 37 40	Piston rod (for cylinder KK 35 37 01 and KK 35 37 03)
	KK 35 37 41	Piston rod (for cylinder KK 35 37 02)
7	KK 01 17 98	O-ring
8	KK 01 17 99	Support ring
9	KK 01 17 33	Ring (Before 15.03.99)
	KK 35 37 92	Lock spring (From 15.03.99)
10	KK 35 37 20	Packing seal
11	KK 01 17 31	Piston rod packing
12	KK 01 17 32	Scraper
13	KK 03 20 16	Screw M10 x 45 mm
14	KK 35 37 22	Clevis

Not ill.	KK 35 37 42	Stop (for cylinder KK 35 37 02)
	KK 35 37 25	Packings cpl.
	KK 35 37 01	Hydraulic cylinder for furrow with adjustment D50 x 200 mm cpl.
	KK 35 37 02	Hydraulic cylinder D50 x 200 mm w/stop cpl.
	KK 35 37 03	Hydraulic cylinder D50 x 200 mm w/90° twisted end cap cpl.



Замовлення запчастин
(050)-407-68-47
(050)-407-68-45



1	KK 35 39 34	Cylinder tube (for cylinder KK 35 39 01 and KK 35 39 02)
	KK 35 39 35	Cylinder tube (for cylinder KK 35 39 03)
2	KK 01 03 90	Piston packing
3	KK 35 39 36	Piston rod (for cylinder KK 35 39 01 and KK 35 39 03)
	KK 35 39 37	Piston rod (for cylinder KK 35 39 02)
4	KK 01 65 17	O-ring D42 x 4 mm
5	KK 03 33 06	Hex screw M6 x 8 mm
6	KK 35 39 26	Packing seal
7	KK 01 30 91	Piston rod packing
8	KK 01 30 89	Scraper
9	KK 03 21 10	Set screw M8 x 8 mm
10	KK 35 39 46	Pin for stop (for cylinder KK 35 39 02)
11	KK 35 39 44	Stop (for cylinder KK 35 39 02)
12	UH 82 56 40	Cylinder screw M12 x 40 mm (for cylinder KK 35 39 02)
13	KK 35 39 22	Clevis
Not ill.	KK 01 30 86	Packings cpl.
	KK 35 39 01	Hydraulic cylinder D50 x 200 mm cpl.
	KK 35 39 02	Hydraulic cylinder D50 x 200 mm w/stop cpl.
	KK 35 39 03	Hydraulic cylinder D50 x 200 mm w/90° twisted end cap cpl.




Замовлення запчастин
(050)-407-68-47
(050)-407-68-45



1	KK 02 99 20	Grease nipple
2	KK 06 41 18	Spindle w/bearing
3	KK 06 41 17	Threaded piece
4	KK 06 40 21	Holder for spindle
5	KK 03 26 45	Hex screw M12 x 45 mm
6	KK 03 27 40	Hex screw M16 x 40 mm
7	KK 06 40 26	Fixing bracket
8	KK 01 10 05	Roll pin D10 x 70 mm
9	KK 06 41 30	Arm for depth wheel w/axle
10	KK 03 36 30	Hex screw M12 x 30 mm
11	KK 07 40 53	Axle
12	KK 07 40 52	Wheel, steel
13	KK 09 42 06	Tyre 6.00 x 9
	KK 01 13 78	Rim
	KK 09 42 07	Inner tube
14	KK 01 08 06	Packing
15	KK 01 12 00	Bearing
16	KK 01 00 96	Spacing tube
17	KK 01 12 31	Bearing
18	KK 01 29 22	Washer
19	KK 01 29 40	Washer
20	KK 01 60 22	Nut M30
21	KK 07 17 40	Holder for scraper
22	KK 07 17 29	Scraper for 6.00 x 9, rubber wheel
	KK 07 40 54	Scraper for 500 x 165, steel wheel
23	KK 01 29 19	Washer
24	KK 01 60 10	Lock nut M16
25	KK 01 11 67	End cap
26	KK 01 14 00	Cover kit 6.00 x 9 cpl.
27	KK 01 58 17	Nut M12
28	KK 01 58 25	Nut M16
Not ill.	KK 07 04 59	Wheel w/axle 500 x 165 cpl.
	KK 07 04 94	Wheel w/axle and tyre 6.00 x 9 cpl.
	KK 06 04 49	Depth wheel, steel 500 x 165 cpl.
	KK 06 04 68	Depth wheel, rubber 6.00 x 9 cpl.



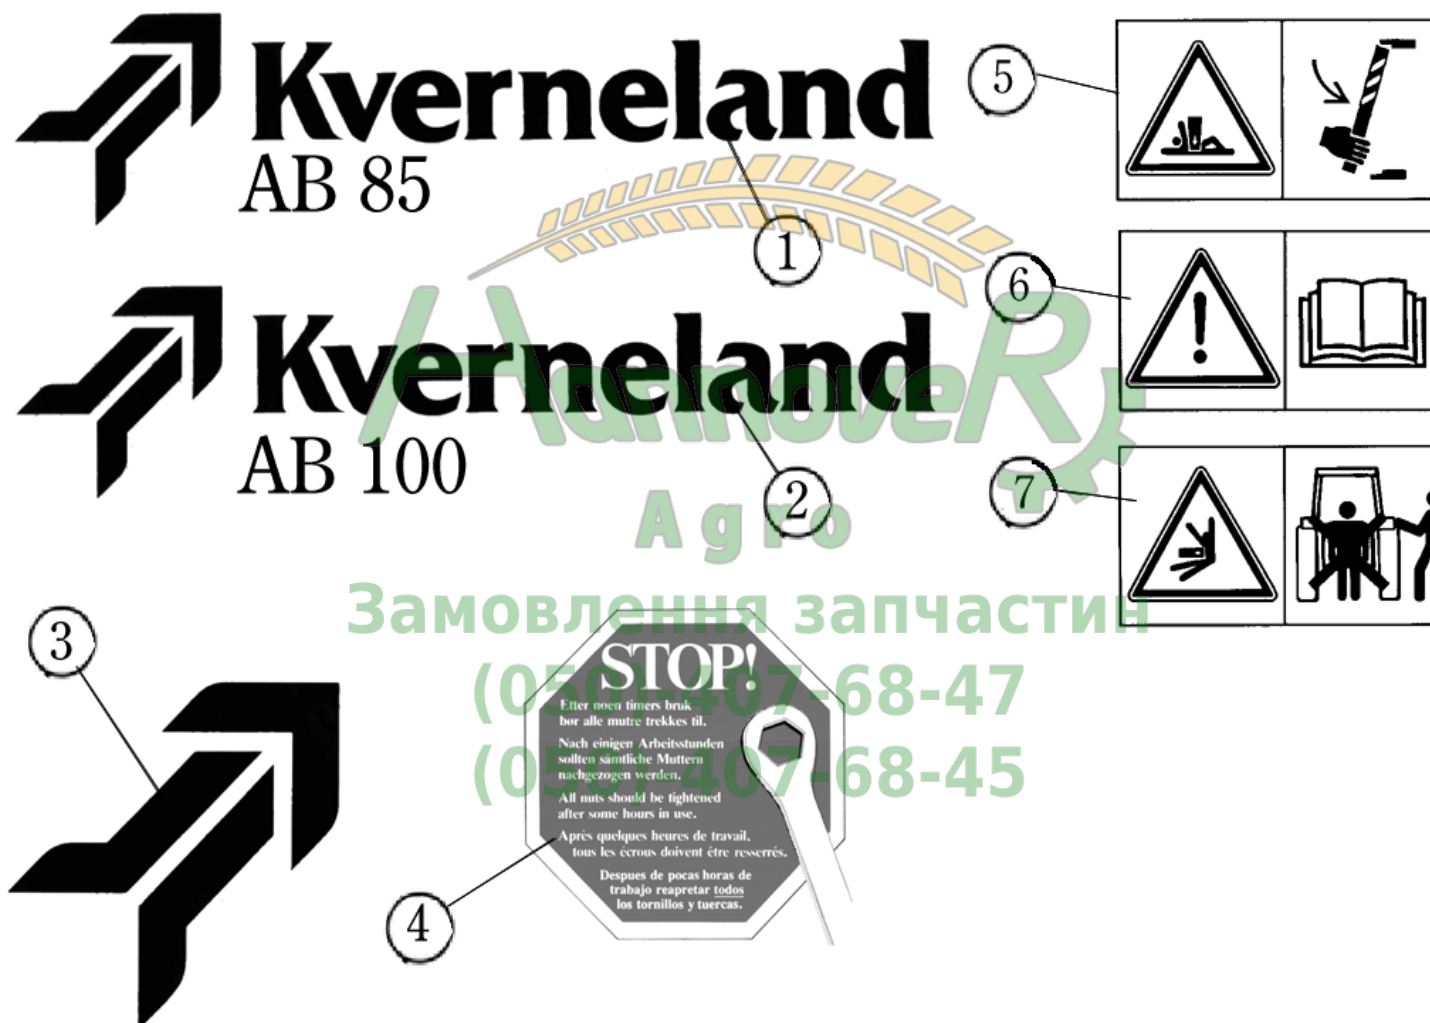

1	KK 70 95 68	Kverneland AB-85
2	KK 70 95 69	Kverneland AB-100
3	KK 70 97 37	Arrow
4	KK 70 94 79	Stop
5	KK 70 98 43	Safety sign, parking support
6	KK 70 98 44	Safety sign, read instruction manual
7	KK 70 98 41	Safety sign, danger, tractor/implement
Not ill.	KK 70 98 47	Patent label
	KK 70 91 24	Oil manual



Замовлення запчастин
(050)-407-68-47
(050)-407-68-45

Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page
KK 01 00 96	51	KK 01 10 05	51	KK 01 17 50	27	KK 01 29 19	15	KK 01 32 34	5	KK 01 58 17	51	KK 01 60 38	37	KK 03 27 40	13
KK 01 01 55	11	KK 01 10 18	37	KK 01 17 98	47	KK 01 29 19	5	KK 01 32 34	9	KK 01 58 25	17	KK 01 60 54	37	KK 03 27 40	15
KK 01 01 55	13	KK 01 10 19	37	KK 01 17 99	47	KK 01 29 19	51	KK 01 33 32	13	KK 01 58 25	17	KK 01 65 17	49	KK 03 27 40	19
KK 01 01 55	19	KK 01 10 20	33	KK 01 18 02	43	KK 01 29 19	9	KK 01 33 32	15	KK 01 58 25	17	KK 02 97 27	29	KK 03 27 40	37
KK 01 01 55	7	KK 01 10 20	37	KK 01 18 10	45	KK 01 29 22	13	KK 01 33 32	15	KK 01 58 25	19	KK 02 99 18	29	KK 03 27 40	51
KK 01 01 56	11	KK 01 10 20	41	KK 01 18 61	43	KK 01 29 22	15	KK 01 33 32	17	KK 01 58 25	19	KK 02 99 20	21	KK 03 27 40	7
KK 01 01 56	13	KK 01 10 48	33	KK 01 18 65	43	KK 01 29 22	17	KK 01 33 32	5	KK 01 58 25	19	KK 02 99 20	23	KK 03 27 45	37
KK 01 01 56	19	KK 01 11 67	51	KK 01 18 66	23	KK 01 29 22	37	KK 01 33 32	9	KK 01 58 25	27	KK 02 99 20	25	KK 03 27 45	37
KK 01 01 56	7	KK 01 12 00	51	KK 01 18 66	27	KK 01 29 22	5	KK 01 33 32	9	KK 01 58 25	29	KK 02 99 20	51	KK 03 27 50	11
KK 01 03 15	37	KK 01 12 31	51	KK 01 18 78	43	KK 01 29 22	51	KK 01 33 33	13	KK 01 58 25	31	KK 03 09 60	37	KK 03 27 50	13
KK 01 03 21	37	KK 01 12 59	23	KK 01 19 06	43	KK 01 29 22	9	KK 01 33 33	7	KK 01 58 25	37	KK 03 13 40	21	KK 03 27 50	17
KK 01 03 23	37	KK 01 12 59	27	KK 01 19 09	45	KK 01 29 27	5	KK 01 33 33	9	KK 01 58 25	51	KK 03 13 40	25	KK 03 27 50	19
KK 01 03 28	41	KK 01 12 62	33	KK 01 19 13	43	KK 01 29 27	9	KK 01 33 46	11	KK 01 58 30	15	KK 03 20 02	47	KK 03 27 50	37
KK 01 03 43	33	KK 01 12 62	37	KK 01 19 15	45	KK 01 29 29	11	KK 01 33 46	13	KK 01 58 30	27	KK 03 20 16	47	KK 03 27 50	7
KK 01 03 90	49	KK 01 12 66	21	KK 01 19 52	45	KK 01 29 29	13	KK 01 33 46	15	KK 01 58 30	29	KK 03 21 10	49	KK 03 27 50	9
KK 01 04 85	21	KK 01 12 66	23	KK 01 19 53	43	KK 01 29 29	19	KK 01 33 46	19	KK 01 58 30	37	KK 03 25 40	27	KK 03 27 55	35
KK 01 04 85	23	KK 01 12 66	25	KK 01 19 59	45	KK 01 29 29	7	KK 01 33 46	7	KK 01 58 32	5	KK 03 25 50	45	KK 03 27 60	37
KK 01 04 85	25	KK 01 12 66	27	KK 01 19 69	45	KK 01 29 34	37	KK 01 33 46	7	KK 01 58 34	13	KK 03 26 45	51	KK 03 27 65	11
KK 01 05 32	23	KK 01 12 72	21	KK 01 19 75	45	KK 01 29 36	37	KK 01 33 46	9	KK 01 58 34	15	KK 03 26 50	29	KK 03 27 65	13
KK 01 05 32	27	KK 01 12 72	23	KK 01 20 25	43	KK 01 29 40	37	KK 01 33 61	11	KK 01 58 34	9	KK 03 26 65	29	KK 03 27 65	19
KK 01 05 72	23	KK 01 12 72	25	KK 01 20 59	41	KK 01 29 40	51	KK 01 33 61	13	KK 01 58 35	25	KK 03 26 70	21	KK 03 27 65	21
KK 01 05 72	27	KK 01 12 92	21	KK 01 20 60	41	KK 01 29 51	33	KK 01 33 61	19	KK 01 58 41	31	KK 03 26 70	25	KK 03 27 65	23
KK 01 06 06	37	KK 01 12 92	25	KK 01 20 60	45	KK 01 30 01	15	KK 01 33 61	7	KK 01 58 41	37	KK 03 26 70	27	KK 03 27 65	25
KK 01 06 50	37	KK 01 13 78	51	KK 01 20 62	41	KK 01 30 13	37	KK 01 33 85	11	KK 01 58 41	37	KK 03 27 02	21	KK 03 27 65	7
KK 01 07 00	33	KK 01 14 00	51	KK 01 20 81	41	KK 01 30 86	49	KK 01 33 85	13	KK 01 60 01	29	KK 03 27 02	23	KK 03 27 70	29
KK 01 07 00	37	KK 01 15 65	41	KK 01 21 14	41	KK 01 30 89	49	KK 01 33 85	19	KK 01 60 06	37	KK 03 27 02	25	KK 03 27 74	29
KK 01 07 00	41	KK 01 15 65	45	KK 01 21 46	41	KK 01 30 91	49	KK 01 33 85	7	KK 01 60 07	29	KK 03 27 02	35	KK 03 27 75	11
KK 01 07 60	21	KK 01 15 85	41	KK 01 21 58	41	KK 01 32 28	11	KK 01 58 13	17	KK 01 60 10	51	KK 03 27 02	37	KK 03 27 75	13
KK 01 07 60	25	KK 01 15 85	41	KK 01 21 77	41	KK 01 32 28	13	KK 01 58 13	17	KK 01 60 13	17	KK 03 27 25	5	KK 03 27 75	19
KK 01 07 60	27	KK 01 15 94	45	KK 01 22 27	41	KK 01 32 28	13	KK 01 58 16	31	KK 01 60 13	37	KK 03 27 25	9	KK 03 27 75	37
KK 01 07 72	21	KK 01 15 96	41	KK 01 22 61	41	KK 01 32 28	15	KK 01 58 17	17	KK 01 60 15	11	KK 03 27 30	13	KK 03 27 75	7
KK 01 07 72	25	KK 01 17 29	47	KK 01 25 08	41	KK 01 32 28	17	KK 01 58 17	17	KK 01 60 15	13	KK 03 27 30	15	KK 03 27 90	33
KK 01 07 75	21	KK 01 17 30	47	KK 01 25 48	41	KK 01 32 28	19	KK 01 58 17	17	KK 01 60 15	17	KK 03 27 35	13	KK 03 27 90	37
KK 01 07 75	25	KK 01 17 31	47	KK 01 25 76	41	KK 01 32 28	7	KK 01 58 17	17	KK 01 60 15	19	KK 03 27 35	37	KK 03 27 95	31
KK 01 08 06	51	KK 01 17 32	47	KK 01 27 92	41	KK 01 32 28	9	KK 01 58 17	17	KK 01 60 15	7	KK 03 27 35	5	KK 03 28 03	33
KK 01 09 09	37	KK 01 17 33	47	KK 01 29 06	31	KK 01 32 34	13	KK 01 58 17	19	KK 01 60 22	51	KK 03 27 35	9	KK 03 28 08	37
KK 01 09 10	37	KK 01 17 50	23	KK 01 29 19	13	KK 01 32 34	15	KK 01 58 17	29	KK 01 60 34	37	KK 03 27 40	11	KK 03 28 50	35

Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page
KK 03 28 50	37	KK 03 31 85	15	KK 05 30 90	19	KK 06 06 17	21	KK 06 41 30	51	KK 07 03 98	9	KK 07 12 40	29	KK 07 17 68	37
KK 03 28 65	33	KK 03 32 51	13	KK 05 30 90	5	KK 06 06 24	21	KK 06 61 02	21	KK 07 03 99	9	KK 07 14 03	37	KK 07 17 69	37
KK 03 28 70	37	KK 03 32 51	15	KK 05 30 90	7	KK 06 06 24	25	KK 06 61 02	25	KK 07 04 20	39	KK 07 14 04	37	KK 07 17 93	33
KK 03 28 80	29	KK 03 32 51	17	KK 05 30 90	9	KK 06 06 26	25	KK 06 61 08	21	KK 07 04 59	51	KK 07 14 10	37	KK 07 17 94	33
KK 03 28 90	29	KK 03 32 51	5	KK 05 33 87	13	KK 06 06 27	25	KK 06 61 08	25	KK 07 04 94	51	KK 07 14 11	37	KK 07 18 53	37
KK 03 28 90	33	KK 03 32 51	9	KK 05 33 87	5	KK 06 06 57	31	KK 06 61 67	25	KK 07 06 26	21	KK 07 14 12	39	KK 07 20 34	35
KK 03 28 95	33	KK 03 32 56	13	KK 05 33 87	9	KK 06 07 03	29	KK 06 61 67	27	KK 07 06 26	25	KK 07 14 12	39	KK 07 20 35	35
KK 03 29 26	37	KK 03 32 56	17	KK 05 60 02	21	KK 06 15 40	29	KK 06 68 11	31	KK 07 06 39	31	KK 07 14 13	37	KK 07 30 00	5
KK 03 29 29	37	KK 03 32 56	5	KK 05 60 02	27	KK 06 20 25	13	KK 06 68 11	31	KK 07 06 40	5	KK 07 14 17	37	KK 07 30 01	5
KK 03 30 04	13	KK 03 32 56	9	KK 05 60 03	21	KK 06 20 25	9	KK 06 68 12	31	KK 07 06 40	9	KK 07 14 20	37	KK 07 30 02	17
KK 03 30 06	17	KK 03 32 86	13	KK 05 60 03	25	KK 06 30 90	11	KK 06 68 61	31	KK 07 06 41	5	KK 07 14 22	37	KK 07 30 02	5
KK 03 30 06	31	KK 03 32 86	15	KK 05 60 03	27	KK 06 30 90	13	KK 06 68 68	31	KK 07 06 41	9	KK 07 14 91	37	KK 07 30 03	17
KK 03 30 07	31	KK 03 32 86	17	KK 05 61 12	21	KK 06 30 90	13	KK 06 68 69	31	KK 07 06 42	5	KK 07 14 94	37	KK 07 30 03	5
KK 03 30 16	17	KK 03 32 86	5	KK 05 61 12	25	KK 06 30 90	15	KK 06 68 73	31	KK 07 06 42	9	KK 07 15 00	15	KK 07 30 04	17
KK 03 31 00	13	KK 03 32 86	9	KK 05 61 14	21	KK 06 30 90	17	KK 06 68 80	31	KK 07 06 53	31	KK 07 15 00	29	KK 07 30 04	5
KK 03 31 00	15	KK 03 32 95	13	KK 05 61 14	25	KK 06 30 90	19	KK 06 68 81	31	KK 07 10 26	37	KK 07 15 04	29	KK 07 30 05	17
KK 03 31 00	5	KK 03 32 95	17	KK 05 61 15	21	KK 06 30 90	5	KK 06 70 07	29	KK 07 10 27	37	KK 07 15 07	29	KK 07 30 05	5
KK 03 31 00	9	KK 03 32 95	5	KK 05 61 15	25	KK 06 30 90	7	KK 06 70 08	29	KK 07 10 28	37	KK 07 15 24	37	KK 07 30 06	17
KK 03 31 07	15	KK 03 32 95	9	KK 05 61 16	21	KK 06 30 90	9	KK 06 70 42	29	KK 07 10 29	37	KK 07 16 72	37	KK 07 30 06	5
KK 03 31 07	17	KK 03 33 06	49	KK 05 61 16	25	KK 06 30 91	15	KK 06 70 63	29	KK 07 10 36	35	KK 07 17 00	37	KK 07 30 07	17
KK 03 31 07	5	KK 03 33 32	5	KK 05 61 56	21	KK 06 30 91	17	KK 06 70 64	29	KK 07 10 37	35	KK 07 17 02	37	KK 07 30 07	5
KK 03 31 07	9	KK 03 36 20	29	KK 05 61 56	25	KK 06 30 91	5	KK 07 00 41	25	KK 07 10 38	37	KK 07 17 03	37	KK 07 30 08	5
KK 03 31 07	9	KK 03 36 30	51	KK 05 61 90	21	KK 06 30 92	15	KK 07 00 43	25	KK 07 10 39	37	KK 07 17 10	37	KK 07 30 09	5
KK 03 31 08	15	KK 03 42 25	31	KK 05 61 90	25	KK 06 30 92	17	KK 07 02 15	37	KK 07 10 45	35	KK 07 17 11	37	KK 07 30 16	15
KK 03 31 11	17	KK 03 42 28	31	KK 05 61 90	27	KK 06 30 92	5	KK 07 02 92	15	KK 07 10 47	35	KK 07 17 12	37	KK 07 30 30	17
KK 03 31 16	17	KK 03 42 50	31	KK 05 68 73	31	KK 06 33 88	13	KK 07 02 93	15	KK 07 10 48	35	KK 07 17 13	37	KK 07 30 30	5
KK 03 31 17	17	KK 03 44 46	31	KK 05 70 63	29	KK 06 33 88	5	KK 07 02 94	15	KK 07 10 54	37	KK 07 17 14	37	KK 07 30 31	17
KK 03 31 18	13	KK 03 50 20	29	KK 05 70 64	29	KK 06 33 88	9	KK 07 03 88	9	KK 07 10 55	37	KK 07 17 15	37	KK 07 30 31	5
KK 03 31 19	13	KK 03 50 21	29	KK 05 70 65	29	KK 06 36 07	15	KK 07 03 89	9	KK 07 10 56	37	KK 07 17 26	37	KK 07 30 40	5
KK 03 31 73	15	KK 03 50 25	37	KK 05 70 66	29	KK 06 36 07	7	KK 07 03 90	5	KK 07 10 57	37	KK 07 17 29	51	KK 07 30 41	5
KK 03 31 74	13	KK 03 51 14	23	KK 05 70 67	29	KK 06 36 07	9	KK 07 03 91	5	KK 07 10 64	35	KK 07 17 34	37	KK 07 30 42	17
KK 03 31 75	15	KK 05 07 06	29	KK 05 70 68	29	KK 06 38 01	5	KK 07 03 92	9	KK 07 10 65	35	KK 07 17 39	37	KK 07 30 42	5
KK 03 31 75	15	KK 05 30 90	11	KK 05 70 89	29	KK 06 38 01	5	KK 07 03 93	9	KK 07 11 58	35	KK 07 17 40	51	KK 07 30 43	17
KK 03 31 75	17	KK 05 30 90	13	KK 06 02 21	43	KK 06 40 21	51	KK 07 03 94	5	KK 07 11 60	37	KK 07 17 60	37	KK 07 30 43	5
KK 03 31 75	5	KK 05 30 90	13	KK 06 04 49	51	KK 06 40 26	51	KK 07 03 95	5	KK 07 11 61	37	KK 07 17 62	37	KK 07 30 44	17
KK 03 31 75	9	KK 05 30 90	15	KK 06 04 68	51	KK 06 41 17	51	KK 07 03 96	9	KK 07 11 72	35	KK 07 17 67	37	KK 07 30 44	5
KK 03 31 81	15	KK 05 30 90	17	KK 06 06 10	21	KK 06 41 18	51	KK 07 03 97	9	KK 07 11 73	35	KK 07 17 68	33	KK 07 30 45	17

Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page
KK 07 30 45	5	KK 07 30 81	13	KK 07 32 42	9	KK 07 33 00	5	KK 07 34 65	13	KK 07 36 35	11	KK 07 38 34	15	KK 07 64 00	23
KK 07 30 54	13	KK 07 30 81	15	KK 07 32 45	15	KK 07 33 00	9	KK 07 34 65	15	KK 07 36 35	13	KK 07 38 35	15	KK 07 64 06	23
KK 07 30 54	15	KK 07 30 81	17	KK 07 32 46	15	KK 07 33 01	15	KK 07 34 70	13	KK 07 36 35	19	KK 07 38 36	15	KK 07 64 06	27
KK 07 30 54	17	KK 07 30 81	9	KK 07 32 50	5	KK 07 33 01	17	KK 07 34 70	15	KK 07 36 35	7	KK 07 38 42	9	KK 07 64 07	23
KK 07 30 54	9	KK 07 30 88	13	KK 07 32 51	5	KK 07 33 01	5	KK 07 34 71	13	KK 07 38 00	13	KK 07 40 50	37	KK 07 64 07	27
KK 07 30 55	13	KK 07 30 88	15	KK 07 32 56	17	KK 07 33 01	9	KK 07 34 71	15	KK 07 38 00	5	KK 07 40 52	51	KK 07 64 09	23
KK 07 30 55	15	KK 07 30 88	17	KK 07 32 56	5	KK 07 33 03	15	KK 07 36 07	15	KK 07 38 00	9	KK 07 40 53	51	KK 07 64 09	27
KK 07 30 55	17	KK 07 30 88	5	KK 07 32 57	17	KK 07 33 04	15	KK 07 36 07	7	KK 07 38 01	13	KK 07 40 54	51	KK 07 64 10	23
KK 07 30 55	9	KK 07 30 88	9	KK 07 32 57	5	KK 07 33 10	5	KK 07 36 07	9	KK 07 38 01	5	KK 07 43 00	37	KK 07 64 10	27
KK 07 30 56	13	KK 07 30 89	13	KK 07 32 60	5	KK 07 33 10	9	KK 07 36 08	13	KK 07 38 01	9	KK 07 43 02	37	KK 07 64 99	23
KK 07 30 56	15	KK 07 30 89	15	KK 07 32 61	5	KK 07 33 11	5	KK 07 36 08	15	KK 07 38 03	15	KK 07 43 04	37	KK 07 64 99	27
KK 07 30 56	17	KK 07 30 89	17	KK 07 32 63	5	KK 07 33 11	9	KK 07 36 08	17	KK 07 38 03	5	KK 07 43 08	37	KK 07 65 75	23
KK 07 30 56	9	KK 07 30 89	5	KK 07 32 64	5	KK 07 33 28	13	KK 07 36 08	5	KK 07 38 03	5	KK 07 43 16	37	KK 07 68 12	31
KK 07 30 57	13	KK 07 30 89	9	KK 07 32 66	5	KK 07 33 29	13	KK 07 36 08	9	KK 07 38 04	9	KK 07 43 17	37	KK 07 68 13	31
KK 07 30 57	15	KK 07 30 91	13	KK 07 32 66	9	KK 07 33 32	15	KK 07 36 09	13	KK 07 38 04	9	KK 07 43 19	37	KK 07 68 17	31
KK 07 30 57	17	KK 07 30 91	15	KK 07 32 67	5	KK 07 33 33	15	KK 07 36 09	15	KK 07 38 05	15	KK 07 43 19	37	KK 07 68 18	31
KK 07 30 57	9	KK 07 30 91	17	KK 07 32 67	9	KK 07 33 38	13	KK 07 36 09	17	KK 07 38 05	9	KK 07 43 29	37	KK 07 68 25	31
KK 07 30 62	13	KK 07 30 91	5	KK 07 32 72	13	KK 07 33 39	13	KK 07 36 09	5	KK 07 38 07	5	KK 07 43 92	37	KK 07 68 26	31
KK 07 30 62	15	KK 07 30 91	9	KK 07 32 72	15	KK 07 33 50	13	KK 07 36 09	9	KK 07 38 08	5	KK 07 43 94	37	KK 07 68 33	31
KK 07 30 62	17	KK 07 30 92	13	KK 07 32 73	13	KK 07 33 51	13	KK 07 36 14	13	KK 07 38 10	15	KK 07 47 01	33	KK 07 68 34	31
KK 07 30 62	9	KK 07 30 92	15	KK 07 32 73	15	KK 07 33 52	13	KK 07 36 14	15	KK 07 38 11	15	KK 07 47 04	33	KK 07 68 58	31
KK 07 30 63	13	KK 07 30 92	17	KK 07 32 75	13	KK 07 33 53	13	KK 07 36 14	17	KK 07 38 12	15	KK 07 47 05	33	KK 07 68 58	31
KK 07 30 63	15	KK 07 30 92	5	KK 07 32 75	15	KK 07 33 54	13	KK 07 36 14	7	KK 07 38 13	15	KK 07 47 06	33	KK 07 68 59	31
KK 07 30 63	17	KK 07 30 92	9	KK 07 32 76	13	KK 07 34 06	5	KK 07 36 14	9	KK 07 38 15	15	KK 07 47 07	33	KK 07 68 72	31
KK 07 30 63	9	KK 07 32 24	9	KK 07 32 76	15	KK 07 34 07	5	KK 07 36 15	13	KK 07 38 16	15	KK 07 47 08	33	KK 07 69 43	31
KK 07 30 64	13	KK 07 32 25	9	KK 07 32 78	13	KK 07 34 11	5	KK 07 36 15	15	KK 07 38 17	15	KK 07 47 27	33	KK 07 69 44	31
KK 07 30 64	15	KK 07 32 27	9	KK 07 32 79	13	KK 07 34 12	5	KK 07 36 15	17	KK 07 38 20	15	KK 07 47 29	33	KK 07 70 00	29
KK 07 30 64	17	KK 07 32 28	9	KK 07 32 80	5	KK 07 34 14	5	KK 07 36 15	5	KK 07 38 21	15	KK 07 61 20	21	KK 07 70 01	29
KK 07 30 64	9	KK 07 32 30	17	KK 07 32 81	5	KK 07 34 15	5	KK 07 36 15	9	KK 07 38 22	15	KK 07 61 20	23	KK 07 70 05	29
KK 07 30 65	13	KK 07 32 30	9	KK 07 32 86	5	KK 07 34 17	9	KK 07 36 16	13	KK 07 38 26	13	KK 07 61 20	25	KK 07 70 11	29
KK 07 30 65	15	KK 07 32 31	17	KK 07 32 87	5	KK 07 34 18	9	KK 07 36 16	17	KK 07 38 26	9	KK 07 61 21	21	KK 07 70 12	29
KK 07 30 65	17	KK 07 32 31	9	KK 07 32 90	5	KK 07 34 35	9	KK 07 36 16	5	KK 07 38 26	9	KK 07 61 21	23	KK 07 70 20	29
KK 07 30 65	9	KK 07 32 36	9	KK 07 32 90	9	KK 07 34 36	9	KK 07 36 16	9	KK 07 38 29	13	KK 07 61 21	25	KK 08 01 87	39
KK 07 30 80	13	KK 07 32 37	9	KK 07 32 91	5	KK 07 34 40	9	KK 07 36 34	11	KK 07 38 29	9	KK 07 61 68	25	KK 08 16 22	37
KK 07 30 80	15	KK 07 32 39	9	KK 07 32 91	9	KK 07 34 41	9	KK 07 36 34	13	KK 07 38 30	5	KK 07 61 68	27	KK 08 16 24	37
KK 07 30 80	17	KK 07 32 40	9	KK 07 33 00	15	KK 07 34 64	13	KK 07 36 34	19	KK 07 38 31	5	KK 07 61 69	25	KK 08 32 10	17
KK 07 30 80	9	KK 07 32 41	9	KK 07 33 00	17	KK 07 34 64	15	KK 07 36 34	7	KK 07 38 31	9	KK 07 61 69	27	KK 08 32 11	17

Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page
KK 08 32 12 17		KK 08 33 00 17		KK 08 38 08 17		KK 09 42 06 51		KK 35 11 44 37		KK 35 24 95 41		KK 35 37 31 47		KK 35 39 46 49	
KK 08 32 13 17		KK 08 33 01 17		KK 08 38 09 5		KK 09 42 07 51		KK 35 11 48 37		KK 35 24 95 43		KK 35 37 40 47		KK 36 11 16 39	
KK 08 32 14 17		KK 08 34 06 17		KK 08 38 10 5		KK 09 63 05 25		KK 35 11 70 37		KK 35 25 26 41		KK 35 37 41 47		KK 36 11 20 39	
KK 08 32 15 17		KK 08 34 07 17		KK 08 50 76 31		KK 09 63 05 27		KK 35 11 72 37		KK 35 33 50 43		KK 35 37 42 47		KK 70 91 24 53	
KK 08 32 16 17		KK 08 34 08 17		KK 08 60 86 23		KK 09 63 10 25		KK 35 11 73 37		KK 35 33 51 43		KK 35 37 92 47		KK 70 94 79 53	
KK 08 32 17 17		KK 08 34 09 17		KK 08 60 87 23		KK 09 63 10 27		KK 35 19 34 41		KK 35 33 52 43		KK 35 39 01 41		KK 70 95 68 53	
KK 08 32 18 17		KK 08 34 15 17		KK 08 60 87 27		KK 09 63 15 25		KK 35 22 52 45		KK 35 33 53 43		KK 35 39 01 49		KK 70 95 69 53	
KK 08 32 20 17		KK 08 34 16 17		KK 08 60 88 27		KK 09 63 15 27		KK 35 22 58 45		KK 35 37 01 41		KK 35 39 02 49		KK 70 97 37 53	
KK 08 32 21 17		KK 08 34 17 17		KK 08 60 89 23		KK 09 63 18 25		KK 35 22 60 45		KK 35 37 01 47		KK 35 39 03 49		KK 70 98 41 53	
KK 08 32 22 17		KK 08 34 18 17		KK 08 60 90 23		KK 09 63 18 27		KK 35 22 61 43		KK 35 37 02 47		KK 35 39 22 49		KK 70 98 43 53	
KK 08 32 23 17		KK 08 38 02 17		KK 08 61 00 27		KK 09 63 20 25		KK 35 22 66 45		KK 35 37 03 47		KK 35 39 26 49		KK 70 98 44 53	
KK 08 32 24 17		KK 08 38 03 17		KK 08 61 01 23		KK 09 63 20 27		KK 35 22 80 45		KK 35 37 20 47		KK 35 39 34 49		KK 70 98 47 53	
KK 08 32 28 5		KK 08 38 04 17		KK 08 61 01 27		KK 09 63 22 25		KK 35 22 90 45		KK 35 37 21 47		KK 35 39 35 49		UH 82 56 40 49	
KK 08 32 29 5		KK 08 38 05 17		KK 08 61 02 23		KK 09 63 22 27		KK 35 23 50 41		KK 35 37 22 47		KK 35 39 36 49			
KK 08 32 35 17		KK 08 38 06 17		KK 08 68 01 31		KK 35 11 39 37		KK 35 23 50 45		KK 35 37 25 47		KK 35 39 37 49			
KK 08 32 35 7		KK 08 38 07 17		KK 09 06 06 25		KK 35 11 40 37		KK 35 23 52 45		KK 35 37 30 47		KK 35 39 44 49			

Агро

Замовлення запчастин

(050)-407-68-47

(050)-407-68-45