



Spare Parts List

Model BE/BM

Semi Mounted Plough

No 733038


Hannover
Agro

Замовлення запчастин
(050)-407-68-47
(050)-407-68-45



Notes

GB Model	GB Interbody clearance	GB Headstock
D Modell	D Körperlängsabstand	D Drehwerk
F Modèle	F Dégagement sous age	F Type de tête
E Modelo	E Separación entre cuerpos	E Tipo de cabezal

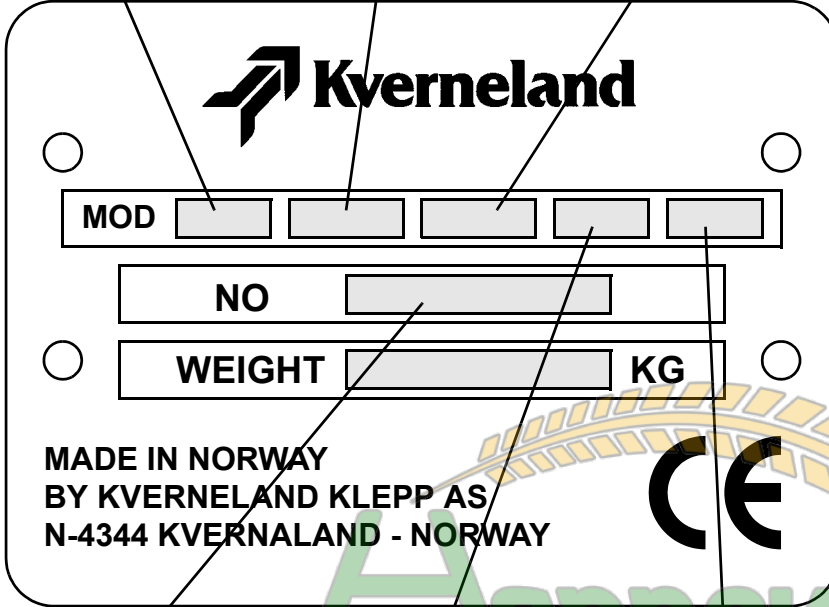

GB Serial number	Type: HD=Heavy Duty SL=Vibromat OL=On-land	GB Body no.
D Seriennummer		D Körper no.
F Numéro de série		F Type no.
E Numero de serie		E Tipo no.

Замовлення запчастин

(GB) Complete model code and serial number must be stated to avoid mistakes when ordering spare parts and misunderstandings regarding service consultations. The identification plate is located on the headstock.

(F) Le code complet et le numéro de série doivent être indiqués pour éviter des erreurs lors de la commande de pièces de rechange et des malentendus concernant des demandes de Service-Après-Vente. La plaque d'identité est située sur la tête.

(D) Um bei Ersatzteilbestellungen und Serviceleistungen Fehler und Mißverständnisse zu vermeiden ist es erforderlich, daß die genaue Bezeichnung und die Seriennummer angegeben werden. Die Plakette befindet sich am Drehwerk.

(E) Debe figura el código completo del modelo y el número de serie para evitar errores al pedir las piezas de recambio y al hacer consultas técnicas. La placa de identificación esta situada en el cabezal.

Plate		Page
244	Bodies no 6, 7, 8, 9 and 28	4
367	Bodies no 12, 15 and 19	8
494	Body no 14 (Plastic mouldboard)	12
1089	Bodies no. 29 and no. 30.....	14
271	Beam with automatic reset BB, BE, BM	18
1250	Automatic reset beam, HD for BE	20
1071	Disc coulter 18" and 20", conventional plough (From 01.02.99).....	22
505	Springloaded disc coulter HD 18", 20", 22" for standard beam	24
1251	Springloaded disc coulter HD 18", 20", 22" for HD beam	26
341	Manure skimmer / Maize skimmer	28
1174	Front parts for BE/ BM	30
1173	Main frame for BE/ BM.....	32
1175	Rear parts for BE/ BM.....	34
1193	Hydraulic layout w/front furrow adjustment and furrow width adjustment	36
1194	Hydraulic depth wheel and hydraulic steering.....	38
1195	Hydraulic cylinder D75 x 200 mm (353904 - 353906) (From 01.04.01)	40
1129	Hydraulic cylinder D100 x 200 mm w/stop and bellow (From 01.06.00, w/garmax from 01.08.00)	42
1200	Hydraulic cylinder D100 x 55 mm.....	44
1201	Hydraulic cylinder D75 x 300 mm.....	46
1176	Additional body	48
527	Wheel 400 x 15.5", 400 x 22.5", 500 x 22.5", 500 x 26.6", 14.9 x 24" and 12.5 x 18" ... (From 01.03.97)	50
1197	Transfers BE-100-115 and BM-100.....	52
	Index.....	54




1	KK 07 30 00	Share 12" R (30 cm)	KK 07 38 03	Stay R + L for body no. 6, 7 and 8 A - saddle, L = 560 (And no. 9 before 01.12.95)	KK 07 06 41	Trashboard, L cpl.		
	KK 07 30 01	Share 12" L (30 cm)			KK 07 06 42	Trashboard, R + L cpl.		
	KK 07 30 02	Share 14" R (35 cm)	KK 07 38 31	Stay R + L for body no. 9 E - saddle, L = 725 (From 01.12.95)	17	KK 03 33 32	Cone screw M14 x 34 mm w/nut	
	KK 07 30 03	Share 14" L (35 cm)			18	KK 03 27 25	Hex screw M16 x 27 mm w/nut	
	KK 07 30 04	Share 16" R (40 cm)	KK 07 38 30	Stay R + L for body no. 9 A - saddle, L = 710 (From 01.12.95)	19	KK 03 31 07	Oval screw M12 x 35 mm w/nut	
	KK 07 30 05	Share 16" L (40 cm)			20	KK 01 32 34	Cone screw M12 x 38 mm w/nut	
	KK 07 30 06	Share 18" R (45 cm)	KK 06 38 01	Extra stay R + L, no. 9 E - saddle L = 550 (From 01.12.95)	21	KK 07 30 91	Share knife, R	
	KK 07 30 07	Share 18" L (45 cm)				KK 07 30 92	Share knife, L	
	KK 07 30 08	Share 20" R (50 cm)	KK 07 03 94	Extra stay R for body no. 9 E - saddle, cpl. w. bracket (pos. 12) (From 01.12.95)		KK 06 30 91	Share knife, R (for Sweden)	
	KK 07 30 09	Share 20" L (50 cm)	KK 07 03 95	Extra stay L for body no. 9 E - saddle, cpl. w. bracket (pos. 12) (From 01.12.95)		KK 06 30 92	Share knife, L (for Sweden)	
2	KK 05 30 90	Reversible point, R			23	KK 07 36 09	Landside, long R + L	
	KK 06 30 90	Reversible point, L	KK 07 38 03	Extra stay R + L, no. 9 A - saddle L = 560 (From 01.12.95)	24	KK 07 32 66	Bracket for stay, body no. 6 and 9, R	
3	KK 07 34 06	Saddle, R (for E-saddle)				KK 07 32 67	Bracket for stay, body no. 6 and 9, L	
	KK 07 34 07	Saddle, L (for E-saddle)	KK 07 03 90	Extra stay R for body no. 9 A - saddle, cpl. w. bracket (pos. 12) (From 01.12.95)	25	KK 07 34 14	Connecting plate, 16" - 20", R	
	KK 07 34 11	Saddle, R (for A-saddle)				KK 07 34 15	Connecting plate, 16" - 20", L	
	KK 07 34 12	Saddle, L (for A-saddle)	KK 07 03 91	Extra stay L for body no. 9 A - saddle, cpl. w. bracket (pos. 12) (From 01.12.95)	26	KK 07 30 40	Flush fit share 12", R	
4	KK 01 33 32	Cone screw M14 x 34 mm w/nut				KK 07 30 41	Flush fit share 12", L	
5	KK 03 31 00	Oval screw M12 x 30 mm w/nut	KK 08 38 09	Stay R + L for body no. 28 A - saddle (From 01.03.03)		KK 07 30 42	Flush fit share 14", R	
6	KK 07 32 60	Mouldboard 12" - 16" no. 6, R	KK 08 38 10	Stay R + L for body no. 28 E - saddle (From 01.03.03)		KK 07 30 43	Flush fit share 14", L	
	KK 07 32 61	Mouldboard 12" - 16" no. 6, L				KK 07 30 44	Flush fit share 16", R	
	KK 07 32 63	Mouldboard 12" - 14" no. 7, R	10	KK 07 36 08	Landside, R and L, short		KK 07 30 45	Flush fit share 16", L
	KK 07 32 64	Mouldboard 12" - 14" no. 7, L	11	KK 01 58 32	Nut M20 mm	27	KK 07 30 30	Flush point, R
	KK 07 32 80	Mouldboard 12" no. 8, R	12	KK 07 38 00	Bracket for stay, R for body no. 6, 7, 8 (And no. 9 before 01.12.95)		KK 07 30 31	Flush point, L
	KK 07 32 81	Mouldboard 12" no. 8, L				28	KK 01 29 27	Washer 17 x 30 x 3 mm (for use with two stays)
	KK 07 32 86	Mouldboard 14" - 18" no. 8, R	KK 07 38 01	Bracket for stay, L for body no. 6, 7, 8 (And no. 9 before 01.12.95)	30	KK 07 36 15	Furrow widener, R	
	KK 07 32 87	Mouldboard 14" - 18" no. 8, L				KK 07 36 16	Furrow widener, L	
	KK 07 32 90	Mouldboard 14" - 20" no. 9, R	KK 07 38 07	Bracket for stay, R for body no. 9 (From 01.12.95)	31	KK 07 30 88	Landside knife w/screw, R	
	KK 07 32 91	Mouldboard 14" - 20" no. 9, L				KK 07 30 89	Landside knife w/screw, L	
	KK 08 32 28	Mouldboard no. 28, R (From 01.03.03)	KK 07 38 08	Bracket for stay, L for body no. 9 (From 01.12.95)	32	KK 03 32 51	Screw M16 x 50 mm w/nut (for E-saddle) (Before 01.02.00)	
	KK 08 32 29	Mouldboard no. 28, L (From 01.03.03)				KK 03 32 56	Screw M16 x 55 mm w/ nut (for E-saddle) (From 01.02.00)	
7	KK 07 32 50	Shinpiece for no. 8, R	13	KK 01 29 19	Washer 12.5 x 23 x 3.2 mm		KK 03 32 86	Screw M16 x 85 mm w/nut (for A-saddle) (Before 01.02.00)
	KK 07 32 51	Shinpiece for no. 8, L	14	KK 05 33 87	Mouldboard extension, R		KK 03 32 95	Screw M16 x 95 mm w/nut (for A-saddle) (From 01.02.00)
	KK 07 32 56	Shinpiece for no. 6 and 9, R		KK 06 33 88	Mouldboard extension, L			
	KK 07 32 57	Shinpiece for no. 6 and 9, L	15	KK 07 33 10	Bracket for trashboard, R			
				KK 07 33 11	Bracket for trashboard, L			
8	KK 03 27 35	Hex screw M16 x 35 mm w/nut	16	KK 07 33 00	Trashboard, R			
9	KK 06 38 01	Stay R + L for body no. 6, 7 and 8 E - saddle, L = 550 (And no. 9 before 01.12.95)		KK 07 33 01	Trashboard L	33	KK 03 31 75	Screw M14 x 50 mm w/nut
				KK 07 06 40	Trashboard, R cpl.	34	KK 01 29 22	Washer 17 x 40 x 4.58 mm




35	KK 06 36 07	Plate
	KK 07 36 07	Plate cpl.
36	KK 01 33 46	Screw M14 x 45 mm w/nut
37	KK 07 36 14	Wearing plate
38	KK 01 33 33	Cone screw M14 x 34 mm
39	KK 08 32 35	Mouldboard knife R and L (From 01.12.01)
Pos. 100 - 107 Eco-share from 01.04.00		
100	KK 05 30 90	Reversible point, R
	KK 06 30 90	Reversible point, L
101	KK 01 32 28	Cone screw M12 x 34 mm w/nut
102	KK 07 36 34	Eco-share, R
	KK 07 36 35	Eco-share, L
103	KK 01 01 55	Bushing (for ploughs w/share bolt beam)
	KK 01 01 56	Bushing (for ploughs w/A-beam)
104	KK 03 27 40	Hex screw M16 x 40 mm w/nut (for ploughs w/E-saddle) (Before 01.03.00)
	KK 03 27 50	Hex screw M16 x 50 mm w/nut (for ploughs w/E-saddle) (From 01.03.00)
	KK 03 27 65	Hex screw M16 x 65 mm w/nut (for ploughs w/share bolt beam)
	KK 03 27 75	Hex screw M16 x 75 mm w/nut (for ploughs w/A-beam)
105	KK 01 33 46	Cone screw M14 x 45 mm w/flange nut (for ploughs w/E-saddle) (Before 01.03.00)
	KK 01 33 61	Cone screw M14 x 60 mm w/flange nut (for ploughs w/E-saddle) (From 01.03.00)
	KK 01 33 85	Cone screw M14 x 85 mm w/flange nut (for ploughs w/share bolt beam and A-beam)
106	KK 01 60 15	Flange nut M14
107	KK 01 29 29	Washer (for ploughs w/E-saddle) (From 01.03.00)



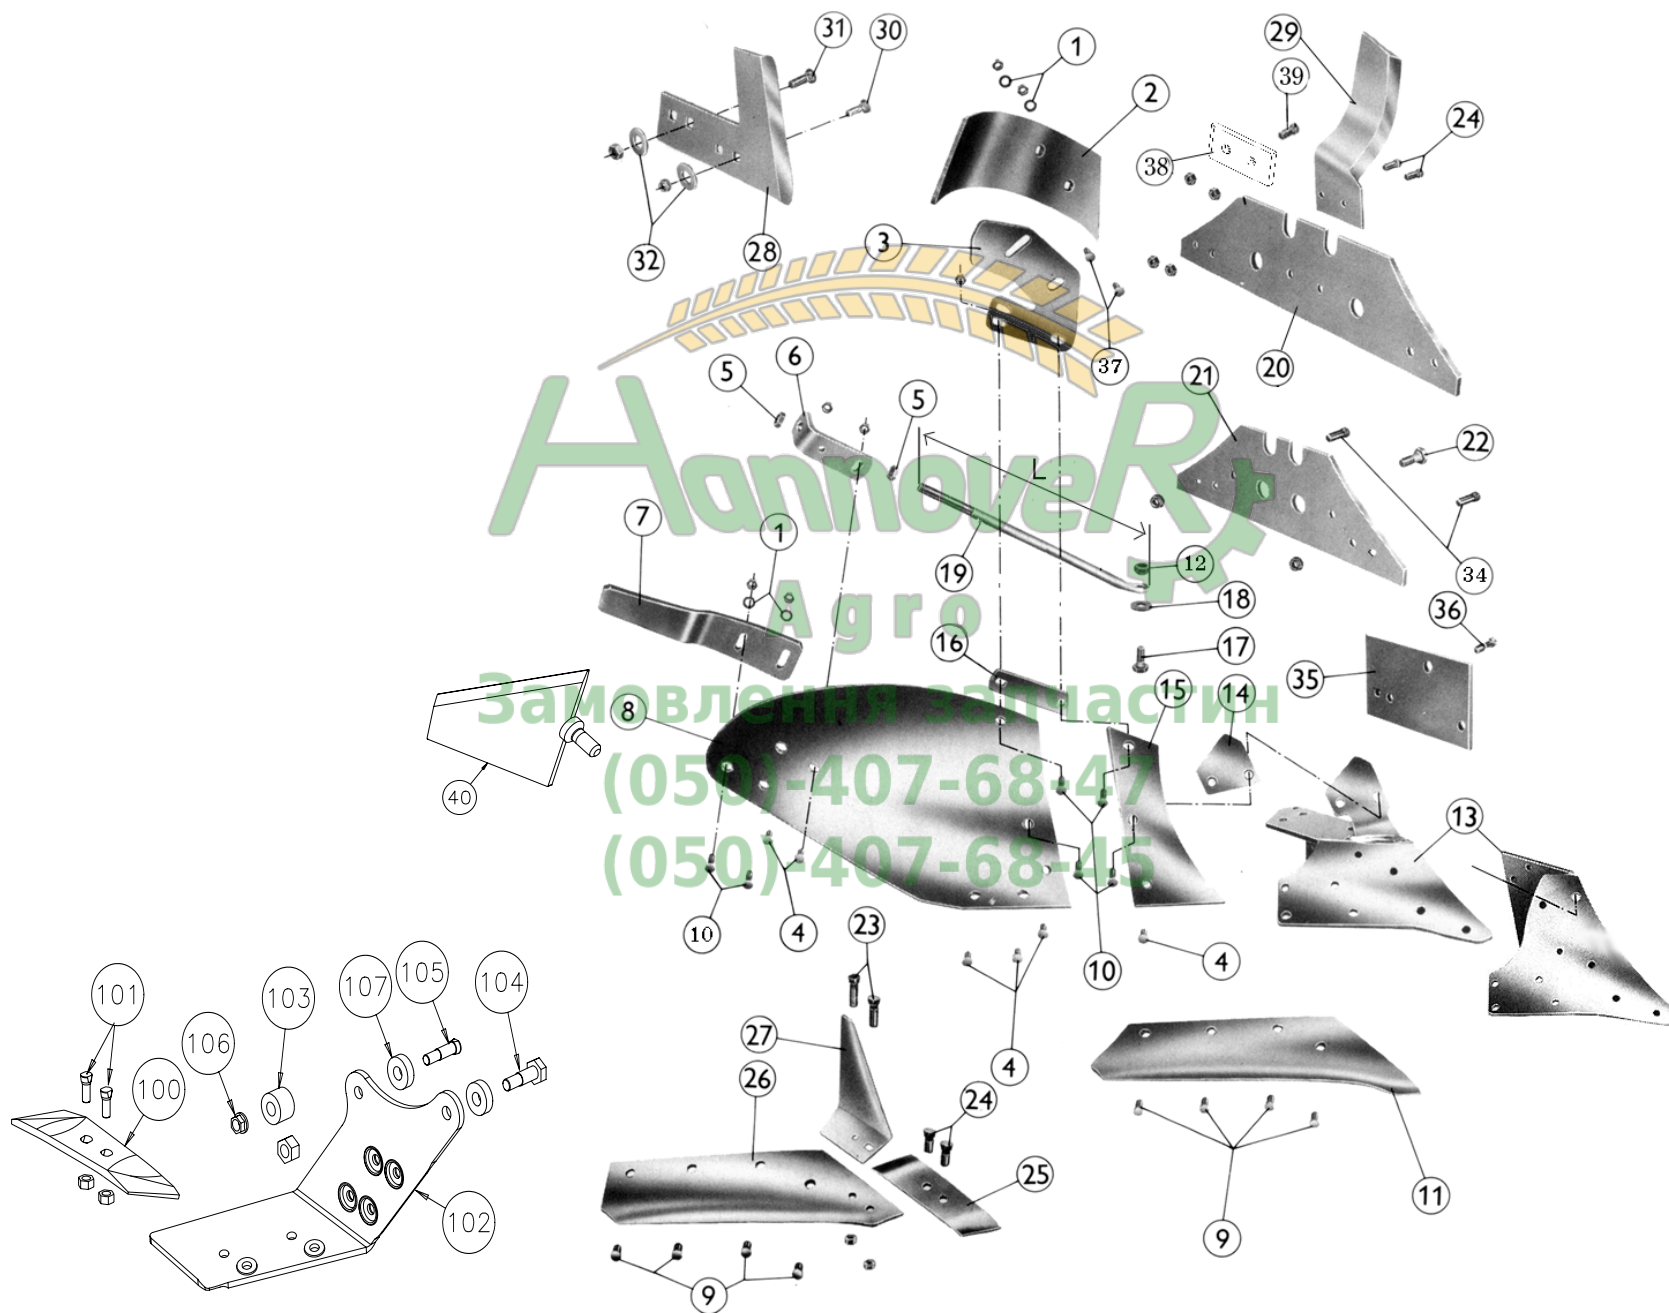

1	KK 01 29 19	Washer	KK 07 32 31	Shinpiece no. 19, L	KK 07 03 93	Extra stay L for body no. 19 A - saddle cpl.	
2	KK 07 33 00	Trashboard, R	16	KK 07 32 39		w. bracket (pos. 6) (From 01.12.95)	
	KK 07 33 01	Trashboard, L		KK 07 32 40	20	KK 07 36 09	Landside, long, R + L
	KK 07 06 40	Trashboard, R cpl.		KK 07 32 66	21	KK 07 36 08	Landside, short, R + L
	KK 07 06 41	Trashboard, L cpl.		KK 07 32 67	22	KK 03 27 25	Hex screw M16 x 27 mm
	KK 07 06 42	Trashboard, R + L cpl.	17	KK 03 27 50	23	KK 01 32 34	Cone screw M12 x 38 mm w/nut
3	KK 07 33 10	Bracket, R			24	KK 01 32 28	Cone screw M12 x 34 mm w/nut
	KK 07 33 11	Bracket, L		KK 03 27 35	25	KK 05 30 90	Reversible point, R
4	KK 03 31 00	Oval screw M12 x 30 mm w/nut				KK 06 30 90	Reversible point, L
5	KK 01 58 34	Nut M20 mm	18	KK 01 29 27	26	KK 07 30 54	Share 14", R
6	KK 07 38 00	Bracket, R				KK 07 30 55	Share 14", L
	KK 07 38 01	Bracket, L	19	KK 07 38 05		KK 07 30 56	Share 16", R
7	KK 05 33 87	Mouldboard extention, R				KK 07 30 57	Share 16", L
	KK 06 33 88	Mouldboard extention, L		KK 07 38 31		KK 07 30 80	Share 18", R
8	KK 07 32 36	Mouldboard no. 12, R		KK 07 38 04		KK 07 30 81	Share 18", L
	KK 07 32 37	Mouldboard no. 12, L			27	KK 07 30 91	Share knife, R
	KK 07 32 24	Mouldboard no. 15, R		KK 07 38 26		KK 07 30 92	Share knife, L
	KK 07 32 25	Mouldboard no. 15, L			28	KK 07 30 88	Landside knife, R w/nuts
	KK 07 32 90	Mouldboard no. 19, R		KK 07 38 26		KK 07 30 89	Landside knife, L w/nuts
	KK 07 32 91	Mouldboard no. 19, L			29	KK 07 36 15	Furrow widener, R
9	KK 01 33 32	Cone screw M14 x 34 mm w/nut		KK 07 03 88		KK 07 36 16	Furrow widener, L
10	KK 03 31 07	Oval screw M12 x 35 mm w/nut			30	KK 03 31 75	Screw M14 x 50 mm w/nut
11	KK 07 30 62	Share 14", R		KK 07 03 89	31	KK 03 32 51	Screw M16 x 50 mm w/nut (for E-saddle)
	KK 07 30 63	Share 14", L					(Before 01.02.00)
	KK 07 30 64	Share 16", R		KK 07 38 29		KK 03 32 56	Screw M16 x 56 mm w/nut (for E-saddle)
	KK 07 30 65	Share 16", L					(From 01.02.00)
12	KK 06 20 25	Nut M16 mm		KK 07 03 98		KK 03 32 86	Screw M16 x 85 mm w/nut (for A-saddle)
13	KK 07 34 35	Saddle, R (for E-saddle)					(Before 01.02.00)
	KK 07 34 36	Saddle, L (for E-saddle)		KK 07 03 99		KK 03 32 95	Screw M16 x 95 mm w/nut (for A-saddle)
	KK 07 34 40	Saddle, R (for A-saddle)					(From 01.02.00)
	KK 07 34 41	Saddle, L (for A-saddle)		KK 07 38 42	32	KK 01 29 22	Washer 17 x 40 x 4.58 mm
14	KK 07 34 17	Connecting plate no. 12 and 15, R			34	KK 01 33 33	Cone screw M14 x 34 mm w/nut
	KK 07 34 18	Connecting plate no. 12 and 15, L		KK 07 03 96	35	KK 06 36 07	Plate for On-Land ploughs
15	KK 07 32 41	Shinpiece no. 12, R				KK 07 36 07	Plate for On-Land ploughs cpl.
	KK 07 32 42	Shinpiece no. 12, L		KK 07 03 97	36	KK 01 33 46	Screw M14 x 45 mm w/nut
	KK 07 32 27	Shinpiece no. 15, R			37	KK 03 31 07	Oval screw M12 x 35 mm
	KK 07 32 28	Shinpiece no. 15, L		KK 07 38 04	38	KK 07 36 14	Wearing plate
	KK 07 32 30	Shinpiece no. 19, R			39	KK 01 33 32	Cone screw M14 x 34 mm
				KK 07 03 92			

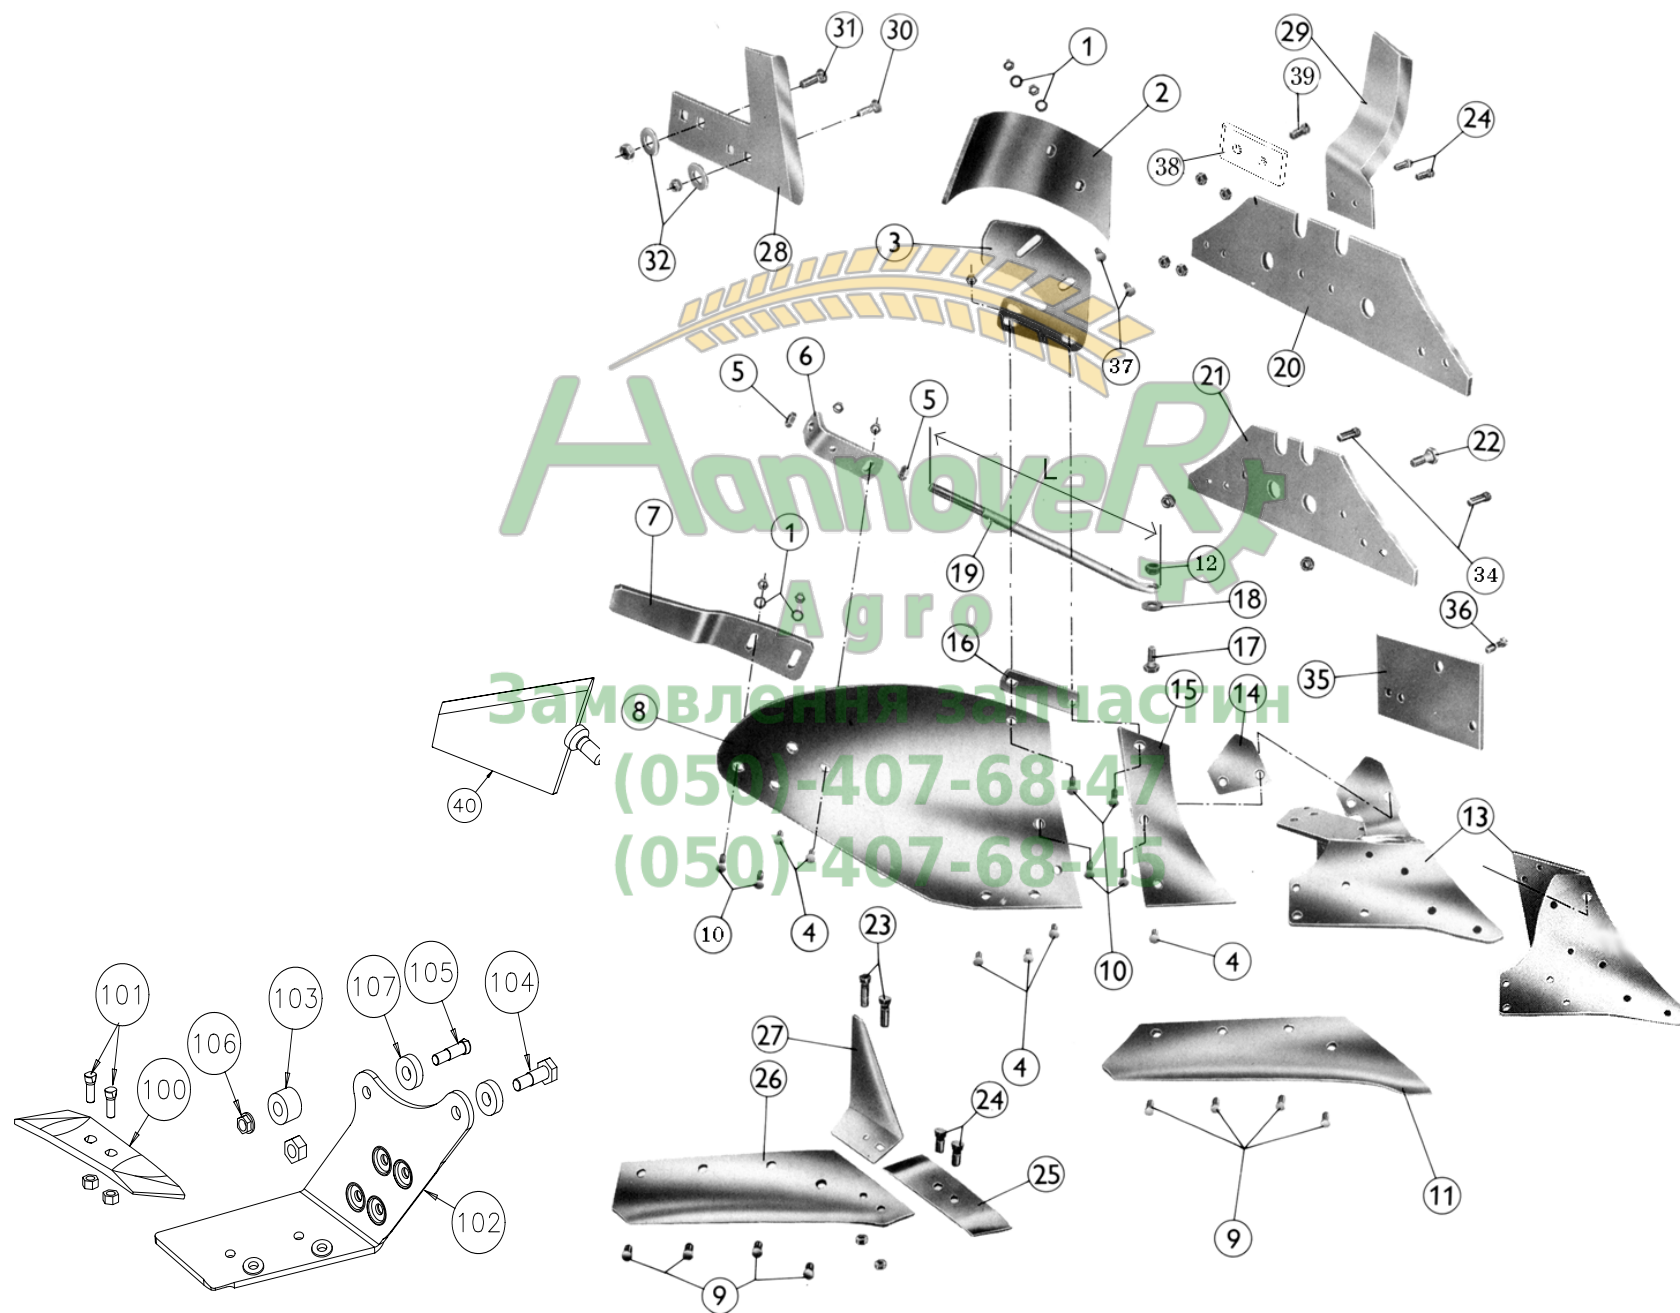


40	KK 08 32 35	Mouldboard knife R and L (From 01.12.01)
Pos. 100 - 107 Eco-share from 01.04.00		
100	KK 05 30 90	Reversible point, R
	KK 06 30 90	Reversible point, L
101	KK 01 32 28	Cone screw M12 x 34 mm w/nut
102	KK 07 36 34	Eco-share, R
	KK 07 36 35	Eco-share, L
103	KK 01 01 55	Bushing (for ploughs w/share bolt beam)
	KK 01 01 56	Bushing (for ploughs w/A-beam)
104	KK 03 27 40	Hex screw M16 x 40 mm w/nut (for ploughs w/E-saddle) (Before 01.03.00)
	KK 03 27 50	Hex screw M16 x 50 mm w/nut (for ploughs w/E-saddle) (From 01.03.00)
	KK 03 27 65	Hex screw M16 x 65 mm w/nut (for ploughs w/share bolt beam)
	KK 03 27 75	Hex screw M16 x 75 mm w/nut (for ploughs w/A-beam)
105	KK 01 33 46	Cone screw M14 x 45 mm w/flange nut (for ploughs w/E-saddle) (Before 01.03.00)
	KK 01 33 61	Cone screw M14 x 60 mm w/flange nut (for ploughs w/E-saddle) (From 01.03.00)
	KK 01 33 85	Cone screw M14 x 85 mm w/flange nut (for ploughs w/share bolt beam and A-beam)
106	KK 01 60 15	Flange nut M14
107	KK 01 29 29	Washer (for ploughs w/E-saddle) (From 01.03.00)






26	KK 03 30 04	Oval screw M10 x 20 mm w/nut
27	KK 07 33 50	Trashboard plastic, R
	KK 07 33 51	Trashboard plastic, L
28	KK 07 33 52	Support, R
	KK 07 33 53	Support, L
29	KK 05 33 87	Mouldboard extension, R
	KK 06 33 88	Mouldboard extension, L
31	KK 03 27 30	Hex screw M16 x 13 mm w/nut
32	KK 06 20 25	Nut M16 mm
33	KK 07 30 88	Landside knife w/nuts, R
	KK 07 30 89	Landside knife w/nuts, L
34	KK 03 32 51	Screw M16 x 50 mm w/nut (for E-sad- dle) (Before 01.02.00)
	KK 03 32 56	Screw M16 x 55 mm w/nut (for E-sad- dle) (From 01.02.00)
	KK 03 32 86	Screw M16 x 85 mm w/nut (for A-sad- dle) (Before 01.02.00)
	KK 03 32 95	Screw M16 x 95 mm w/nut (for A-sad- dle) (From 01.02.00)
35	KK 03 31 74	Screw M14 x 45 mm w/nut

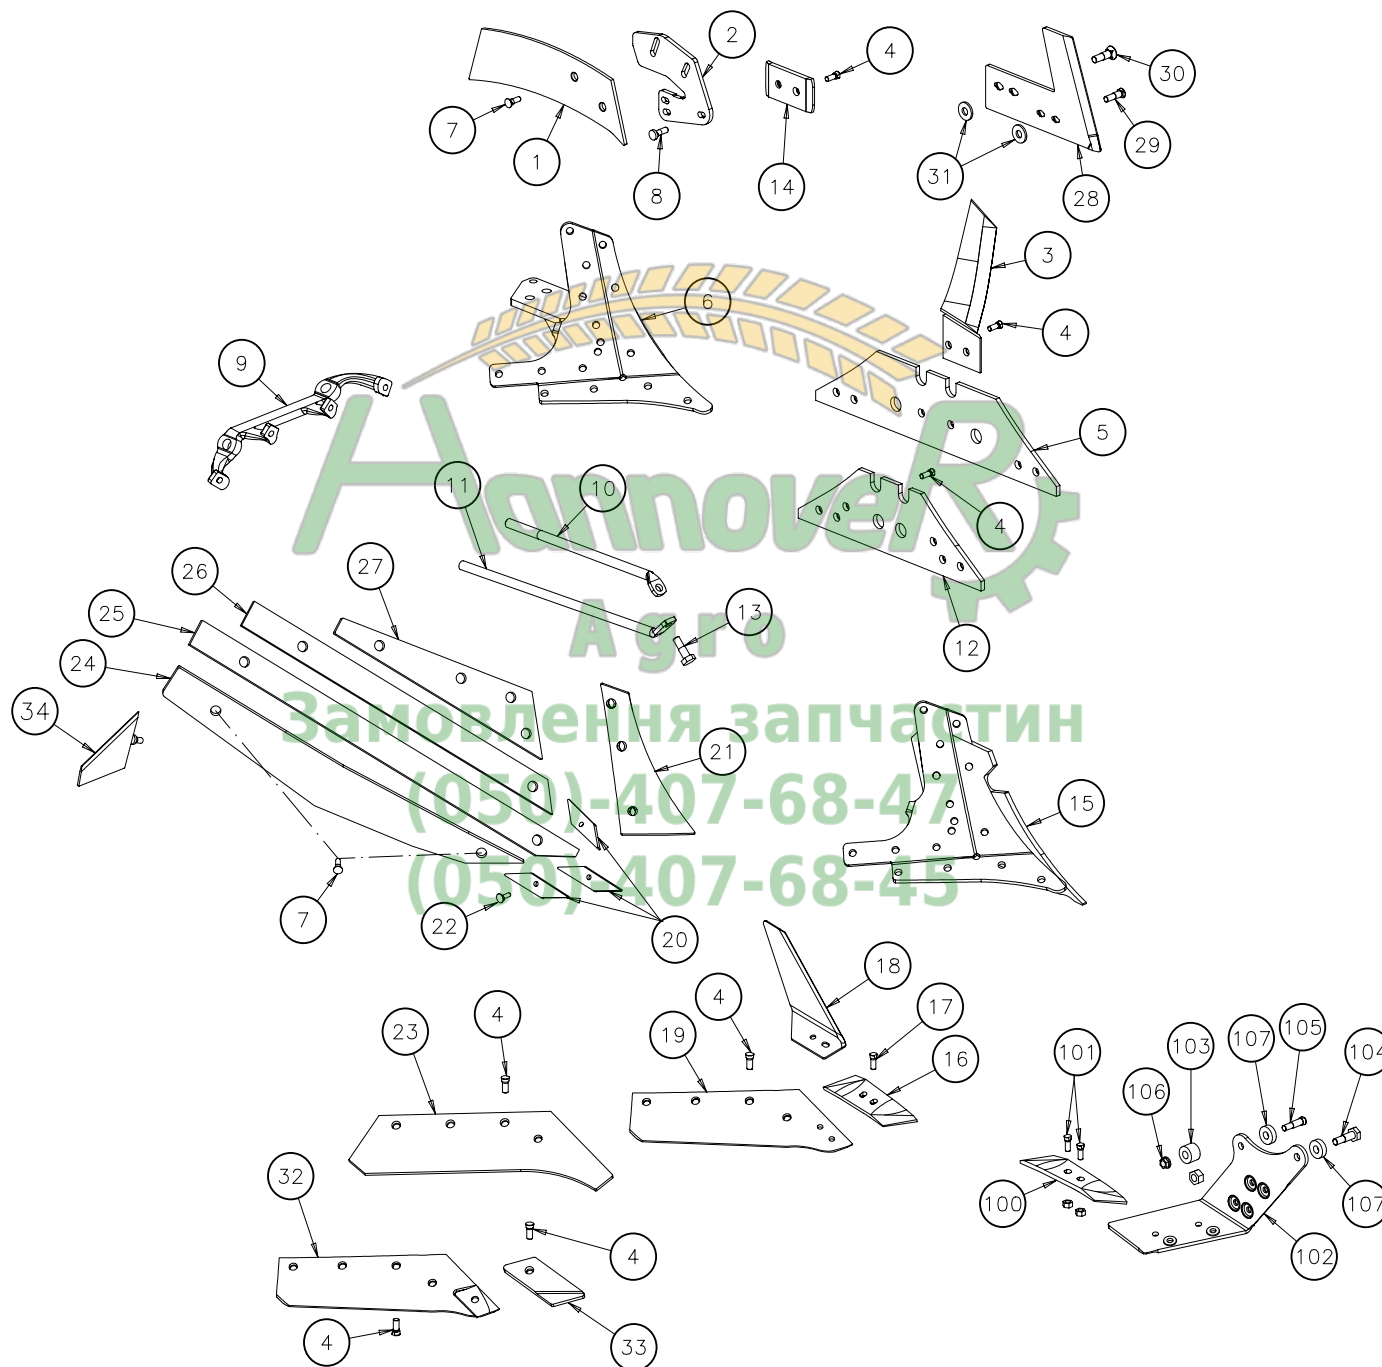


1	KK 07 33 00	Trashboard, R	15	KK 08 34 15	Saddle R, A-saddle (for body no. 29)	KK 03 30 16	Oval screw M10 x 30 mm (for body no. 30)
	KK 07 33 01	Trashboard, L		KK 08 34 16	Saddle L, A-saddle (for body no. 29)		
2	KK 08 33 00	Bracket, R		KK 08 34 06	Saddle R, A-saddle (for body no. 30)	KK 01 58 13	Nut M10
	KK 08 33 01	Bracket, L		KK 08 34 07	Saddle L, A-saddle (for body no. 30)	23	KK 07 30 62 Share 14", R (for body no. 30)
3	KK 07 36 15	Furrow widener, R	16	KK 05 30 90	Reversible point, R		KK 07 30 63 Share 14", L (for body no. 30)
	KK 07 36 16	Furrow widener, L		KK 06 30 90	Reversible point, L		KK 07 30 64 Share 16", R (for body no. 30)
4	KK 01 33 32	Cone screw M14 x 34 mm	17	KK 01 32 28	Cone screw M12 x 34 mm		KK 07 30 65 Share 16", L (for body no. 30)
	KK 01 60 13	Flange nut M14		KK 01 58 17	Nut M12	24	KK 08 32 11 Slat no 1, R
5	KK 07 36 09	Landside, long R + L	18	KK 07 30 91	Share knife, R		KK 08 32 21 Slat no 1, L
6	KK 08 34 17	Saddle R, E-saddle (for body no. 29)		KK 07 30 92	Share knife, L	25	KK 08 32 12 Slat no 2, R
	KK 08 34 18	Saddle L, E-saddle (for body no. 29)		KK 06 30 91	Share knife, R (for Sweeden)		KK 08 32 22 Slat no 2, L
	KK 08 34 08	Saddle R, E-saddle (for body no. 30)		KK 06 30 92	Share knife, L (for Sweeden)	26	KK 08 32 13 Slat no 3, R
	KK 08 34 09	Saddle L, E-saddle (for body no. 30)	19	KK 07 30 02	Share 14", R (for body no. 29)		KK 08 32 23 Slat no 3, L
7	KK 03 31 16	Oval screw M12 x 35 mm (for body no. 29 and 30)		KK 07 30 03	Share 14", L (for body no. 29)	27	KK 08 32 14 Slat no 4, R
	KK 01 58 17	Nut M12		KK 07 30 54	Share 14", R (for body no. 30)		KK 08 32 24 Slat no 4, L
	KK 03 31 07	Oval screw M12 x 35 mm (for body no. 30) (Before 01.01.01)		KK 07 30 55	Share 14", L (for body no. 30)	28	KK 07 30 88 Landside knife, R
	KK 01 58 17	Nut M12		KK 07 30 04	Share 16", R (for body no. 29)		KK 07 30 89 Landside knife, L
8	KK 03 31 17	Oval screw M12 x 45 mm (for body no. 29 and 30)		KK 07 30 05	Share 16", L (for body no. 29)	29	KK 03 31 75 Screw M14 x 50 mm
	KK 01 58 17	Nut M12		KK 07 30 56	Share 16", R (for body no. 30)		KK 01 60 15 Flange nut M14
	KK 03 31 11	Oval screw M12 x 45 mm (for body no. 30) (Before 01.01.01)		KK 07 30 57	Share 16", L (for body no. 30)	30	KK 03 32 51 Screw M16 x 50 mm (for E-saddle) (Before 01.02.00)
	KK 01 58 17	Nut M12		KK 07 30 06	Share 18", R (for body no. 29)		KK 03 32 56 Screw M16 x 56 mm (for E-saddle) (From 01.02.00)
	KK 03 31 11	Oval screw M12 x 45 mm (for body no. 30) (Before 01.01.01)		KK 07 30 07	Share 18", L (for body no. 29)		KK 01 58 25 Nut M16
	KK 01 58 17	Nut M12		KK 07 30 80	Share 18", R (for body no. 30)		KK 03 32 86 Screw M16 x 85 mm (for A-saddle) (Before 01.02.00)
9	KK 08 32 10	Slat support, R	20	KK 08 32 15	Connecting piece, plastic (for slat 1-2)		KK 03 32 95 Screw M16 x 95 mm (for A-saddle) (From 01.02.00)
	KK 08 32 20	Slat support, L		KK 08 32 18	Connecting piece, plastic (for slat 2) (for body no. 29)		KK 01 58 25 Nut M16
10	KK 08 38 03	Stay		KK 08 32 16	Connecting piece, plastic (for slat 2-3) (for body no. 30)	31	KK 01 29 22 Washer 17 x 40 x 4.58 mm
11	KK 08 38 05	Stay 1, saddle A (for body no. 29)		KK 08 32 17	Connecting piece, plastic (for slat 3-4)	32	KK 07 30 42 Flush fit share 14", R (for body no. 29)
	KK 08 38 06	Stay 2, saddle A (for body no. 29)		KK 07 32 56	Shinpiece, R (for body no. 29)		KK 07 30 43 Flush fit share 14", L (for body no. 29)
	KK 08 38 02	Stay, saddle A (for body no. 30)	21	KK 07 32 57	Shinpiece, L (for body no. 29)		KK 07 30 44 Flush fit share 16", R (for body no. 29)
	KK 08 38 07	Stay 1, saddle E (for body no. 29)		KK 07 32 30	Shinpiece, R (for body no. 30)		KK 07 30 45 Flush fit share 16", L (for body no. 29)
	KK 08 38 08	Stay 2, saddle E (for body no. 29)		KK 07 32 31	Shinpiece, L (for body no. 30)	33	KK 07 30 30 Flush fit point, R
	KK 08 38 04	Stay, saddle E (for body no. 30)	22	KK 03 30 06	Oval screw M10 x 30 mm (for body no. 29)		KK 07 30 31 Flush fit point, L
12	KK 07 36 08	Landside, short R + L		KK 01 58 13	Nut M10	34	KK 08 32 35 Mouldboard knife R and L (From 01.12.01)
13	KK 03 27 50	Hex screw M16 x 50 mm					
	KK 01 58 25	Nut M16					
14	KK 07 36 14	Wearing plate					

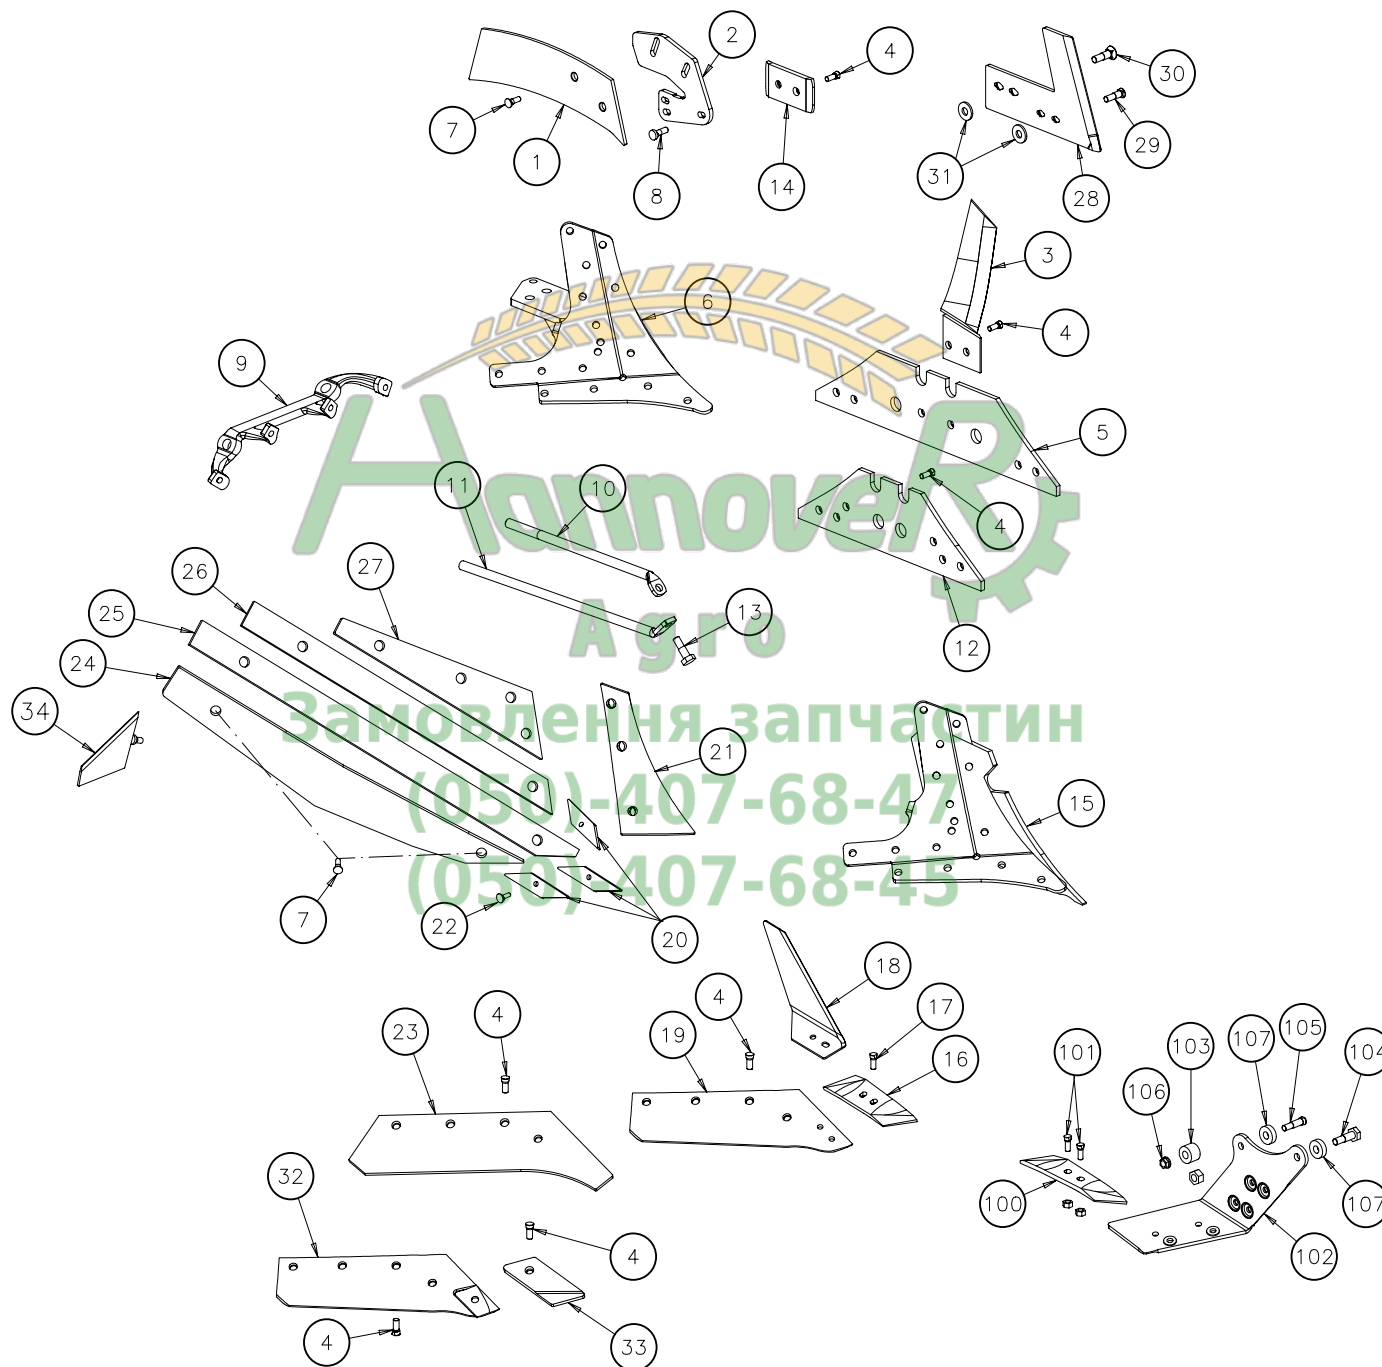


Pos. 100 - 107 Eco-share from 01.04.00		
100	KK 05 30 90	Reversible point, R
	KK 06 30 90	Reversible point, L
101	KK 01 32 28	Cone screw M12 x 34 mm
	KK 01 58 17	Nut M12
102	KK 07 36 34	Eco-share, R
	KK 07 36 35	Eco-share, L
103	KK 01 01 55	Bushing (for ploughs w/share bolt beam)
	KK 01 01 56	Bushing (for ploughs w/A-beam)
104	KK 03 27 40	Hex screw M16 x 40 (for ploughs w/E-saddle) (Before 01.03.00)
	KK 03 27 50	Hex screw M16 x 50 mm (for ploughs w/E-saddle) (From 01.03.00)
	KK 01 58 25	Nut M16
	KK 03 27 65	Hex screw M16 x 65 mm w/nut (for ploughs w/share bolt beam)
	KK 01 58 25	Nut M16
	KK 03 27 75	Hex screw M16 x 75 mm w/nut (for ploughs w/A-beam)
	KK 01 58 25	Nut ;16
105	KK 01 33 46	Cone screw M14 x 45 mm (for ploughs w/E-saddle) (Before 01.03.00)
	KK 01 33 61	Cone screw M14 x 60 mm (for ploughs w/E-saddle) (From 01.03.00)
	KK 01 33 85	Cone screw M14 x 85 mm (for ploughs w/share bolt beam and A-beam)
106	KK 01 60 15	Flange nut M14
107	KK 01 29 29	Washer (for ploughs w/E-saddle) (From 01.03.00)




Замовлення запчастин
(050)-407-68-47
(050)-407-68-45

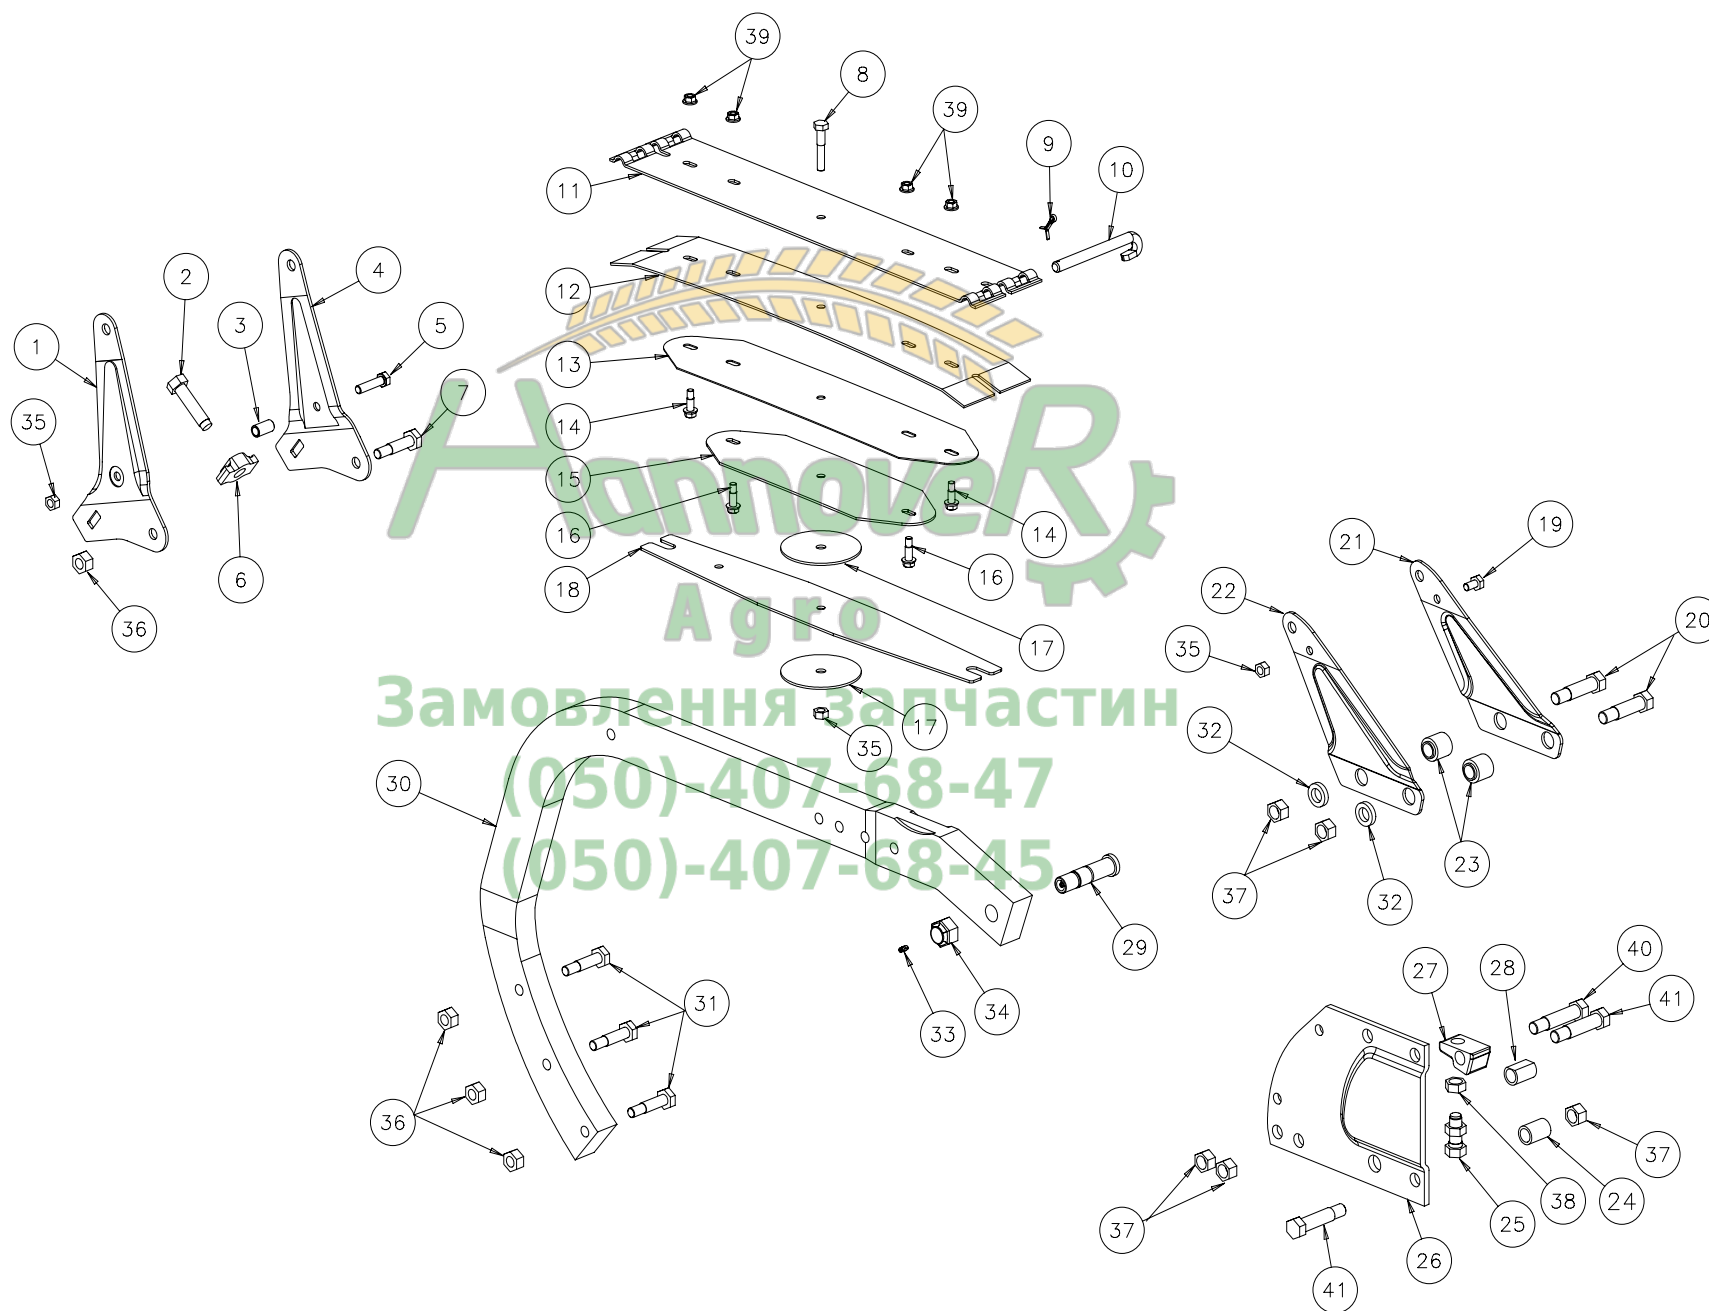

1	KK 06 70 63	Plate, R	36	KK 01 58 25	Nut M16
2	KK 06 70 42	Adjusting screw M20 x 75 mm	37	KK 01 58 30	Nut M20
3	KK 07 70 12	Spacing tube	38	KK 01 58 34	Nut M20, H12
4	KK 06 70 64	Plate, L	39	KK 01 60 07	Nut M10 w/ flange
5	KK 03 26 50	Hex screw M12 x 50 mm	40	KK 03 28 80	Hex screw M20 x 80 mm
6	KK 07 70 11	Threaded piece	41	KK 03 28 90	Hex screw M20 x 90 mm (for BB, DA, DC and CC ploughs only)
7	KK 03 27 70	Hex screw M16 x 70 mm		KK 03 28 80	Hex screw M20 x 80 mm (for BE and BM ploughs only)
8	KK 03 26 65	Hex screw M12 x 65 mm			
9	KK 02 97 27	Split pin			
10	KK 05 70 89	Bolt			
11	KK 05 70 63	Main blade for leaf spring			
12	KK 05 70 64	Blade no. 1			
13	KK 05 70 65	Blade no. 2			
14	KK 03 50 21	Hex screw M10 x 30.5 mm			
15	KK 05 70 66	Blade no. 3			
16	KK 03 50 20	Hex screw M10 x 34 mm			
17	KK 05 70 67	Blade no. 4			
18	KK 05 70 68	Blade no. 5			
19	KK 03 36 20	Hex screw M12 x 20 mm			
20	KK 03 28 80	Hex screw M20 x 80 mm (for DA, DC and CC ploughs only)			
	KK 03 28 90	Hex screw M20 x 90 mm (for BB, BE and BM ploughs only)			
21	KK 06 70 08	Plate, L			
22	KK 06 70 07	Plate, R			
23	KK 07 70 01	Spacing tube			
24	KK 07 15 00	Spacing tube			
25	KK 06 70 74	Adjusting screw M20 x 50 mm w/ nut			
26	KK 06 15 40	Plate			
27	KK 07 15 02	Beam height regulator			
28	KK 07 15 01	Spacing tube			
29	KK 07 70 20	Bolt w/grease nipple (for BB, DA, DC and CC ploughs only)			
	KK 08 18 03	Bolt w/grease nipple (for BE/BM ploughs only)			
30	KK 07 12 40	Beam, H = 700 mm			
	KK 07 12 41	Beam, H = 800 mm			
31	KK 03 27 74	Hex screw M16 x 70 mm			
32	KK 01 29 63	Washer D35 x d21 x 7.5 mm (for BB, BE and BM ploughs only)			
33	KK 02 99 18	Grease nipple			
34	KK 01 60 01	Lock nut M24			
35	KK 01 58 17	Nut M12			

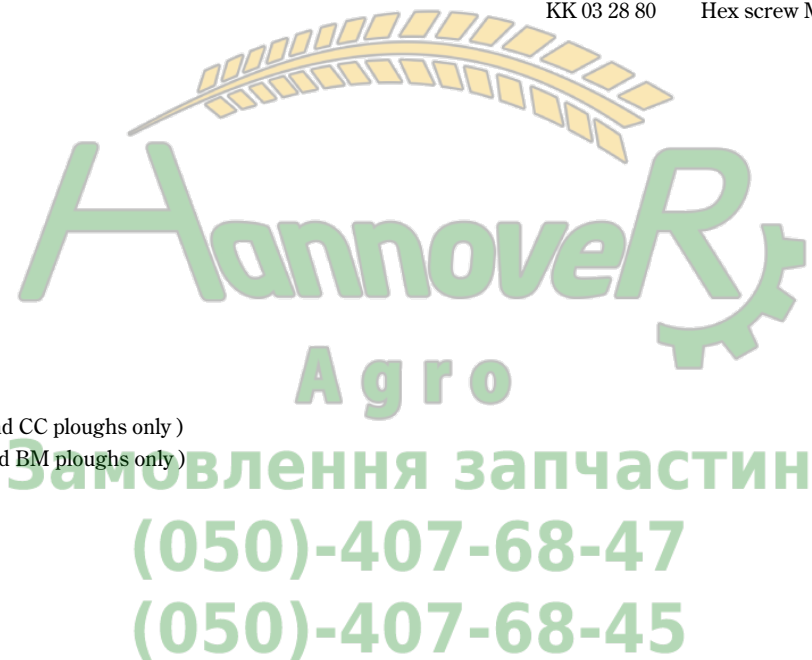

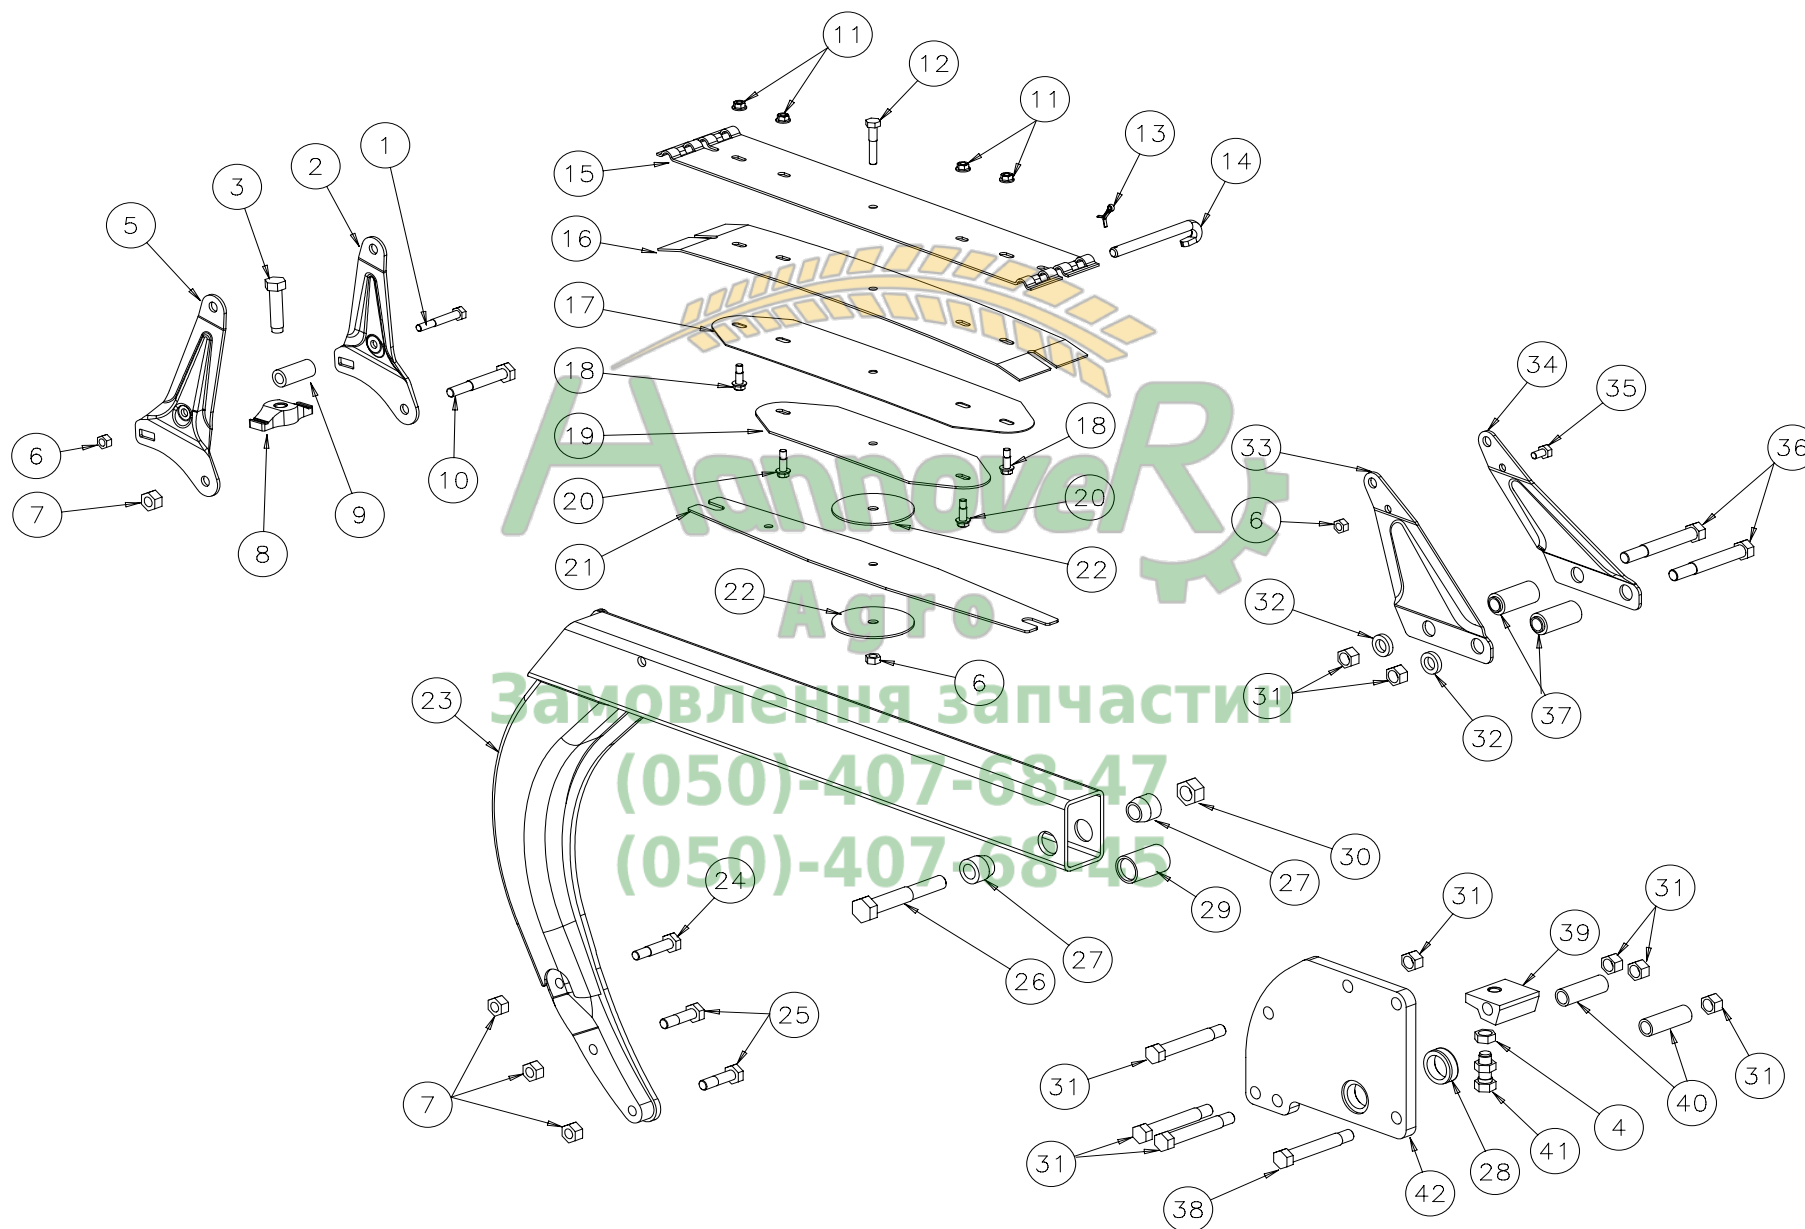

1	KK 03 26 80	Hex screw M12 x 80 mm	38	KK 03 28 11	Hex screw M20 x 130 mm
2	KK 08 50 81	Plate for spring adjustment left	39	KK 08 50 84	Beam regulator conventional beam
3	KK 06 70 42	Adjustment screw M20 x 75 mm	40	KK 08 50 85	Bushing D28 x d20.5 x 80.2
4	KK 01 58 34	Nut M20, H = 12 mm	41	KK 06 70 74	Adjustment screw with nut H12
5	KK 08 50 80	Plate for spring adjustment right	42	KK 08 50 58	Plate for beamholder with bushing
6	KK 01 58 17	Nut M12			
7	KK 01 58 25	Nut M16			
8	KK 08 50 83	Threaded piece conventional beam			
9	KK 07 63 21	Bushing D28 x 17 x 60.5			
10	KK 03 27 02	Hex screw M16 x 110 mm			
11	KK 01 60 07	Flange nut M10			
12	KK 03 26 65	Hex screw M12 x 65 mm			
13	KK 02 97 27	Split pin			
14	KK 05 70 89	Bolt			
15	KK 05 70 63	Main blade for leaf spring			
16	KK 05 70 64	Blade no. 1			
17	KK 05 70 65	Blade no. 2			
18	KK 03 50 21	Hex screw M10 x 30.5 mm			
19	KK 05 70 66	Blade no. 3			
20	KK 03 50 20	Hex screw M10 x 34 mm			
21	KK 05 70 68	Blade no. 5			
22	KK 05 70 67	Blade no. 4			
23	KK 08 50 50	Conventional beam welded			
24	KK 03 27 70	Hex screw M16 x 70 mm			
25	KK 03 27 62	Hex screw M16 x 60 mm			
26	KK 03 29 08	Hex screw M24 x 150 mm			
27	KK 07 14 03	Bushing w/ cone D40 x 36			
28	KK 01 16 94	Bushing D55 x d40.2 x 16			
29	KK 08 50 77	Bushing with cone conventional beam			
30	KK 01 58 41	Nut M24			
31	KK 01 58 30	Nut M20			
32	KK 01 29 63	Washer D35 x d21 x 7.5			
33	KK 08 50 78	Spring holder front R, conventional beam			
34	KK 08 50 79	Spring holder front L, conventional beam			
35	KK 03 36 20	Hex screw M12 x 20 mm			
36	KK 03 28 15	Hex screw M20 x 140 mm			
37	KK 08 50 82	Distance tube conventional beam			





1	KK 07 64 06	Disc coulters 18"
	KK 07 64 07	Disc coulters 20"
2	KK 07 64 09	Disc coulters, notched 18"
	KK 07 64 10	Disc coulters, notched 20"
3	KK 07 64 99	Plate
4	KK 03 51 14	Screw M10 x 40 mm w/lock nut
5	KK 01 17 50	O-ring 124,5 x 3 mm
6	KK 01 18 66	O-ring 67 x 3 mm
7	KK 01 12 59	Circlip I 62 x 2 mm
8	KK 01 12 66	Circlip A 30 x 1,5 mm
9	KK 01 05 72	Bearing
10	KK 01 05 32	Gasket ring
11	KK 08 60 90	Bearing housing cpl. (ill. no. 4, 5, 6, 8 and 12)
12	KK 08 61 01	Axle
	KK 08 60 86	Disc coulters arm w/bearing, A- and 3D-saddle
	KK 08 60 87	Disc coulters bearing cpl. (ill. no. 7, 9, 10 and 11)
13	KK 07 65 75	Arm
14	KK 07 64 00	Support
15	KK 03 27 02	Hex screw M16 x 110 mm w/nut
16	KK 02 99 20	Grease nipple
17	KK 08 61 02	Stem
18	KK 07 61 21	Bracket
19	KK 07 61 20	Holder
20	KK 01 04 85	Pin
21	KK 01 12 72	Circlip
22	KK 03 27 65	Hex screw M16 x 65 mm w/nut
Not ill.	KK 08 60 89	Hub without axle cpl.






1	KK 03 28 90	Hex screw M20 x 90 mm	31	KK 02 97 22	Pin
2	KK 01 60 10	Lock nut M16	32	KK 01 11 61	Cap D63
3	KK 07 60 56	Bracket for spring w/bushing (for semi mounted ploughs)		KK 07 62 97	Cap (From 01.01.97)
	KK 08 18 96	Bracket for spring w/bushing (for BE/BM ploughs)	33	KK 07 62 83	Arm
4	KK 07 60 23	Spring		KK 07 62 96	Arm (From 01.01.97) (Before 01.10.02)
5	KK 07 65 31	Washer		KK 07 64 30	Arm (From 01.10.02)
6	KK 07 60 22	Spring	34	KK 03 33 25	Hex screw M6 x 25 mm
7	KK 01 58 34	Nut M20, H = 12 mm	35	KK 07 64 09	Disc 18" notched
8	KK 01 10 32	Roll pin		KK 07 64 10	Disc 20" notched
9	KK 07 60 58	Bolt		KK 07 62 95	Disc 22" notched (From 01.07.97)
10	KK 07 65 28	Bolt w/clevis	36	KK 07 60 53	U-bracket
11	KK 01 07 72	Gasket ring	37	KK 01 28 72	Cup spring (From 15.03.98)
12	KK 01 12 03	Bearing	38	KK 01 17 93	O - ring Ø60 x 2
13	KK 07 00 09	Bearing housing w/bearing and gasket ring (for semi mounted ploughs)	39	KK 07 60 91	Bushing (From 15.03.98)
	KK 08 18 00	Bearing housing w/bearing and gasket ring (for BE/BM ploughs)	40	KK 01 58 30	Nut M20
14	KK 07 60 52	Hoop	41	KK 01 58 25	Nut M16
15	KK 03 27 75	Hex screw M16 x 75 mm	42	KK 01 60 12	Flange nut M20
16	KK 07 60 54	Plate w/axle (Before 01.10.02)	43	KK 01 60 04	Lock nut M10
	KK 07 64 32	Plate w/axle D20 (From 01.10.02)	44	KK 08 50 91	Plate w/ axle (From 15.09.03)
17	KK 07 60 08	Pivot pin	45	KK 03 28 50	Hex screw M20 x 50 (From 15.09.03)
18	KK 03 27 25	Hex screw M16 x 27 mm	46	KK 01 29 39	Washer (From 15.09.03)
19	KK 07 64 00	Support (Before 01.10.02)	47	KK 07 62 98	Washer
	KK 07 64 37	Support (From 01.10.02)			
20	KK 03 27 02	Hex screw M16 x 110 mm (Before 01.10.02)			
	KK 03 51 78	Hex screw M20 x 110 mm (From 01.10.02)			
21	KK 02 99 20	Grease nipple			
22	KK 03 51 14	Hex screw M10 x 40 mm w/lock nut			
23	KK 07 64 99	Plate			
24	KK 07 64 06	Disc 18"			
	KK 07 64 07	Disc 20"			
	KK 07 62 94	Disc 22" (From 01.01.97)			
25	KK 07 62 85	Axle			
26	KK 01 05 83	Gasket ring			
27	KK 01 05 84	Gasket ring			
28	KK 01 62 08	Bearing			
29	KK 01 29 95	Washer			
	KK 01 30 14	Washer (From 01.05.03)			
30	KK 01 60 52	Nut 1"			




1	KK 03 28 90	Hex screw M20 x 90 mm																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																											</
---	-------------	-----------------------	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	----



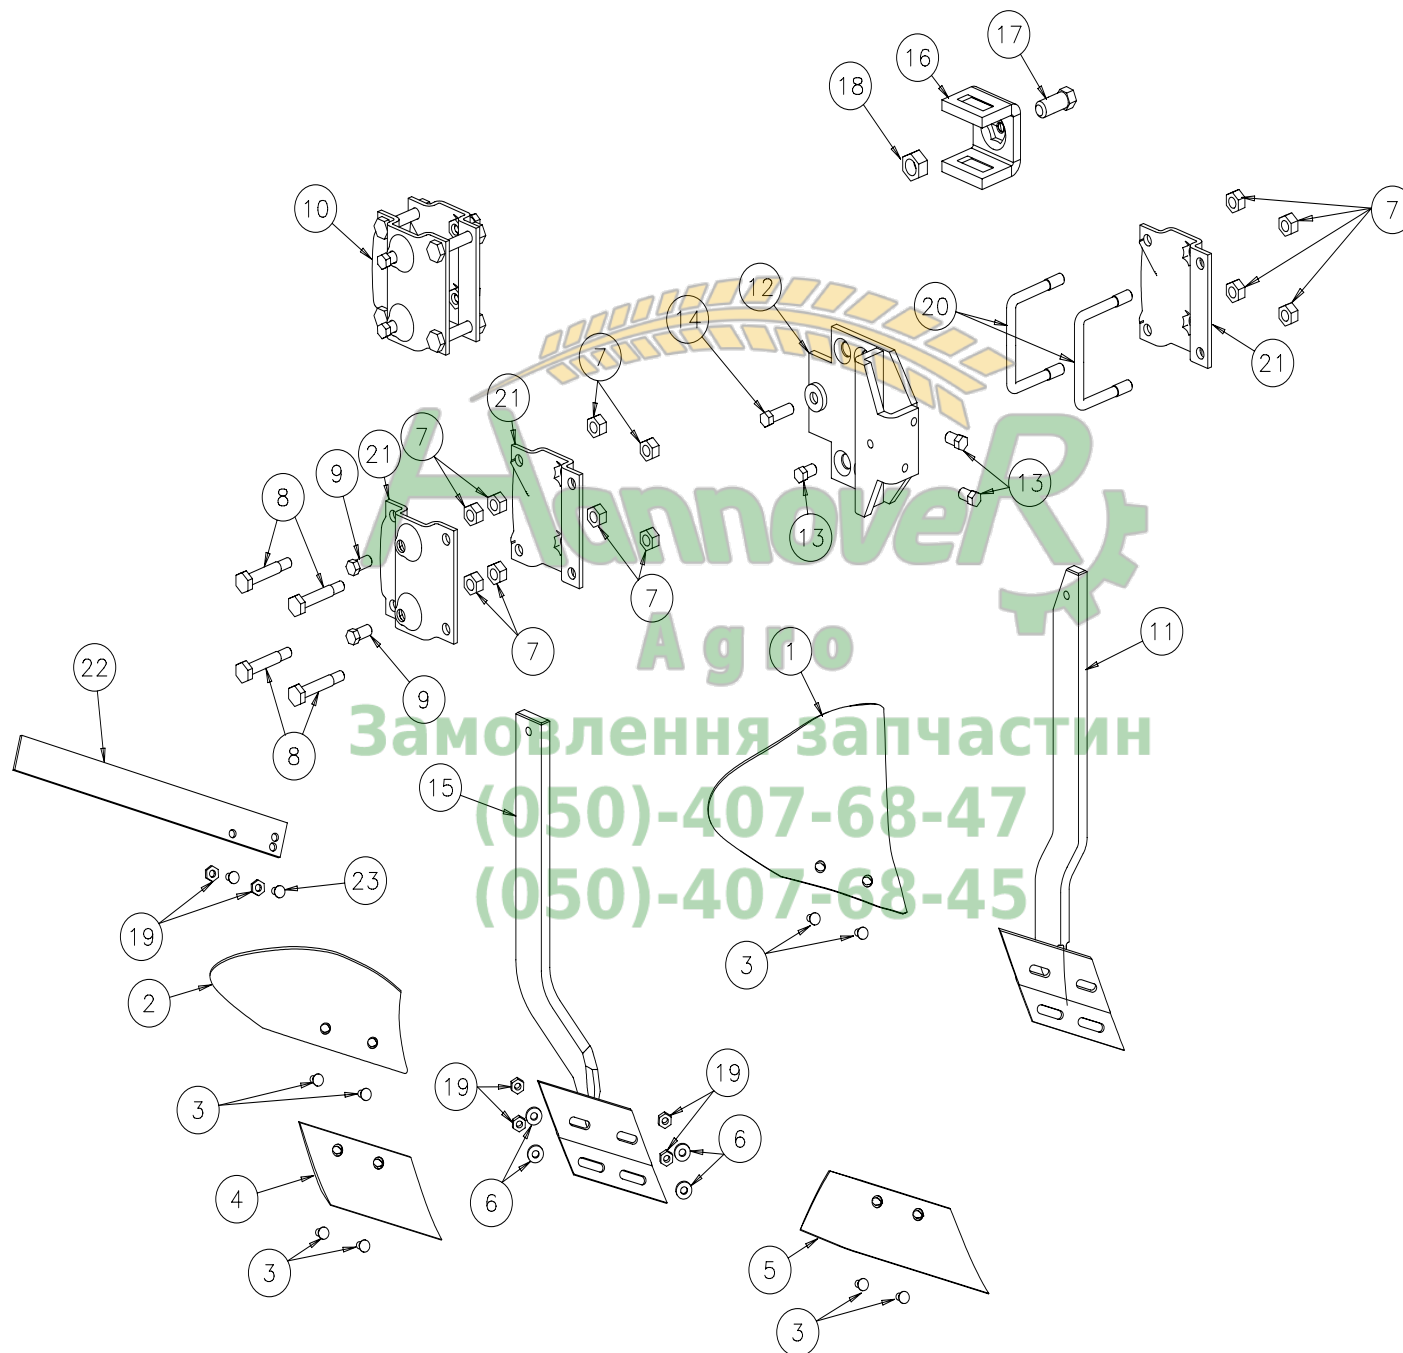


1	KK 07 68 12	Mouldboard maize R	11	KK 06 68 11	Arm R, H = 700 mm for HD beam and std. beam H700
	KK 07 68 13	Mouldboard maize L		KK 07 68 58	Arm R, H = 750 mm for std. beam H800 (From 01.12.00)
2	KK 06 68 80	Mouldboard R	16	KK 07 06 53	Fixing bracket with screw and nut (for beam 071240 and 071241)
	KK 07 69 43	Mouldboard R, plastic	17	KK 03 44 46	Setscrew M24 x 53 mm
	KK 06 68 81	Mouldboard L	18	KK 01 58 41	Nut M24
	KK 07 69 44	Mouldboard L, plastic	19	KK 01 58 16	Nut M10
3	KK 03 30 06	Oval screw M10 x 30 mm	20	KK 08 50 76	Clevis
4	KK 05 68 73	Share, short R	21	KK 06 68 61	Bracket HD beam
	KK 06 68 73	Share, short L			
5	KK 06 68 68	Share, long R			
	KK 06 68 69	Share, long L			
6	KK 01 29 06	Washer 10.5 x 25 x 3.4			
7	KK 01 58 25	Nut M16			
22	KK 08 68 01	Skimmer extension			
23	KK 03 30 07	Oval screw M10 x 35 mm			
for all turnable ploughs with Auto Reset beams:					
8	KK 03 27 95	Hex screw M16 x 95 mm			
9	KK 03 42 28	Setscrew M16 x 32 mm			
10	KK 06 06 57	Bracket cpl.			
11	KK 06 68 11	Arm R, H = 700 mm			
	KK 07 68 58	Arm R, H = 750 mm (From 01.12.00)			
	KK 06 68 12	Arm L, H = 700 mm			
	KK 07 68 59	Arm L, H = 750 mm (From 01.12.00)			
for all turnable ploughs with Shear Bolt beams:					
12	KK 07 06 39	Bracket with screws (for LB, LD, RB, RS, RX)			
	KK 07 68 72	Bracket (for LM, LS, RG, RL, RM, VD)			
13	KK 03 42 25	Setscrew M16 x 25 mm			
14	KK 03 42 50	Setscrew M16 x 50 mm			
15	KK 07 68 17	Arm R, H = 700 mm			
	KK 07 68 18	Arm L, H = 700 mm			
	KK 07 68 25	Arm R, H = 800 mm			
	KK 07 68 26	Arm L, H = 800 mm			
	KK 07 68 33	Arm R, H = 700 mm (for VD plough only) (Before 15.03.98)			
	KK 07 68 34	Arm L, H = 700 mm (for VD plough only) (Before 15.03.98)			
for beams on conventional ploughs:					




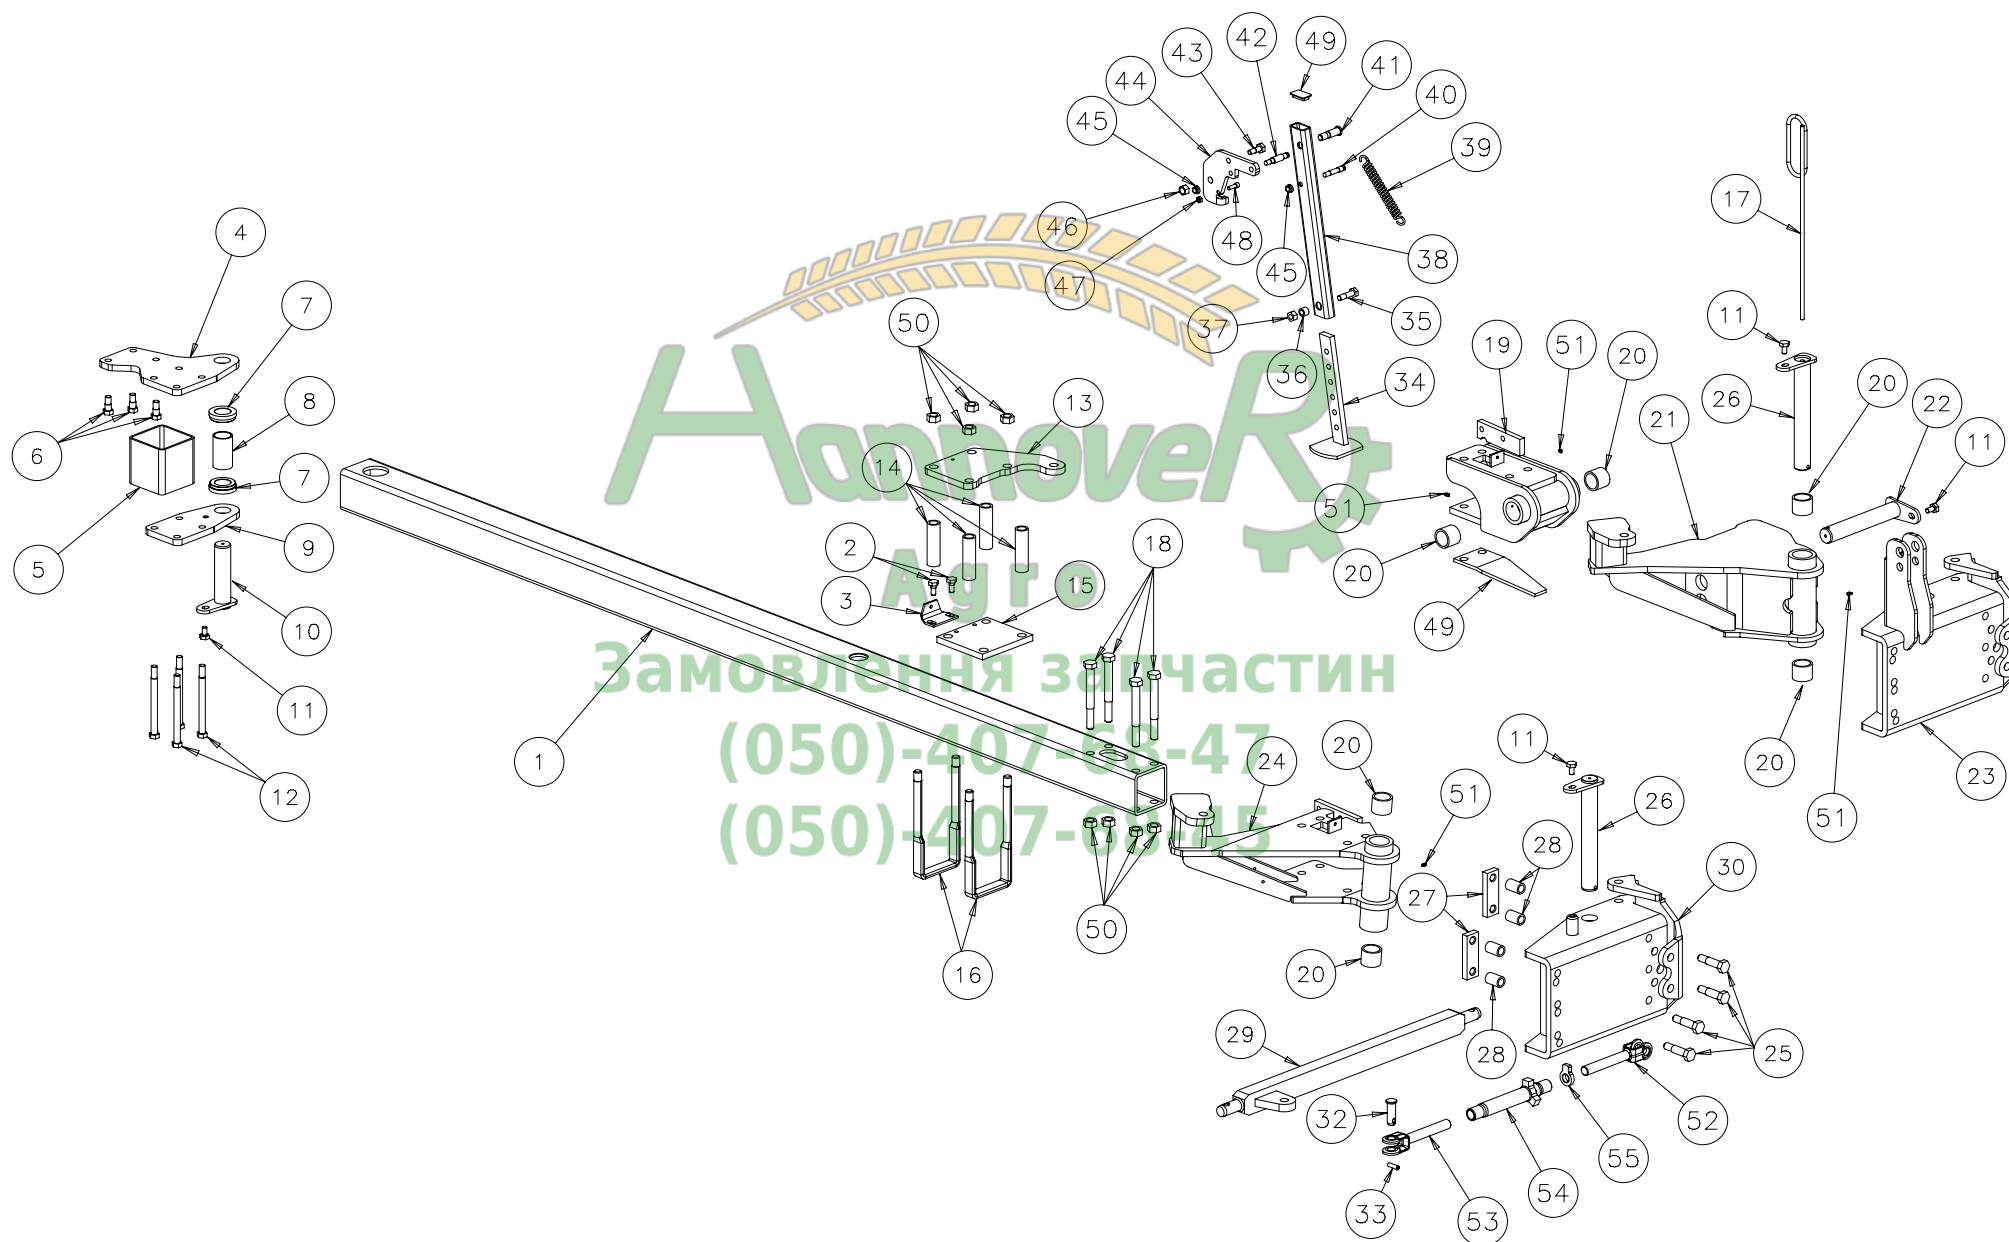


41	KK 07 17 12	Bolt
42	KK 07 17 13	Bolt
43	KK 03 27 45	Hex screw M
44	KK 07 17 10	Fixing plate
45	KK 01 60 13	Flange nut M
46	KK 01 58 30	Nut M20
47	KK 01 60 06	Lock nut M
48	KK 03 50 25	Cylinder scr
49	KK 08 19 59	Support plat
50	KK 01 58 41	Nut M24
51	KK 02 99 20	Grease nipp
52	KK 35 11 39	Screw R
53	KK 35 11 40	Screw L
54	KK 35 11 44	Tube for tur
55	KK 35 11 48	Lock nut
	Not ill. KK 36 11 16	Turnbuckle

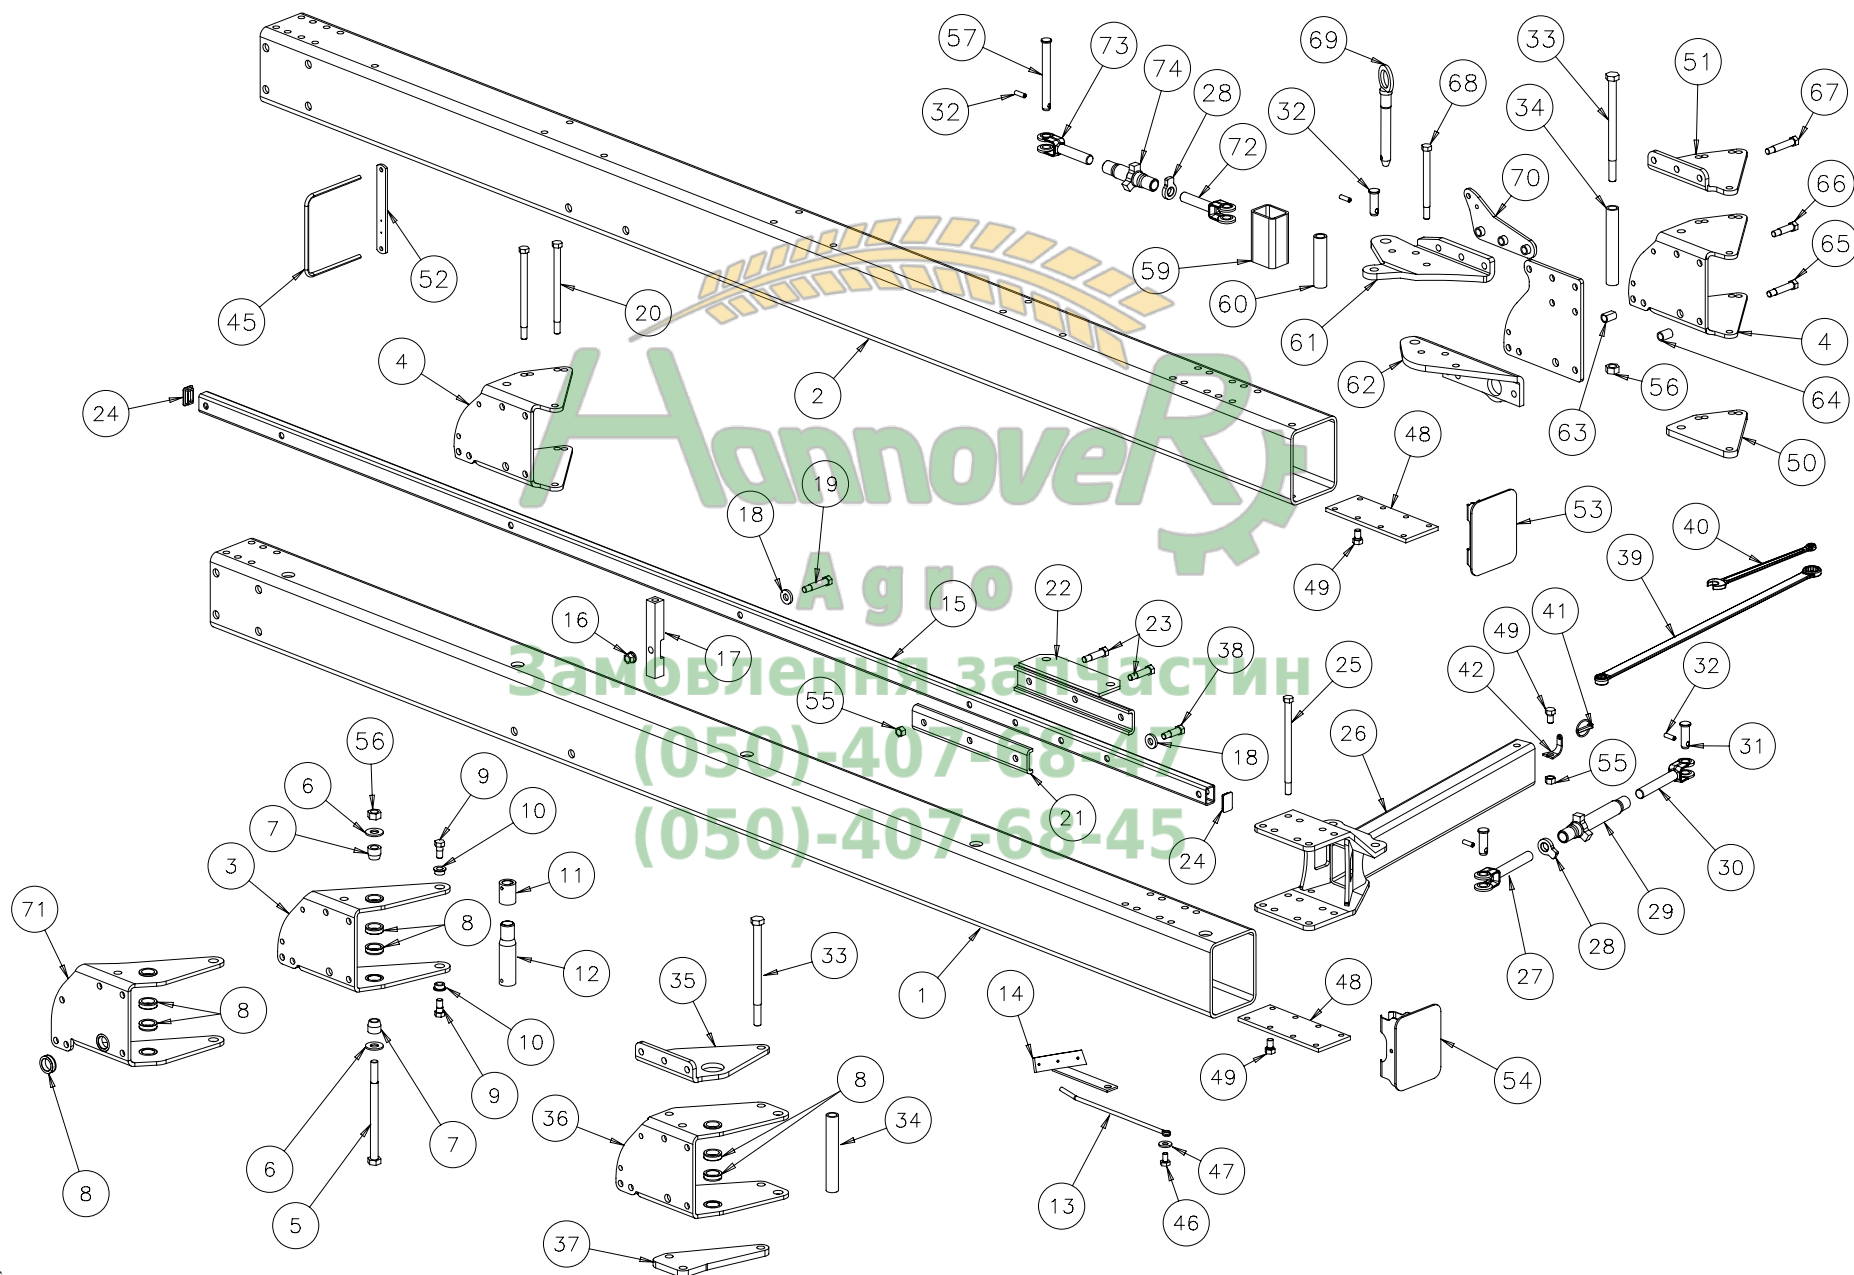


1	KK 08 18 10	Main tube, 4 furrows BE100	17	KK 08 18 41	Coupling piece	55	KK 01 58 30	Nut M20
	KK 08 18 11	Main tube, 5 furrows BE100	18	KK 01 29 68	Washer D45 x d21 x 7,5	56	KK 01 58 41	Nut M24
	KK 08 18 12	Main tube, 6 furrows BE100	19	KK 03 28 95	Hex screw M20 x 95 mm w/lock nut	57	KK 12 60 95	Bolt w/ head D25,3 x 212
	KK 08 18 13	Main tube, 7 furrows BE100	20	KK 03 28 33	Hex screw M20 x 290 mm w/nut (BM plough)	59	KK 07 78 41	Spacing tube for fixing device
	KK 08 18 14	Main tube, 8 furrows BE100	21	KK 08 22 40	Bracket	60	KK 07 78 43	Bushing D28 - d40 x 166
	KK 08 18 15	Main tube, 4 furrows BE115	22	KK 08 18 45	Bracket for stay	61	KK 07 78 40	Upper plate for bracket
	KK 08 18 16	Main tube, 5 furrows BE115	23	KK 03 28 80	Hex screw M20 x 80 mm	62	KK 07 78 45	Lower plate for bracket
	KK 08 18 17	Main tube, 6 furrows BE115	24	KK 01 09 09	Plastic cover	63	KK 07 15 01	Bushing D20,5 - d28 x 40,2
	KK 08 18 18	Main tube, 7 furrows BE115	25	KK 03 28 31	Hex screw M20 x 310 mm	64	KK 07 15 00	Bushing D20,5 - d28 x 40,2
	KK 08 18 19	Main tube, 8 furrows BE115	26	KK 08 19 30	Fixing device (BE/BM plough)	65	KK 03 28 07	Hex screw M20 x 100 mm
2	KK 08 19 10	Main tube, 4 furrows BM100	27	KK 35 11 39	Screw, R (520 - 720)	66	KK 03 28 80	Hex screw M20 x 80 mm
	KK 08 19 11	Main tube, 5 furrows BM100	28	KK 35 11 48	Nut	67	KK 03 28 03	Hex screw M20 x 110 mm
	KK 08 19 12	Main tube, 6 furrows BM100	29	KK 35 11 44	Tube for turnbuckle (520 - 720)	68	KK 03 28 39	Hex screw M20 x 230 mm
	KK 08 19 13	Main tube, 7 furrows BM100	30	KK 35 11 40	Screw, L (520 - 720)	69	KK 07 75 87	Quick coupling axle
	KK 08 19 14	Main tube, 8 furrows BM100	31	KK 01 03 15	Bolt w/head D25.3 x 60 mm	70	KK 07 78 35	Spring holder for Packomat
3	KK 08 18 40	Beam holder w/bushing (BE plough)	32	KK 01 10 20	Roll pin D12 x 40 mm	71	KK 08 50 02	Beam support with bushings
4	KK 08 19 20	Beam holder (BM plough)	33	KK 03 29 35	Hex screw M24 x 340 mm	72	KK 35 11 72	Screw, R (390 - 520)
5	KK 03 29 34	Hex screw M24 x 325 mm	34	KK 08 18 33	Bushing	73	KK 35 11 73	Screw, L (390 - 520)
6	KK 01 29 40	Washer D55 x 25,4 x 4,58	35	KK 08 18 34	Plate (for packomat fixing) BE	74	KK 35 11 70	Tube for turnbuckle (390 - 520)
7	KK 07 14 03	Tube w/cone	36	KK 08 18 30	Beam holder w/bushing (for Packomat) BE	Not ill.	KK 08 18 01	Internal support cpl. (Ill. no. 11-12)
8	KK 01 16 94	Bushing	37	KK 08 18 32	Beam holder support (for packomat) BE		KK 36 11 16	Turnbuckle cpl. (520 - 720) (for On-Land outer wheel with more than 3 m. Max 3.3 m.)
9	KK 03 28 40	Hex screw M20 x 40 mm	38	KK 03 28 65	Hex screw M20 x 65 mm			
10	KK 31 00 75	Bushing	39	KK 01 06 50	Spanner 27 - 36		KK 36 11 20	Turnbuckle cpl. (390 - 520) (for in furrow and On-Land outer wheel with less than 3 m.)
11	KK 08 18 44	Bushing support, outer D51xd33,4x65	40	KK 01 06 06	Spanner 19 - 27			
12	KK 08 18 43	Bushing support, inner D51xd33,4x200	41	KK 01 07 00	Ring pin D12 mm			
13	KK 07 18 53	Indicator	42	KK 08 15 76	Spanner holder			
14	KK 08 18 02	Scale	45	KK 08 18 73	U-bolt			
15	KK 08 18 20	Parallel rod, 4 furrows BE100	46	KK 03 27 25	Hex screw M16 x 27 mm w/nut			
	KK 08 18 21	Parallel rod, 5 furrows BE100	47	KK 01 29 22	Washer			
	KK 08 18 22	Parallel rod, 6 furrows BE100	48	KK 08 19 29	Plate			
	KK 08 18 23	Parallel rod, 7 furrows BE100	49	KK 03 28 30	Hex screw M20 x 30 mm			
	KK 08 18 24	Parallel rod, 8 furrows BE100	50	KK 08 19 58	Support plate for beam holder BM			
	KK 08 18 25	Parallel rod, 4 furrows BE115	51	KK 08 19 57	Upper fixing plate for Packomat BM			
	KK 08 18 26	Parallel rod, 5 furrows BE115	52	KK 08 18 72	Orvel			
	KK 08 18 27	Parallel rod, 6 furrows BE115	53	KK 08 19 99	Cover (BM)			
	KK 08 18 28	Parallel rod, 7 furrows BE115	54	KK 08 19 96	Cover (BE)			
	KK 08 18 29	Parallel rod, 8 furrows BE115						
16	KK 01 60 12	Lock nut M20						

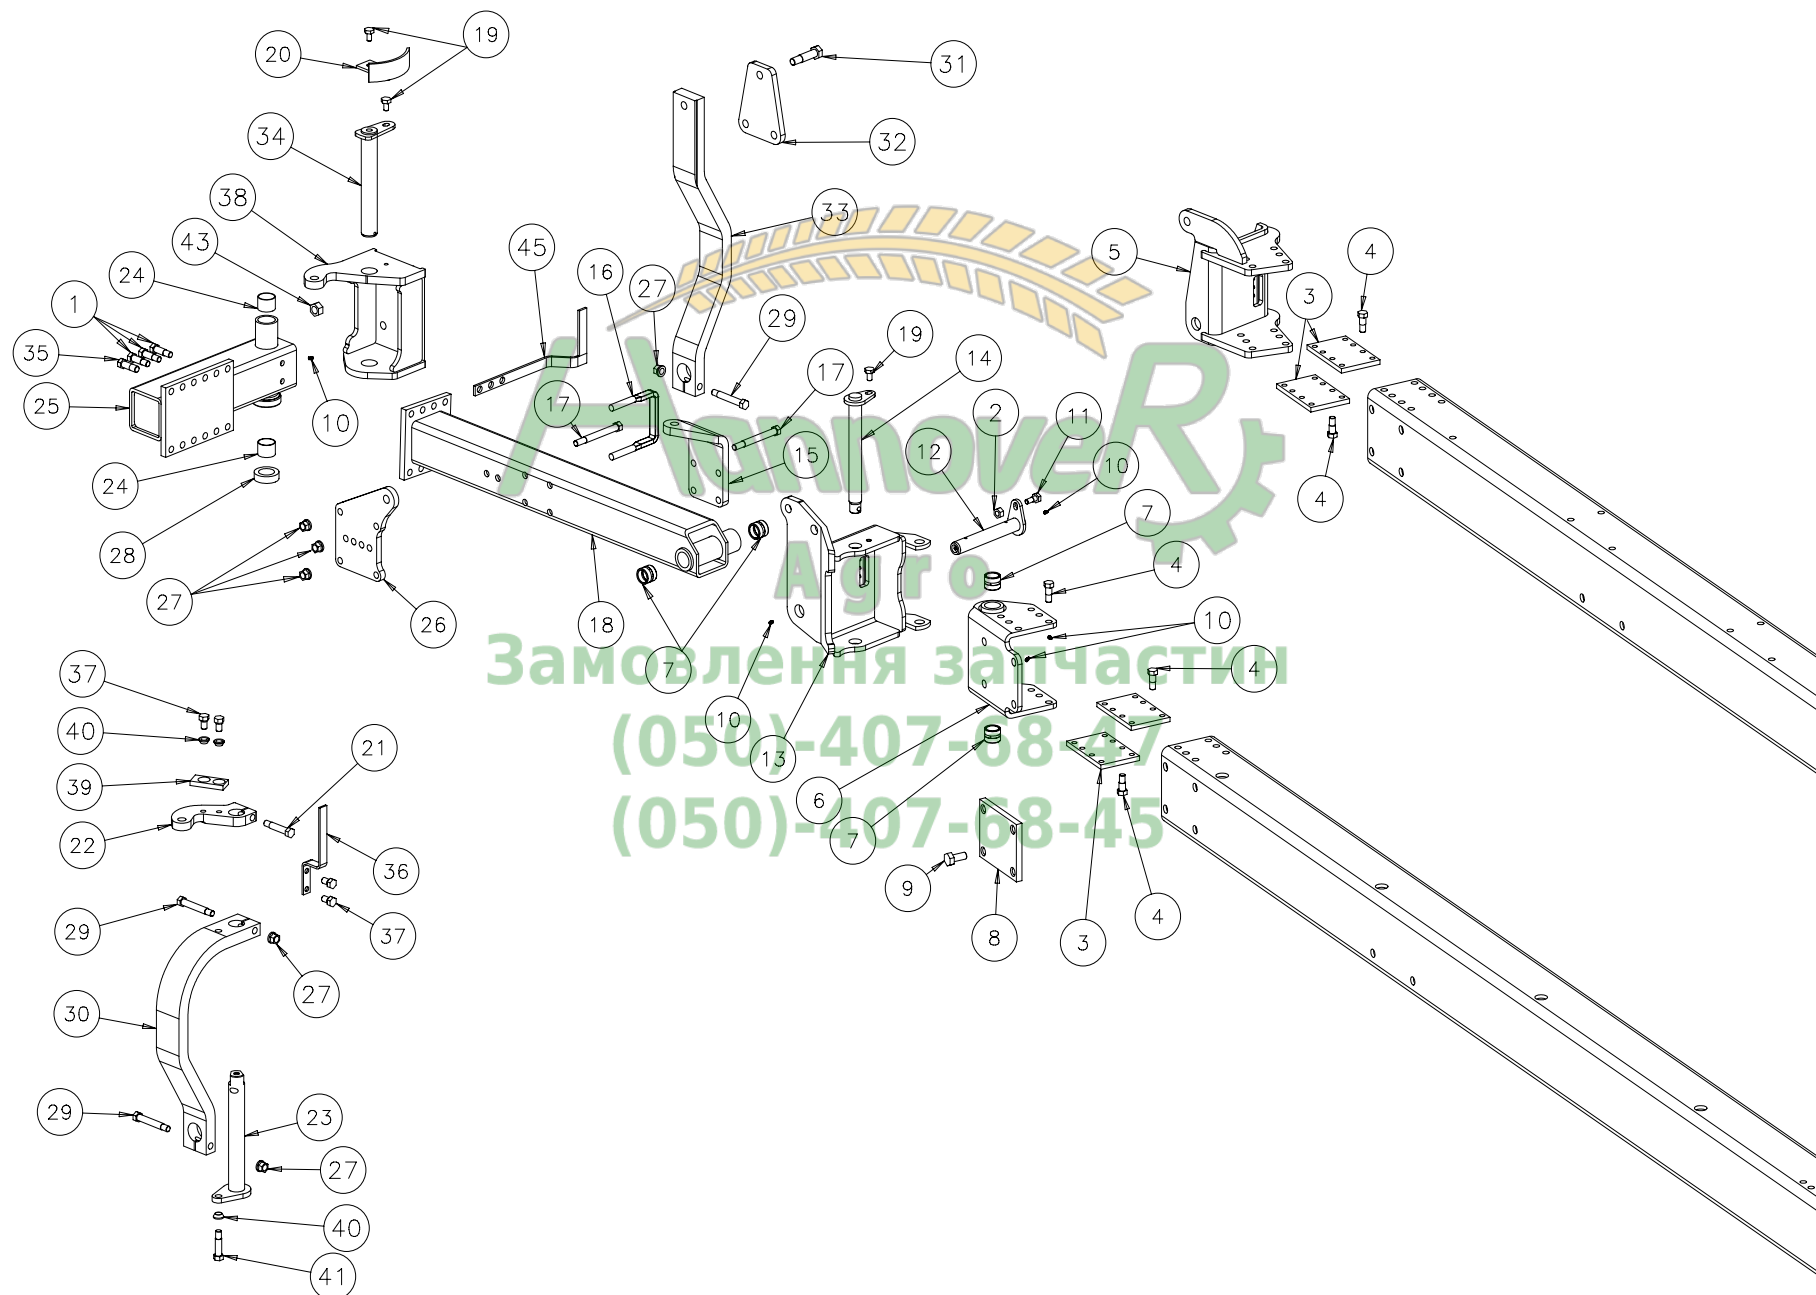

1	KK 03 28 65	Hex screw M20 x 65 mm	38	KK 08 80 82	Support wheel arm (From 01.10.03)
2	KK 01 58 25	Nut M16	39	KK 08 19 79	Lock plate
3	KK 08 19 65	Plate	40	KK 30 12 23	Cone (Before 01.10.03)
4	KK 03 28 50	Hex screw M20 x 50 mm	41	KK 03 28 80	Hex screw M20 x 80 mm w/ nut (Before 01.10.03)
5	KK 08 19 60	Fixing device for depth wheel (BM plough)	42	KK 08 18 08	Extension bushing for support wheel
6	KK 08 19 04	Support w/bushing (BE plough)	43	KK 01 58 39	Nut M24 (From 01.10.03)
7	KK 01 16 83	Bushing	44	KK 08 80 90	Indicator (From 01.10.03)
8	KK 08 18 58	Plate (BE plough)			
9	KK 03 29 50	Hex screw M24 x 50 mm			
10	KK 02 99 20	Grease nipple			
11	KK 03 27 40	Hex screw M16 x 40 mm			
12	KK 07 82 35	Axle			
13	KK 08 18 50	Fixing device for depth wheel (BE plough)			
14	KK 07 82 38	Axle			
15	KK 08 19 81	Cylinder plate			
16	KK 07 78 80	U-bolt M20			
17	KK 03 28 18	Hex screw M20 x 180 mm			
18	KK 08 19 05	Arm for depth wheel w/bushing			
19	KK 03 27 25	Hex screw M16 x 27 mm			
20	KK 08 18 36	Indicator display			
21	KK 03 28 07	Hex screw M20 x 100 mm w/nut (Before 01.10.03)			
22	KK 08 19 80	Steering bracket (Before 01.10.03)			
23	KK 08 19 68	Axle (Before 01.10.03)			
24	KK 01 16 52	Bushing			
25	KK 08 19 06	Support for depth wheel arm w/ bushings			
26	KK 08 19 73	Fix for cylinder			
27	KK 01 60 12	Lock nut M20			
28	KK 01 07 49	Bearing			
29	KK 03 28 11	Hex screw M20 x 130 mm w/nut (Before 01.10.03)			
30	KK 08 18 76	Arm (Before 01.10.03)			
31	KK 03 29 00	Hex screw M24 x 100 mm			
32	KK 08 80 88	Fixing plate (From 01.10.03)			
33	KK 08 80 80	Arm Standard wheel (From 01.10.03)			
	KK 08 80 81	Arm Wheel 14,9 x 24 (From 01.10.03)			
34	KK 07 88 28	Axle with lock plate (From 01.10.03)			
35	KK 03 28 60	Hex screw M20 x 60 mm w/nut			
36	KK 08 18 62	Indicator (when using standard wheel arm) (Before 01.10.03)			
37	KK 03 27 30	Hex screw M16 x 30 mm			

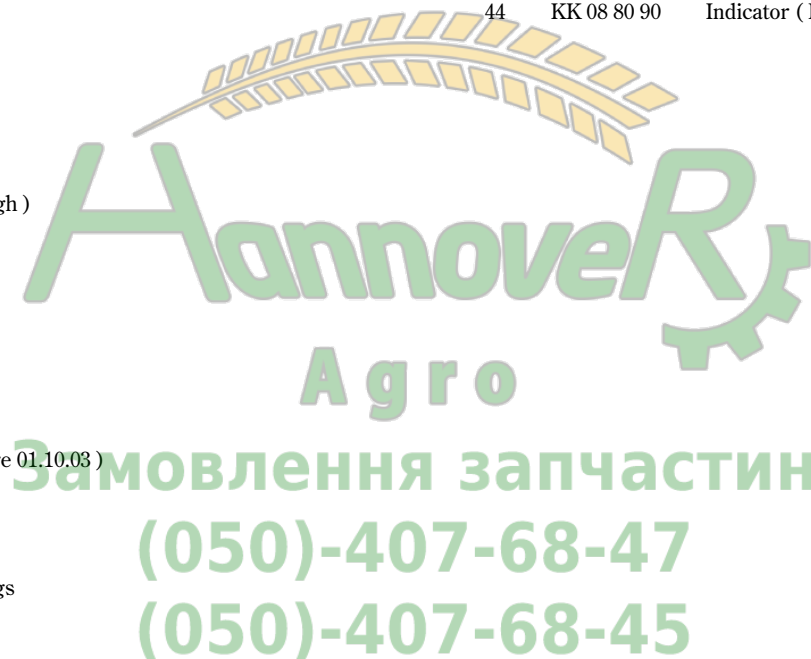


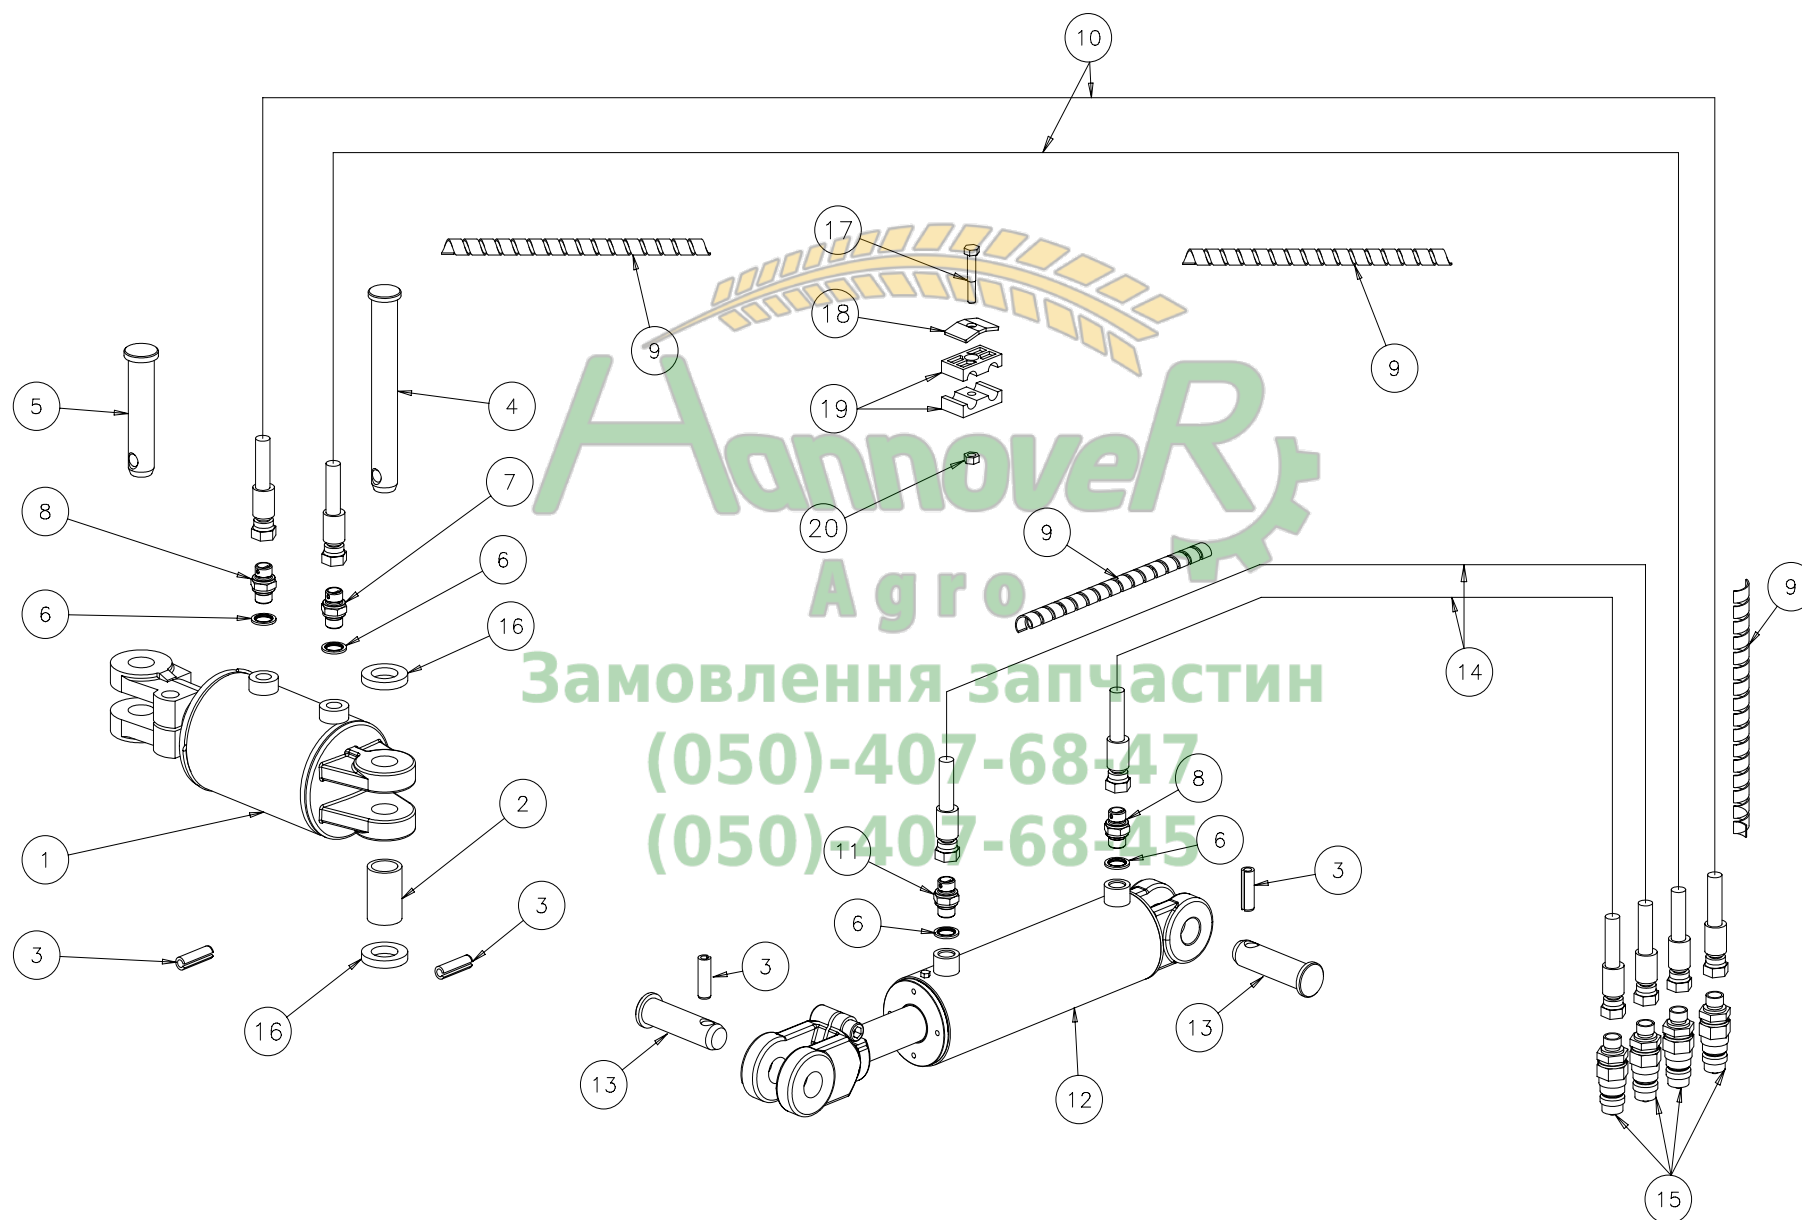


1	KK 35 38 17	Hydraulic cylinder D100 x 55 mm cpl. (see plate no.1200)
2	KK 01 00 53	Bushing D33.8 x d25.7 x 53
3	KK 01 10 20	Roll pin D12 x 40 mm
4	KK 01 03 37	Bolt w/head D25.3 x 180 mm
5	KK 01 03 18	Bolt w/head D25.3 x 103 mm
6	KK 01 15 85	Gasket ring 3/8"
7	KK 01 20 77	Threaded coupling 3/8" - 3/8", 1.7 mm choke
8	KK 01 20 76	Threaded coupling 3/8" - 3/8", 1.4 mm choke
9	KK 01 15 96	Hose band D12.5 x 250 mm
10	KK 01 26 79	Hose 3/8", L = 4000 mm, with pivot box, without tower
	KK 01 15 12	Hose 3/8", L = 4500 mm, with pivot box, with tower
11	KK 01 20 75	Threaded coupling 3/8" - 3/8", 1.0 mm choke
12	KK 35 39 06	Hydraulic cylinder D75 x 200 mm w/90° twisted end cpl. (see plate no. 1195)
13	KK 01 03 28	Bolt w/head D25.3 x 78 mm
14	KK 01 27 73	Hose 3/8", L = 1300 mm
15	KK 01 21 58	Quick coupling
16	KK 01 29 36	Washer D45 x d26 x 7,5
17	KK 03 24 50	Hex screw M8 x 50 mm
18	KK 01 23 24	Plastic cover
19	KK 01 25 22	Plastic part
20	KK 01 58 11	Nut M8
Not ill.	KK 01 35 29	Strip, yellow



Замовлення запчастин
(050)-407-68-47
(050)-407-68-45

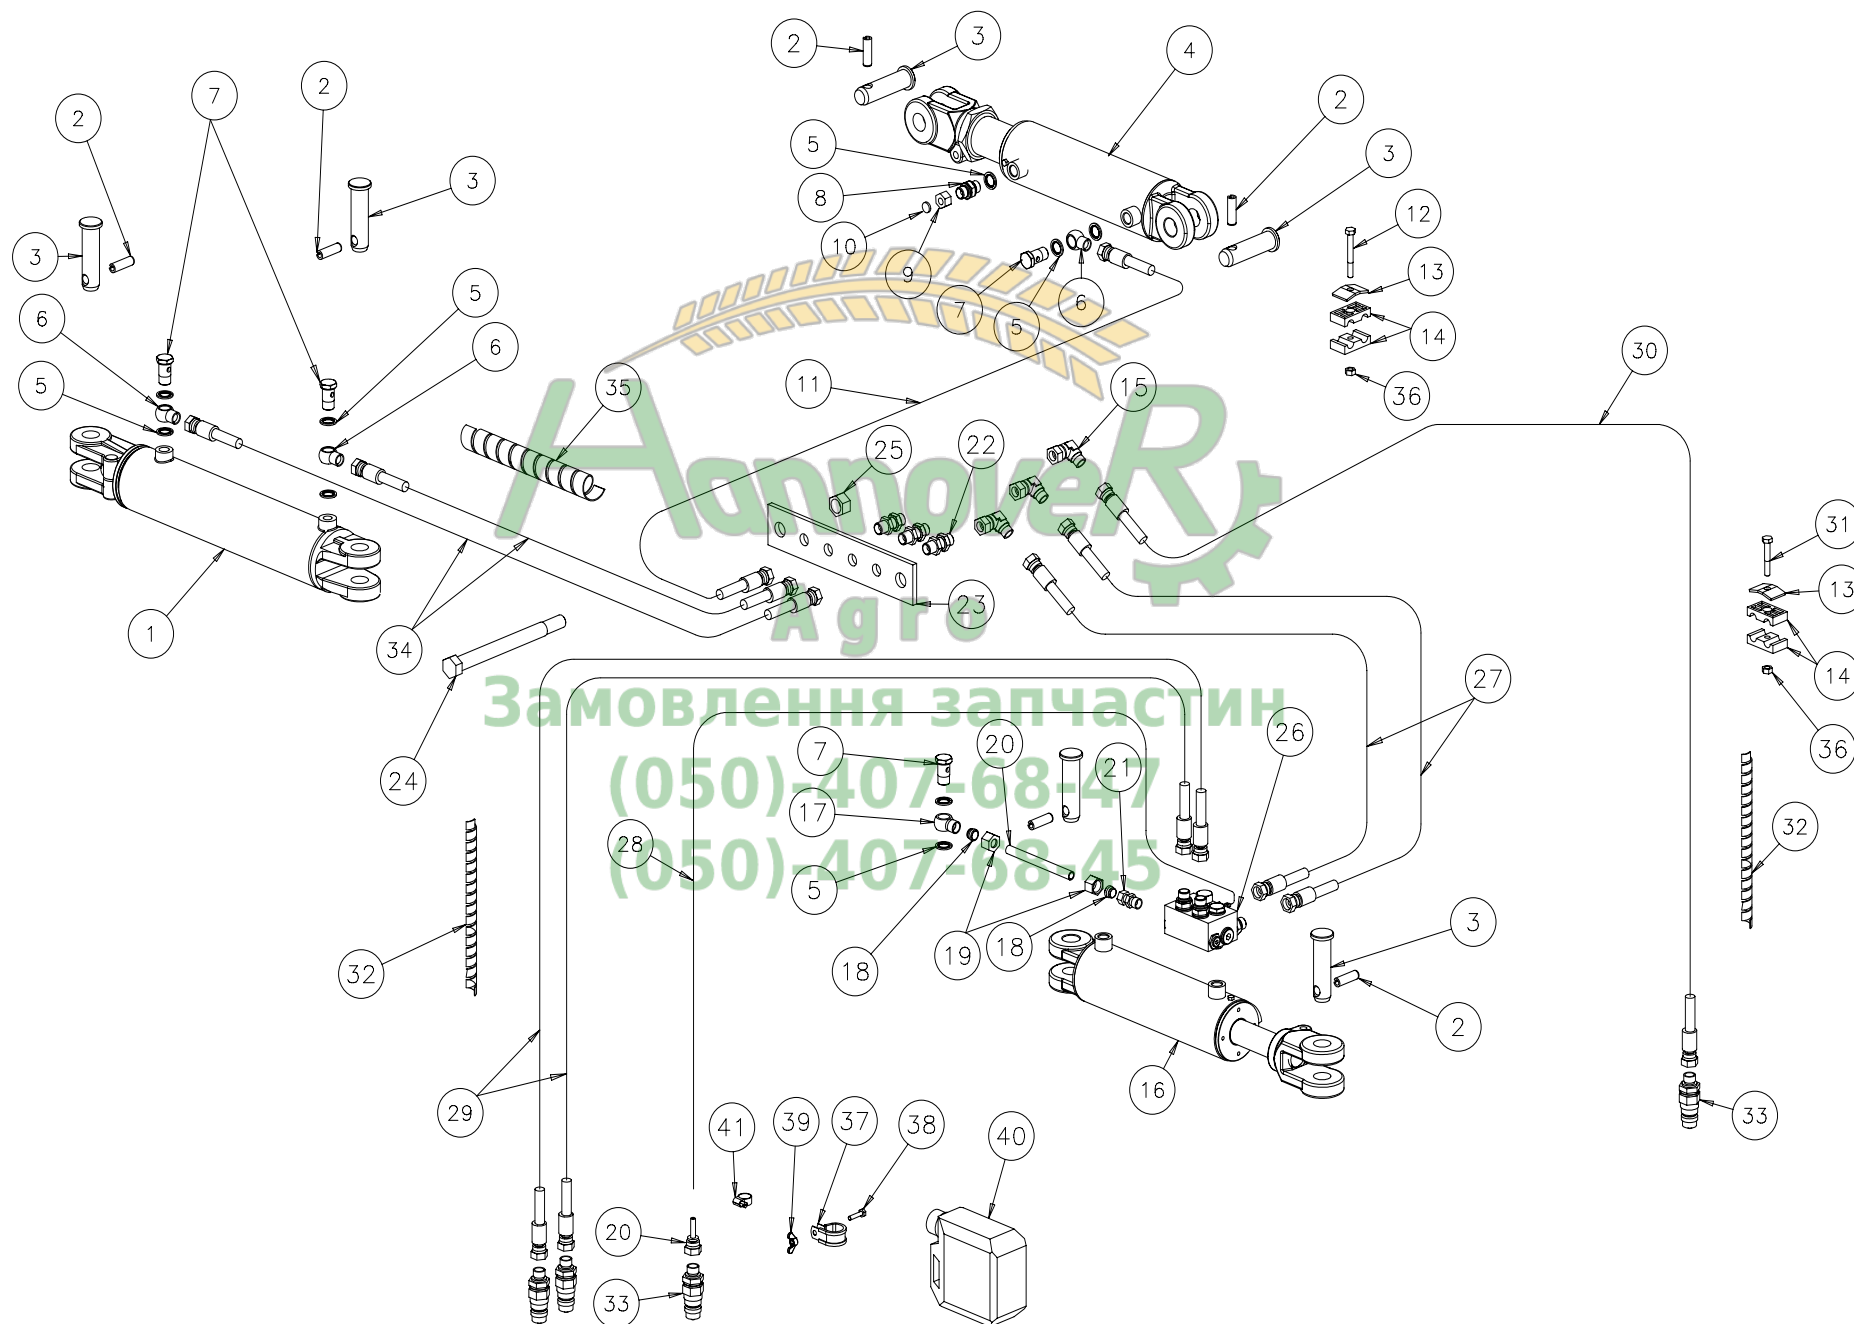


1	KK 35 37 11	Hydraulic cylinder D75 x 300 mm cpl. (see plate no. 1201)		KK 01 27 97	Hose 3/8", L = 6000 when using Pivot box with headstock
2	KK 01 10 20	Roll pin D12 x 40 mm	31	KK 03 24 50	Hex screw M8 x 50 mm w/nut
3	KK 01 03 28	Bolt w/head D25.3 x 78 mm (PS! Look at which way to put it into the cylinder)	32	KK 01 15 96	Hose band D12 x 250 mm
4	KK 35 38 37	Hydraulic cylinder D100 x 200 mm w/stop cpl. (see plate no. 1129)	33	KK 01 21 58	Quick coupling 3/8"
5	KK 01 15 85	Gasket ring 3/8"	34	KK 01 23 63	Hose 3/8", L = 2000 mm (for BE/BM100, 4 furrows)
6	KK 01 20 62	Banjo 3/8", H = 17		KK 01 15 18	Hose 3/8", L = 3200 mm (for BE/BM100, 5 furrows)
7	KK 01 20 59	Banjo bolt 3/8" x 31 mm		KK 01 26 79	Hose 3/8", L = 4000 mm (for BE/BM100, 6 furrows and BE115, 5 furrows)
8	KK 01 22 61	Threaded coupling 3/8" - 3/8"		KK 01 27 96	Hose 3/8", L = 5000 mm (for BE/BM100, 7 furrows and BE115, 6 furrows)
9	KK 01 09 60	Filter cover 3/8"		KK 01 27 97	Hose 3/8", L = 6000 mm (for BE/BM100, 8 furrows and BE115, 7 furrows)
10	KK 01 09 61	Filter 3/8", D14.5		KK 01 27 95	Hose 3/8", L = 2500 mm (for BE115, 4 furrows)
11	KK 01 22 19	Hose 3/8", L = 1600 mm (for BE/BM100, 4 furrows)		KK 01 26 61	Hose 3/8", L = 7300 mm (for BE115, 8 furrows)
	KK 01 27 95	Hose 3/8", L = 2000 mm (for BE/BM100, 5 furrows)	35	KK 01 35 00	Hose wrapper D32 x 250 mm
	KK 01 26 57	Hose 3/8", L = 3500 mm (for BE/BM100, 6 furrows and BE115, 5 furrows)	36	KK 01 58 11	Nut M8
	KK 01 15 12	Hose 3/8", L = 4500 mm (for BE100/BM, 7 furrows and BE115, 6 furrows)	37	KK 01 27 37	Hose clamp 1/4", rubber/ steel
	KK 01 22 01	Hose 3/8", L = 5500 mm (for BE100/BM, 8 furrows)	38	KK 03 33 25	Hex screw M6 x 25 mm
	KK 01 23 62	Hose 3/8", L = 2400 mm (for BE115, 4 furrows)	39	KK 01 58 99	Wing nut M6
	KK 01 27 97	Hose 3/8", L = 6000 mm (for BE115, 7 furrows)	40	KK 08 18 77	Plastic can 1L
	KK 01 26 61	Hose 3/8", L = 7300 mm (for BE115, 8 furrows)			
12	KK 03 24 65	Hex screw M8 x 65 mm			
13	KK 01 23 24	Plastic cover			
14	KK 01 25 22	Plastic part			
15	KK 01 20 56	Angle 90°, 3/8" - 3/8"			
16	KK 35 39 04	Hydraulic cylinder D75 x 200 mm cpl. (see plate no. 1195)			
17	KK 01 25 47				
18	KK 01 22 67				
19	KK 01 22 64				
20	KK 01 23 77				
21	KK 01 21 21				
22	KK 01 27 07	Hose connector			
23	KK 08 18 79	Fix for hoses, front BE/ BM			
24	KK 03 28 32	Hex screw M20 x 320 mm			
25	KK 01 58 30	Nut M20			
26	KK 01 37 67	Lock- and pressure adj. valve			
27	KK 01 26 79	Hose 3/8", L = 4000 mm			
	KK 01 15 12	Hose 3/8", L = 4500 mm when using Pivot box with headstock			
28	KK 01 35 19	Hose 3/8", L = 1000 mm			
29	KK 01 22 19	Hose 3/8", L = 1600 mm			
30	KK 01 22 01	Hose 3/8", L = 5500 mm			

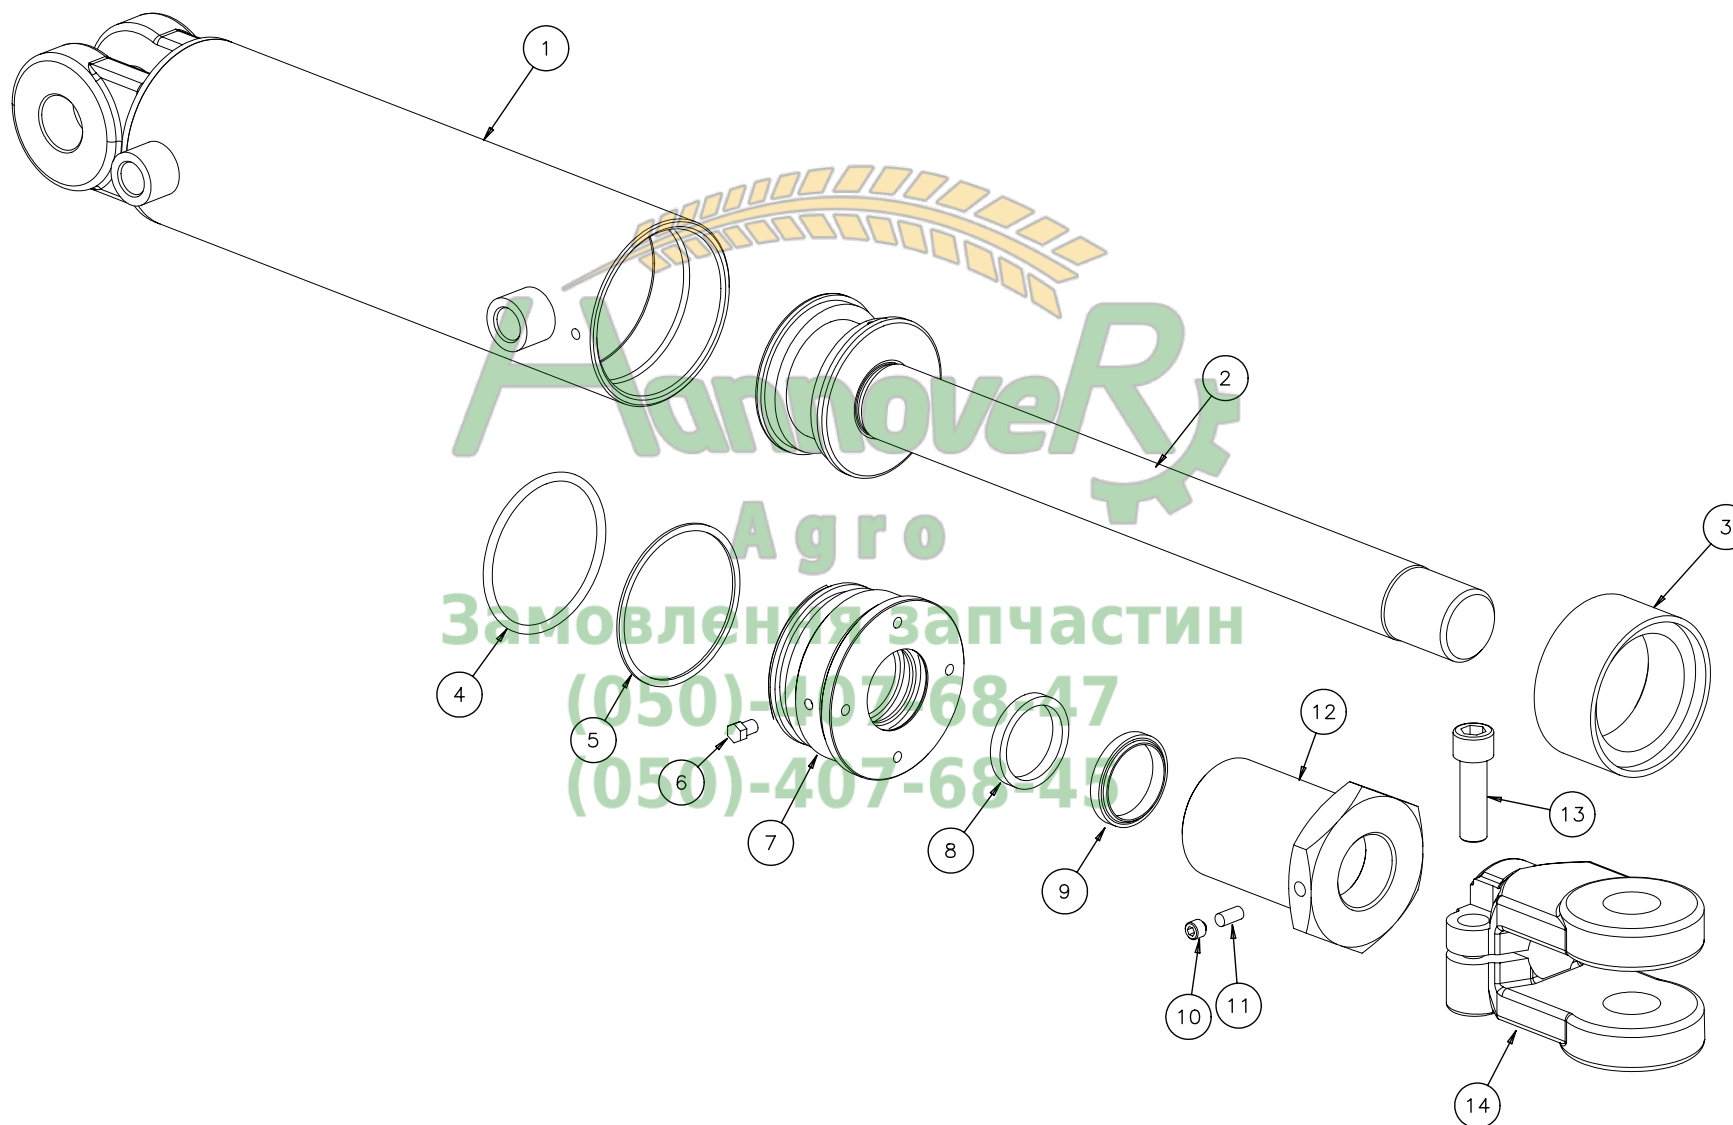

1	KK 35 39 38	Cylinder tube (for cylinder KK 35 39 04 and KK 35 39 05)
	KK 35 39 39	Cylinder tube (for cylinder KK 35 39 06)
2	KK 35 39 40	Piston rod (for cylinder KK 35 39 04 and KK 35 39 06)
	KK 35 39 41	Piston rod (for cylinder KK 35 39 05)
3	KK 01 30 93	Piston packing
4	KK 01 30 96	O-ring D67 x 4 mm
5	KK 01 30 95	Support ring
6	KK 03 33 06	Hex screw M6 x 8 mm
7	KK 35 39 27	Packing seal
8	KK 01 30 94	Piston rod packing
9	KK 01 30 92	Scraper
10	KK 03 21 10	Set screw M8 x 8 mm (for cylinder KK 35 39 05)
11	KK 35 39 46	Pin for stop (for cylinder KK 35 39 05)
12	KK 35 39 45	Stop (for cylinder KK 35 39 05)
13	UH 82 56 40	Cylinder screw M12 x 40 mm
14	KK 35 39 23	Clevis

Not ill.	KK 01 30 87	Packings cpl.
	KK 35 39 04	Hydraulic cylinder D75 x 200 mm cpl.
	KK 35 39 05	Hydraulic cylinder D75 x 200 mm w/stop cpl.
	KK 35 39 06	Hydraulic cylinder D75 x 200 mm w/90° twisted end cap cpl.



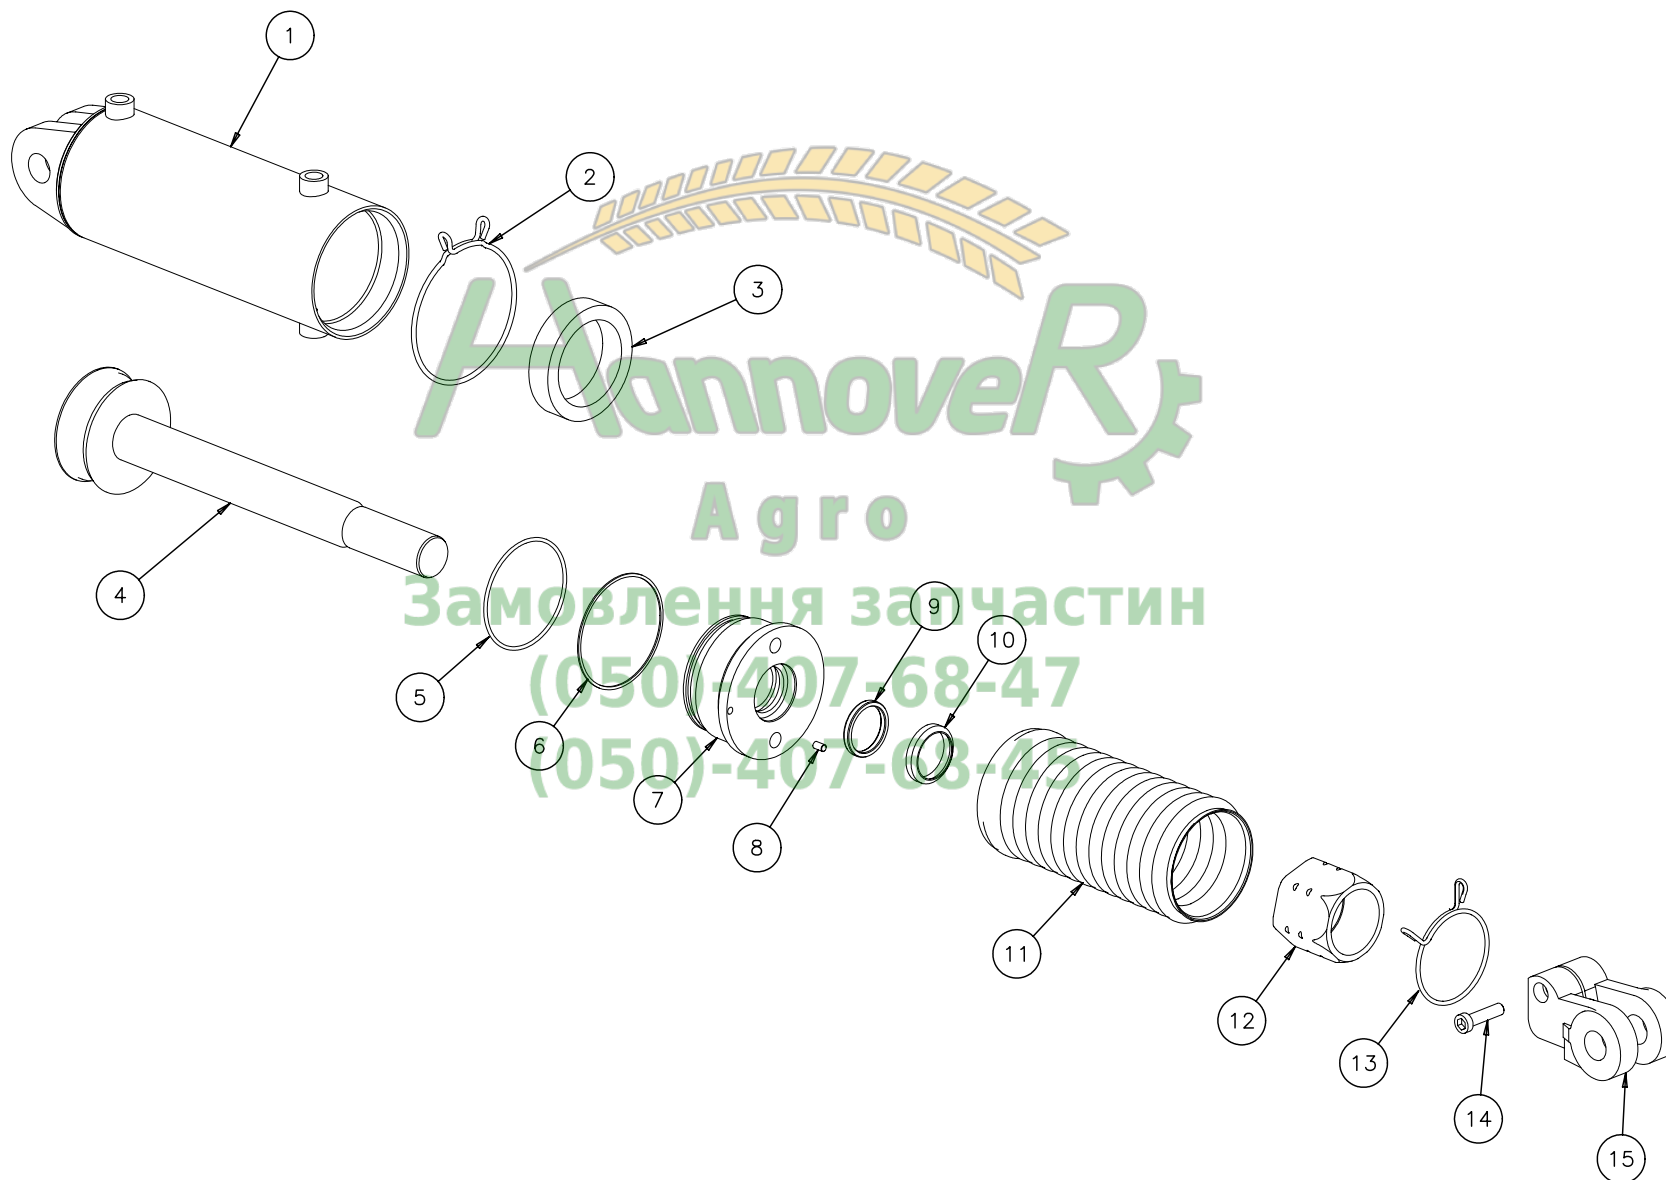

1	KK 35 38 51	Cylinder tube
2	KK 01 35 97	Thread clamp D110
3	KK 01 19 08	Piston packing set
4	KK 35 33 72	Piston rod
5	KK 01 18 06	O-ring
6	KK 01 18 88	Support ring
7	KK 35 38 50	End cap
8	KK 03 20 02	Screw M6 x 10 mm
9	KK 01 19 51	Piston rod packing
10	KK 01 19 12	Scraper
11	KK 01 35 95	Bellow
12	KK 35 36 27	Stop
13	KK 01 35 96	Thread clamp D80
14	KK 03 20 40	Screw M10 x 40 mm
15	KK 35 33 92	Clevis (for PB/RB plough)
	KK 35 27 74	Clevis w/garmax (for PX/RX plough)
Not ill.	KK 01 30 73	Packing set cpl.
	KK 35 38 37	Hydraulic cylinder D100 x 200 mm w/stop and bellow cpl.
	KK 35 38 38	Hydraulic cylinder D100 x 200 mm w/garmx, stop and bellow cpl.




Замовлення запчастин
(050)-407-68-47
(050)-407-68-45



1	KK 35 38 70	Cylinder tube
2	KK 01 17 17	Piston packing
3	KK 35 37 49	Piston
4	KK 03 20 06	Cylinder screw M6 x 20 mm
5	KK 01 17 18	O-ring D50
6	KK 35 38 71	Piston rod
7	KK 01 17 19	O-ring D93
8	KK 01 17 24	Support ring
9	KK 35 37 95	Lock ring
10	KK 35 37 39	Rod cap
11	KK 01 17 25	Piston rod packing
12	KK 01 17 27	Scraper
13	KK 03 20 16	Cylinder screw M10 x 45 mm
14	KK 35 37 51	Clevis
Not ill.	KK 01 36 01	Packings cpl.
	KK 35 38 17	Hydraulic cylinder D100 x 55 mm cpl.




Замовлення запчастин
(050)-407-68-47
(050)-407-68-45

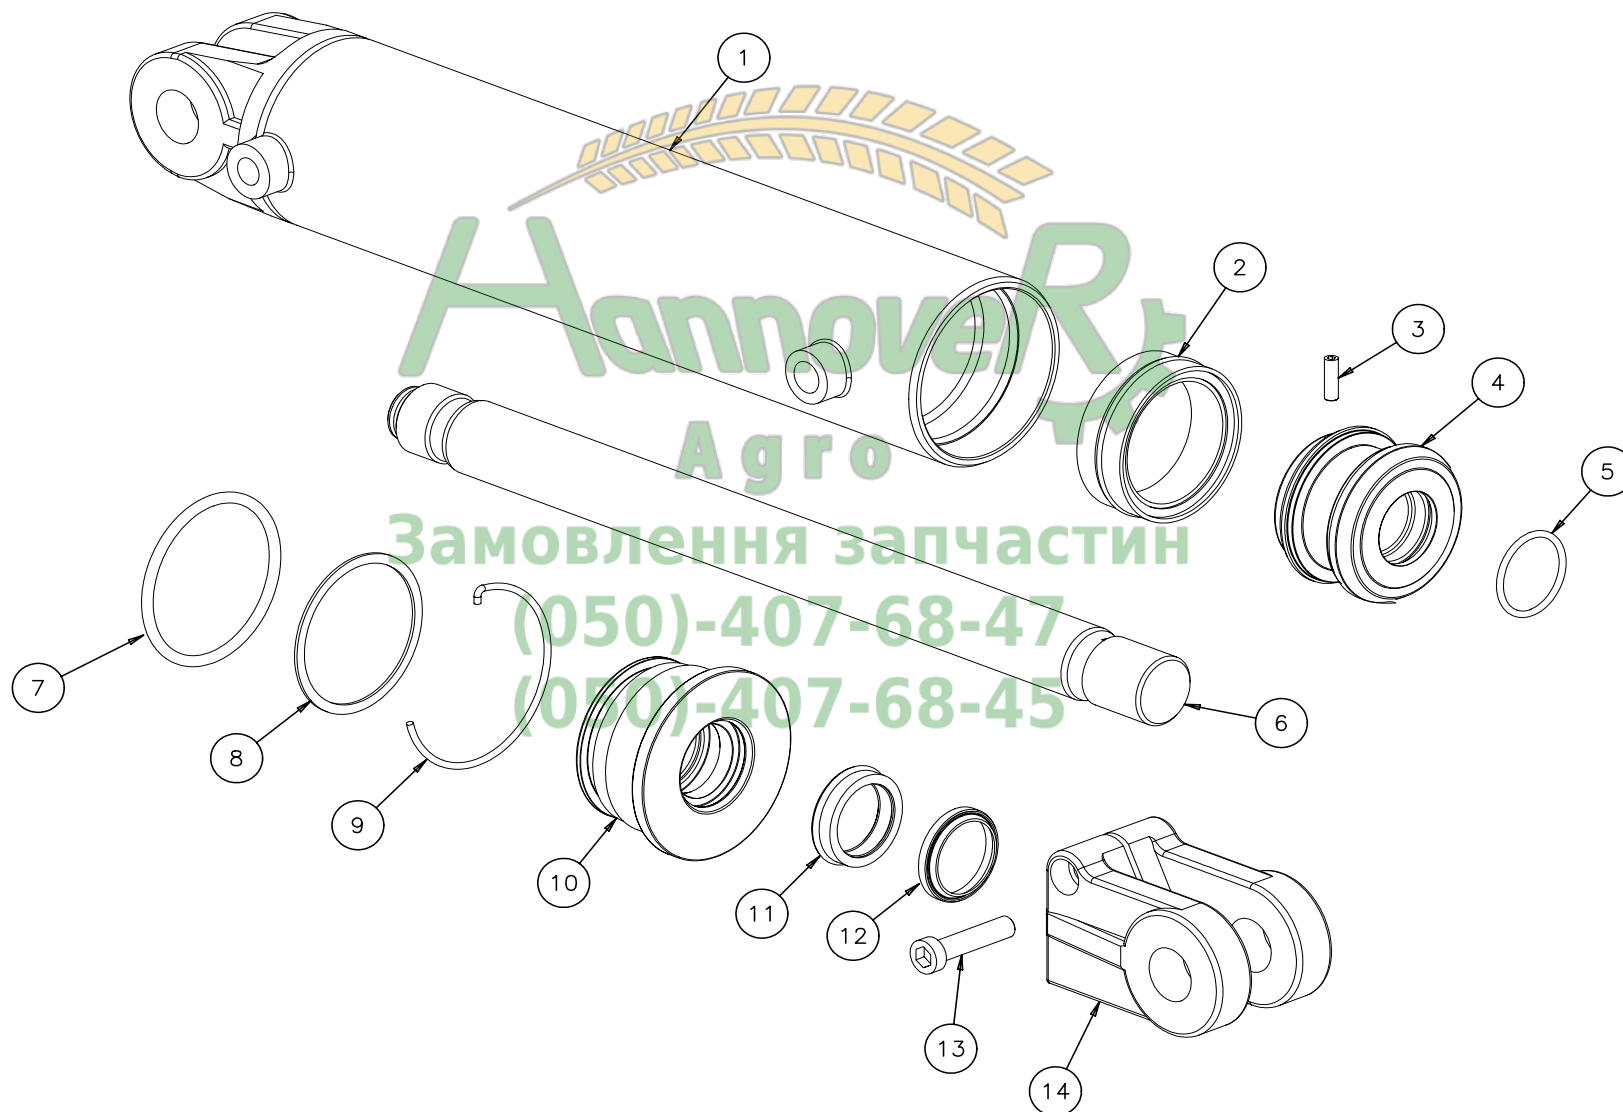

1	KK 35 38 72	Cylinder tube
2	KK 01 17 36	Piston packing
3	KK 03 20 06	Cylinder screw M6 x 20 mm
4	KK 35 37 27	Piston
5	KK 01 17 37	O-ring D35
6	KK 35 38 73	Piston rod
7	KK 07 17 38	O-ring
8	KK 01 17 43	Support ring
9	KK 35 37 93	Lock ring
10	KK 35 37 26	Rod cap
11	KK 01 17 44	Piston rod packing
12	KK 01 17 45	Scraper
13	KK 03 20 16	Cylinder screw M10 x 45 mm
14	KK 35 37 28	Clevis
Not ill.	KK 35 37 29	Packings cpl.
	KK 35 37 11	Hydraulic cylinder D75 x 300 mm cpl.



Замовлення запчастин
(050)-407-68-47
(050)-407-68-45

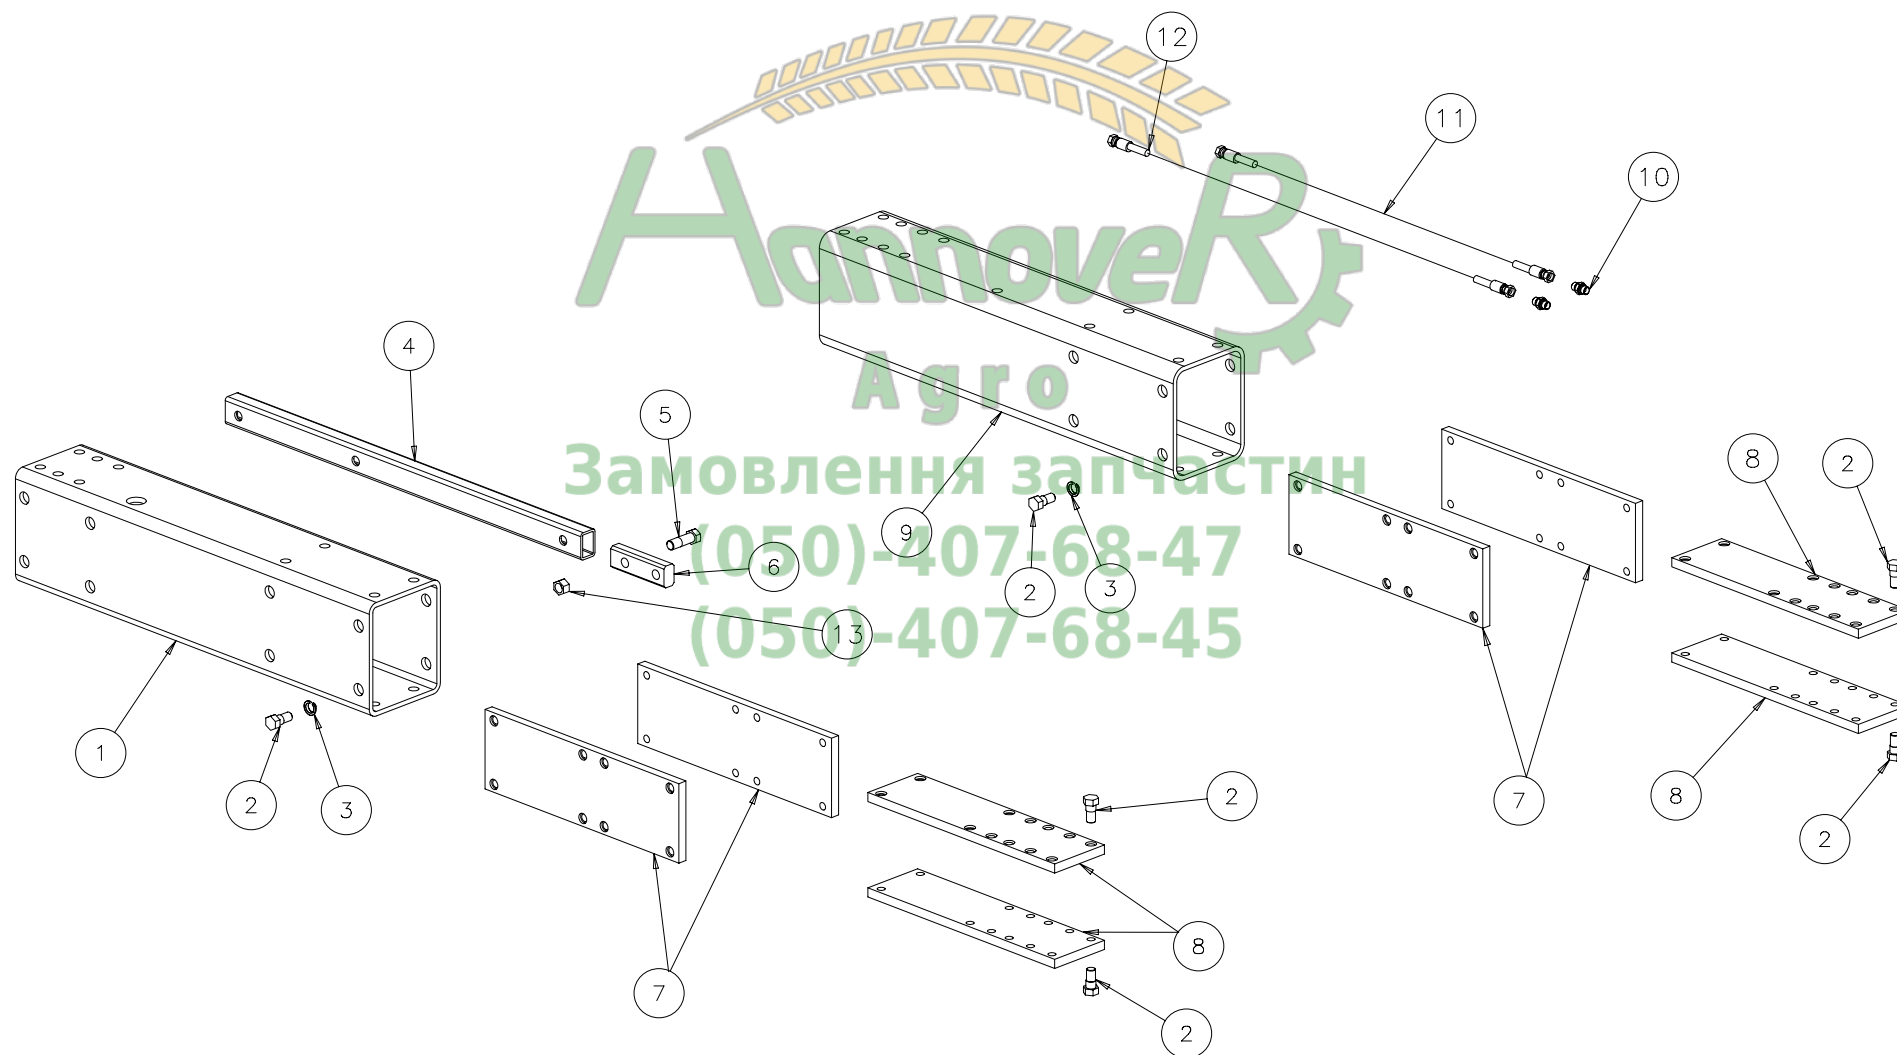

1	KK 08 18 05	Additional tube for 200 x 250 mm tube (BE100)
	KK 08 18 06	Additional tube for 200 x 250 mm tube (BE115)
2	KK 03 28 40	Hex screw M20 x 40 mm
3	KK 01 28 13	Conical bushing
4	KK 08 22 65	Parallel rod -100
	KK 08 18 07	Parallel rod -115
5	KK 03 28 60	Hex screw M20 x 60 mm
6	KK 08 22 66	Fix for additional tube
7	KK 08 19 18	Plate, R + L
8	KK 08 19 17	Plate, upper + lower
9	KK 08 19 16	Additional tube 250 x 200 tube BM100
10	KK 01 22 66	Threaded coupling 3/8" - 3/8"
11	KK 01 27 78	Hose 3/8", L = 1000 for BE100 and BM
12	KK 01 27 73	Hose 3/8", L = 1300 for BE115
13	KK 01 58 30	Nut M20



Замовлення запчастин
(050)-407-68-47
(050)-407-68-45


527 Wheel 400 x 15.5", 400 x 22.5", 500 x 22.5", 500 x 26.6", 14.9 x 24" and 12.5 x 18"
(From 01.03.97)



527 Wheel 400 x 15.5", 400 x 22.5", 500 x 22.5", 500 x 26.6", 14.9 x 24" and 12.5 x 18"
(From 01.03.97)

1	KK 01 14 62	Axle D75 x 287
	KK 01 14 84	Axle D50 (for DA plough, middle section only)
2	KK 01 14 61	Hub
	KK 01 14 60	Hub without axle cpl.
3	KK 01 62 01	Bearing 32210
4	KK 01 14 68	Packing w/plate
7	KK 01 14 66	Plate for seal
9	KK 01 14 65	Crown nut
10	KK 01 14 64	Pin
11	KK 01 14 63	Cap for hub D90 mm ADR-65
12	KK 01 62 03	Bearing 30213
13	KK 02 99 20	Grease nipple M8 x 1
14	KK 01 14 79	Wheel bolt M18 x 1.5
15	KK 01 14 69	Nut for wheel M18 x 1.5
16	KK 01 13 44	Rim for tyre 400 x 15.5"
	KK 01 13 70	Rim for tyre 400 x 22.5"
	KK 01 14 53	Rim for tyre 500 x 22.5"
	KK 01 14 78	Rim for tyre 500 x 26.5"
17	KK 01 13 42	Tyre 400 x 15.5", 8 ply (also for DA plough, middle section)
	KK 01 14 16	Tyre 400 x 15.5", 14 ply (also for DA plough, middle section)
	KK 01 13 68	Tyre 400 x 22.5", 8 ply
	KK 01 14 14	Tyre 400 x 22.5", 14 ply
	KK 01 14 51	Tyre 500 x 22.5", 8 ply
	KK 01 14 76	Tyre 500 x 26.5", 8 ply
	KK 01 13 43	Inner tube to 400 x 15.5" tyre
	KK 01 13 69	Inner tube to 400 x 22.5" tyre
	KK 01 14 52	Inner tube to 500 x 22.5" tyre
	KK 01 14 77	Inner tube to 500 x 26.5" tyre
18	KK 01 14 72	Tyre 14.9 x 24", 8 ply
	KK 01 14 73	Inner tube to 14.9 x 24" tyre
19	KK 01 14 74	Rim for tyre 14.9 x 24"
20	KK 01 14 57	Rim for tyre 12.5/80 - 12/18
21	KK 01 14 59	Tyre 12.5/80 - 18/12
	KK 01 14 58	Inner tube for tyre 12.5/80 - 12/18



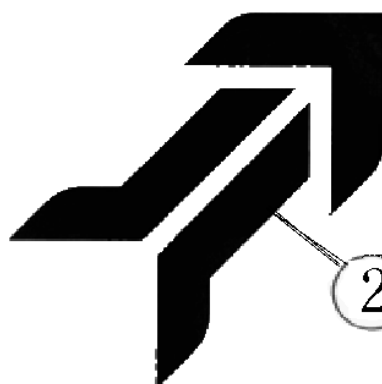

1

STOP!

Efter noen timers bruk
bor alle mutre trekkes til.

Nach einigen Arbeitsstunden
sollten sämtliche Mütter
nachgezogen werden.

All nuts should be tightened
after some hours in use.


Après quelques heures de travail,
tous les écrous doivent être resserrés.

Después de pocas horas de
trabajo reapretar todos
los tornillos y tuercas.


2

3


5

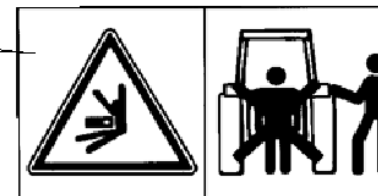


6

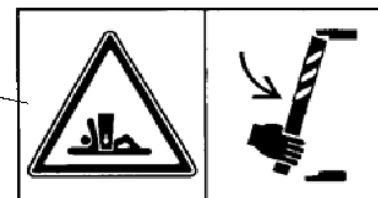

7

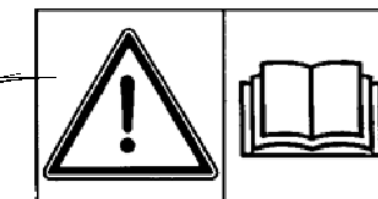

9

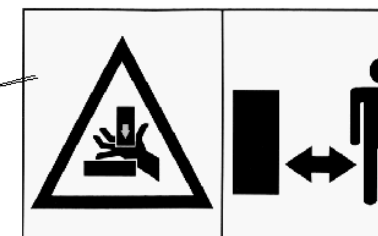


11



25

10

4

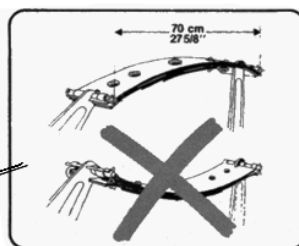

1	KK 70 99 90	Kverneland BE-100
	KK 70 99 91	Kverneland BE-115
	KK 70 99 92	Kverneland BM-100
2	KK 70 97 37	Arrow
3	KK 70 94 79	Info., nuts
4	KK 70 92 34	Info., springs
5	KK 70 98 41	Safety sign, danger, tractor/implement
6	KK 70 98 43	Safety sign, parking support
7	KK 70 98 44	Safety sign, read instruction manual
8	KK 70 91 24	Info., greasing instruction
9	KK 70 98 23	Safety sign, crush danger
10	UH 22 06 52	Speed limit
11	KK 70 99 93	Info., indicator wheel
Not ill.	KK 70 98 47	Info., patents



Замовлення запчастин
(050)-407-68-47
(050)-407-68-45

Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page
KK 01 00 53	37	KK 01 11 61	25	KK 01 15 12	37	KK 01 20 77	37	KK 01 28 13	49	KK 01 32 28	13	KK 01 37 67	39	KK 01 58 34	21
KK 01 01 55	11	KK 01 12 03	25	KK 01 15 12	39	KK 01 21 21	39	KK 01 28 72	25	KK 01 32 28	15	KK 01 58 11	37	KK 01 58 34	25
KK 01 01 55	13	KK 01 12 03	27	KK 01 15 12	39	KK 01 21 58	37	KK 01 28 72	27	KK 01 32 28	17	KK 01 58 11	39	KK 01 58 34	27
KK 01 01 55	17	KK 01 12 59	23	KK 01 15 18	39	KK 01 21 58	39	KK 01 29 06	29	KK 01 32 28	7	KK 01 58 13	15	KK 01 58 34	9
KK 01 01 55	7	KK 01 12 66	23	KK 01 15 85	37	KK 01 22 01	39	KK 01 29 19	13	KK 01 32 28	9	KK 01 58 13	15	KK 01 58 39	35
KK 01 01 56	11	KK 01 12 72	23	KK 01 15 85	39	KK 01 22 01	39	KK 01 29 19	5	KK 01 32 34	13	KK 01 58 16	29	KK 01 58 41	21
KK 01 01 56	13	KK 01 13 42	51	KK 01 15 96	37	KK 01 22 19	39	KK 01 29 19	9	KK 01 32 34	5	KK 01 58 17	15	KK 01 58 41	29
KK 01 01 56	17	KK 01 13 43	51	KK 01 15 96	39	KK 01 22 19	39	KK 01 29 22	13	KK 01 32 34	9	KK 01 58 17	15	KK 01 58 41	31
KK 01 01 56	7	KK 01 13 44	51	KK 01 16 40	31	KK 01 22 61	39	KK 01 29 22	15	KK 01 33 32	13	KK 01 58 17	15	KK 01 58 41	33
KK 01 03 15	31	KK 01 13 68	51	KK 01 16 52	35	KK 01 22 64	39	KK 01 29 22	33	KK 01 33 32	15	KK 01 58 17	15	KK 01 58 99	39
KK 01 03 15	33	KK 01 13 69	51	KK 01 16 83	35	KK 01 22 66	49	KK 01 29 22	5	KK 01 33 32	5	KK 01 58 17	15	KK 01 60 01	19
KK 01 03 18	37	KK 01 13 70	51	KK 01 16 94	21	KK 01 22 67	39	KK 01 29 22	9	KK 01 33 32	9	KK 01 58 17	17	KK 01 60 04	25
KK 01 03 28	37	KK 01 14 14	51	KK 01 16 94	33	KK 01 23 24	37	KK 01 29 27	5	KK 01 33 32	9	KK 01 58 17	19	KK 01 60 04	27
KK 01 03 28	39	KK 01 14 16	51	KK 01 17 17	45	KK 01 23 24	39	KK 01 29 27	9	KK 01 33 33	13	KK 01 58 17	21	KK 01 60 06	31
KK 01 03 37	37	KK 01 14 51	51	KK 01 17 18	45	KK 01 23 62	39	KK 01 29 29	11	KK 01 33 33	7	KK 01 58 25	15	KK 01 60 07	19
KK 01 04 85	23	KK 01 14 52	51	KK 01 17 19	45	KK 01 23 63	39	KK 01 29 29	13	KK 01 33 33	9	KK 01 58 25	15	KK 01 60 07	21
KK 01 05 32	23	KK 01 14 53	51	KK 01 17 24	45	KK 01 23 77	39	KK 01 29 29	17	KK 01 33 46	11	KK 01 58 25	15	KK 01 60 10	25
KK 01 05 72	23	KK 01 14 57	51	KK 01 17 25	45	KK 01 25 22	37	KK 01 29 29	7	KK 01 33 46	13	KK 01 58 25	17	KK 01 60 10	27
KK 01 05 83	25	KK 01 14 58	51	KK 01 17 26	27	KK 01 25 22	39	KK 01 29 36	37	KK 01 33 46	17	KK 01 58 25	17	KK 01 60 12	25
KK 01 05 83	27	KK 01 14 59	51	KK 01 17 27	45	KK 01 25 47	39	KK 01 29 39	25	KK 01 33 46	7	KK 01 58 25	17	KK 01 60 12	27
KK 01 05 84	25	KK 01 14 60	51	KK 01 17 36	47	KK 01 26 57	39	KK 01 29 39	27	KK 01 33 46	7	KK 01 58 25	19	KK 01 60 12	33
KK 01 05 84	27	KK 01 14 61	51	KK 01 17 37	47	KK 01 26 61	39	KK 01 29 40	33	KK 01 33 46	9	KK 01 58 25	21	KK 01 60 12	35
KK 01 06 06	33	KK 01 14 62	51	KK 01 17 43	47	KK 01 26 61	39	KK 01 29 63	19	KK 01 33 61	11	KK 01 58 25	25	KK 01 60 13	15
KK 01 06 50	33	KK 01 14 63	51	KK 01 17 44	47	KK 01 26 79	37	KK 01 29 63	21	KK 01 33 61	13	KK 01 58 25	29	KK 01 60 13	31
KK 01 07 00	33	KK 01 14 64	51	KK 01 17 45	47	KK 01 26 79	39	KK 01 29 68	33	KK 01 33 61	17	KK 01 58 25	31	KK 01 60 15	11
KK 01 07 49	35	KK 01 14 65	51	KK 01 17 50	23	KK 01 26 79	39	KK 01 29 95	25	KK 01 33 61	7	KK 01 58 25	35	KK 01 60 15	13
KK 01 07 72	25	KK 01 14 66	51	KK 01 18 06	43	KK 01 27 07	39	KK 01 30 14	25	KK 01 33 85	11	KK 01 58 30	19	KK 01 60 15	15
KK 01 07 72	27	KK 01 14 68	51	KK 01 18 66	23	KK 01 27 37	39	KK 01 30 14	27	KK 01 33 85	13	KK 01 58 30	21	KK 01 60 15	17
KK 01 09 09	33	KK 01 14 69	51	KK 01 18 88	43	KK 01 27 73	37	KK 01 30 73	43	KK 01 33 85	17	KK 01 58 30	25	KK 01 60 15	7
KK 01 09 60	39	KK 01 14 72	51	KK 01 19 08	43	KK 01 27 73	49	KK 01 30 87	41	KK 01 33 85	7	KK 01 58 30	27	KK 01 60 52	25
KK 01 09 61	39	KK 01 14 73	51	KK 01 19 12	43	KK 01 27 78	49	KK 01 30 92	41	KK 01 35 00	39	KK 01 58 30	31	KK 01 60 52	27
KK 01 10 20	31	KK 01 14 74	51	KK 01 19 51	43	KK 01 27 95	39	KK 01 30 93	41	KK 01 35 19	39	KK 01 58 30	33	KK 01 62 01	51
KK 01 10 20	33	KK 01 14 76	51	KK 01 20 56	39	KK 01 27 95	39	KK 01 30 94	41	KK 01 35 29	37	KK 01 58 30	39	KK 01 62 03	51
KK 01 10 20	37	KK 01 14 77	51	KK 01 20 59	39	KK 01 27 96	39	KK 01 30 95	41	KK 01 35 95	43	KK 01 58 30	49	KK 01 62 08	25
KK 01 10 20	39	KK 01 14 78	51	KK 01 20 62	39	KK 01 27 97	39	KK 01 30 96	41	KK 01 35 96	43	KK 01 58 32	5	KK 01 62 08	27
KK 01 10 32	25	KK 01 14 79	51	KK 01 20 75	37	KK 01 27 97	39	KK 01 32 28	11	KK 01 35 97	43	KK 01 58 34	13	KK 02 97 22	25
KK 01 10 32	27	KK 01 14 84	51	KK 01 20 76	37	KK 01 27 97	39	KK 01 32 28	13	KK 01 36 01	45	KK 01 58 34	19	KK 02 97 22	27

Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page
KK 02 97 27	19	KK 03 27 35	31	KK 03 28 30	33	KK 03 30 07	29	KK 03 33 32	5	KK 05 70 67	19	KK 06 68 80	29	KK 07 15 01	19
KK 02 97 27	21	KK 03 27 35	5	KK 03 28 31	33	KK 03 30 16	15	KK 03 36 20	19	KK 05 70 67	21	KK 06 68 81	29	KK 07 15 01	33
KK 02 99 18	19	KK 03 27 35	9	KK 03 28 32	39	KK 03 31 00	13	KK 03 36 20	21	KK 05 70 68	19	KK 06 70 07	19	KK 07 15 02	19
KK 02 99 20	23	KK 03 27 40	11	KK 03 28 33	33	KK 03 31 00	5	KK 03 42 25	29	KK 05 70 68	21	KK 06 70 08	19	KK 07 17 10	31
KK 02 99 20	25	KK 03 27 40	13	KK 03 28 39	31	KK 03 31 00	9	KK 03 42 28	29	KK 05 70 89	19	KK 06 70 42	19	KK 07 17 11	31
KK 02 99 20	27	KK 03 27 40	17	KK 03 28 39	33	KK 03 31 07	15	KK 03 42 50	29	KK 05 70 89	21	KK 06 70 42	21	KK 07 17 12	31
KK 02 99 20	31	KK 03 27 40	35	KK 03 28 40	33	KK 03 31 07	5	KK 03 44 46	29	KK 06 06 57	29	KK 06 70 63	19	KK 07 17 13	31
KK 02 99 20	35	KK 03 27 40	7	KK 03 28 40	49	KK 03 31 07	9	KK 03 50 20	19	KK 06 15 40	19	KK 06 70 64	19	KK 07 17 14	31
KK 02 99 20	51	KK 03 27 45	31	KK 03 28 45	31	KK 03 31 07	9	KK 03 50 20	21	KK 06 20 25	13	KK 06 70 74	21	KK 07 17 38	47
KK 03 20 02	43	KK 03 27 50	11	KK 03 28 50	25	KK 03 31 11	15	KK 03 50 21	19	KK 06 20 25	9	KK 06 86 70	31	KK 07 18 53	33
KK 03 20 06	45	KK 03 27 50	13	KK 03 28 50	27	KK 03 31 16	15	KK 03 50 21	21	KK 06 21 65	31	KK 07 00 09	25	KK 07 30 00	5
KK 03 20 06	47	KK 03 27 50	15	KK 03 28 50	35	KK 03 31 17	15	KK 03 50 25	31	KK 06 30 90	11	KK 07 03 88	9	KK 07 30 01	5
KK 03 20 16	45	KK 03 27 50	17	KK 03 28 60	35	KK 03 31 18	13	KK 03 51 14	23	KK 06 30 90	13	KK 07 03 89	9	KK 07 30 02	15
KK 03 20 16	47	KK 03 27 50	7	KK 03 28 60	49	KK 03 31 19	13	KK 03 51 14	25	KK 06 30 90	13	KK 07 03 90	5	KK 07 30 02	5
KK 03 20 40	43	KK 03 27 50	9	KK 03 28 65	33	KK 03 31 74	13	KK 03 51 14	27	KK 06 30 90	15	KK 07 03 91	5	KK 07 30 03	15
KK 03 21 10	41	KK 03 27 60	31	KK 03 28 65	35	KK 03 31 75	15	KK 03 51 78	25	KK 06 30 90	17	KK 07 03 92	9	KK 07 30 03	5
KK 03 23 25	27	KK 03 27 65	11	KK 03 28 80	19	KK 03 31 75	5	KK 03 51 78	27	KK 06 30 90	5	KK 07 03 93	9	KK 07 30 04	15
KK 03 24 50	37	KK 03 27 65	13	KK 03 28 80	19	KK 03 31 75	9	KK 05 30 90	11	KK 06 30 90	7	KK 07 03 94	5	KK 07 30 04	5
KK 03 24 50	39	KK 03 27 65	17	KK 03 28 80	19	KK 03 32 51	13	KK 05 30 90	13	KK 06 30 90	9	KK 07 03 95	5	KK 07 30 05	15
KK 03 24 65	39	KK 03 27 65	23	KK 03 28 80	33	KK 03 32 51	15	KK 05 30 90	13	KK 06 30 91	15	KK 07 03 96	9	KK 07 30 05	5
KK 03 26 50	19	KK 03 27 65	7	KK 03 28 80	33	KK 03 32 51	5	KK 05 30 90	15	KK 06 30 91	5	KK 07 03 97	9	KK 07 30 06	15
KK 03 26 65	19	KK 03 27 70	19	KK 03 28 80	35	KK 03 32 51	9	KK 05 30 90	17	KK 06 30 92	15	KK 07 03 98	9	KK 07 30 06	5
KK 03 26 65	21	KK 03 27 70	21	KK 03 28 90	19	KK 03 32 56	13	KK 05 30 90	5	KK 06 30 92	5	KK 07 03 99	9	KK 07 30 07	15
KK 03 26 80	21	KK 03 27 74	19	KK 03 28 90	19	KK 03 32 56	15	KK 05 30 90	7	KK 06 33 88	13	KK 07 06 39	29	KK 07 30 07	5
KK 03 27 02	21	KK 03 27 75	11	KK 03 28 90	25	KK 03 32 56	5	KK 05 30 90	9	KK 06 33 88	5	KK 07 06 40	5	KK 07 30 08	5
KK 03 27 02	23	KK 03 27 75	13	KK 03 28 90	27	KK 03 32 56	9	KK 05 33 87	13	KK 06 33 88	9	KK 07 06 40	9	KK 07 30 09	5
KK 03 27 02	25	KK 03 27 75	17	KK 03 28 95	33	KK 03 32 86	13	KK 05 33 87	5	KK 06 36 07	7	KK 07 06 41	5	KK 07 30 30	15
KK 03 27 25	25	KK 03 27 75	25	KK 03 29 00	35	KK 03 32 86	15	KK 05 33 87	9	KK 06 36 07	9	KK 07 06 41	9	KK 07 30 30	5
KK 03 27 25	27	KK 03 27 75	7	KK 03 29 08	21	KK 03 32 86	5	KK 05 68 73	29	KK 06 38 01	5	KK 07 06 42	5	KK 07 30 31	15
KK 03 27 25	31	KK 03 27 95	29	KK 03 29 21	31	KK 03 32 86	9	KK 05 70 63	19	KK 06 38 01	5	KK 07 06 42	9	KK 07 30 31	5
KK 03 27 25	33	KK 03 28 03	33	KK 03 29 34	33	KK 03 32 95	13	KK 05 70 63	21	KK 06 68 11	29	KK 07 06 53	29	KK 07 30 40	5
KK 03 27 25	35	KK 03 28 07	33	KK 03 29 35	33	KK 03 32 95	15	KK 05 70 64	19	KK 06 68 11	29	KK 07 12 40	19	KK 07 30 41	5
KK 03 27 25	5	KK 03 28 07	35	KK 03 29 50	35	KK 03 32 95	5	KK 05 70 64	21	KK 06 68 12	29	KK 07 12 41	19	KK 07 30 42	15
KK 03 27 25	9	KK 03 28 11	21	KK 03 29 95	31	KK 03 32 95	9	KK 05 70 65	19	KK 06 68 61	29	KK 07 14 03	21	KK 07 30 42	5
KK 03 27 30	13	KK 03 28 11	35	KK 03 30 04	13	KK 03 33 06	41	KK 05 70 65	21	KK 06 68 68	29	KK 07 14 03	33	KK 07 30 43	15
KK 03 27 30	35	KK 03 28 15	21	KK 03 30 06	15	KK 03 33 25	25	KK 05 70 66	19	KK 06 68 69	29	KK 07 15 00	19	KK 07 30 43	5
KK 03 27 35	13	KK 03 28 18	35	KK 03 30 06	29	KK 03 33 25	39	KK 05 70 66	21	KK 06 68 73	29	KK 07 15 00	33	KK 07 30 44	15

Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page
KK 07 30 44	5	KK 07 30 89	13	KK 07 32 66	9	KK 07 34 07	5	KK 07 36 34	11	KK 07 60 52	25	KK 07 64 30	27	KK 07 80 53	31
KK 07 30 45	15	KK 07 30 89	15	KK 07 32 67	5	KK 07 34 11	5	KK 07 36 34	13	KK 07 60 53	25	KK 07 64 32	25	KK 07 82 35	35
KK 07 30 45	5	KK 07 30 89	5	KK 07 32 67	9	KK 07 34 12	5	KK 07 36 34	17	KK 07 60 54	25	KK 07 64 37	25	KK 07 82 38	35
KK 07 30 54	13	KK 07 30 89	9	KK 07 32 72	13	KK 07 34 14	5	KK 07 36 34	7	KK 07 60 56	25	KK 07 64 37	27	KK 07 83 12	31
KK 07 30 54	15	KK 07 30 91	13	KK 07 32 73	13	KK 07 34 15	5	KK 07 36 35	11	KK 07 60 58	25	KK 07 64 99	23	KK 07 83 15	31
KK 07 30 54	9	KK 07 30 91	15	KK 07 32 75	13	KK 07 34 17	9	KK 07 36 35	13	KK 07 60 58	27	KK 07 64 99	25	KK 07 83 75	31
KK 07 30 55	13	KK 07 30 91	5	KK 07 32 76	13	KK 07 34 18	9	KK 07 36 35	17	KK 07 60 91	25	KK 07 64 99	27	KK 07 83 78	31
KK 07 30 55	15	KK 07 30 91	9	KK 07 32 78	13	KK 07 34 35	9	KK 07 36 35	7	KK 07 61 20	23	KK 07 65 28	25	KK 07 83 82	31
KK 07 30 55	9	KK 07 30 92	13	KK 07 32 79	13	KK 07 34 36	9	KK 07 38 00	13	KK 07 61 21	23	KK 07 65 28	27	KK 07 83 98	31
KK 07 30 56	13	KK 07 30 92	15	KK 07 32 80	5	KK 07 34 40	9	KK 07 38 00	5	KK 07 62 83	25	KK 07 65 31	25	KK 07 88 28	35
KK 07 30 56	15	KK 07 30 92	5	KK 07 32 81	5	KK 07 34 41	9	KK 07 38 00	9	KK 07 62 85	25	KK 07 65 31	27	KK 07 90 75	31
KK 07 30 56	9	KK 07 30 92	9	KK 07 32 86	5	KK 07 34 64	13	KK 07 38 01	13	KK 07 62 85	27	KK 07 65 75	23	KK 08 15 76	33
KK 07 30 57	13	KK 07 32 24	9	KK 07 32 87	5	KK 07 34 65	13	KK 07 38 01	5	KK 07 62 94	25	KK 07 68 12	29	KK 08 16 22	31
KK 07 30 57	15	KK 07 32 25	9	KK 07 32 90	5	KK 07 34 70	13	KK 07 38 01	9	KK 07 62 94	27	KK 07 68 13	29	KK 08 16 24	31
KK 07 30 57	9	KK 07 32 27	9	KK 07 32 90	9	KK 07 34 71	13	KK 07 38 03	5	KK 07 62 95	25	KK 07 68 17	29	KK 08 18 00	25
KK 07 30 62	13	KK 07 32 28	9	KK 07 32 91	5	KK 07 36 07	7	KK 07 38 03	5	KK 07 62 95	27	KK 07 68 18	29	KK 08 18 01	33
KK 07 30 62	15	KK 07 32 30	15	KK 07 32 91	9	KK 07 36 07	9	KK 07 38 04	9	KK 07 62 96	25	KK 07 68 25	29	KK 08 18 02	33
KK 07 30 62	9	KK 07 32 30	9	KK 07 33 00	15	KK 07 36 08	13	KK 07 38 04	9	KK 07 62 97	25	KK 07 68 26	29	KK 08 18 03	19
KK 07 30 63	13	KK 07 32 31	15	KK 07 33 00	5	KK 07 36 08	15	KK 07 38 05	9	KK 07 62 97	27	KK 07 68 33	29	KK 08 18 05	49
KK 07 30 63	15	KK 07 32 31	9	KK 07 33 00	9	KK 07 36 08	5	KK 07 38 07	5	KK 07 62 98	25	KK 07 68 34	29	KK 08 18 06	49
KK 07 30 63	9	KK 07 32 36	9	KK 07 33 01	15	KK 07 36 08	9	KK 07 38 08	5	KK 07 62 98	27	KK 07 68 58	29	KK 08 18 07	49
KK 07 30 64	13	KK 07 32 37	9	KK 07 33 01	5	KK 07 36 09	13	KK 07 38 26	13	KK 07 63 21	21	KK 07 68 58	29	KK 08 18 08	35
KK 07 30 64	15	KK 07 32 39	9	KK 07 33 01	9	KK 07 36 09	15	KK 07 38 26	9	KK 07 64 00	23	KK 07 68 59	29	KK 08 18 10	33
KK 07 30 64	9	KK 07 32 40	9	KK 07 33 10	5	KK 07 36 09	5	KK 07 38 26	9	KK 07 64 00	25	KK 07 68 72	29	KK 08 18 11	33
KK 07 30 65	13	KK 07 32 41	9	KK 07 33 10	9	KK 07 36 09	9	KK 07 38 29	13	KK 07 64 06	23	KK 07 69 43	29	KK 08 18 12	33
KK 07 30 65	15	KK 07 32 42	9	KK 07 33 11	5	KK 07 36 14	13	KK 07 38 29	9	KK 07 64 06	25	KK 07 69 44	29	KK 08 18 13	33
KK 07 30 65	9	KK 07 32 50	5	KK 07 33 11	9	KK 07 36 14	15	KK 07 38 30	5	KK 07 64 06	27	KK 07 70 01	19	KK 08 18 14	33
KK 07 30 80	13	KK 07 32 51	5	KK 07 33 28	13	KK 07 36 14	7	KK 07 38 31	5	KK 07 64 07	23	KK 07 70 11	19	KK 08 18 15	33
KK 07 30 80	15	KK 07 32 56	15	KK 07 33 29	13	KK 07 36 14	9	KK 07 38 31	9	KK 07 64 07	25	KK 07 70 12	19	KK 08 18 16	33
KK 07 30 80	9	KK 07 32 56	5	KK 07 33 38	13	KK 07 36 15	13	KK 07 38 42	9	KK 07 64 07	27	KK 07 70 20	19	KK 08 18 17	33
KK 07 30 81	13	KK 07 32 57	15	KK 07 33 39	13	KK 07 36 15	15	KK 07 43 19	31	KK 07 64 09	23	KK 07 75 87	33	KK 08 18 18	33
KK 07 30 81	15	KK 07 32 57	5	KK 07 33 50	13	KK 07 36 15	5	KK 07 60 08	25	KK 07 64 09	25	KK 07 78 35	33	KK 08 18 19	33
KK 07 30 81	9	KK 07 32 60	5	KK 07 33 51	13	KK 07 36 15	9	KK 07 60 08	27	KK 07 64 09	27	KK 07 78 40	33	KK 08 18 20	33
KK 07 30 88	13	KK 07 32 61	5	KK 07 33 52	13	KK 07 36 16	13	KK 07 60 22	25	KK 07 64 10	23	KK 07 78 41	33	KK 08 18 21	33
KK 07 30 88	15	KK 07 32 63	5	KK 07 33 53	13	KK 07 36 16	15	KK 07 60 22	27	KK 07 64 10	25	KK 07 78 43	33	KK 08 18 22	33
KK 07 30 88	5	KK 07 32 64	5	KK 07 33 54	13	KK 07 36 16	5	KK 07 60 23	25	KK 07 64 10	27	KK 07 78 45	33	KK 08 18 23	33
KK 07 30 88	9	KK 07 32 66	5	KK 07 34 06	5	KK 07 36 16	9	KK 07 60 23	27	KK 07 64 30	25	KK 07 78 80	35	KK 08 18 24	33

Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page
KK 08 18 25	33	KK 08 19 01	31	KK 08 19 47	31	KK 08 32 20	15	KK 08 38 10	5	KK 08 80 82	35	KK 35 37 39	45	KK 35 39 45	41
KK 08 18 26	33	KK 08 19 02	31	KK 08 19 50	31	KK 08 32 21	15	KK 08 50 02	33	KK 08 80 88	35	KK 35 37 49	45	KK 35 39 46	41
KK 08 18 27	33	KK 08 19 03	31	KK 08 19 55	31	KK 08 32 22	15	KK 08 50 50	21	KK 08 80 90	35	KK 35 37 51	45	KK 36 11 16	31
KK 08 18 28	33	KK 08 19 04	35	KK 08 19 57	33	KK 08 32 23	15	KK 08 50 58	21	KK 12 60 95	33	KK 35 37 93	47	KK 36 11 16	33
KK 08 18 29	33	KK 08 19 05	35	KK 08 19 58	33	KK 08 32 24	15	KK 08 50 76	29	KK 30 12 23	35	KK 35 37 95	45	KK 36 11 20	33
KK 08 18 30	33	KK 08 19 06	35	KK 08 19 59	31	KK 08 32 28	5	KK 08 50 77	21	KK 31 00 75	33	KK 35 38 17	37	KK 70 91 24	53
KK 08 18 32	33	KK 08 19 10	33	KK 08 19 60	35	KK 08 32 29	5	KK 08 50 78	21	KK 35 11 39	31	KK 35 38 17	45	KK 70 92 34	53
KK 08 18 33	33	KK 08 19 11	33	KK 08 19 65	35	KK 08 32 35	15	KK 08 50 79	21	KK 35 11 39	33	KK 35 38 37	39	KK 70 94 79	53
KK 08 18 34	33	KK 08 19 12	33	KK 08 19 68	35	KK 08 32 35	7	KK 08 50 80	21	KK 35 11 40	31	KK 35 38 37	43	KK 70 97 37	53
KK 08 18 36	35	KK 08 19 13	33	KK 08 19 73	35	KK 08 33 00	15	KK 08 50 81	21	KK 35 11 40	33	KK 35 38 38	43	KK 70 98 23	53
KK 08 18 39	31	KK 08 19 14	33	KK 08 19 79	35	KK 08 33 01	15	KK 08 50 82	21	KK 35 11 44	31	KK 35 38 50	43	KK 70 98 41	53
KK 08 18 40	33	KK 08 19 16	49	KK 08 19 80	35	KK 08 34 06	15	KK 08 50 83	21	KK 35 11 44	33	KK 35 38 51	43	KK 70 98 43	53
KK 08 18 41	33	KK 08 19 17	49	KK 08 19 81	35	KK 08 34 07	15	KK 08 50 84	21	KK 35 11 48	31	KK 35 38 70	45	KK 70 98 44	53
KK 08 18 43	33	KK 08 19 18	49	KK 08 19 96	33	KK 08 34 08	15	KK 08 50 85	21	KK 35 11 48	33	KK 35 38 71	45	KK 70 98 47	53
KK 08 18 44	33	KK 08 19 20	33	KK 08 19 99	33	KK 08 34 09	15	KK 08 50 86	27	KK 35 11 70	33	KK 35 38 72	47	KK 70 99 90	53
KK 08 18 45	33	KK 08 19 22	31	KK 08 22 40	33	KK 08 34 15	15	KK 08 50 91	25	KK 35 11 72	33	KK 35 38 73	47	KK 70 99 91	53
KK 08 18 50	35	KK 08 19 23	31	KK 08 22 65	49	KK 08 34 16	15	KK 08 50 91	27	KK 35 11 73	33	KK 35 39 04	39	KK 70 99 92	53
KK 08 18 58	35	KK 08 19 24	31	KK 08 22 66	49	KK 08 34 17	15	KK 08 50 93	27	KK 35 27 74	43	KK 35 39 04	41	KK 70 99 93	53
KK 08 18 62	35	KK 08 19 25	31	KK 08 32 10	15	KK 08 34 18	15	KK 08 60 86	23	KK 35 33 72	43	KK 35 39 05	41	UH 22 06 52	53
KK 08 18 72	33	KK 08 19 26	31	KK 08 32 11	15	KK 08 38 02	15	KK 08 60 87	23	KK 35 33 92	43	KK 35 39 06	37	UH 82 56 40	41
KK 08 18 73	33	KK 08 19 27	31	KK 08 32 12	15	KK 08 38 03	15	KK 08 60 89	23	KK 35 36 27	43	KK 35 39 06	41		
KK 08 18 76	35	KK 08 19 28	31	KK 08 32 13	15	KK 08 38 04	15	KK 08 60 90	23	KK 35 37 11	39	KK 35 39 23	41		
KK 08 18 77	39	KK 08 19 29	33	KK 08 32 14	15	KK 08 38 05	15	KK 08 61 01	23	KK 35 37 11	47	KK 35 39 27	41		
KK 08 18 78	31	KK 08 19 30	33	KK 08 32 15	15	KK 08 38 06	15	KK 08 61 02	23	KK 35 37 26	47	KK 35 39 38	41		
KK 08 18 79	39	KK 08 19 34	31	KK 08 32 16	15	KK 08 38 07	15	KK 08 68 01	29	KK 35 37 27	47	KK 35 39 39	41		
KK 08 18 96	25	KK 08 19 35	31	KK 08 32 17	15	KK 08 38 08	15	KK 08 80 80	35	KK 35 37 28	47	KK 35 39 40	41		
KK 08 18 96	27	KK 08 19 37	31	KK 08 32 18	15	KK 08 38 09	5	KK 08 80 81	35	KK 35 37 29	47	KK 35 39 41	41		