

Spare Parts List

Model EG

Mounted plough

No 733010

Hannover
Agro

Замовлення запчастин


(050)-407-68-47

(050)-407-68-45



Notes

GB Model	GB Interbody clearance	GB Headstock
D Modell	D Körperlängsabstand	D Drehwerk
F Modèle	F Dégagement sous age	F Type de tête
E Modelo	E Separación entre cuerpos	E Tipo de cabezal

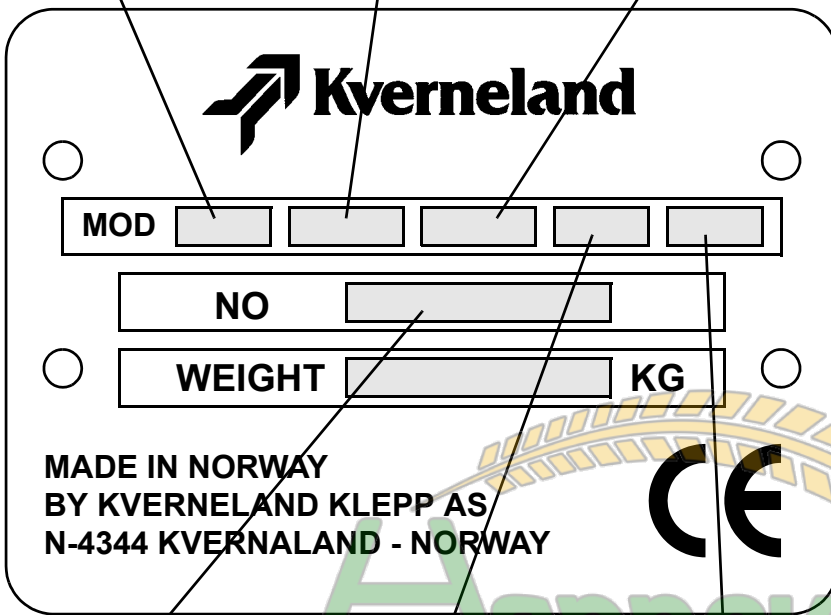

GB Serial number	Type of beam:	GB Type of body
D Seriennummer	Heavy Duty	D Körperform
F Numéro de série	Vibromat	F Type de corps
E Numero de serie	On-land	E Tipo de cuerpo

Замовлення запчастин

(GB) Complete model code and serial number must be stated to avoid mistakes when ordering spare parts and misunderstandings regarding service consultations. The identification plate is located on the headstock.

(F) Le code complet et le numéro de série doivent être indiqués pour éviter des erreurs lors de la commande de pièces de rechange et des malentendus concernant des demandes de Service-Après-Vente. La plaque d'identité est située sur la tête.

(D) Um bei Ersatzteilbestellungen und Serviceleistungen Fehler und Mißverständnisse zu vermeiden ist es erforderlich, daß die genaue Bezeichnung und die Seriennummer angegeben werden. Die Plakette befindet sich am Drehwerk.

(E) Debe figura el código completo del modelo y el número de serie para evitar errores al pedir las piezas de recambio y al hacer consultas técnicas. La placa de identificación esta situada en el cabezal.

Plate		Page
244	Bodies no 6, 7, 8, 9 and 28	4
367	Bodies no 12, 15 and 19	8
494	Body no 14 (Plastic mouldboard)	12
414	Body no 20 (Finger Body) (Before 01.03.99)	14
1089	Bodies no. 29 and no. 30	16
458	Auto Reset Beam	20
187	Disc coulters for Auto Reset beam (Before 01.01.99)	22
1073	Disc coulters 18" and 20", E-saddle (From 01.01.99)	24
574	Disc coulters for auto reset beam	26
341	Manure skimmer / Maize skimmer	28
495	Turnable cross shaft mod. 110 - 160	30
1103	Cross shafts for headstock mod. 200	32
1122	Cross shafts for headstock mod. 300	34
496	Quick coupling mod. 110 - 160 (Before 01.01.96)	36
332	Parts for additional bodies	38
355	Turn-over device mod. 160	40
1102	Turn-over device mod. 200	42
330	Turn-over device mod. 240	44
1121	Turn-over device mod. 300	46
364	Frame for EG-160	48
1157	Frame for EG-200	50
337	Frame mod. EG/LB-240	52
1140	Frame mod. EG-HD w/ headstock 300 (From 21.08.00)	56
576	Hydraulic layout for turn-over and furrow width adjustment mod. 160	60
1108	Hydraulic layout w/front furrow adjustment cylinder for headstock 200, EG/LB (From 01.01.00)	62
577	Hydraulic layout for turn-over w/memory valve and sequence-memory valve mod. 160	64
1109	Hydraulic layout for sequence memory valve w/front furrow adjustment cylinder for headstock 200, EG/LB (From 01.01.00)	66
578	Hydraulic layout for mod. 240	68
1125	Hydraulic layout w/front furrow adjustment cylinder for headstock 300, EG-LB (From 01.04.00)	70
579	Hydraulic layout for turn-over w/memory valve and sequence-memory valve mod. 240	72
1124	Hydraulic layout for sequence memory valve w/front furrow adjustment cylinder for headstock 300, EG-LB (From 01.04.00)	74
568	Cylinder for furrow width adjustment D75 x 200 mm (Before 01.08.96)	76
890	Hydraulic cylinder D75 x 200 mm (353704 - 353707)	78
1195	Hydraulic cylinder D75 x 200 mm (353904 - 353906) (From 01.04.01)	80
473	Cylinder for furrow adjustment D50 x 200 mm without stop (Before 01.08.96)	82
525	Hydraulic cylinder D50 x 200 mm (353701 - 353703) (From 01.08.96) (Before 01.04.01)	84
1192	Hydraulic cylinder D50 x 200 mm (353901 - 353903) (From 01.04.01)	86
1033	Turn-over cylinder D90 x 150 mm for mod. 160 (Before 01.12.98)	88
1063	Turn-over cylinder D90 x 150 mm for mod. 160 (From 01.12.98)	90
306	Memory cylinder D80 x 200 mm (Before 15.01.98)	92
1035	Memory cylinder D80 x 200 mm (From 15.01.98) (Before 01.03.99)	94
1196	Memory cylinder D80 x 200 mm (From 01.04.01) (Before 02.01.02)	96
1218	Memory cylinder D80 x 200 mm (From 02.01.02)	98
369	Turn-over cylinder D75 x 400 mm for mod. 240 (Before 01.07.97)	100
1005	Turn-over cylinder D75 x 420 mm for mod. 240 (From 01.07.97)	102
1111	Turn-over cylinder D80 x 300 mm	104
1114	Front furrow adjustment cylinder D50 x 200 mm	106
1123	Front furrow adjustment cylinder D63 x 200 mm	108
1062	Hydraulic cylinder D80 x 200 mm (From 01.03.99)	110
188	Depth wheel for mod. 80 - 110 - 160 - 200	112
299	Depth wheel 200 x 14.5 (Before 01.06.99)	114
340	Depth/transport wheel 87	116
514	Depth/transport wheel 93 (Before 01.06.99)	120
1088	Depth/transport wheel 99 (From 01.06.99)	122
1228	Bracket for depth/ transport wheel 99 (From 01.06.99)	128
1166	Depth wheel double	130
580	Transfers for EG85/100 - 160/240	132
	Index	134




1	KK 07 30 00	Share 12" R (30 cm)	KK 07 38 03	Stay R + L for body no. 6, 7 and 8 A - saddle, L = 560 (And no. 9 before 01.12.95)	KK 07 06 41	Trashboard, L cpl.		
	KK 07 30 01	Share 12" L (30 cm)			KK 07 06 42	Trashboard, R + L cpl.		
	KK 07 30 02	Share 14" R (35 cm)	KK 07 38 31	Stay R + L for body no. 9 E - saddle, L = 725 (From 01.12.95)	17	KK 03 33 32	Cone screw M14 x 34 mm w/nut	
	KK 07 30 03	Share 14" L (35 cm)			18	KK 03 27 25	Hex screw M16 x 27 mm w/nut	
	KK 07 30 04	Share 16" R (40 cm)	KK 07 38 30	Stay R + L for body no. 9 A - saddle, L = 710 (From 01.12.95)	19	KK 03 31 07	Oval screw M12 x 35 mm w/nut	
	KK 07 30 05	Share 16" L (40 cm)			20	KK 01 32 34	Cone screw M12 x 38 mm w/nut	
	KK 07 30 06	Share 18" R (45 cm)	KK 06 38 01	Extra stay R + L, no. 9 E - saddle L = 550 (From 01.12.95)	21	KK 07 30 91	Share knife, R	
	KK 07 30 07	Share 18" L (45 cm)				KK 07 30 92	Share knife, L	
	KK 07 30 08	Share 20" R (50 cm)	KK 07 03 94	Extra stay R for body no. 9 E - saddle, cpl. w. bracket (pos. 12) (From 01.12.95)		KK 06 30 91	Share knife, R (for Sweden)	
	KK 07 30 09	Share 20" L (50 cm)	KK 07 03 95	Extra stay L for body no. 9 E - saddle, cpl. w. bracket (pos. 12) (From 01.12.95)		KK 06 30 92	Share knife, L (for Sweden)	
2	KK 05 30 90	Reversible point, R			23	KK 07 36 09	Landside, long R + L	
	KK 06 30 90	Reversible point, L	KK 07 38 03	Extra stay R + L, no. 9 A - saddle L = 560 (From 01.12.95)	24	KK 07 32 66	Bracket for stay, body no. 6 and 9, R	
3	KK 07 34 06	Saddle, R (for E-saddle)				KK 07 32 67	Bracket for stay, body no. 6 and 9, L	
	KK 07 34 07	Saddle, L (for E-saddle)	KK 07 03 90	Extra stay R for body no. 9 A - saddle, cpl. w. bracket (pos. 12) (From 01.12.95)	25	KK 07 34 14	Connecting plate, 16" - 20", R	
	KK 07 34 11	Saddle, R (for A-saddle)				KK 07 34 15	Connecting plate, 16" - 20", L	
	KK 07 34 12	Saddle, L (for A-saddle)	KK 07 03 91	Extra stay L for body no. 9 A - saddle, cpl. w. bracket (pos. 12) (From 01.12.95)	26	KK 07 30 40	Flush fit share 12", R	
4	KK 01 33 32	Cone screw M14 x 34 mm w/nut				KK 07 30 41	Flush fit share 12", L	
5	KK 03 31 00	Oval screw M12 x 30 mm w/nut	KK 08 38 09	Stay R + L for body no. 28 A - saddle (From 01.03.03)		KK 07 30 42	Flush fit share 14", R	
6	KK 07 32 60	Mouldboard 12" - 16" no. 6, R	KK 08 38 10	Stay R + L for body no. 28 E - saddle (From 01.03.03)		KK 07 30 43	Flush fit share 14", L	
	KK 07 32 61	Mouldboard 12" - 16" no. 6, L				KK 07 30 44	Flush fit share 16", R	
	KK 07 32 63	Mouldboard 12" - 14" no. 7, R	10	KK 07 36 08	Landside, R and L, short		KK 07 30 45	Flush fit share 16", L
	KK 07 32 64	Mouldboard 12" - 14" no. 7, L	11	KK 01 58 32	Nut M20 mm	27	KK 07 30 30	Flush point, R
	KK 07 32 80	Mouldboard 12" no. 8, R	12	KK 07 38 00	Bracket for stay, R for body no. 6, 7, 8 (And no. 9 before 01.12.95)		KK 07 30 31	Flush point, L
	KK 07 32 81	Mouldboard 12" no. 8, L				28	KK 01 29 27	Washer 17 x 30 x 3 mm (for use with two stays)
	KK 07 32 86	Mouldboard 14" - 18" no. 8, R	KK 07 38 01	Bracket for stay, L for body no. 6, 7, 8 (And no. 9 before 01.12.95)	30	KK 07 36 15	Furrow widener, R	
	KK 07 32 87	Mouldboard 14" - 18" no. 8, L	KK 07 38 07	Bracket for stay, R for body no. 9 (From 01.12.95)		KK 07 36 16	Furrow widener, L	
	KK 07 32 90	Mouldboard 14" - 20" no. 9, R			31	KK 07 30 88	Landside knife w/screw, R	
	KK 07 32 91	Mouldboard 14" - 20" no. 9, L	KK 07 38 08	Bracket for stay, L for body no. 9 (From 01.12.95)		KK 07 30 89	Landside knife w/screw, L	
	KK 08 32 28	Mouldboard no. 28, R (From 01.03.03)			32	KK 03 32 51	Screw M16 x 50 mm w/nut (for E-saddle) (Before 01.02.00)	
	KK 08 32 29	Mouldboard no. 28, L (From 01.03.03)	13	KK 01 29 19	Washer 12.5 x 23 x 3.2 mm		KK 03 32 56	Screw M16 x 55 mm w/ nut (for E-saddle) (From 01.02.00)
7	KK 07 32 50	Shinpiece for no. 8, R	14	KK 05 33 87	Mouldboard extension, R		KK 03 32 86	Screw M16 x 85 mm w/nut (for A-saddle) (Before 01.02.00)
	KK 07 32 51	Shinpiece for no. 8, L					KK 03 32 95	Screw M16 x 95 mm w/nut (for A-saddle) (From 01.02.00)
	KK 07 32 56	Shinpiece for no. 6 and 9, R	15	KK 06 33 88	Mouldboard extension, L			
	KK 07 32 57	Shinpiece for no. 6 and 9, L						
8	KK 03 27 35	Hex screw M16 x 35 mm w/nut	16	KK 07 33 10	Bracket for trashboard, R			
9	KK 06 38 01	Stay R + L for body no. 6, 7 and 8 E - saddle, L = 550 (And no. 9 before 01.12.95)		KK 07 33 11	Bracket for trashboard, L			
				KK 07 33 00	Trashboard, R			
				KK 07 33 01	Trashboard L			
				KK 07 06 40	Trashboard, R cpl.	33	KK 03 31 75	Screw M14 x 50 mm w/nut
						34	KK 01 29 22	Washer 17 x 40 x 4.58 mm




35	KK 06 36 07	Plate
	KK 07 36 07	Plate cpl.
36	KK 01 33 46	Screw M14 x 45 mm w/nut
37	KK 07 36 14	Wearing plate
38	KK 01 33 33	Cone screw M14 x 34 mm
39	KK 08 32 35	Mouldboard knife R and L (From 01.12.01)
Pos. 100 - 107 Eco-share from 01.04.00		
100	KK 05 30 90	Reversible point, R
	KK 06 30 90	Reversible point, L
101	KK 01 32 28	Cone screw M12 x 34 mm w/nut
102	KK 07 36 34	Eco-share, R
	KK 07 36 35	Eco-share, L
103	KK 01 01 55	Bushing (for ploughs w/share bolt beam)
	KK 01 01 56	Bushing (for ploughs w/A-beam)
104	KK 03 27 40	Hex screw M16 x 40 mm w/nut (for ploughs w/E-saddle) (Before 01.03.00)
	KK 03 27 50	Hex screw M16 x 50 mm w/nut (for ploughs w/E-saddle) (From 01.03.00)
	KK 03 27 65	Hex screw M16 x 65 mm w/nut (for ploughs w/share bolt beam)
	KK 03 27 75	Hex screw M16 x 75 mm w/nut (for ploughs w/A-beam)
105	KK 01 33 46	Cone screw M14 x 45 mm w/flange nut (for ploughs w/E-saddle) (Before 01.03.00)
	KK 01 33 61	Cone screw M14 x 60 mm w/flange nut (for ploughs w/E-saddle) (From 01.03.00)
	KK 01 33 85	Cone screw M14 x 85 mm w/flange nut (for ploughs w/share bolt beam and A-beam)
106	KK 01 60 15	Flange nut M14
107	KK 01 29 29	Washer (for ploughs w/E-saddle) (From 01.03.00)



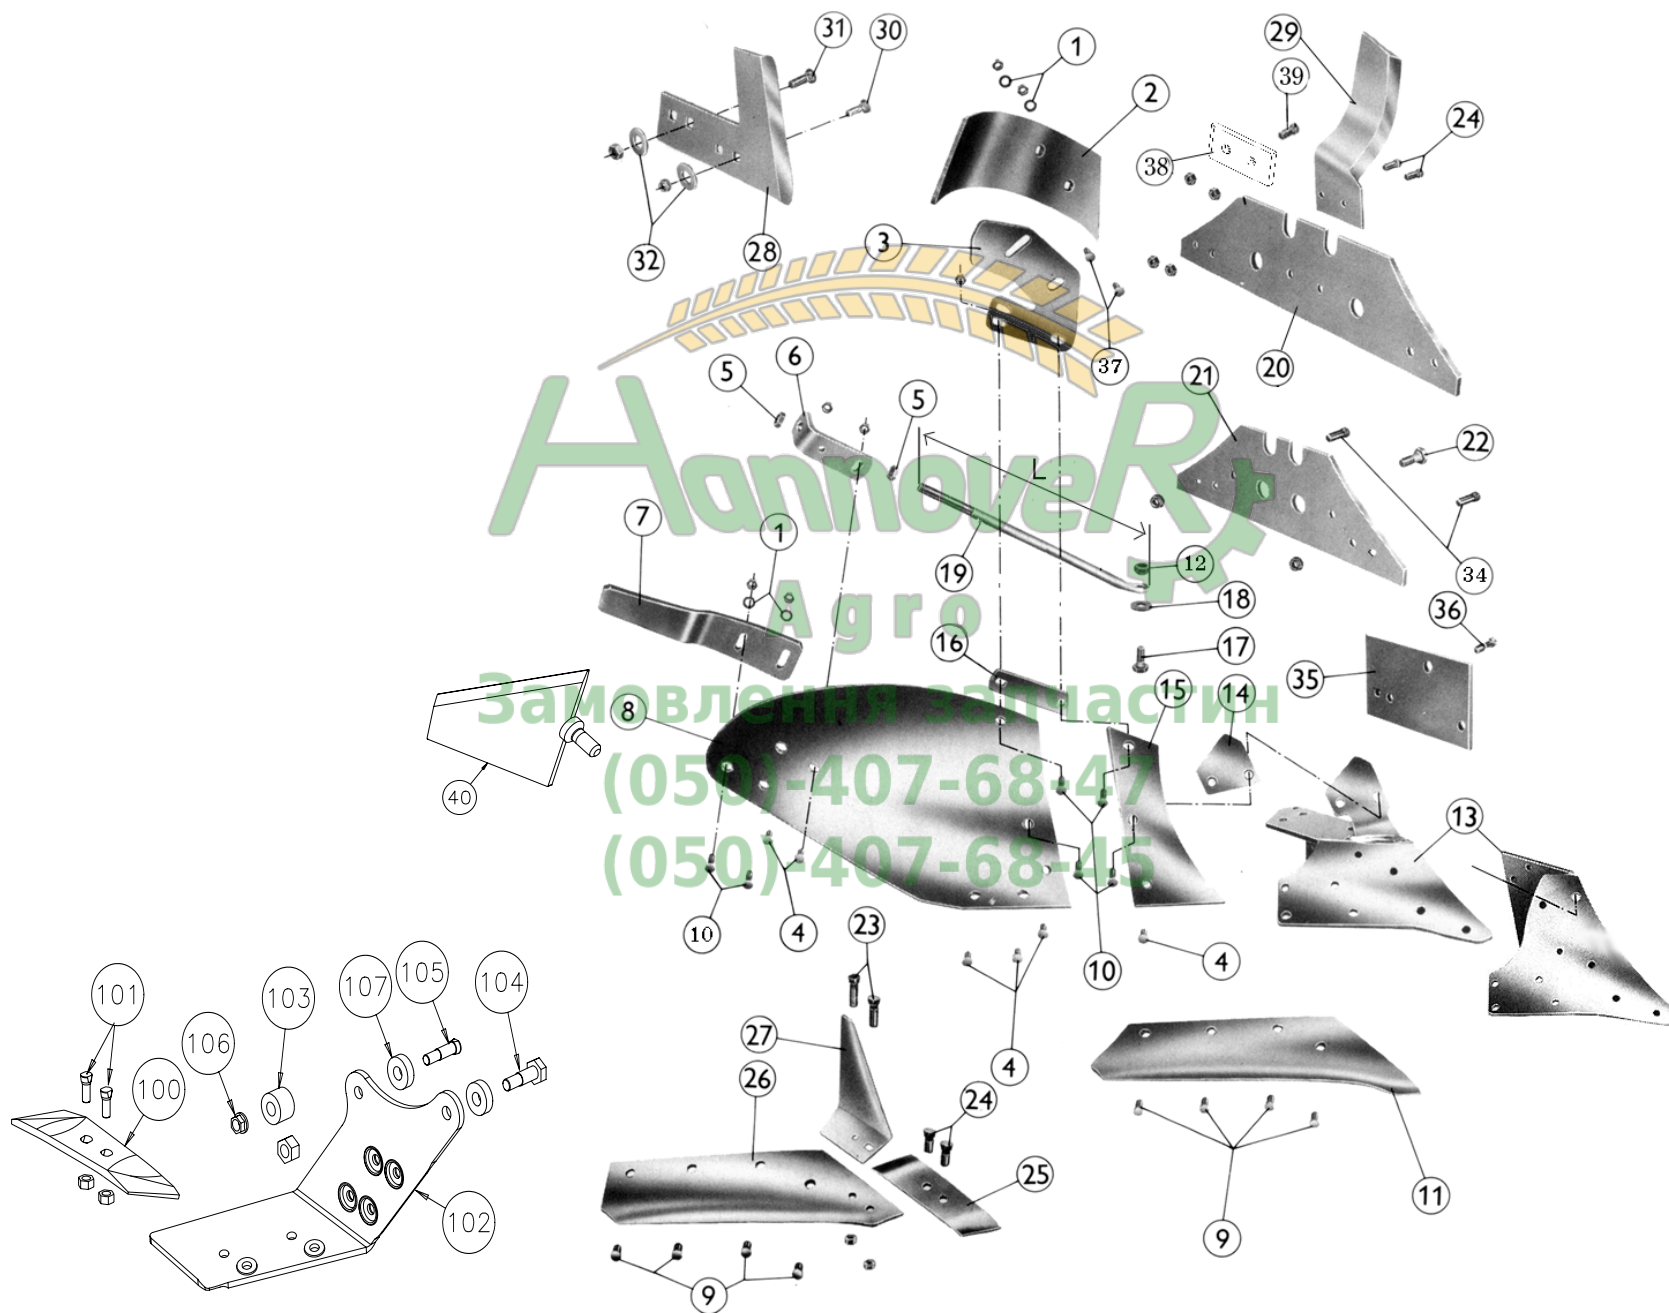

1	KK 01 29 19	Washer		KK 07 32 31	Shinpiece no. 19, L		KK 07 03 93	Extra stay L for body no. 19 A - saddle cpl.
2	KK 07 33 00	Trashboard, R	16	KK 07 32 39	Connecting piece no. 12 and 15, R			w. bracket (pos. 6) (From 01.12.95)
	KK 07 33 01	Trashboard, L		KK 07 32 40	Connecting piece no. 12 and 15, L	20	KK 07 36 09	Landside, long, R + L
	KK 07 06 40	Trashboard, R cpl.		KK 07 32 66	Connecting piece no. 19, R	21	KK 07 36 08	Landside, short, R + L
	KK 07 06 41	Trashboard, L cpl.		KK 07 32 67	Connecting piece no. 19, L	22	KK 03 27 25	Hex screw M16 x 27 mm
	KK 07 06 42	Trashboard, R + L cpl.	17	KK 03 27 50	Hex screw M16 x 50 mm w/nut (for use with two stays)	23	KK 01 32 34	Cone screw M12 x 38 mm w/nut
3	KK 07 33 10	Bracket, R		KK 03 27 35	Hex screw M16 x 35 mm w/nut (for use with one stay only)	24	KK 01 32 28	Cone screw M12 x 34 mm w/nut
	KK 07 33 11	Bracket, L				25	KK 05 30 90	Reversible point, R
4	KK 03 31 00	Oval screw M12 x 30 mm w/nut					KK 06 30 90	Reversible point, L
5	KK 01 58 34	Nut M20 mm	18	KK 01 29 27	Washer 17 x 30 x 3 mm (for use with two stays)	26	KK 07 30 54	Share 14", R
6	KK 07 38 00	Bracket, R					KK 07 30 55	Share 14", L
	KK 07 38 01	Bracket, L	19	KK 07 38 05	Stay R + L for body no. 12 and 15 E - saddle, L = 540 (And no. 19 before 12.01.95)		KK 07 30 56	Share 16", R
7	KK 05 33 87	Mouldboard extention, R		KK 07 38 31	Stay R + L for body no. 19 E - saddle, L = 730 (From 12.01.95)		KK 07 30 57	Share 16", L
	KK 06 33 88	Mouldboard extention, L		KK 07 38 04	Stay R + L for body no. 12 and 15 A - saddle, L = 550 (And no. 19 before 12.01.95)		KK 07 30 80	Share 18", R
8	KK 07 32 36	Mouldboard no. 12, R		KK 07 38 26	Stay R + L for body no. 19 A - saddle, L = 770 (From 12.01.95)	27	KK 07 30 81	Share 18", L
	KK 07 32 37	Mouldboard no. 12, L		KK 07 38 26	Extra stay R + L, no. 15 E - saddle L = 770 (From 01.12.96)		KK 07 30 91	Share knife, R
	KK 07 32 24	Mouldboard no. 15, R		KK 07 38 26	Extra stay R + L, no. 15 E - saddle L = 770 (From 01.12.96)	28	KK 07 30 92	Share knife, L
	KK 07 32 25	Mouldboard no. 15, L		KK 07 03 88	Extra stay R for body no. 15 E - saddle cpl. w. bracket (pos. 6) (From 01.12.96)	29	KK 07 30 88	Landside knife, R w/nuts
	KK 07 32 90	Mouldboard no. 19, R		KK 07 03 89	Extra stay L for body no. 15 E - saddle cpl. w. bracket (pos. 6) (From 01.12.96)		KK 07 30 89	Landside knife, L w/nuts
	KK 07 32 91	Mouldboard no. 19, L		KK 07 38 29	Extra stay R + L, no. 15 A - saddle L = 785 (From 01.12.96)	30	KK 07 36 15	Furrow widener, R
9	KK 01 33 32	Cone screw M14 x 34 mm w/nut		KK 07 03 98	Extra stay R for body no. 15 A - saddle cpl. w. bracket (pos. 6) (From 01.12.96)		KK 07 36 16	Furrow widener, L
10	KK 03 31 07	Oval screw M12 x 35 mm w/nut		KK 07 03 99	Extra stay L for body no. 15 A - saddle cpl. w. bracket (pos. 6) (From 01.12.96)	31	KK 03 31 75	Screw M14 x 50 mm w/nut
11	KK 07 30 62	Share 14", R		KK 07 38 42	Extra stay R + L, no. 19 E - saddle L = 570 (From 01.12.95)		KK 03 32 51	Screw M16 x 50 mm w/nut (for E-saddle) (Before 01.02.00)
	KK 07 30 63	Share 14", L		KK 07 03 96	Extra stay R for body no. 19 E - saddle cpl. w. bracket (pos. 6) (From 01.12.95)		KK 03 32 56	Screw M16 x 56 mm w/nut (for E-saddle) (From 01.02.00)
	KK 07 30 64	Share 16", R		KK 07 03 97	Extra stay L for body no. 19 E - saddle cpl. w. bracket (pos. 6) (From 01.12.95)		KK 03 32 86	Screw M16 x 85 mm w/nut (for A-saddle) (Before 01.02.00)
	KK 07 30 65	Share 16", L		KK 07 38 04	Extra stay R + L, no. 19 A - saddle L = 550 (From 01.12.95)		KK 03 32 95	Screw M16 x 95 mm w/nut (for A-saddle) (From 01.02.00)
12	KK 06 20 25	Nut M16 mm		KK 07 03 92	Extra stay R for body no. 19 A - saddle cpl. w. bracket (pos. 6) (From 01.12.95)	32	KK 01 29 22	Washer 17 x 40 x 4.58 mm
13	KK 07 34 35	Saddle, R (for E-saddle)				34	KK 01 33 33	Cone screw M14 x 34 mm w/nut
	KK 07 34 36	Saddle, L (for E-saddle)				35	KK 06 36 07	Plate for On-Land ploughs
	KK 07 34 40	Saddle, R (for A-saddle)					KK 07 36 07	Plate for On-Land ploughs cpl.
	KK 07 34 41	Saddle, L (for A-saddle)				36	KK 01 33 46	Screw M14 x 45 mm w/nut
14	KK 07 34 17	Connecting plate no. 12 and 15, R				37	KK 03 31 07	Oval screw M12 x 35 mm
	KK 07 34 18	Connecting plate no. 12 and 15, L				38	KK 07 36 14	Wearing plate
15	KK 07 32 41	Shinpiece no. 12, R				39	KK 01 33 32	Cone screw M14 x 34 mm
	KK 07 32 42	Shinpiece no. 12, L						
	KK 07 32 27	Shinpiece no. 15, R						
	KK 07 32 28	Shinpiece no. 15, L						
	KK 07 32 30	Shinpiece no. 19, R						

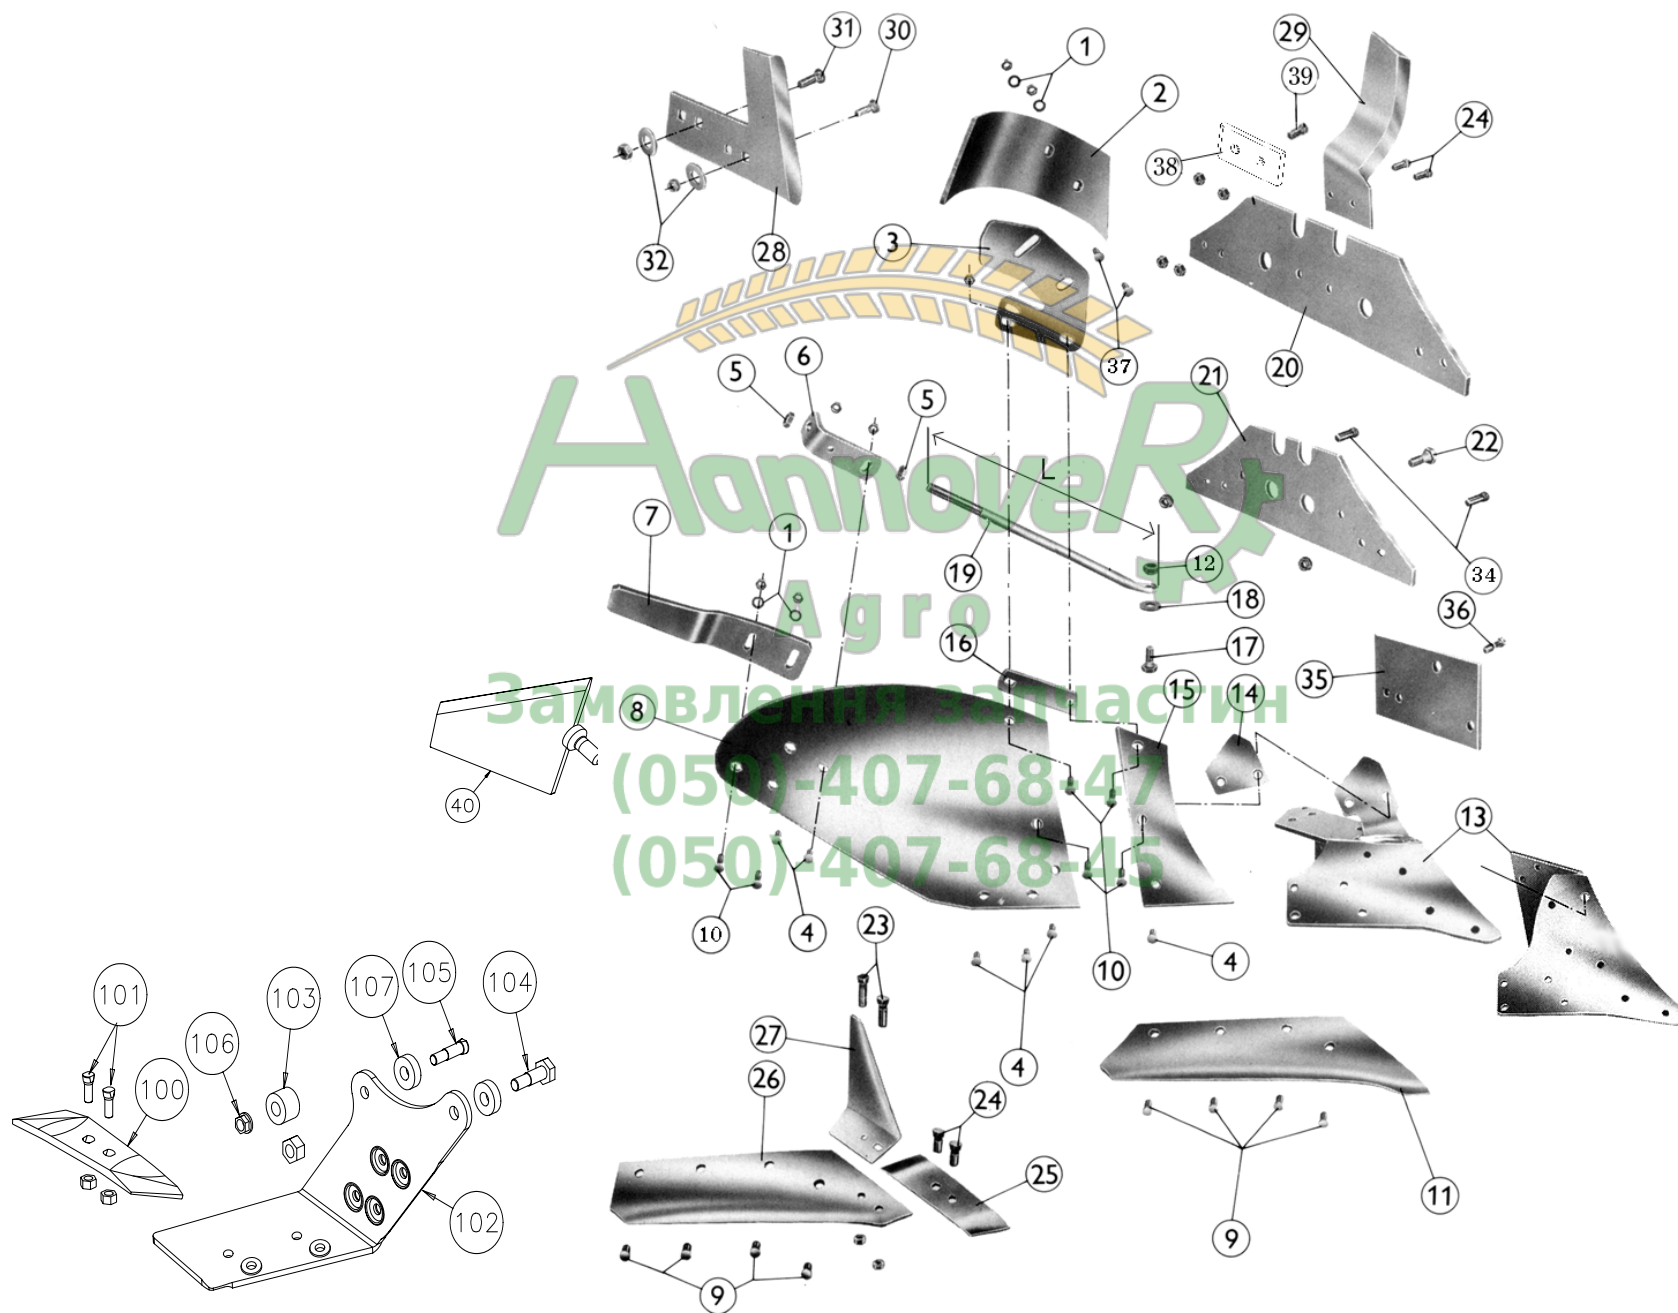

40	KK 08 32 35	Mouldboard knife R and L (From 01.12.01)
Pos. 100 - 107 Eco-share from 01.04.00		
100	KK 05 30 90	Reversible point, R
	KK 06 30 90	Reversible point, L
101	KK 01 32 28	Cone screw M12 x 34 mm w/nut
102	KK 07 36 34	Eco-share, R
	KK 07 36 35	Eco-share, L
103	KK 01 01 55	Bushing (for ploughs w/share bolt beam)
	KK 01 01 56	Bushing (for ploughs w/A-beam)
104	KK 03 27 40	Hex screw M16 x 40 mm w/nut (for ploughs w/E-saddle) (Before 01.03.00)
	KK 03 27 50	Hex screw M16 x 50 mm w/nut (for ploughs w/E-saddle) (From 01.03.00)
	KK 03 27 65	Hex screw M16 x 65 mm w/nut (for ploughs w/share bolt beam)
	KK 03 27 75	Hex screw M16 x 75 mm w/nut (for ploughs w/A-beam)
105	KK 01 33 46	Cone screw M14 x 45 mm w/flange nut (for ploughs w/E-saddle) (Before 01.03.00)
	KK 01 33 61	Cone screw M14 x 60 mm w/flange nut (for ploughs w/E-saddle) (From 01.03.00)
	KK 01 33 85	Cone screw M14 x 85 mm w/flange nut (for ploughs w/share bolt beam and A-beam)
106	KK 01 60 15	Flange nut M14
107	KK 01 29 29	Washer (for ploughs w/E-saddle) (From 01.03.00)







26	KK 03 30 04	Oval screw M10 x 20 mm w/nut
27	KK 07 33 50	Trashboard plastic, R
	KK 07 33 51	Trashboard plastic, L
28	KK 07 33 52	Support, R
	KK 07 33 53	Support, L
29	KK 05 33 87	Mouldboard extension, R
	KK 06 33 88	Mouldboard extension, L
31	KK 03 27 30	Hex screw M16 x 13 mm w/nut
32	KK 06 20 25	Nut M16 mm
33	KK 07 30 88	Landside knife w/nuts, R
	KK 07 30 89	Landside knife w/nuts, L
34	KK 03 32 51	Screw M16 x 50 mm w/nut (for E-sad- dle) (Before 01.02.00)
	KK 03 32 56	Screw M16 x 55 mm w/nut (for E-sad- dle) (From 01.02.00)
	KK 03 32 86	Screw M16 x 85 mm w/nut (for A-sad- dle) (Before 01.02.00)
	KK 03 32 95	Screw M16 x 95 mm w/nut (for A-sad- dle) (From 01.02.00)
35	KK 03 31 74	Screw M14 x 45 mm w/nut



1	KK 01 33 32	Cone screw M14 x 34 mm w/nut	21	KK 07 33 03	Bracket, R		KK 07 30 89	Landside knife w/nut, L
2	KK 07 30 54	Share 14", R		KK 07 33 04	Bracket, L	44	KK 01 29 22	Washer 17 x 40 x 4.58 mm
	KK 07 30 55	Share 14", L	22	KK 01 29 19	Washer 12.5 x 23 x 3.2 mm	45	KK 03 31 75	Screw M14 x 50 mm w/nut
	KK 07 30 56	Share 16", R	23	KK 03 27 40	Hex screw M16 x 40 mm w/nut	46	KK 03 32 51	Screw M16 x 50 mm w/nut (for E-saddle)
	KK 07 30 57	Share 16", L	24	KK 07 36 08	Landside, short, R + L		KK 03 32 86	Screw M16 x 85 mm w/nut (for A-saddle)
	KK 07 30 80	Share 18", R	25	KK 07 36 09	Landside, long, R + L	47	KK 06 36 07	Plate (For On-land ploughs only)
	KK 07 30 81	Share 18", L	26	KK 07 38 22	Stay front (for E-saddle)		KK 07 36 07	Plate cpl. (For On-land ploughs only)
3	KK 05 30 90	Reversible point, R		KK 07 38 16	Stay front (for A-saddle)	48	KK 01 33 46	Screw M14 x 45 mm w/nut
	KK 06 30 90	Reversible point, L	27	KK 01 58 30	Nut M20 mm (Before 01.06.93)	50	KK 07 36 14	Wearing plate
4	KK 07 32 45	Mouldboard, R	28	KK 07 38 17	Stay (Before 01.06.93)	51	KK 01 33 32	Cone screw M14 x 34 mm
	KK 07 32 46	Mouldboard, L	29	KK 07 38 15	Stay, rear (for A-saddle) (Before 01.06.93)			
5	KK 03 31 73	Oval screw M14 x 38 mm w/nut		KK 07 38 20	Stay, R cpl. (for E-saddle) (Before 01.06.93)			
7	KK 01 32 28	Cone screw M12 x 34 mm w/nut		KK 07 38 21	Stay, L cpl. (for E-saddle) (Before 01.06.93)			
8	KK 01 32 34	Cone screw M12 x 38 mm w/nut		KK 07 38 10	Stay, R cpl. (for A-saddle) (Before 01.06.93)			
9	KK 07 30 91	Share knife, R		KK 07 38 11	Stay, L cpl (for A-saddle) (Before 01.06.93)			
	KK 07 30 92	Share knife, L						
	KK 06 30 91	Share knife, R (for Sweden)						
	KK 06 30 92	Share knife, L (for Sweden)						
10	KK 07 34 70	Saddle, R (for E-saddle)	31	KK 07 15 00	Spacer			
	KK 07 34 71	Saddle, L (for E-saddle)	32	KK 03 31 81	Oval screw M14 x 85 mm w/nut			
	KK 07 34 64	Saddle, R (for A-saddle)	33	KK 07 36 15	Furrow widener, R			
	KK 07 34 65	Saddle, L (for A-saddle)		KK 07 30 16	Furrow widener, L			
11	KK 03 31 00	Oval screw M12 x 30 mm w/nut	34	KK 07 30 62	Share 14", R			
12	KK 07 32 72	Shinpiece, R		KK 07 30 63	Share 14", L			
	KK 07 32 73	Shinpiece, L		KK 07 30 64	Share 16", R			
13	KK 03 31 08	Oval screw M12 x 40 mm w/nut		KK 07 30 65	Share 16", L			
14	KK 03 27 30	Hex screw M16 x 30 mm w/nut	35	KK 07 38 05	Stay (for E-saddle) (From 01.06.93)			
16	KK 03 31 75	Oval screw M14 x 50 mm w/nut		KK 07 38 03	Stay (for A-saddle) (From 01.06.93)			
17	KK 07 32 75	Connecting piece, R	36	KK 07 38 34	Bracket for stay, R+L			
	KK 07 32 76	Connecting piece, L	37	KK 07 38 35	Spacing tube 27 x 20.5 x 80 mm			
18	KK 03 31 07	Oval screw M12 x 35 mm w/nut	38	KK 07 38 36	Spacing tube 27 x 20.5 x 69 mm			
19	KK 07 33 00	Trashboard, R	39	KK 07 38 12	Bracket for stay, R			
	KK 07 33 01	Trashboard, L		KK 07 38 13	Bracket for stay, L			
	KK 07 02 92	Trashboard, R cpl.	40	KK 01 30 01	Washer 14 x 30 x 7.5 mm			
	KK 07 02 93	Trashboard, L cpl.	41	KK 01 58 34	Nut M20 mm			
	KK 07 02 94	Trashboard, R + L cpl.	42	KK 03 31 85	Oval screw M14 x 130 mm w/flangenut			
20	KK 07 33 32	Mouldboard extension, R (extra)	43	KK 07 30 88	Landside knife w/nut, R			
	KK 07 33 33	Mouldboard extension,, L (extra)						

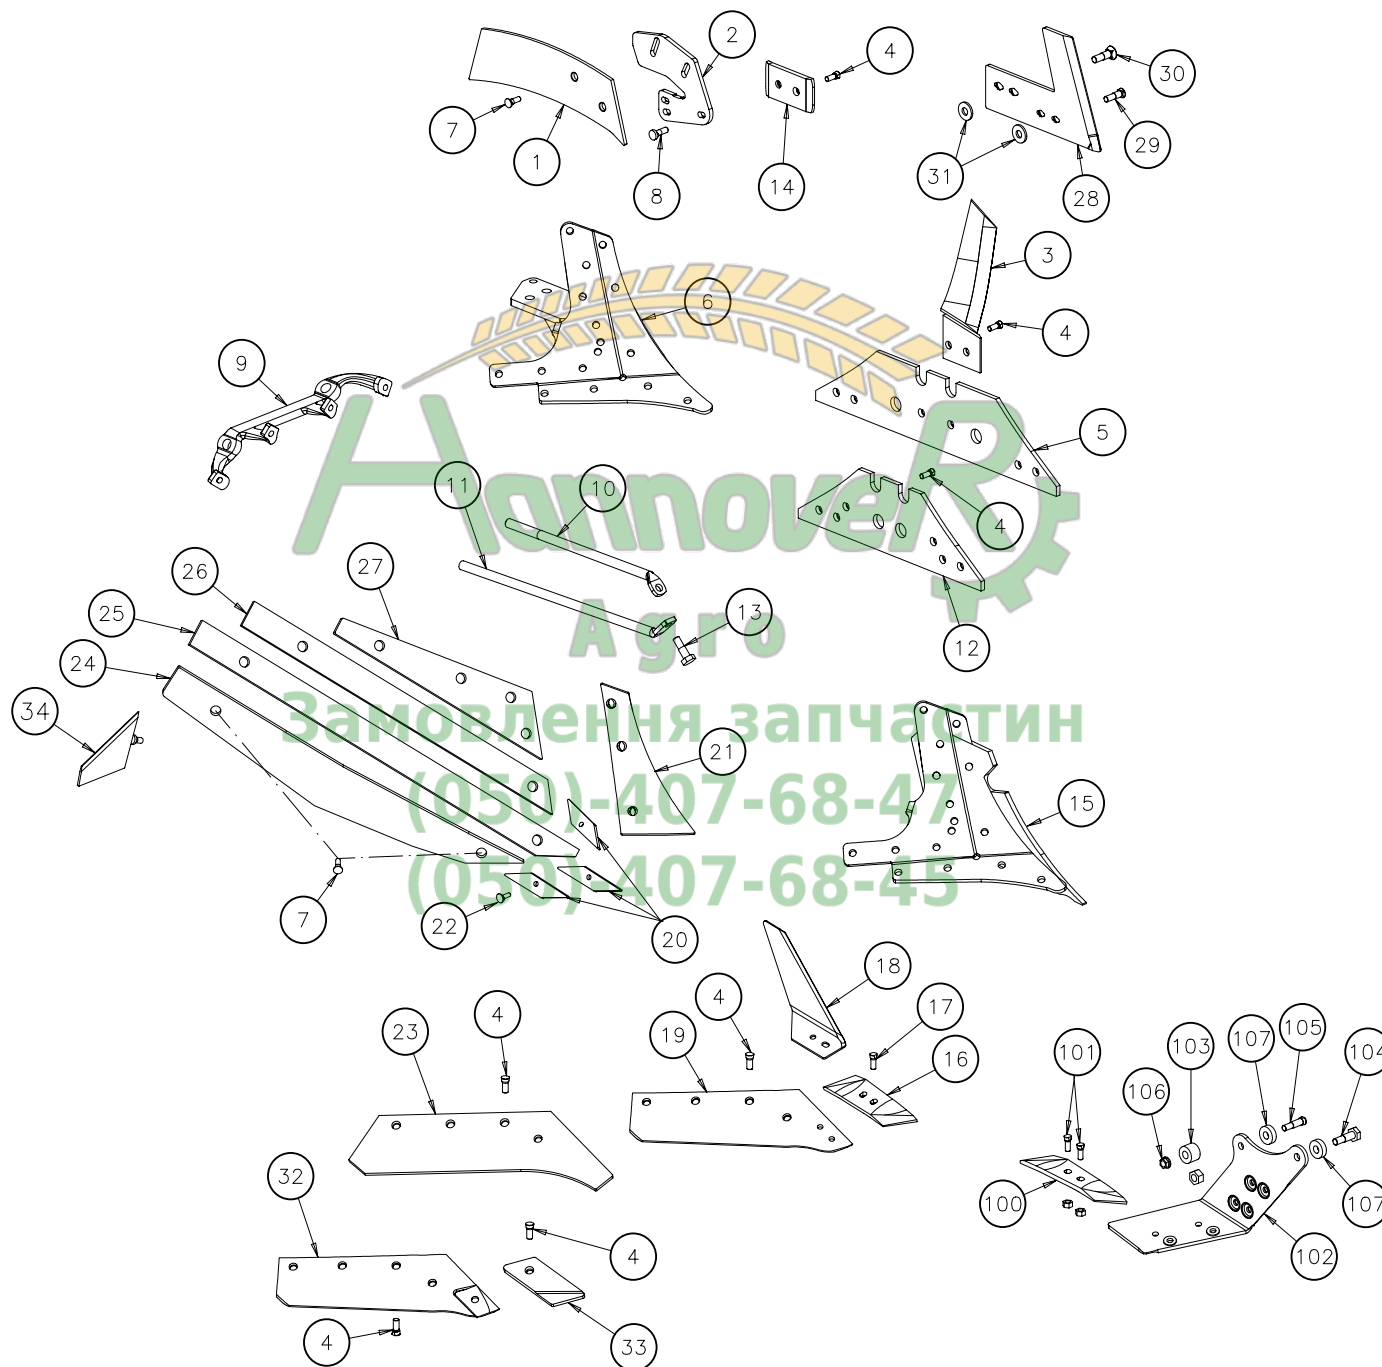


1	KK 07 33 00	Trashboard, R	15	KK 08 34 15	Saddle R, A-saddle (for body no. 29)	KK 03 30 16	Oval screw M10 x 30 mm (for body no. 30)
	KK 07 33 01	Trashboard, L		KK 08 34 16	Saddle L, A-saddle (for body no. 29)		
2	KK 08 33 00	Bracket, R		KK 08 34 06	Saddle R, A-saddle (for body no. 30)	KK 01 58 13	Nut M10
	KK 08 33 01	Bracket, L		KK 08 34 07	Saddle L, A-saddle (for body no. 30)	23	KK 07 30 62 Share 14", R (for body no. 30)
3	KK 07 36 15	Furrow widener, R	16	KK 05 30 90	Reversible point, R		KK 07 30 63 Share 14", L (for body no. 30)
	KK 07 36 16	Furrow widener, L		KK 06 30 90	Reversible point, L		KK 07 30 64 Share 16", R (for body no. 30)
4	KK 01 33 32	Cone screw M14 x 34 mm	17	KK 01 32 28	Cone screw M12 x 34 mm		KK 07 30 65 Share 16", L (for body no. 30)
	KK 01 60 13	Flange nut M14		KK 01 58 17	Nut M12	24	KK 08 32 11 Slat no 1, R
5	KK 07 36 09	Landside, long R + L	18	KK 07 30 91	Share knife, R		KK 08 32 21 Slat no 1, L
6	KK 08 34 17	Saddle R, E-saddle (for body no. 29)		KK 07 30 92	Share knife, L	25	KK 08 32 12 Slat no 2, R
	KK 08 34 18	Saddle L, E-saddle (for body no. 29)		KK 06 30 91	Share knife, R (for Sweeden)		KK 08 32 22 Slat no 2, L
	KK 08 34 08	Saddle R, E-saddle (for body no. 30)		KK 06 30 92	Share knife, L (for Sweeden)	26	KK 08 32 13 Slat no 3, R
	KK 08 34 09	Saddle L, E-saddle (for body no. 30)	19	KK 07 30 02	Share 14", R (for body no. 29)		KK 08 32 23 Slat no 3, L
7	KK 03 31 16	Oval screw M12 x 35 mm (for body no. 29 and 30)		KK 07 30 03	Share 14", L (for body no. 29)	27	KK 08 32 14 Slat no 4, R
	KK 01 58 17	Nut M12		KK 07 30 54	Share 14", R (for body no. 30)		KK 08 32 24 Slat no 4, L
	KK 03 31 07	Oval screw M12 x 35 mm (for body no. 30) (Before 01.01.01)		KK 07 30 55	Share 14", L (for body no. 30)	28	KK 07 30 88 Landside knife, R
	KK 01 58 17	Nut M12		KK 07 30 04	Share 16", R (for body no. 29)		KK 07 30 89 Landside knife, L
8	KK 03 31 17	Oval screw M12 x 45 mm (for body no. 29 and 30)		KK 07 30 05	Share 16", L (for body no. 29)	29	KK 03 31 75 Screw M14 x 50 mm
	KK 01 58 17	Nut M12		KK 07 30 56	Share 16", R (for body no. 30)		KK 01 60 15 Flange nut M14
	KK 03 31 11	Oval screw M12 x 45 mm (for body no. 30) (Before 01.01.01)		KK 07 30 57	Share 16", L (for body no. 30)	30	KK 03 32 51 Screw M16 x 50 mm (for E-saddle) (Before 01.02.00)
	KK 01 58 17	Nut M12		KK 07 30 06	Share 18", R (for body no. 29)		KK 03 32 56 Screw M16 x 56 mm (for E-saddle) (From 01.02.00)
	KK 03 31 11	Oval screw M12 x 45 mm (for body no. 30) (Before 01.01.01)		KK 07 30 07	Share 18", L (for body no. 29)		KK 01 58 25 Nut M16
	KK 01 58 17	Nut M12		KK 07 30 80	Share 18", R (for body no. 30)		KK 03 32 86 Screw M16 x 85 mm (for A-saddle) (Before 01.02.00)
9	KK 08 32 10	Slat support, R	20	KK 08 32 15	Connecting piece, plastic (for slat 1-2)		KK 03 32 95 Screw M16 x 95 mm (for A-saddle) (From 01.02.00)
	KK 08 32 20	Slat support, L		KK 08 32 18	Connecting piece, plastic (for slat 2) (for body no. 29)		KK 01 58 25 Nut M16
10	KK 08 38 03	Stay		KK 08 32 16	Connecting piece, plastic (for slat 2-3) (for body no. 30)	31	KK 01 29 22 Washer 17 x 40 x 4.58 mm
11	KK 08 38 05	Stay 1, saddle A (for body no. 29)			Connecting piece, plastic (for slat 3-4)	32	KK 07 30 42 Flush fit share 14", R (for body no. 29)
	KK 08 38 06	Stay 2, saddle A (for body no. 29)		KK 08 32 17	Connecting piece, plastic (for slat 3-4)		KK 07 30 43 Flush fit share 14", L (for body no. 29)
	KK 08 38 02	Stay, saddle A (for body no. 30)	21	KK 07 32 56	Shinpiece, R (for body no. 29)		KK 07 30 44 Flush fit share 16", R (for body no. 29)
	KK 08 38 07	Stay 1, saddle E (for body no. 29)		KK 07 32 57	Shinpiece, L (for body no. 29)		KK 07 30 45 Flush fit share 16", L (for body no. 29)
	KK 08 38 08	Stay 2, saddle E (for body no. 29)		KK 07 32 30	Shinpiece, R (for body no. 30)	33	KK 07 30 30 Flush fit point, R
	KK 08 38 04	Stay, saddle E (for body no. 30)		KK 07 32 31	Shinpiece, L (for body no. 30)		KK 07 30 31 Flush fit point, L
12	KK 07 36 08	Landside, short R + L	22	KK 03 30 06	Oval screw M10 x 30 mm (for body no. 29)	34	KK 08 32 35 Mouldboard knife R and L (From 01.12.01)
13	KK 03 27 50	Hex screw M16 x 50 mm		KK 01 58 13	Nut M10		
	KK 01 58 25	Nut M16					
14	KK 07 36 14	Wearing plate					

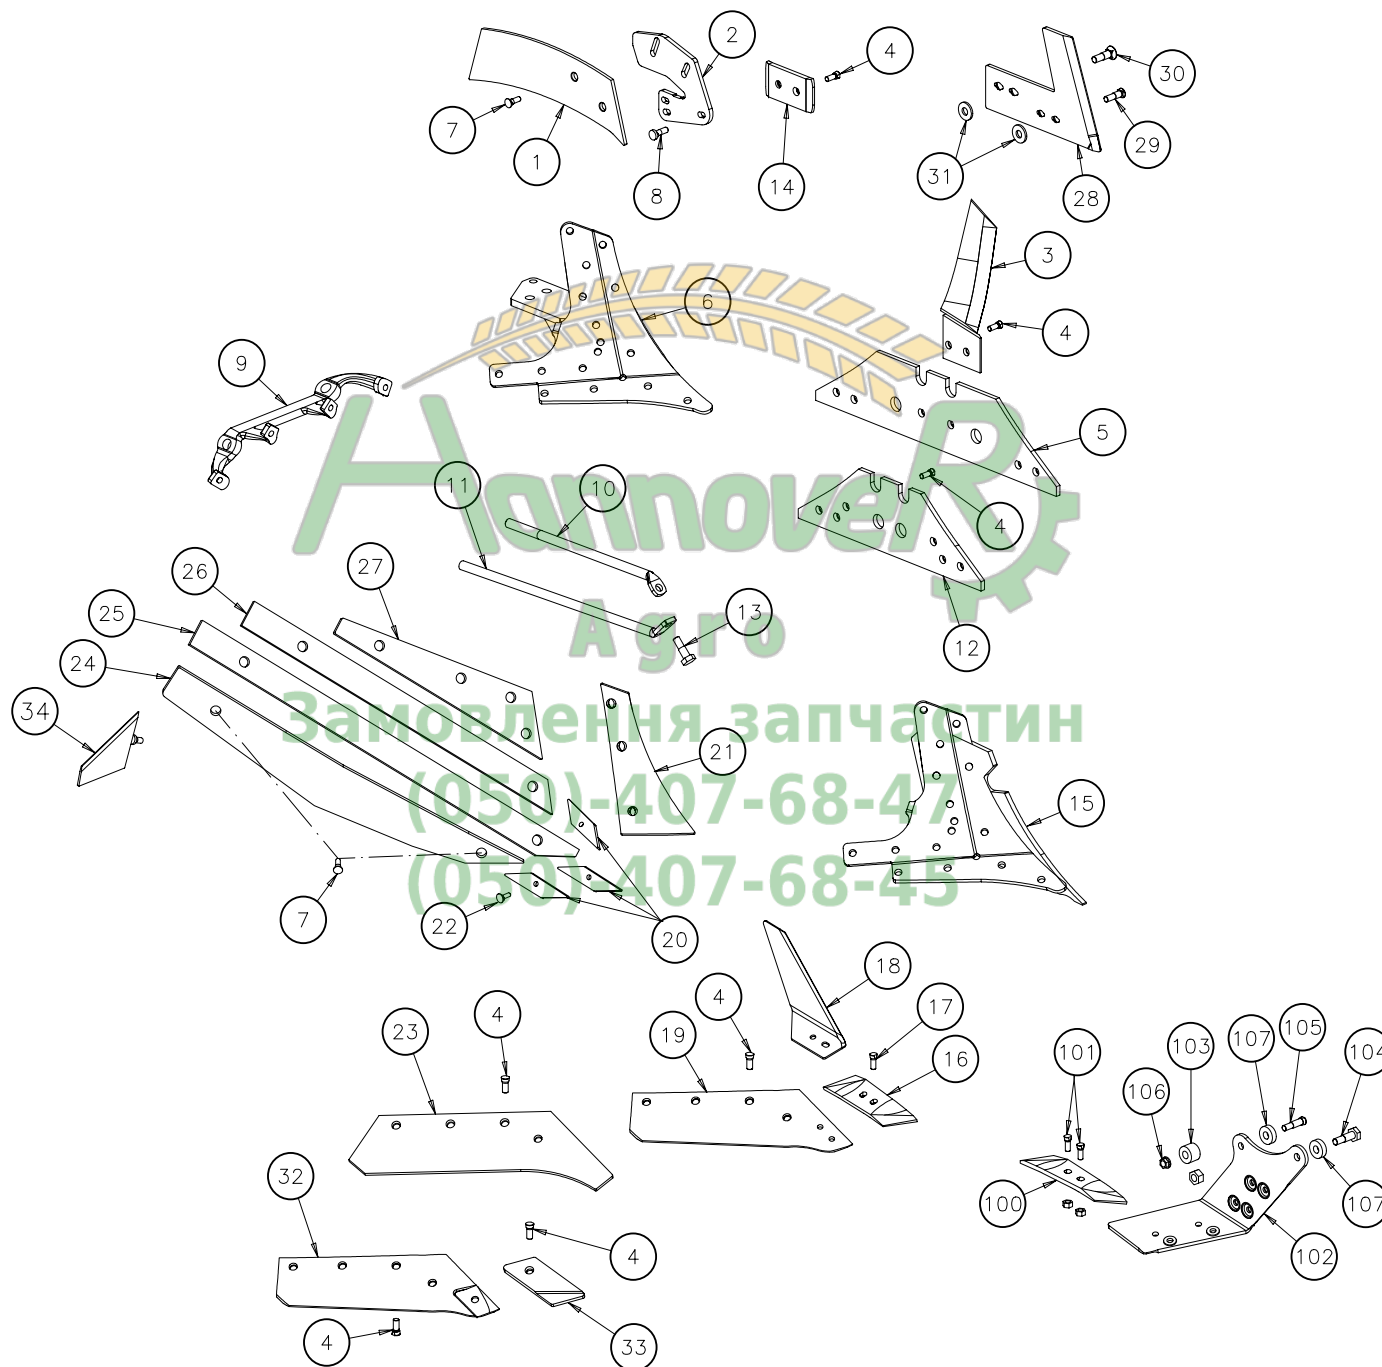

Pos. 100 - 107		Eco-share from 01.04.00
100	KK 05 30 90	Reversible point, R
	KK 06 30 90	Reversible point, L
101	KK 01 32 28	Cone screw M12 x 34 mm
	KK 01 58 17	Nut M12
102	KK 07 36 34	Eco-share, R
	KK 07 36 35	Eco-share, L
103	KK 01 01 55	Bushing (for ploughs w/share bolt beam)
	KK 01 01 56	Bushing (for ploughs w/A-beam)
104	KK 03 27 40	Hex screw M16 x 40 (for ploughs w/E-saddle) (Before 01.03.00)
	KK 03 27 50	Hex screw M16 x 50 mm (for ploughs w/E-saddle) (From 01.03.00)
	KK 01 58 25	Nut M16
	KK 03 27 65	Hex screw M16 x 65 mm w/nut (for ploughs w/share bolt beam)
	KK 01 58 25	Nut M16
	KK 03 27 75	Hex screw M16 x 75 mm w/nut (for ploughs w/A-beam)
	KK 01 58 25	Nut ;16
105	KK 01 33 46	Cone screw M14 x 45 mm (for ploughs w/E-saddle) (Before 01.03.00)
	KK 01 33 61	Cone screw M14 x 60 mm (for ploughs w/E-saddle) (From 01.03.00)
	KK 01 33 85	Cone screw M14 x 85 mm (for ploughs w/share bolt beam and A-beam)
106	KK 01 60 15	Flange nut M14
107	KK 01 29 29	Washer (for ploughs w/E-saddle) (From 01.03.00)



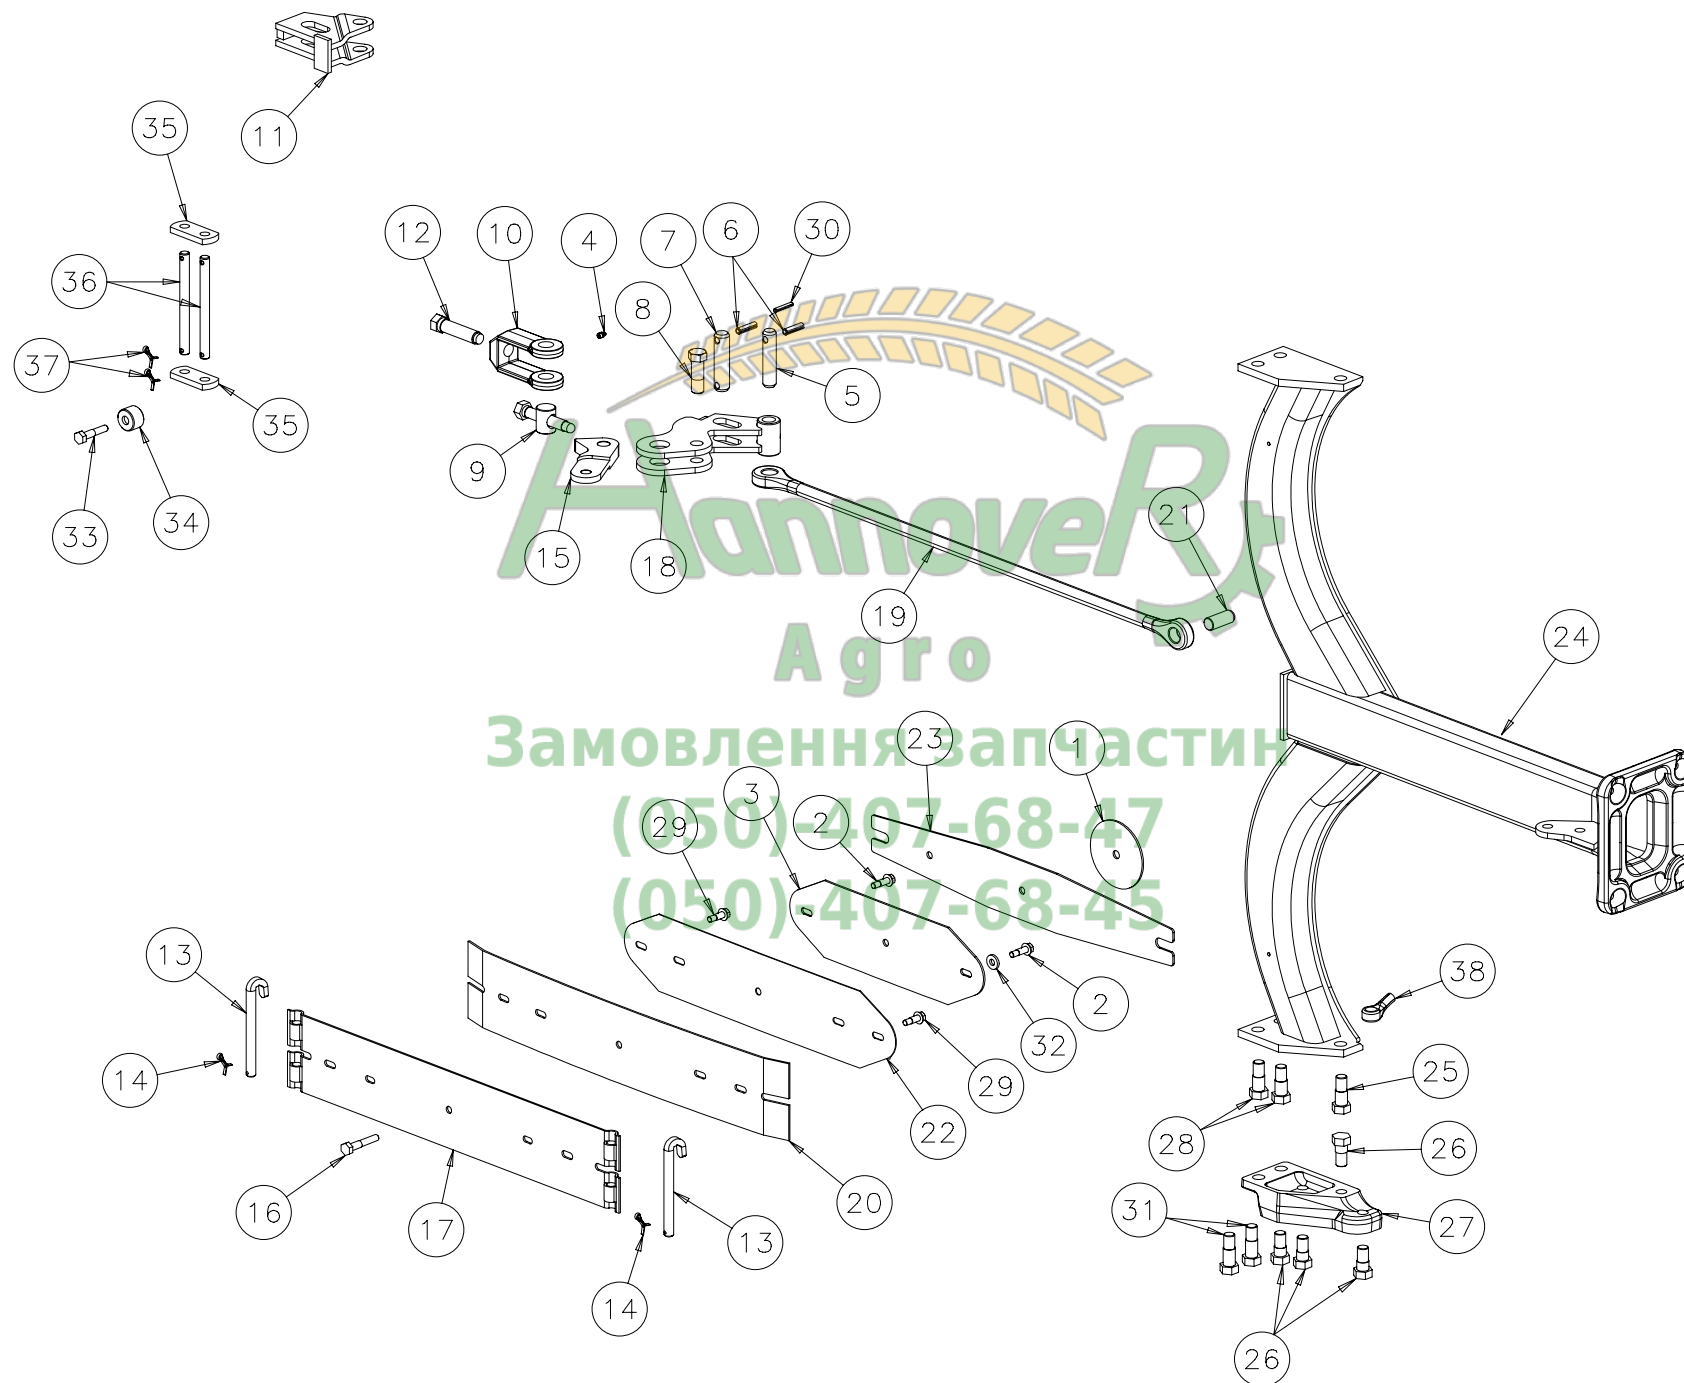

1	KK 05 70 67	Blade no 4	33	KK 03 26 55	Hex screw M12 x 55 mm w/nut (for extra additional leaf spring cpl.)
2	KK 03 50 20	Hex screw w/flange M10 x 34 mm w/nut	34	KK 06 70 77	Bushing (for extra additional leaf spring cpl.)
3	KK 05 70 66	Blade no 3	35	KK 06 70 75	Linkage (for extra additional leaf spring cpl.)
4	KK 02 99 20	Grease nipple M8 x 1	36	KK 06 70 76	Bolt D15.7 (for extra additional leaf spring cpl.)
5	KK 06 70 59	Bolt	37	KK 02 97 27	Split pin D5 x 32 mm (for extra additional leaf spring cpl.)
6	KK 01 10 37	Roll pin D10 x 40 mm	38	KK 06 12 91	Threaded piece
7	KK 06 70 57	Bolt (Before 01.08.02)			
	KK 06 70 16	Bolt (From 01.08.02)	Not ill.	KK 05 07 06	Leaf spring cpl. (1 x ill. no. 3, 13, 14, 16, 17 and 22 + 2 x ill. no. 1, 2, 20 and 29)
8	KK 03 28 60	Hex screw M20 x 60 mm w/nut		KK 06 07 03	Leaf spring HD cpl. (1 x ill. no 3, 16, 17 22 and 32 + 2 x ill. no. 1, 2, 20, 23 and 29)
9	KK 06 70 51	Adjustment screw w/threaded piece		KK 06 01 19	Spacer kit w/ hex screws R & L cpl.
10	KK 06 70 40	Holder (Before 01.08.02)			
	KK 06 70 25	Holder (From 01.08.02)			
11	KK 06 70 68	Bracket (Before 01.08.02)			
	KK 06 70 92	Bracket (From 01.08.02)			
12	KK 06 70 39	Adjustment screw M24 x 90 mm			
13	KK 05 70 89	Bolt			
14	KK 02 97 27	Split pin D5 x 32 mm			
15	KK 06 70 80	Spring arm			
16	KK 03 26 65	Hex screw M12 x 65 mm w/nut			
17	KK 05 70 63	Main blade			
18	KK 06 70 60	Regulator (Before 01.08.02)			
	KK 06 70 90	Regulator (From 01.08.02)			
19	KK 06 70 70	Tie rod (Before 01.08.02)			
	KK 06 70 26	Tie rod (From 01.08.02)			
20	KK 05 70 64	Blade no 1			
21	KK 06 70 31	Axle D22 x 53 mm			
22	KK 05 70 65	Blade no 2			
23	KK 05 70 68	Blade no 5			
24	KK 06 12 80	Beam			
25	KK 03 52 09	Hex screw M20 x 50 mm w/threaded piece			
26	KK 03 28 40	Hex screw M20 x 40 mm w/nut			
27	KK 06 01 08	Spacer cpl. w/hex screws R			
	KK 06 01 09	Spacer cpl. w/hex screws L			
28	KK 03 51 65	Hex screw M20 x 50 mm w/flange nut			
29	KK 03 50 21	Hex screw w/flange M10 x 30.5 mm w/nut			
30	KK 01 10 42	Roll pin D6 x 40 mm (to be mounted into roll pin 011037)			
31	KK 03 28 55	Hex screw M20 x 55 mm			
32	KK 01 29 13	Washer			





1	KK 03 13 40	Hex screw M8 x 40 mm
2	KK 05 61 56	Cap
3	KK 01 07 75	O-ring D54.5 x 3 mm
4	KK 01 12 66	Circlip
5	KK 01 12 92	Washer D30 x 45 x 2.5 mm
6	KK 05 61 12	Disc 18"
	KK 05 61 14	Disc 20"
	KK 05 61 15	Disc 18" Notched
	KK 05 61 16	Disc 20" Notched
7	KK 06 61 02	Hub w/needles
	KK 06 61 24	Hub cpl (ill 1, 3 - 5 and 7 - 9)
8	KK 01 07 72	Seal ring
9	KK 06 61 08	Axle D30
10	KK 02 99 20	Grease nipple M8 x 1 mm
11	KK 06 61 40	Disc coulters arm 18" R
	KK 06 61 43	Disc coulters arm 20" R
12	KK 06 61 90	Clip
13	KK 03 50 31	Hex screw M12 x 45 mm w/nut
14	KK 06 61 85	Bracket
15	KK 06 61 42	Disc coulters arm 18" L
	KK 06 61 45	Disc coulters arm 20" L
16	KK 01 60 31	Cone nut M16
17	KK 06 61 89	Bracket 18"
	KK 06 61 82	Bracket 20"
18	KK 06 61 78	Eccentric
19	KK 06 61 75	U - bolt
20	KK 03 17 30	Hex screw M20 x 30 mm
	KK 03 17 40	Hex screw M20 x 40 mm (for eccentric nut)



Замовлення запчастин
(050)-407-68-47
(050)-407-68-45



1	KK 07 64 06	Disc coulters 18"	22	KK 03 28 30	Hex screw M20 x 30 mm
	KK 07 64 07	Disc coulters 20"		KK 01 58 30	Nut M20
2	KK 07 64 09	Disc coulters, notched 18"	23	KK 03 28 40	Hex screw M20 x 40 mm
	KK 07 64 10	Disc coulters, notched 20"		KK 01 58 30	Nut M20
3	KK 07 64 99	Plate	24	KK 01 60 31	Cone nut M16
4	KK 03 35 40	Screw M10 x 40 mm			
	KK 01 60 04	Lock nut M10			
5	KK 01 17 50	O-ring 124,5 x 4 mm			
6	KK 01 18 66	O-ring 67 x 3 mm			
7	KK 01 12 59	Circlip I 62 x 2 mm			
8	KK 01 12 66	Circlip A 30 x 1,5 mm			
9	KK 01 05 72	Bearing			
10	KK 01 05 32	Gasket ring			
11	KK 08 60 89	Bearing housing cpl. (ill. 3 - 11)			
	KK 08 60 90	Bearing housing cpl. w/axle			
12	KK 08 61 01	Axle			
	KK 08 60 80	Disc coulters arm w/bearing 18", R			
	KK 08 60 81	Disc coulters arm w/bearing 18", L			
	KK 08 60 82	Disc coulters arm w/bearing 20", R			
	KK 08 60 83	Disc coulters arm w/bearing 20", L			
	KK 08 60 84	Disc coulters arm w/bearing 20", lowered R			
	KK 08 60 85	Disc coulters arm w/bearing 20", lowered L			
13	KK 08 61 10	Arm 18", R			
	KK 08 61 12	Arm 20", R			
	KK 08 61 14	Arm 20", lowered R			
14	KK 08 61 11	Arm 18", L			
	KK 08 61 13	Arm 20", L			
	KK 08 61 15	Arm 20", lowered L			
15	KK 06 61 70	Bracket			
16	KK 02 99 20	Grease nipple			
17	KK 06 61 90	Clip			
18	KK 03 50 31	Hex screw M12 x 45 mm			
	KK 01 58 17	Nut M12			
19	KK 06 61 89	Bracket 18"			
	KK 06 61 82	Bracket 20"			
20	KK 06 61 78	Eccentric			
21	KK 06 61 75	U-bolt			




Замовлення запчастин
(050)-407-68-47
(050)-407-68-45




1	KK 07 64 06	Disc coulters 18"
	KK 07 64 07	Disc coulters 20"
2	KK 07 64 09	Disc coulters, notched 18"
	KK 07 64 10	Disc coulters, notched 20"
3	KK 03 10 30	Screw M10 x 30 mm w/nut
4	KK 01 17 50	O-ring 124,5 x 3,0 mm
5	KK 01 18 66	O-ring 67,0 x 3,0 mm
6	KK 01 12 59	Circlip I 62 x 2 mm
7	KK 01 12 66	Circlip A 30 x 1,5 mm
8	KK 01 05 72	Bearing
9	KK 01 08 18	Gasket ring 35/52 x 7 mm (Before 01.01.99)
	KK 01 05 32	Gasket ring (From 01.01.99)
10	KK 07 60 75	Bearing housing (Before 01.01.99)
	KK 07 60 97	Bearing, mounted (Before 01.01.99)
	KK 08 61 00	Bearing (From 01.01.99)
11	KK 07 60 76	Axle (Before 01.01.99)
	KK 08 61 01	Axle (From 01.01.99)
12	KK 02 99 20	Grease nipple M8 x 1
13	KK 07 65 75	Arm
	KK 07 60 82	Arm w/bearing, mounted
14	KK 03 27 02	Hex screw M16 x 110 mm w/nut
15	KK 07 64 00	Support
16	KK 07 60 63	Axle -92
17	KK 01 60 31	Cone nut M16
18	KK 07 60 60	Bracket (Before 01.05.02)
	KK 08 61 03	Bracket (From 01.05.02)
19	KK 03 51 75	Hex screw m20 x 100 mm w/locknut
20	KK 06 61 75	Clevis M16, 120 x 90 mm
21	KK 07 64 99	Plate (From 01.01.99)
Not ill.	KK 07 62 10	Disc coulters 92, 18" R & L, without fix
	KK 07 62 11	Disc coulters 92, 20" R & L, without fix
	KK 07 62 12	Disc coulters 92, 18" R & L, notched, without fix
	KK 07 62 13	Disc coulters 92, 20" R & L, notched, without fix



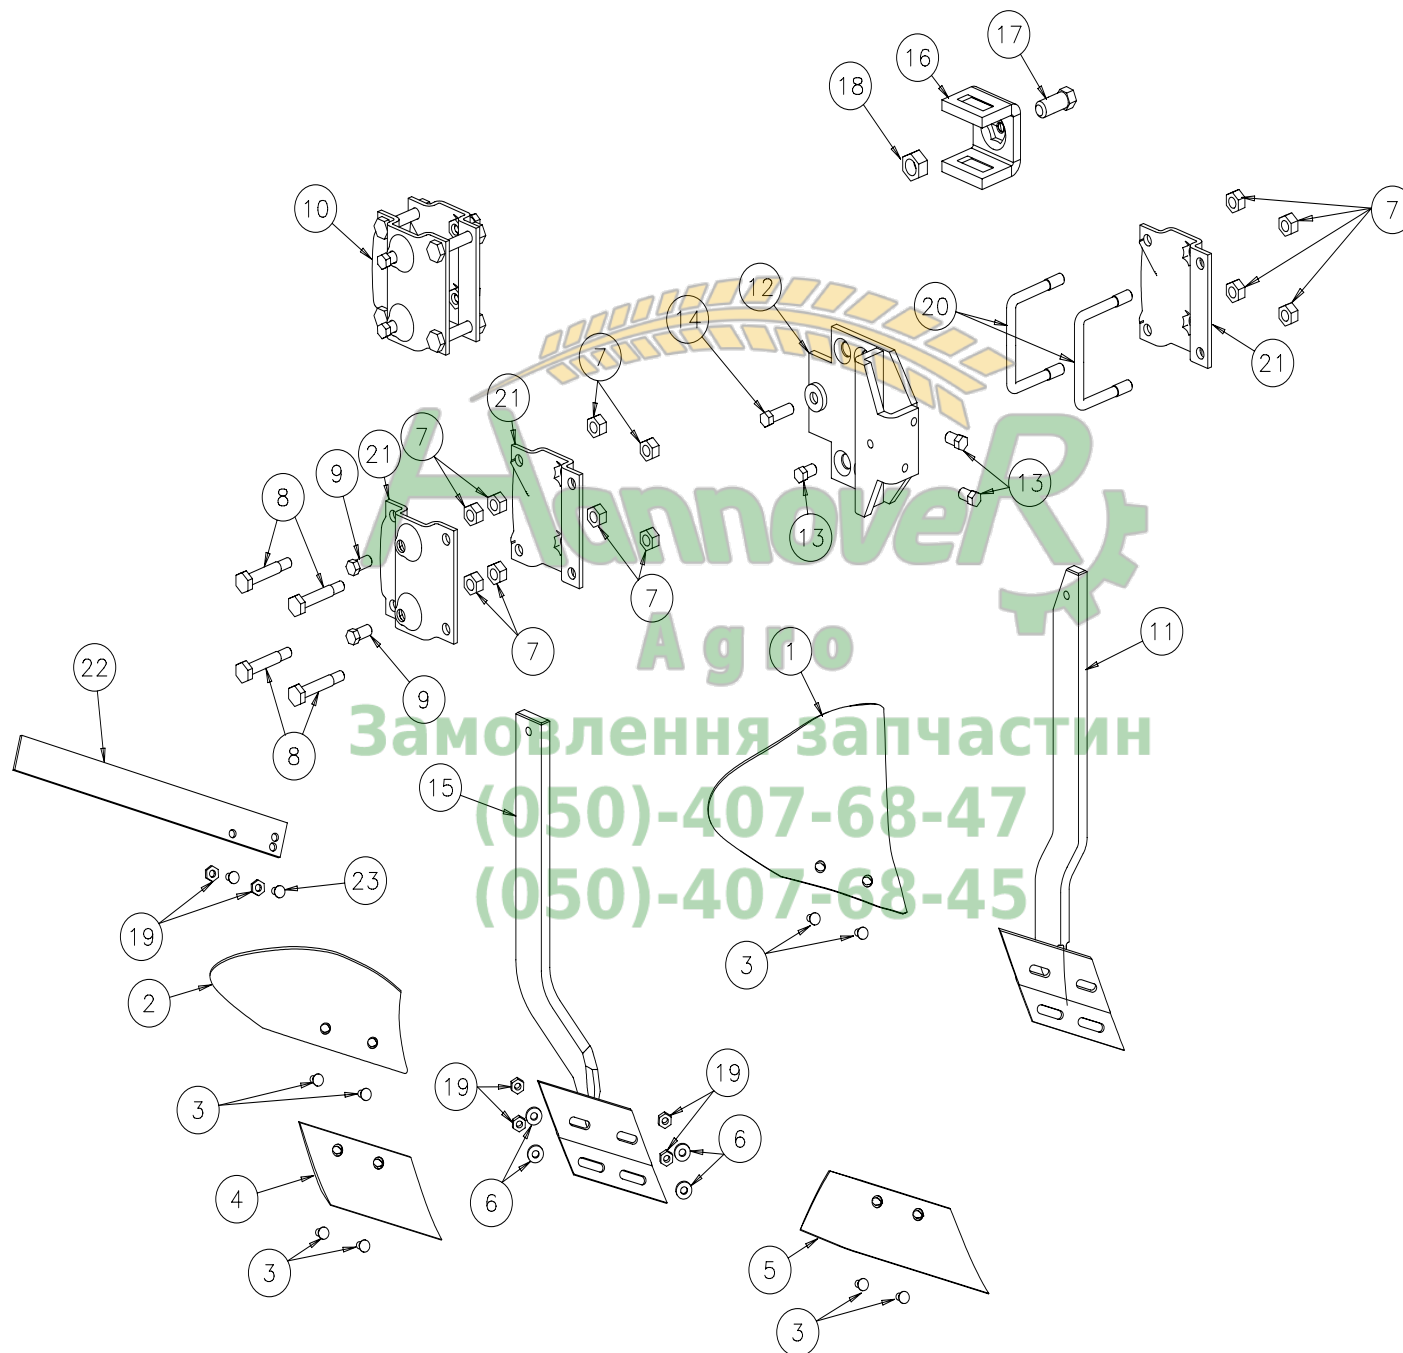

1	KK 07 68 12	Mouldboard maize R	11	KK 06 68 11	Arm R, H = 700 mm for HD beam and std. beam H700
	KK 07 68 13	Mouldboard maize L		KK 07 68 58	Arm R, H = 750 mm for std. beam H800 (From 01.12.00)
2	KK 06 68 80	Mouldboard R	16	KK 07 06 53	Fixing bracket with screw and nut (for beam 071240 and 071241)
	KK 07 69 43	Mouldboard R, plastic	17	KK 03 44 46	Setscrew M24 x 53 mm
	KK 06 68 81	Mouldboard L	18	KK 01 58 41	Nut M24
	KK 07 69 44	Mouldboard L, plastic	19	KK 01 58 16	Nut M10
3	KK 03 30 06	Oval screw M10 x 30 mm	20	KK 08 50 76	Clevis
4	KK 05 68 73	Share, short R	21	KK 06 68 61	Bracket HD beam
	KK 06 68 73	Share, short L			
5	KK 06 68 68	Share, long R			
	KK 06 68 69	Share, long L			
6	KK 01 29 06	Washer 10.5 x 25 x 3.4			
7	KK 01 58 25	Nut M16			
22	KK 08 68 01	Skimmer extension			
23	KK 03 30 07	Oval screw M10 x 35 mm			
for all turnable ploughs with Auto Reset beams:					
8	KK 03 27 95	Hex screw M16 x 95 mm			
9	KK 03 42 28	Setscrew M16 x 32 mm			
10	KK 06 06 57	Bracket cpl.			
11	KK 06 68 11	Arm R, H = 700 mm			
	KK 07 68 58	Arm R, H = 750 mm (From 01.12.00)			
	KK 06 68 12	Arm L, H = 700 mm			
	KK 07 68 59	Arm L, H = 750 mm (From 01.12.00)			
for all turnable ploughs with Shear Bolt beams:					
12	KK 07 06 39	Bracket with screws (for LB, LD, RB, RS, RX)			
	KK 07 68 72	Bracket (for LM, LS, RG, RL, RM, VD)			
13	KK 03 42 25	Setscrew M16 x 25 mm			
14	KK 03 42 50	Setscrew M16 x 50 mm			
15	KK 07 68 17	Arm R, H = 700 mm			
	KK 07 68 18	Arm L, H = 700 mm			
	KK 07 68 25	Arm R, H = 800 mm			
	KK 07 68 26	Arm L, H = 800 mm			
	KK 07 68 33	Arm R, H = 700 mm (for VD plough only) (Before 15.03.98)			
	KK 07 68 34	Arm L, H = 700 mm (for VD plough only) (Before 15.03.98)			
for beams on conventional ploughs:					



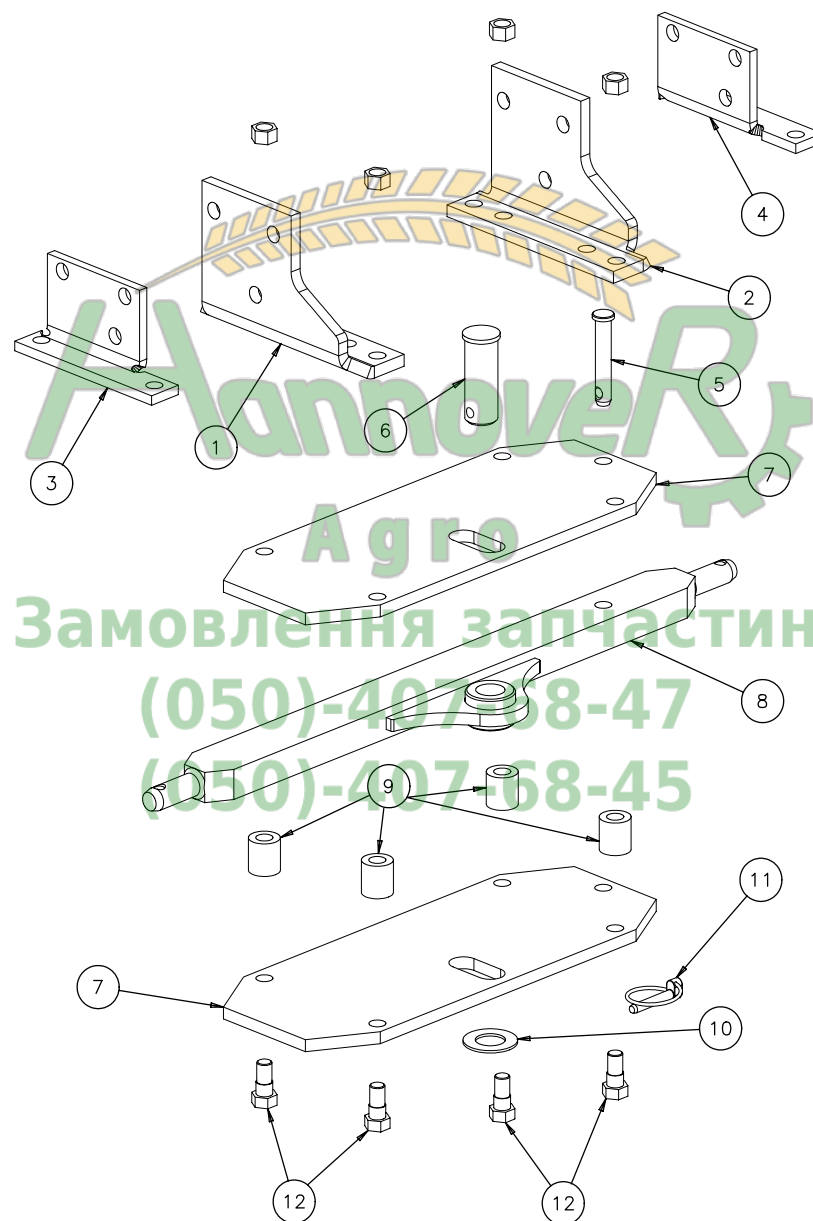


1	KK 07 19 13	Plate R, mod. 160
2	KK 07 19 14	Plate L, mod. 160
3	KK 07 22 80	Plate R, mod. 110
4	KK 07 22 81	Plate L, mod. 110
5	KK 01 02 78	Pin 19 x 93 mm cat II
	KK 01 02 82	Pin 19 x 110 mm cat III
6	KK 07 17 94	Pin 35 x 90 mm cat II
	KK 07 43 79	Pin 35 x 105 mm cat III
7	KK 07 19 12	Plate
8	KK 07 43 32	Cross shaft cat II, 110 and 160
	KK 07 43 77	Cross shaft cat III, 160
9	KK 06 43 43	Spacing tube cat II
	KK 07 43 78	Spacing tube cat III
10	KK 01 29 51	Washer
11	KK 01 07 00	Pin
12	KK 03 28 24	Hex screw M20 x 105 mm w/nut
	KK 03 28 11	Hex screw M20 x 130 mm w/nut



Замовлення запчастин
(050)-407-68-47
(050)-407-68-45




1	KK 03 28 24	Hex screw M20 x 105 mm w/lock nut (for cross shaft cat. II, L = 852 mm)	KK 06 43 20	Cross shaft cat. II, L = 935 mm D60
	KK 03 28 11	Hex screw M20 x 130 mm w/lock nut (for cross shaft cat. III, L = 965 mm)	KK 06 43 23	Cross shaft cat. III, L = 860 mm D60
2	KK 03 29 56	Hex screw M24 x 55 mm	KK 06 43 21	Cross shaft cat. III, L = 965 mm D60
3	KK 08 15 81	Plate mod. 200, R	KK 07 43 96	Cross shaft cat. III, L = 860 mm D70
4	KK 01 02 78	Bolt w/head D19 x 93 mm (for cross shaft cat. II, L = 852 mm)	KK 07 43 95	Cross shaft cat. III, L = 965 mm D70
	KK 01 02 82	Bolt w/head D19 x 110 mm (for cross shaft cat. III, L = 965 mm)		
5	KK 07 17 94	Bolt w/head D35 x 90 mm (for cross shaft cat. II, L = 852 mm)		
	KK 07 43 79	Bolt w/head D35 x 105 mm (for cross shaft cat. III, L = 965 mm)		
6	KK 08 15 80	Plate, upper and lower		
7	KK 07 43 32	Cross shaft cat. II, L = 825 mm		
	KK 07 43 77	Cross shaft cat. III, L = 965 mm		
8	KK 06 43 43	Bushing D38 x D20,5 x 41 mm (for cross shaft cat. II, L = 852 mm)		
	KK 07 43 78	Bushing D38 x D20,5 x 61 mm (for cross shaft cat. III, L = 965 mm)		
9	KK 01 29 51	Washer D65 x D36 x 3 mm		
10	KK 01 07 00	Pin D12		
11	KK 01 02 88	Bolt w/handle D19 x 93 mm, D60		
	KK 01 02 91	Bolt w/handle D19 x 110 mm, D70		
12	KK 07 43 54	Collar, D60		
	KK 07 26 34	Collar, D70		
13	KK 08 15 50	Holder for quick coupling, D60		
	KK 08 15 52	Holder for lower quick coupling, D60		
	KK 08 15 60	Holder for quick coupling, D70		
	KK 08 15 62	Holder for lower quick coupling, D70		
14	KK 06 43 23	Cross shaft cat. III, L = 860 mm D60 (for quick coupling and lower quick coupling)		
	KK 06 43 20	Cross shaft cat. II , L = 935 mm D60 (for quick coupling and lower quick coupling)		
	KK 06 43 21	Cross shaft cat. III, L = 965 mm D60 (for quick coupling and lower quick coupling)		
	KK 07 43 96	Cross shaft cat. III, L = 860 mm D70 (for quick coupling and lower quick coupling)		
	KK 07 43 95	Cross shaft cat. III, L = 965 mm D70 (for quick coupling and lower quick coupling)		
15	KK 08 15 83	Plate mod. 200, L		
16	KK 06 43 60	Collar, D60 w/hex screw KK 03 27 50 w/nut (M16 x 50 mm) (for cross shaft D60)		
	KK 07 43 97	Collar, D70 w/hex screw KK 03 28 70 w/nut (M20 x 70 mm) (for cross shaft D70)		
17	KK 08 15 54	Holder (for cross shaft D60) (Before 01.03.02)		
	KK 08 15 34	Holder (for cross shaft D60) (From 01.03.02)		
	KK 08 15 37	Holder (for cross shaft D70) (Before 01.03.02)		
	KK 08 15 35	Holder (for cross shaft D70) (From 01.03.02)		
18	KK 06 43 19	Cross shaft cat. II, L = 825 mm D60		

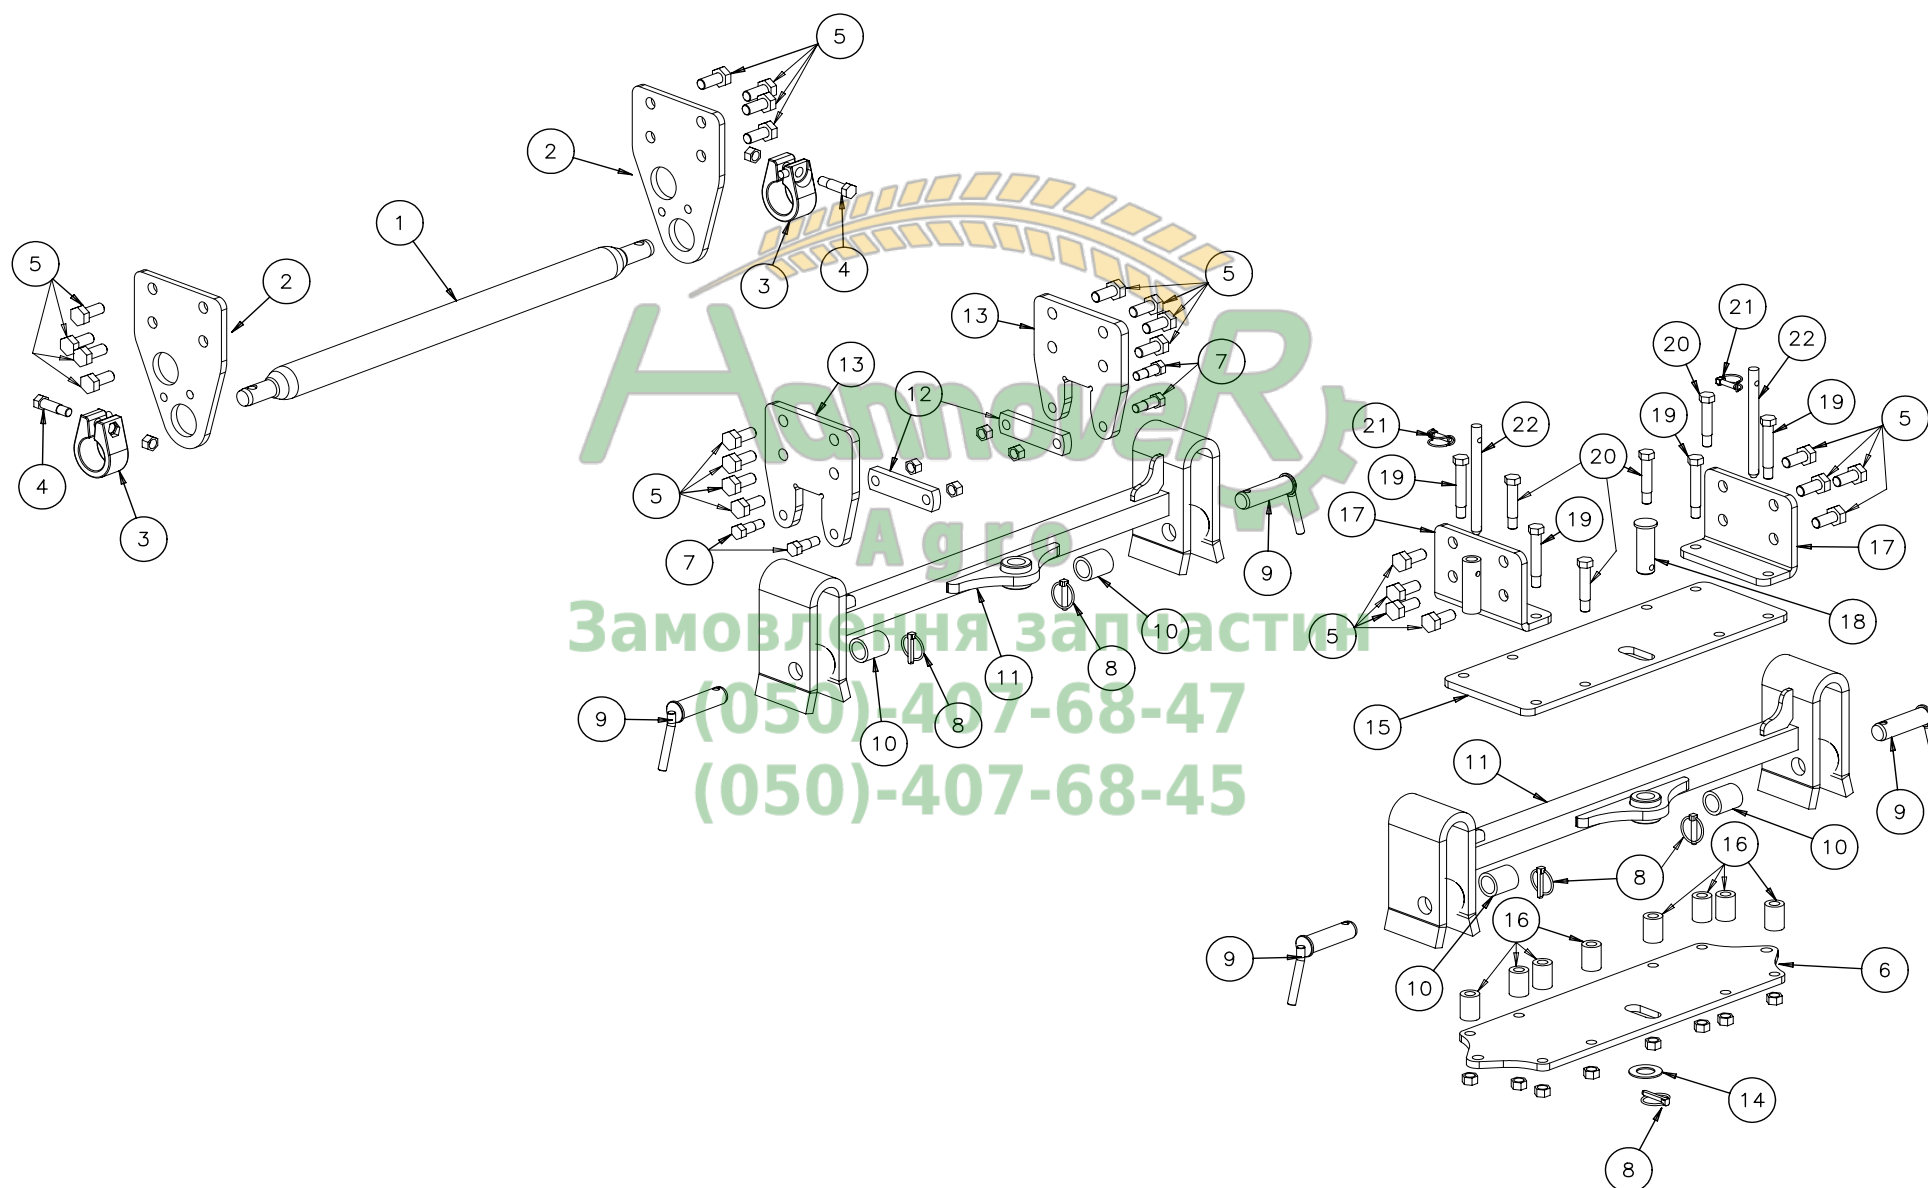

1	KK 07 43 95	Cross shaft cat. III, L = 965 mm D70
2	KK 08 14 61	Holder (for cross shaft D70)
3	KK 07 43 97	Stop ring D70
4	KK 03 28 70	Hex screw M20 x 70 mm w/nut
5	KK 03 29 56	Hex screw M24 x 55 mm
6	KK 08 14 39	Plate (From 01.10.00 - before plate no. 081442)
7	KK 03 28 55	Hex screw M20 x 55 mm w/nut
8	KK 01 07 00	Pin D12
9	KK 01 03 45	Bolt w/handle D36.6
10	KK 01 01 57	Bushing D50,6 x D37 x 59 mm
11	KK 08 14 43	Cross shaft cat. III/IV, L = 965 mm
12	KK 08 14 53	Lock plate (for cross shaft cat. IV)
13	KK 08 14 52	Plate (for cross shaft cat. IV)
14	KK 01 29 63	Washer
15	KK 08 14 42	Plate upper/lower
16	KK 07 17 93	Bushing D35 x D20.5 x 53 mm
17	KK 08 14 40	Plate
18	KK 07 17 94	Bolt w/head D35 x 90 mm
19	KK 03 28 05	Hex screw M20 x 120 mm w/nut
20	KK 03 28 07	Hex screw M20 x 100 mm w/nut
21	KK 01 08 51	Pin D10
22	KK 08 14 49	Bolt m/hull D20 x 180 mm




Замовлення запчастин
(050)-407-68-47
(050)-407-68-45

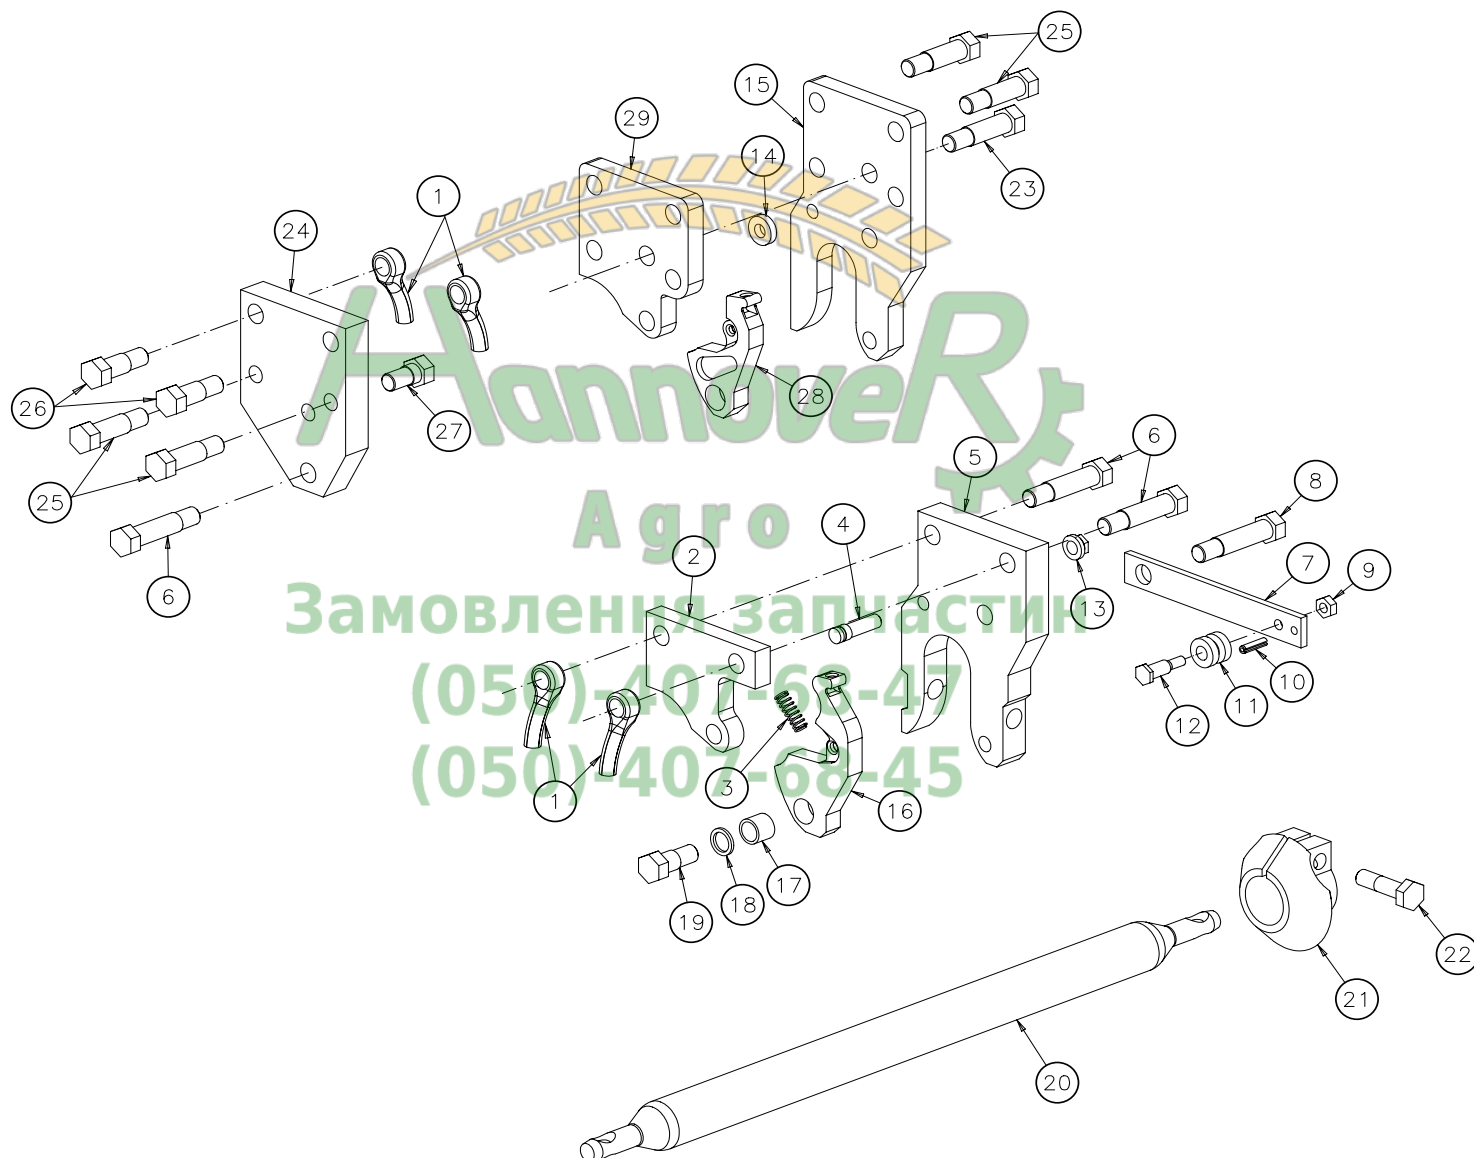

1	KK 06 12 78	Threaded piece	29	KK 07 22 77	Plate, headstock 110
2	KK 07 43 52	Plate, headstock 160			
3	KK 01 17 23	Spring	Not ill.	KK 07 45 84	Lock for transport wheel, quick coupling cpl.
4	KK 07 43 55	Bolt		KK 07 43 58	Shackle w/bolt
5	KK 07 43 50	Holder, headstock 160		KK 07 43 57	Wire
6	KK 03 28 85	Hex screw M20 x 85 mm			
7	KK 07 43 56	Plate			
8	KK 03 28 90	Hex screw M20 x 90 mm w/nut			
9	KK 01 58 13	Nut			
10	KK 01 10 64	Pin			
11	KK 07 43 59	Roller			
12	KK 07 43 63	Bolt			
13	KK 01 60 13	Flange nut			
14	KK 01 29 21	Washer, headstock 110			
15	KK 07 22 76	Holder for cross shaft, headstock 110			
16	KK 07 43 51	Lock arm, headstock 160			
17	KK 07 43 53	Bushing			
18	KK 01 29 31	Washer			
19	KK 03 28 45	Hex screw M20 x 45 mm			
20	KK 07 22 73	Cross shaft cat I, L = 720 mm for headstock 110			
	KK 07 22 74	Cross shaft cat II, L = 825 mm for headstock 110			
	KK 07 22 75	Cross shaft cat II, L = 935 mm for headstock 110			
	KK 07 22 91	Cross shaft cat II, L = 720 mm for headstock 110			
	KK 06 43 19	Cross shaft cat II, L = 825 mm for headstock 160			
	KK 06 43 20	Cross shaft cat II, L = 935 mm for headstock 160			
	KK 06 43 21	Cross shaft cat III, L = 965 mm for headstock 160			
	KK 06 43 23	Cross shaft cat III, L = 860 mm for headstock 160			
21	KK 07 22 79	Collar for headstock 110			
	KK 07 43 54	Collar for headstock 160			
22	KK 03 27 60	Hex screw M16 x 60 mm w/nut			
23	KK 03 28 75	Hex screw M20 x 75 mm w/nut			
24	KK 07 43 64	Lowering plate for quick coupling, headstock 160			
25	KK 03 28 70	Hex screw M20 x 70 mm			
26	KK 03 28 55	Hex screw M20 x 55 mm			
27	KK 03 28 35	Hex screw M20 x 35 mm w/nut			
28	KK 07 22 78	Lock piece, headstock 110			




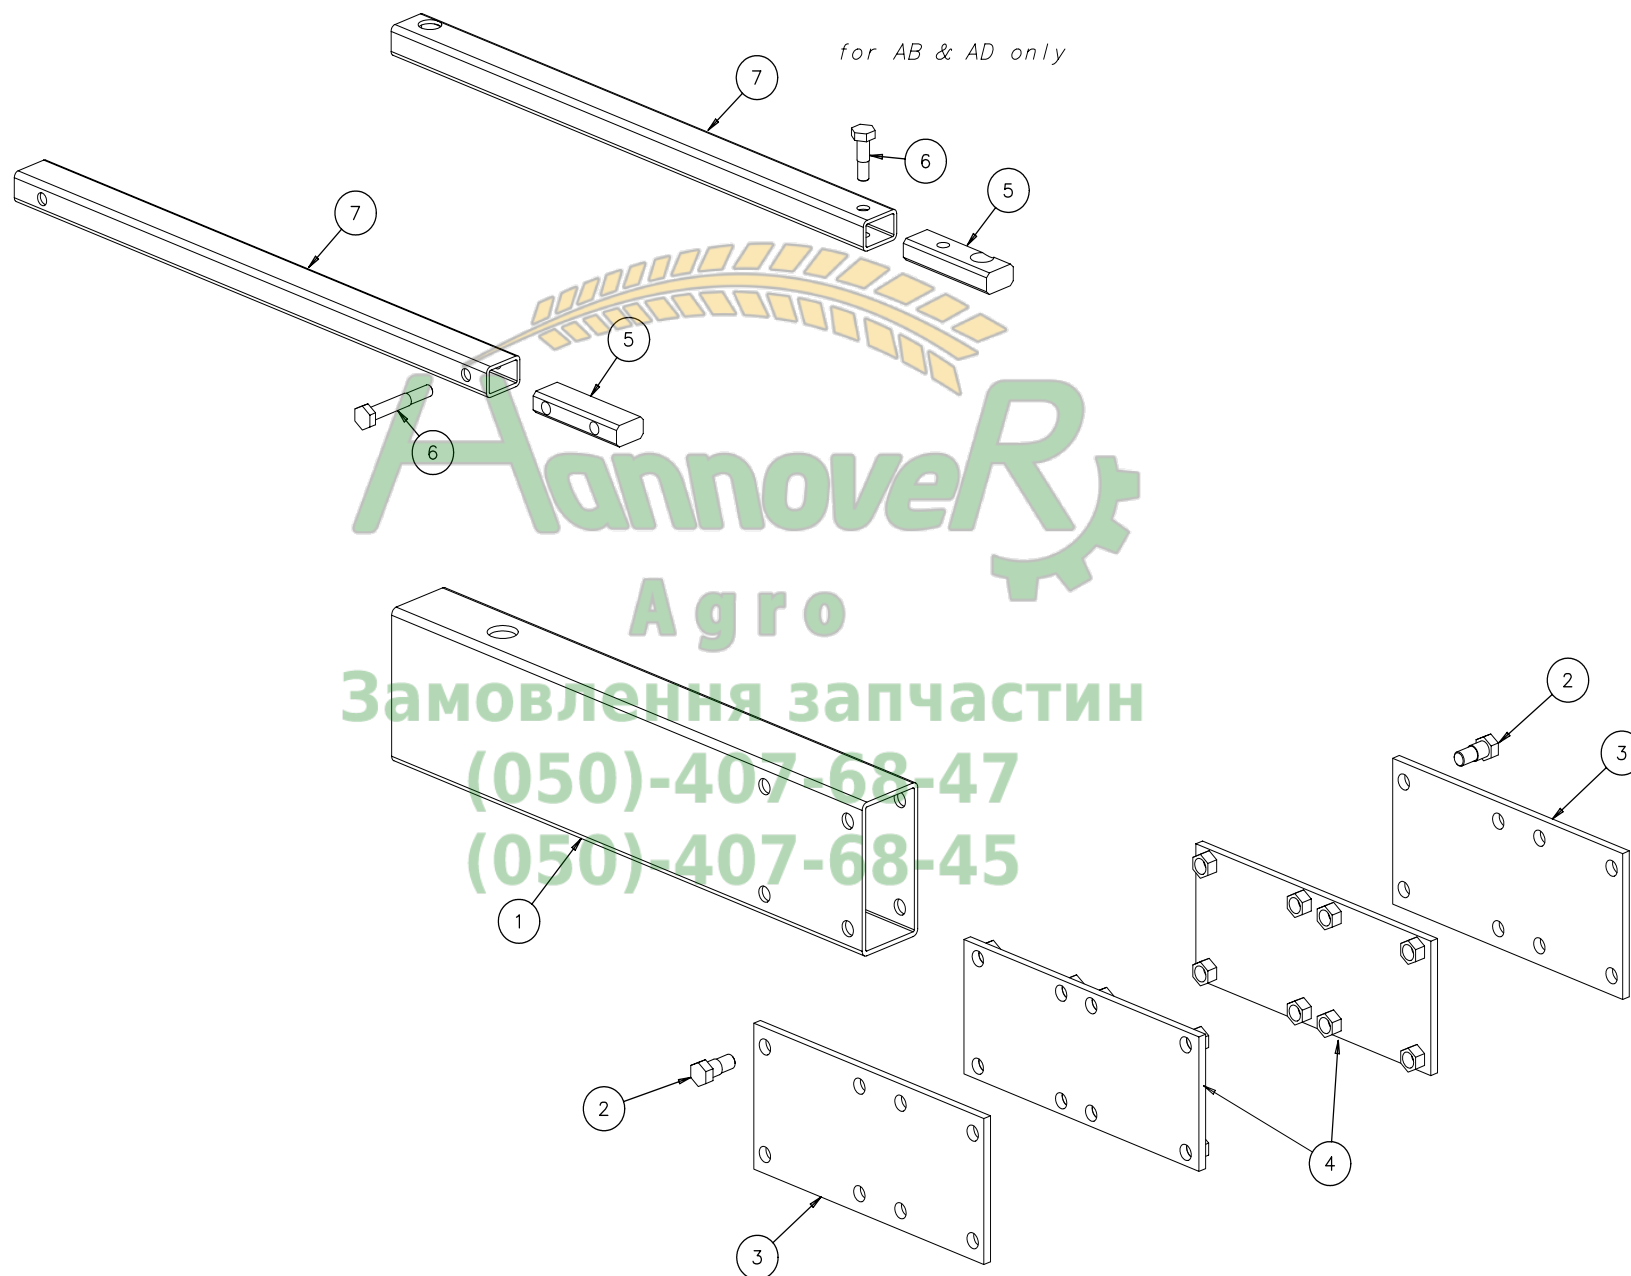


1	KK 07 10 36	Tube for -85
	KK 07 10 37	Tube for -100
	KK 07 20 34	Tube for -115 (LB only)
2	KK 03 28 50	Hex screw M20 x 50 mm w/nut
3	KK 07 10 45	Plate, outer
4	KK 07 10 47	Plate, inner
5	KK 07 11 58	Connecting piece
	KK 07 10 48	Connecting piece (for AB & AD only)
6	KK 03 27 02	Hex screw M16 x 110 mm w/nut
	KK 03 27 55	Hex screw M16 x 55 mm w/nut (for AB & AD only)
7	KK 07 11 72	Parallel rod for -85
	KK 07 10 64	Parallel rod (for AB & AD-85 only)
	KK 07 11 73	Parallel rod for -100
	KK 07 10 65	Parallel rod (for AB & AD-100 only)
	KK 07 20 35	Parallel rod for -115 (LB only)




Замовлення запчастин
(050)-407-68-47
(050)-407-68-45

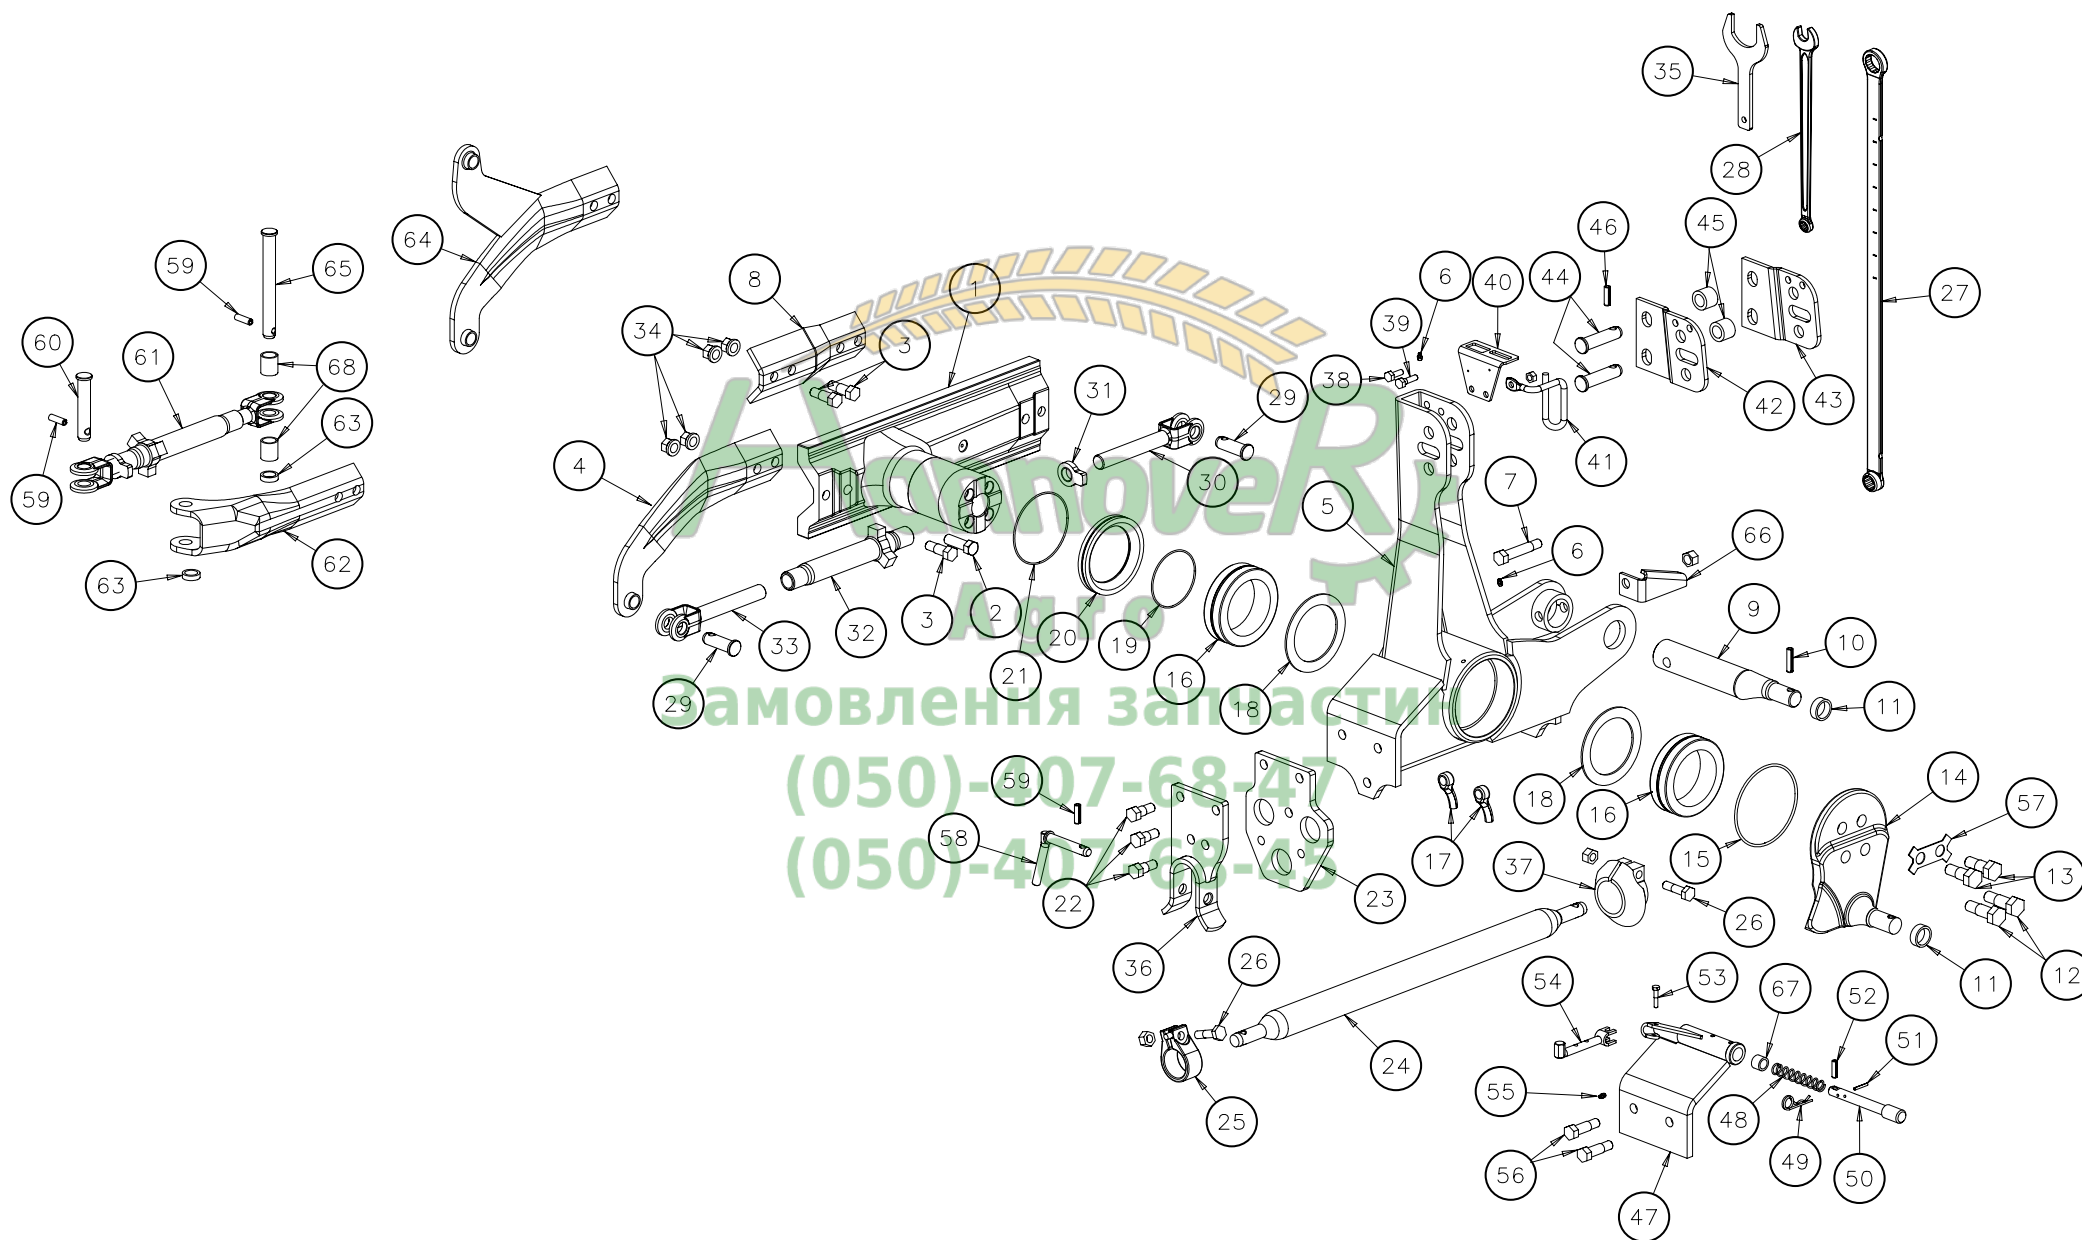

1	KK 07 19 30	Main shaft, H = 200 mm (Before 01.10.97)	29	KK 01 03 15	Bolt D25.3 x 60 mm	54	KK 07 45 76	Handle
	KK 07 24 21	Main shaft w/cross track H = 200 mm (From 01.10.97)		KK 01 03 18	Bolt D25.3 x 100 mm (for ES only)	55	KK 02 99 20	Grease nipple M8
2	KK 03 28 60	Hex screw M20 x 60 mm w/nut		KK 12 60 95	Bolt D25.3 x 212 mm (for LS only)	56	KK 03 28 65	Hex screw M20 x 65 mm
3	KK 03 28 55	Hex screw M20 x 55 mm w/nut	30	KK 35 11 39	Screw R	57	KK 07 25 26	Lock washer
4	KK 07 19 26	Cylinder bracket	31	KK 35 11 48	Nut	58	KK 01 02 88	Bolt D19 x 93 mm w/handle for D60
5	KK 07 19 00	Headstock mod. 160	32	KK 35 11 44	Tube		KK 01 02 91	Bolt D19 x 110 for D70
6	KK 02 99 20	Grease nipple	33	KK 35 11 40	Screw L	59	KK 01 10 20	Roll pin D12 x 40 mm (for EM, LM and LS)
7	KK 03 28 07	Hex screw M20 x 100 mm w/nut	34	KK 01 60 12	Flange nut	60	KK 01 03 19	Bolt w/head D25.3 x 120 mm (for EM, LM and LS)
8	KK 07 19 35	Bracket	35	KK 01 06 55	Spanner for hydraulic cylinder			
9	KK 07 19 24	Shaft	36	KK 07 25 36	Holder for quick coupling (From 01.01.96)	61	KK 36 11 16	Turnbuckle cpl. (520 - 720)
10	KK 01 10 21	Roll pin D12 x 50 mm		KK 07 25 37	Holder, extended for lower quick coupling (From 03.01.96)	62	KK 07 49 14	Cylinder bracket (for EM, LM and LS)
11	KK 07 19 25	Tube		KK 07 26 27	Holder for quick coupling D70 mm	63	KK 01 00 08	Wahser D35 x D26 x 10 mm for EM, LM and LS)
12	KK 03 09 70	Hex screw M24 x 70 mm		KK 07 26 32	Holder for lower quick coupling D70 mm	64	KK 07 59 15	Cylinder bracket (ES plough only)
13	KK 03 09 60	Hex screw M24 x 60 mm	37	KK 07 43 54	Collare D60 mm	65	KK 12 60 95	Bolt D25.3 x 212 mm (for EM, LM and LS)
14	KK 07 19 38	Plate w/notch for transport lock		KK 07 26 34	Collar for quick coupling D70 mm	66	KK 07 58 61	Bracket (From 01.03.99)
15	KK 01 18 95	O-ring	38	KK 03 26 30	Hex screw M12 x 30 mm w/nut	67	KK 01 09 58	Bushing
16	KK 01 05 66	Bearing	39	KK 03 26 40	Hex screw M12 x 40 mm w/nut	68	KK 01 00 42	Bushing (for EM, LM and LS)
17	KK 06 12 91	Threaded piece	40	KK 07 22 68	Spanner holder			
18	KK 01 29 79	Washer	41	KK 01 27 26	Hose holder	Not ill.	KK 01 12 52	Circlip
19	KK 01 18 90	O-ring	42	KK 07 19 17	Side plate R		KK 07 45 70	Lock for transport wheel, cpl.
20	KK 07 19 04	Ring	43	KK 07 19 18	Side plate L		KK 07 01 63	Turn-over device w/regular cross shaft cpl.
21	KK 01 18 91	O-ring		KK 07 22 93	Fixing plate cpl.		KK 07 01 64	Turn-over device w/pivotal cross shaft cpl.
22	KK 03 28 45	Hex screw M20 x 45 mm w/nut	44	KK 01 03 32	Bolt w/head		KK 07 01 65	Turn-over device w/quick coupling cpl.
23	KK 07 19 10	Bracket for cross shaft	45	KK 07 22 92	Bush		KK 07 41 73	Quick coupling cpl.
	KK 07 25 39	Bracket for D70 mm cross shaft	46	KK 01 07 00	Pin D12 (Before 01.08.97)		KK 07 41 84	Extended lower quick coupling
	KK 07 25 27	Bracket for cross shaft, extended		KK 01 10 20	Roll pin D12 x 40 mm (From 01.08.97)		KK 07 25 08	Cross shaft assembly w/eccentric adjustment cpl.
24	KK 06 43 19	Cross shaft cat. II, L = 825 mm		III. 47 - 59	Lock for transport wheel			
	KK 06 43 20	Cross shaft cat. II, L = 935 mm			From 07.01.93		KK 07 58 60	Bracket for electric valve (From 01.04.99)
	KK 06 43 21	Cross shaft cat. III, L = 965 mm	47	KK 07 45 71	Plate for locking			
	KK 06 43 23	Cross shaft cat. III, L = 860 mm		KK 07 45 80	Plate for locking, quick coupling (Before 01.01.96)			
	KK 07 43 95	Cross shaft D70 mm cat. III, L = 965 mm	48	KK 35 60 42	Spring			
	KK 07 43 96	Cross shaft D70 mm cat. III, L = 860 mm	49	KK 02 97 70	Pin D4			
25	KK 06 43 60	Collar D60 mm	50	KK 06 86 40	Pin for lock			
	KK 07 43 97	Collar D70 mm	51	KK 01 10 02	Roll pin D5 x 36 mm			
26	KK 03 27 60	Hex screw M16 x 60 mm w/nut	52	KK 01 10 09	Roll pin D10 x 36 mm			
27	KK 01 06 50	Spanner 27 - 36	53	KK 03 24 40	Hex screw M8 x 40 mm			
28	KK 01 06 06	Spanner 19 - 27						

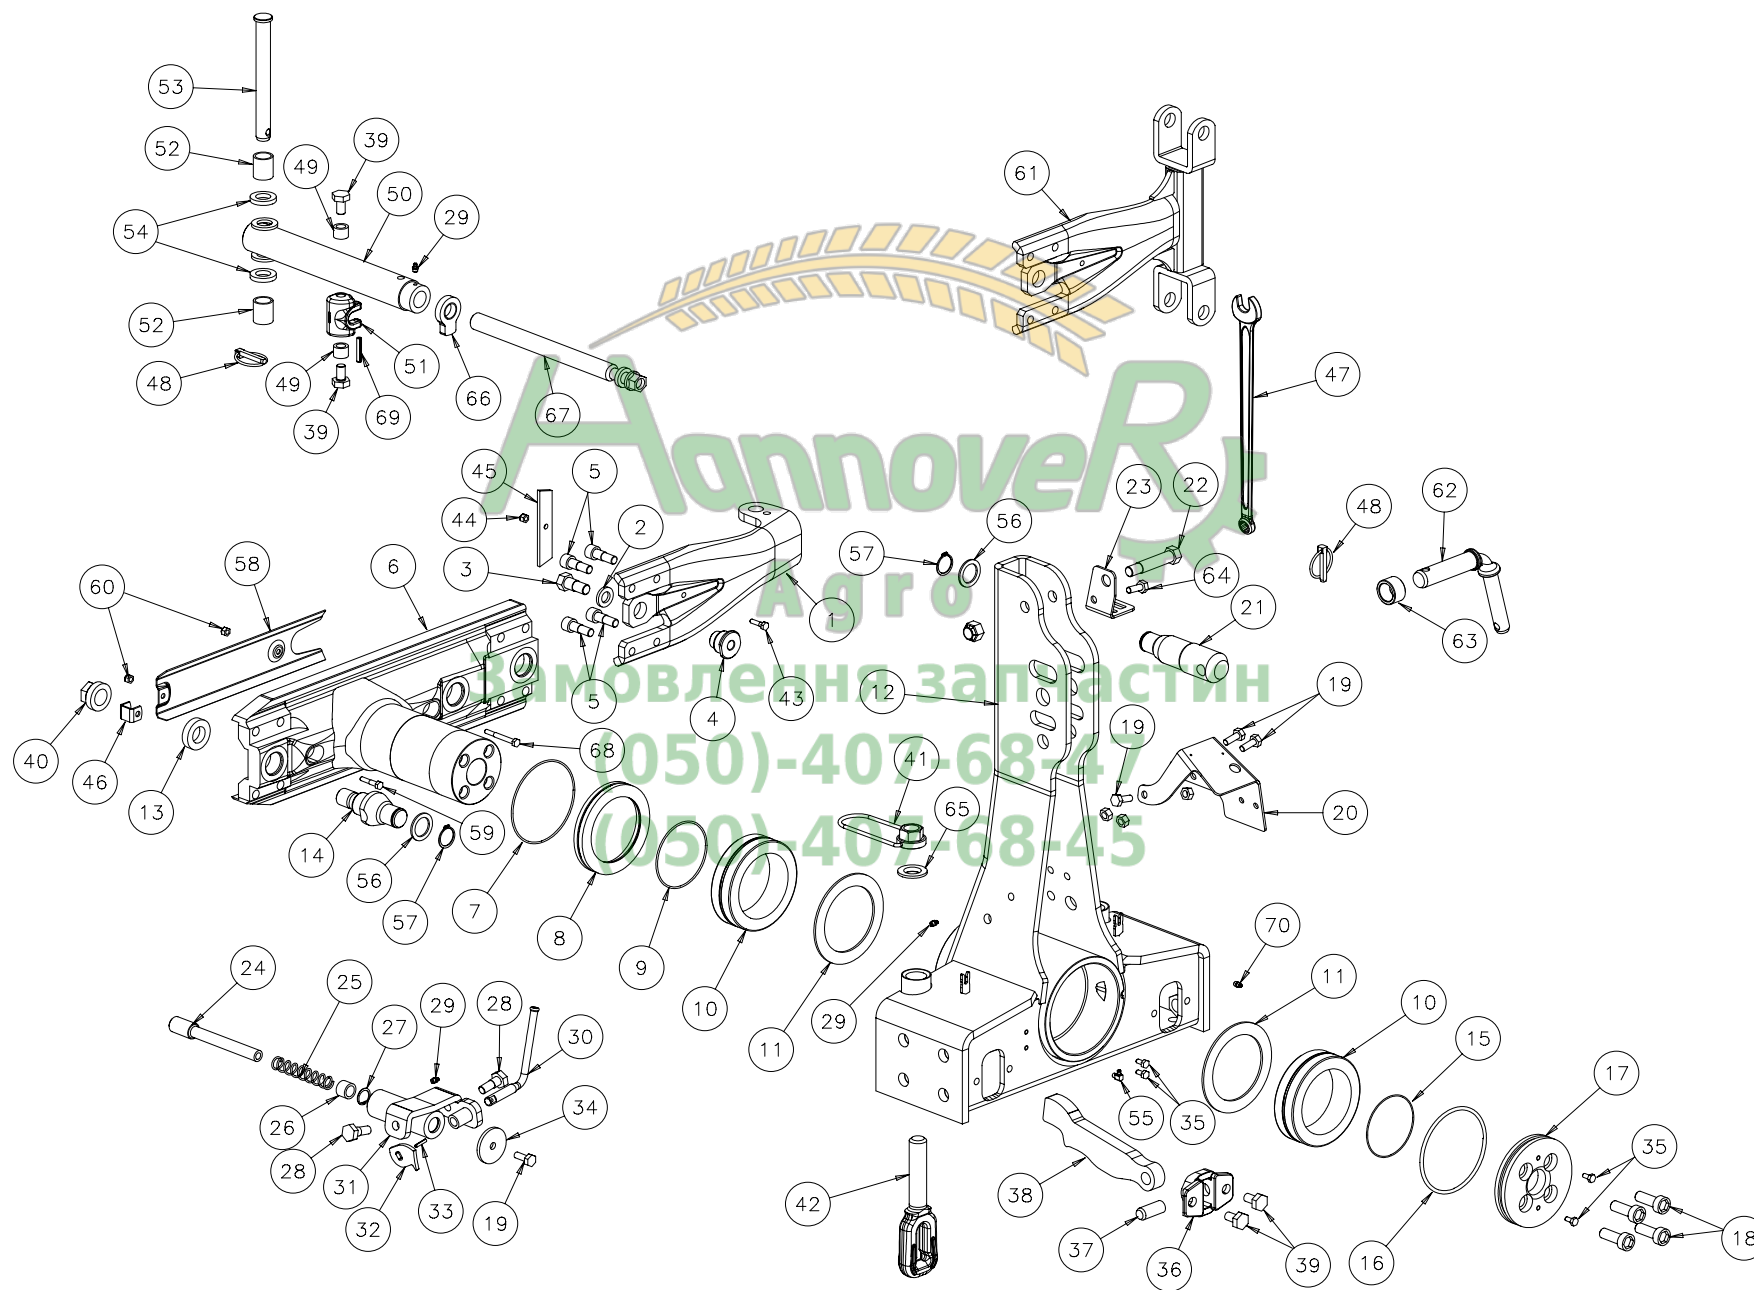


1	KK 08 15 29	Cylinder bracket	36	KK 08 14 57	Bracket	59	KK 03 24 70	Hex screw M8 x 70 mm (Before 01.02.01)
2	KK 01 29 70	Washer	37	KK 06 70 31	Bolt		KK 03 24 40	Hex screw M8 x 40 mm (From 01.02.01)
3	KK 03 28 30	Hex screw M20 x 30 mm	38	KK 08 15 31	Lever arm			
4	KK 08 15 55	Bolt	39	KK 03 27 35	Hex screw M16 x 35 mm	60	KK 01 60 05	Lock nut M8
	KK 08 15 56	Bolt (for headstock slide R, turning with bodies over the frame)	40	KK 01 60 22	Flange nut M30	61	KK 08 15 17	Cylinder bracket (when using 2 cylinders) (From 01.09.00)
5	KK 03 20 50	Unbraco screw M16 x 45 mm	41	KK 08 14 79	Nut w/spring clamp	62	KK 01 02 93	Top link
6	KK 08 15 27	Main shaft	42	KK 08 14 58	Adjustable screw	63	KK 01 01 58	Bushing
7	KK 01 18 91	O-ring D150	43	KK 03 24 40	Hex screw M8 x 40 mm	64	KK 03 36 30	Hex screw M12 x 30 mm w/nut for extra hole (From 01.01.02)
8	KK 07 19 04	Gasket ring	44	KK 01 60 05	Lock nut M8	65	KK 08 14 50	Washer
9	KK 01 18 90	O-ring D120	45	KK 08 15 65	Bracket for hoses	66	KK 08 14 78	Stop for adjustable screw (Before 01.07.01)
10	KK 01 05 66	Bearing	46	KK 08 15 47	Bracket (From 01.02.01)		KK 35 11 48	Stop for adjustable screw (From 01.07.01)
11	KK 01 29 79	Washer	47	KK 01 06 06	Spanner 19 - 27, L = 450 mm	67	KK 08 14 71	Adjustable screw (Before 01.07.01)
12	KK 08 15 20	Headstock mod. 200	48	KK 01 07 00	Ring pin D12		KK 08 15 88	Adjustable screw (From 01.07.01)
13	KK 01 30 10	Washer	49	KK 07 43 19	Bushing	68	KK 03 24 70	Hex screw M8 x 70 mm (From 01.02.01)
14	KK 08 15 32	Axle	50	KK 08 14 73	Bushing for adjustable screw (Before 01.07.01)	69	KK 01 10 16	Roll pin D8 x 45 mm (From 01.12.01)
15	KK 01 30 64	O-ring D112		KK 08 15 87	Bushing for adjustable screw (From 01.07.01)	70	KK 02 99 20	Grease nipple (From 01.07.01)
16	KK 01 30 62	O-ring D153		KK 08 15 82	Bracket for adjustable screw (Before 01.07.01)			
17	KK 08 15 36	Cover	51	KK 08 15 45	Bracket for adjustable screw (From 01.12.01)			
18	KK 03 20 51	Unbraco screw M20 x 50 mm		KK 01 00 42	Bushing (for EM/LM and ES/LS)	Not ill.	KK 08 15 43	Transport lock cpl.
19	KK 03 36 30	Hex screw M12 x 30 mm	52	KK 01 01 52	Bushing (for EG, LB, LD and VX)		KK 08 14 70	Adjustable screw cpl. (Before 01.07.01)
20	KK 08 15 57	Bracket and cover for turn-over valve		KK 01 01 53	Bushing (for ED and LD-HD)		KK 08 15 90	Adjustable screw cpl. (From 01.07.01)
21	KK 08 15 30	Axle for cylinder bracket	53	KK 12 60 95	Bolt w/head D25 x 212 mm (for ES/LS and EM/LM)			
22	KK 03 28 07	Hex screw M20 x 100 w/lock nut		KK 01 03 37	Bolt w/head D25 x 180 mm (for ED, EG, LB and LD-HD)			
23	KK 08 15 33	Key holder		KK 01 03 38	Bolt w/head D25 x 190 mm (for LD and VX)			
24	KK 08 15 70	Pin for lock						
25	KK 35 60 42	Spring	54	KK 01 29 36	Washer (for mechanical adjustment only) (Before 01.07.01)			
26	KK 01 09 58	Bushing, bronze	55	KK 02 99 22	Grease nipple (Before 01.07.01)			
27	KK 01 12 52	Locking plate	56	KK 01 29 78	Washer			
28	KK 03 37 41	Hex screw M16 x 40 mm w/nut	57	KK 01 12 62	Lock ring			
29	KK 02 99 20	Grease nipple	58	KK 08 15 67	Cover for hoses (Before 01.01.01)			
30	KK 08 15 74	Bolt (Before 01.01.01)		KK 08 15 39	Cover for hoses (From 01.01.01)			
	KK 08 15 69	Handle (From 01.01.01)						
31	KK 08 15 40	Lock linkage						
32	KK 08 15 71	Eccentric for lock linkage						
33	KK 01 10 01	Pin						
34	KK 08 15 72	Washer						
35	KK 03 34 16	Hex screw M8 x 16 mm w/nut						

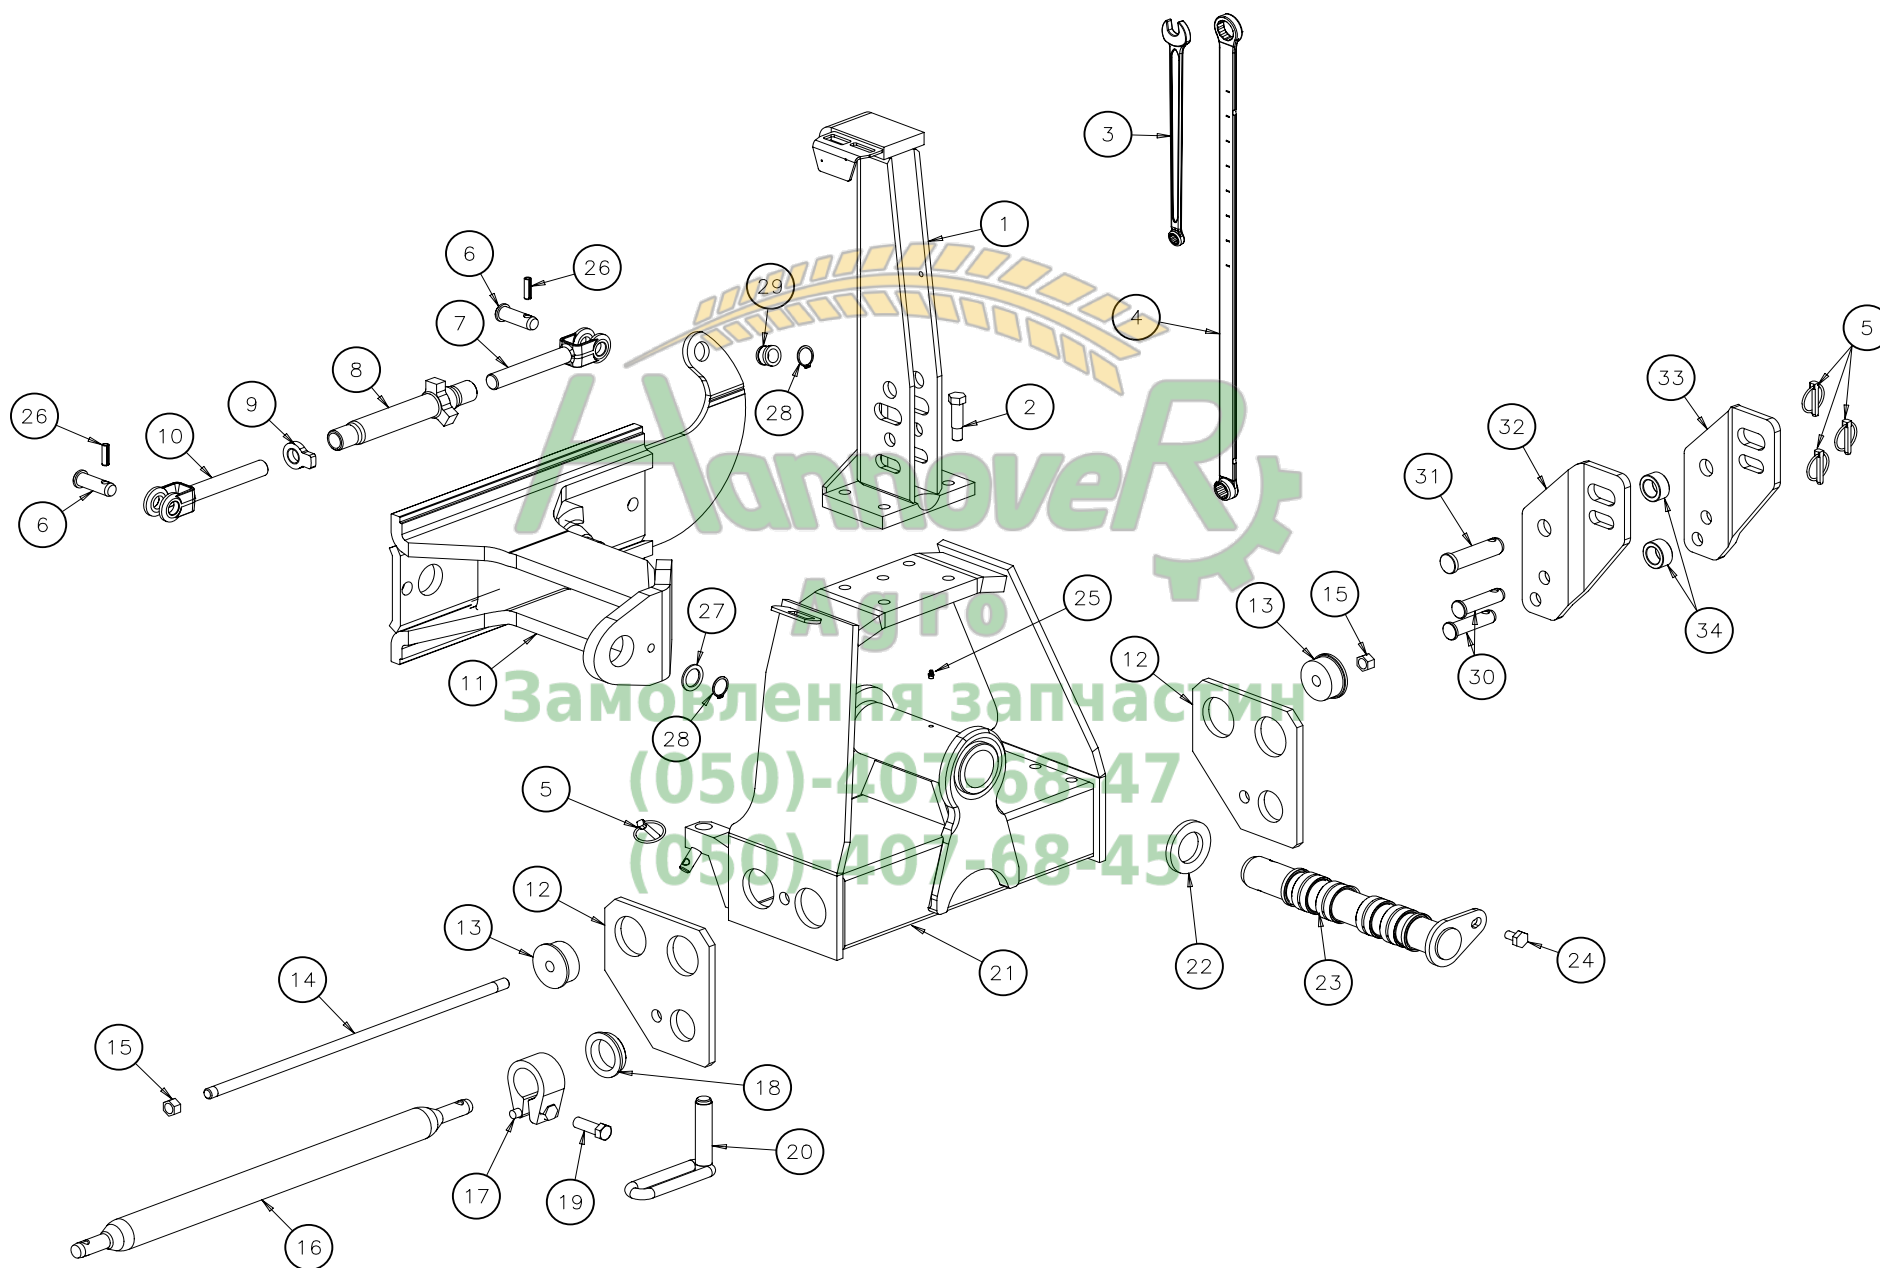


1	KK 06 21 53	Headstock	33	KK 07 28 11	Extended top link bracket, R (From 07.07.99)
2	KK 03 28 75	Hex screw M20 x 75 mm w/nut	34	KK 07 28 13	Bushing D51 x D33 x 24 mm (From 07.07.99)
3	KK 01 06 06	Spanner 19-27			
4	KK 01 06 50	Spanner 27-36	Not ill.	KK 06 02 39	Lock for transport wheel cpl.
5	KK 01 07 00	Pin D12		KK 36 11 16	Turnbuckle cpl. (520 - 720)
6	KK 01 03 15	Bolt D25.3 x 60 mm		KK 07 04 58	Lower cross shaft, kit cpl. (ill. no. 12-15)
7	KK 35 11 40	Screw L			
8	KK 35 11 44	Tube			
9	KK 35 11 48	Nut			
10	KK 35 11 39	Screw R			
11	KK 07 18 80	Main shaft (For turning w/bodies under the main frame)			
	KK 07 26 36	Main shaft (For turning w/bodies under the main frame, for EM/LM only)			
	KK 07 25 28	Main shaft (For turning w/bodies over the main frame)			
	KK 07 14 96	Main shaft for wide wheel setting (For turning w/bodies under the main frame)			
12	KK 07 43 40	Bracket for lower cross shaft			
13	KK 07 43 41	Bushing			
14	KK 07 43 42	Bolt			
15	KK 01 58 30	Nut			
16	KK 06 43 19	Cross shaft cat. II L=825 mm			
	KK 06 43 20	Cross shaft cat. II L=935 mm			
	KK 06 43 23	Cross shaft cat. III L=860 mm			
	KK 06 43 21	Cross shaft cat. III L=965 mm			
17	KK 06 43 60	Collar, D60			
18	KK 06 43 17	Bushing			
19	KK 03 28 60	Hex screw M20 x 60 mm w/nut			
20	KK 07 14 83	Screw adj.			
21	KK 07 14 80	Turn-over device			
22	KK 07 16 52	Ring			
23	KK 06 02 52	Pivot pin w/bearing and packing			
24	KK 03 27 25	Hex screw M16 x 27 mm			
25	KK 02 99 20	Grease nipple			
26	KK 01 10 20	Roll pin D12 x 40 mm			
27	KK 01 29 78	Washer			
28	KK 01 12 62	Circlip			
29	KK 07 17 65	Bushing			
30	KK 01 03 32	Bolt w/head D25.3 x 85 mm (From 07.07.99)			
31	KK 01 03 30	Bolt w/head D31.75 x 103 mm (From 07.07.99)			
32	KK 07 28 12	Extended top link bracket, L (From 07.07.99)			




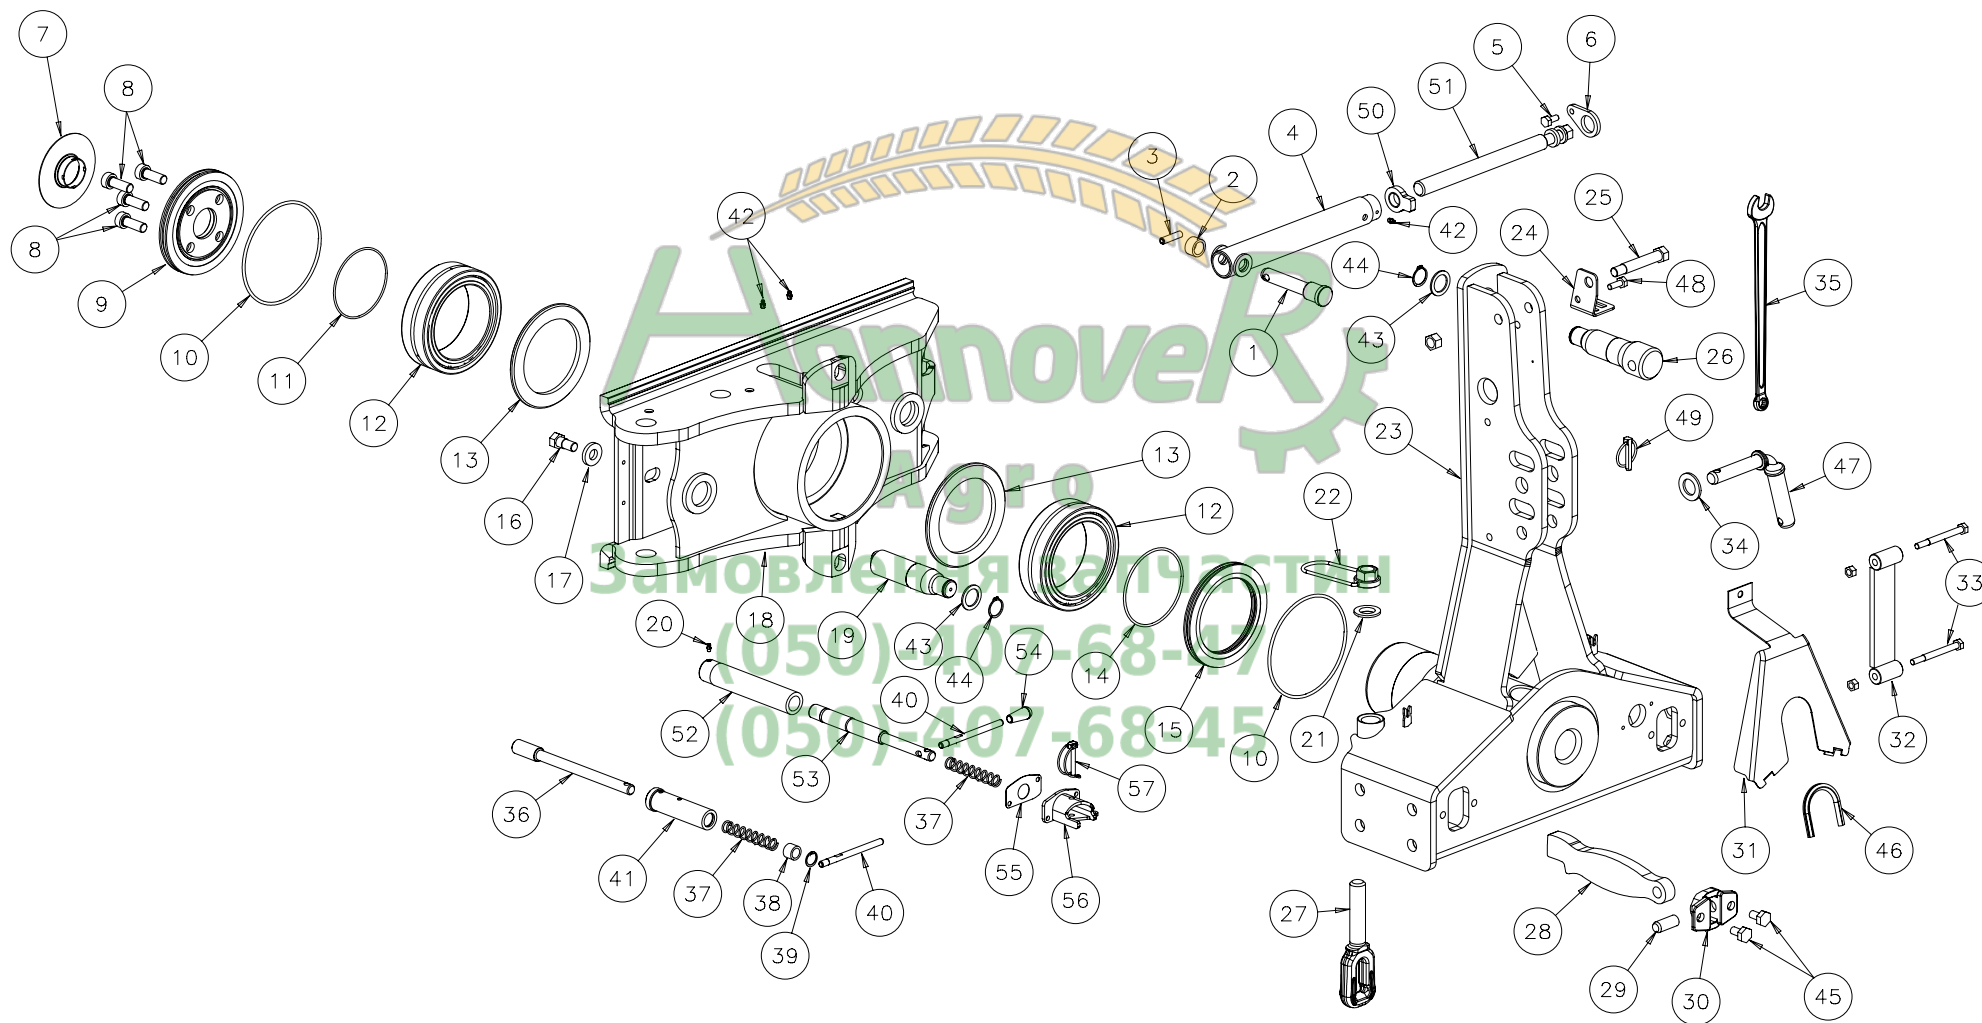


1	KK 08 14 65	Bolt w/head D25.3 x 138 mmm	37	KK 35 60 42	Spring
2	KK 01 01 54	Bushing D35 x D25.7 x 32 mm	38	KK 01 09 58	Bushing, bronze (Before 15.08.01)
3	KK 01 10 21	Roll pin D12 x 50 mm	39	KK 01 12 52	Circlip (Before 15.08.01)
4	KK 08 14 73	Bushing for adjustable screw (Before 01.07.01)	40	KK 07 48 74	Handle
	KK 08 15 87	Bushing for adjustable screw (From 01.07.01)	41	KK 07 45 73	Bushing (Before 15.08.01)
5	KK 03 36 25	Hex screw M12 x 25 mm	42	KK 02 99 20	Grease nipple
6	KK 08 14 66	Bracket	43	KK 01 29 78	Washer
7	KK 08 14 37	Hose guiding	44	KK 01 12 62	Circlip
8	KK 03 20 51	Umbraco screw M20 x 50 mm	45	KK 03 27 25	Hex screw M16 x 27 mm w/nut
9	KK 08 14 31	Cover	46	KK 01 37 50	Edge list for cover
10	KK 01 03 73	O-ring D194.2 x 5.7 mm	47	KK 01 02 93	Top link bolt
11	KK 01 03 71	O-ring D136.12 x 3.53 mm	48	KK 03 36 30	Hex screw M12 x 30 mm w/nut for extra hole (From 01.01.02)
12	KK 01 05 88	Bearing	49	KK 01 07 00	Pin D12
13	KK 08 14 32	Washer	50	KK 08 14 78	Stop for adjustable screw (Before 01.07.01)
14	KK 01 03 72	O-ring D150 x 4.5 mm		KK 35 11 48	Stop for adjustable screw (From 01.07.01)
15	KK 08 14 33	Gasket ring	51	KK 08 14 71	Adjustable screw (Before 01.07.01)
16	KK 03 28 40	Hex screw M20 x 40 mm		KK 08 15 88	Adjustable screw (From 01.07.01)
17	KK 01 29 68	Washer	52	KK 08 14 95	Bushing for transport lock (From 15.08.01)
18	KK 08 14 20	Main shaft (Before 15.05.03)	53	KK 08 14 99	Locking pin (From 15.08.01)
	KK 08 29 20	Main shaft (From 15.05.03)	54	KK 01 11 22	Plastic cap (From 15.08.01)
19	KK 08 14 30	Axle	55	KK 08 20 46	Plate for transport lock (From 15.08.01)
20	KK 02 99 18	Grease nipple	56	KK 08 14 96	Guide lock (From 15.08.01)
21	KK 08 14 50	Washer	57	KK 01 37 10	Tube pin D8 x 60 mm (From 15.08.01)
22	KK 08 14 79	Nut w/spring clamp			
23	KK 08 14 10	Headstock mod. 300	Not ill.	KK 35 29 22	Manual front furrow adjustment cpl. (pos. 1 - 6)
24	KK 08 15 33	Key holder		KK 08 20 09	Transport lock cpl. (Before 15.08.01)
25	KK 03 28 05	Hex screw M20 x 120 mm w/nut		KK 08 14 70	Adjustable screw cpl. (pos. 4, 50 and 51) (Before 01.07.01)
26	KK 08 14 34	Axle for cylinder		KK 08 15 90	Adjustable screw cpl. (pos. 4, 50 and 51) (From 01.07.01)
27	KK 08 14 58	Adjusting screw			
28	KK 08 14 59	Lever arm			
29	KK 06 70 31	Bolt			
30	KK 08 14 57	Bracket			
31	KK 08 14 80	Cover			
32	KK 08 14 67	Hose protector			
33	KK 03 26 02	Hex screw M12 x 110 mm w/nut			
34	KK 01 29 42	Washer			
35	KK 01 06 06	Spanner 19 - 27			
36	KK 08 14 55	Pin for lock (Before 15.08.01)			

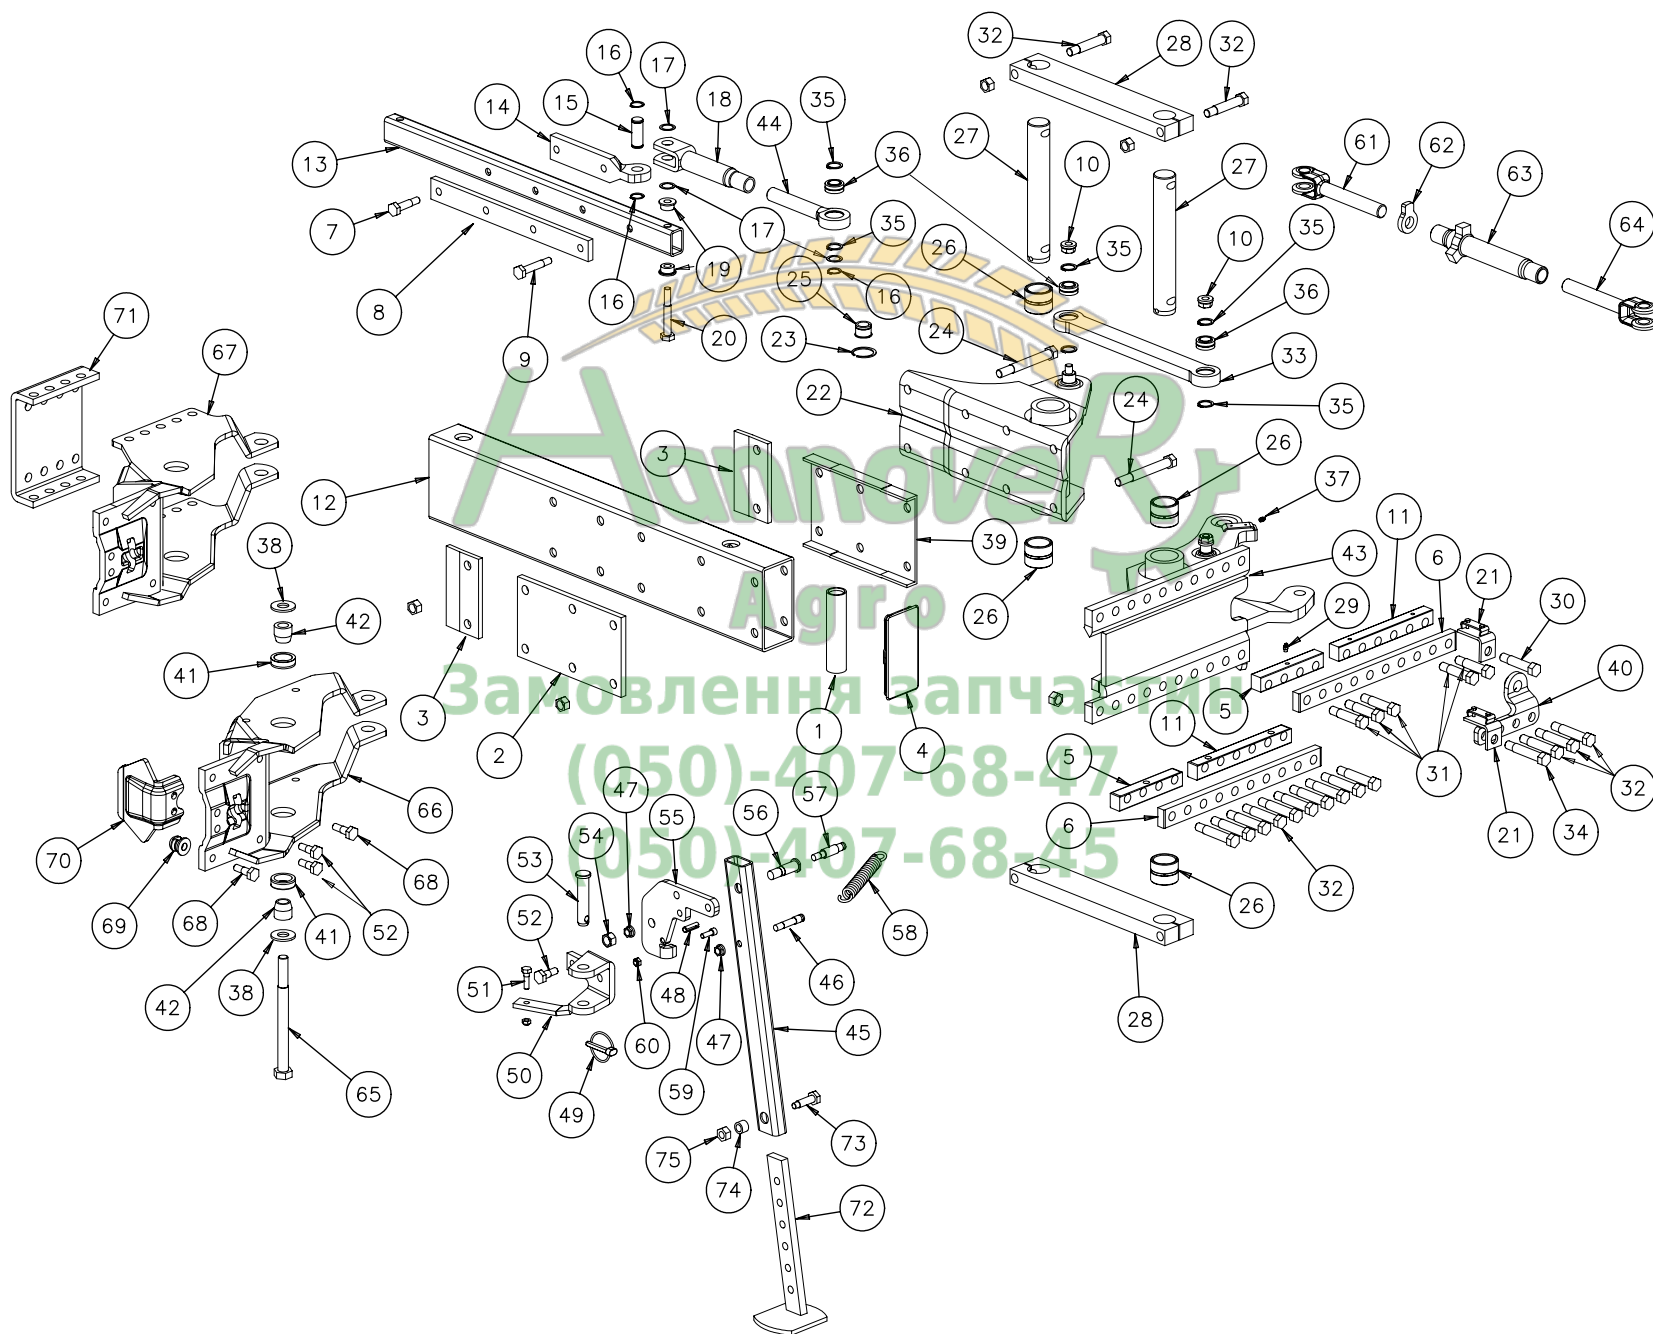


1	KK 07 14 17	Tube 44.5 x 5 x 186 mm	26	KK 01 16 82	Bushing	58	KK 07 17 11	Spring
2	KK 07 21 68	Plate	27	KK 07 21 71	Pivot pin D50 x 328 mm	59	KK 03 50 25	Cylinder screw M10 x 30 mm (From 01.05.99)
3	KK 07 21 67	Plate	28	KK 07 21 70	Arm	60	KK 01 60 06	Nut M10 (From 01.05.99)
4	KK 01 09 10	Cover for tube 100 x 200 mm	29	KK 02 99 22	Grease nipple (Before 01.04.99)	61	KK 35 11 39	Screw R
5	KK 07 26 17	Slide rail, inner		KK 02 99 27	Grease nipple (From 01.04.99)	62	KK 35 11 48	Nut
6	KK 07 19 42	Slide rail, outer	30	KK 03 28 95	Hex screw M20 x 95 mm w/nut	63	KK 35 11 44	Tube
7	KK 03 27 70	Hex screw M16 x 70 mm w/nut	31	KK 03 28 90	Hex screw M20 x 90 mm w/nut	64	KK 35 11 40	Screw L
8	KK 07 21 69	Plate	32	KK 03 28 24	Hex screw M20 x 105 mm w/nut		KK 36 11 16	Turnbuckle cpl. (520 - 720)
9	KK 03 27 90	Hex screw M16 x 90 mm w/nut	33	KK 07 02 34	Steering arm w/bearings Ø25	65	KK 03 29 23	Hex screw M24 x 270 mm w/nut
10	KK 01 60 58	Flange nut	34	KK 03 28 03	Hex screw M20 x 110 mm w/nut	66	KK 07 18 60	Beam support w/bushing and balls
11	KK 07 26 18	Slide rail, inner	35	KK 01 12 74	Circlip	67	KK 07 47 61	Beam support w/bushing and balls, rear (Before 18.06.01)
12	KK 07 20 00	Tube EG-85 (2 furrows)	36	KK 01 05 70	Bearing		KK 07 20 80	Beam support w/bushing and balls, rear (From 18.06.01)
	KK 07 20 01	Tube EG-85 (3 furrows)	37	KK 02 99 20	Grease nipple	68	KK 03 27 52	Hex screw M16 x 50 mm
	KK 07 20 02	Tube EG-85 (4 furrows)	38	KK 01 29 40	Washer	69	KK 07 12 56	2 balls w/bolt M16 x 50 mm and locktite
	KK 07 20 06	Tube EG-100 (2 furrows)	39	KK 07 21 66	Plate	70	KK 06 16 37	Plate
	KK 07 20 07	Tube EG-100 (3 furrows)	40	KK 07 15 69	Fix for cylinder	71	KK 08 13 69	Fixing bracket (From 18.06.01)
	KK 07 20 08	Tube EG-100 (4 furrows)	41	KK 01 16 94	Bushing	72	KK 08 16 22	Adjustable machine stand (From 01.08.01)
13	KK 07 20 03	Parallel rod EG85 (2 furrows)	42	KK 07 14 03	Tube w/cone	73	KK 03 27 60	Hex screw M16 x 60 mm (From 01.08.01)
	KK 07 20 04	Parallel rod EG85 (3 furrows)	43	KK 07 02 46	Front piece w/bushing EG85	74	KK 07 43 19	Bushing (From 01.08.01)
	KK 07 20 05	Parallel rod EG85 (4 furrows)		KK 07 02 47	Front piece w/bushing EG100	75	KK 01 58 25	Nut M16 (From 01.08.01)
	KK 07 20 09	Parallel rod EG100 (2 furrows)	44	KK 07 21 74	Screw			
	KK 07 20 10	Parallel rod EG100 (3 furrows)	45	KK 07 17 15	Machine stand for beam H = 700 (Before 01.08.01)	Not ill.	KK 08 01 87	Machine stand cpl. (From 01.08.01)
	KK 07 20 11	Parallel rod EG100 (4 furrows)		KK 07 15 24	Machine stand for beam H = 800 (Before 01.08.01)			
14	KK 07 21 58	Fix for parallel rod		KK 08 16 24	Tube for machine stand (From 01.08.01)			
15	KK 07 18 29	Axle D25 x 63 mm	46	KK 07 17 14	Bolt			
16	KK 01 12 77	Circlip	47	KK 01 60 13	Nut M14			
17	KK 01 29 80	Washer	48	KK 01 10 18	Roll pin D10 x 40 mm			
18	KK 07 21 73	Tube for turnbuckle EG/LB-85	49	KK 01 07 00	Pin			
	KK 07 18 36	Tube for turnbuckle EG/LB-100	50	KK 07 21 75	Fix for machine stand			
	KK 07 08 06	Turnbuckle EG/LB-85 cpl.	51	KK 03 26 40	Hex screw M12 x 40 mm w/nut			
	KK 07 08 49	Turnbuckle EG/LB-100 cpl.	52	KK 03 27 45	Hex screw M16 x 45 mm w/nut			
19	KK 07 16 64	Bushing	53	KK 01 03 18	Bolt 25.3 x 100 mm			
20	KK 03 27 02	Hex screw M16 x 120 mm w/nut	54	KK 01 58 35	Nut M20			
21	KK 06 19 70	Fix for hose (3 hoses)	55	KK 07 17 10	Plate			
22	KK 07 02 33	Main support w/bushing	56	KK 07 17 12	Bolt			
23	KK 01 12 61	Circlip	57	KK 07 17 13	Bolt			
24	KK 03 28 08	Hex screw M20 x 160 mm w/nut						
25	KK 07 17 68	Tube						

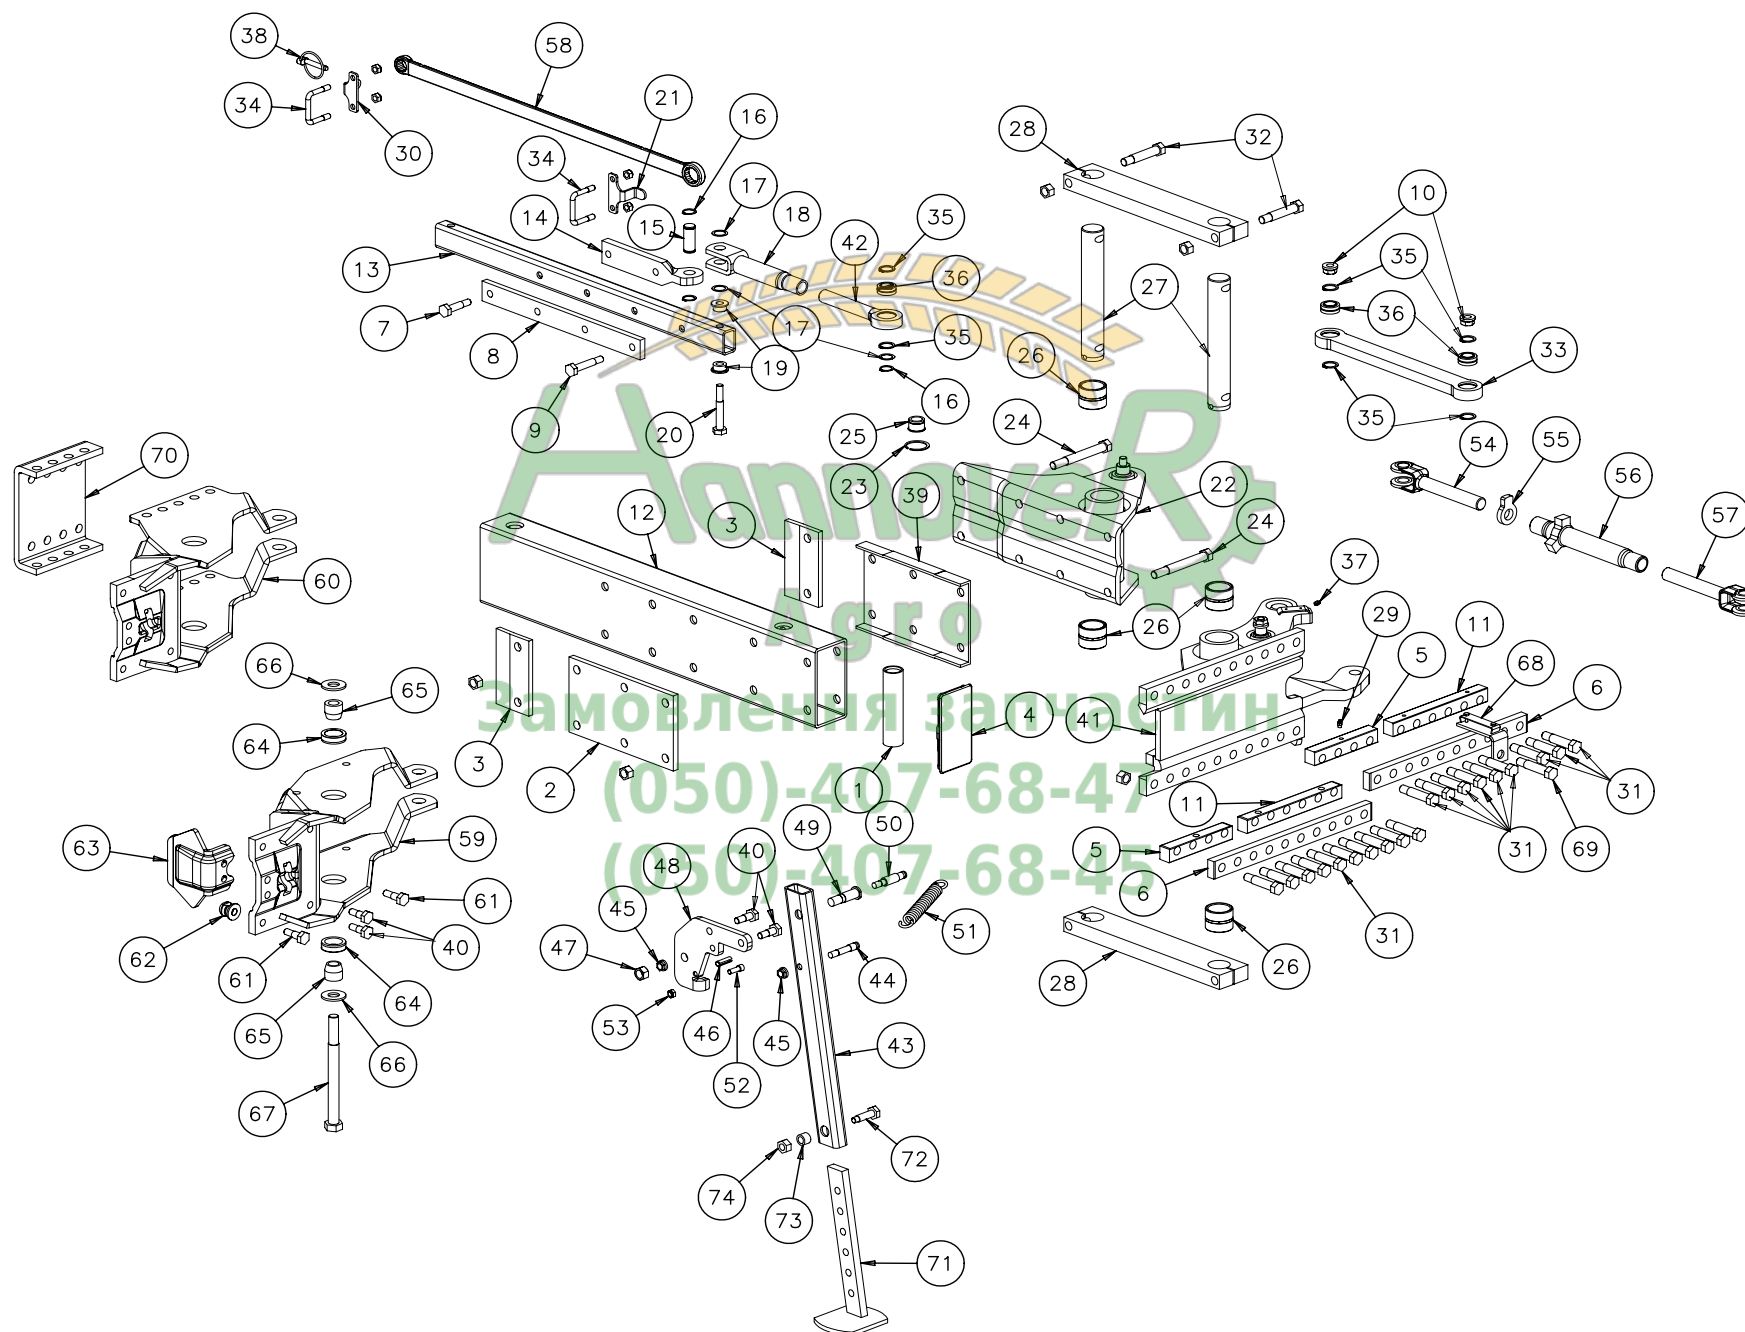


1	KK 07 14 17	Tube 44.5 x 5 x 186 mm	26	KK 01 16 82	Bushing	58	KK 01 06 50	Spanner
2	KK 07 21 68	Plate	27	KK 07 21 71	Pivot pin D50 x 328 mm	59	KK 07 18 60	Beam support w/bushing and balls
3	KK 07 21 67	Plate	28	KK 07 21 70	Arm	60	KK 07 47 61	Beam support w/bushing and balls (Before 18.06.01)
4	KK 01 09 10	Cover for tube 100 x 200 mm	29	KK 02 99 27	Grease nipple		KK 07 20 80	Beam support w/bushing and balls, (From 18.06.01)
5	KK 07 26 17	Slide rail, inner	30	KK 08 15 78	Spanner holder w/lock hole			
6	KK 07 19 42	Slide rail, outer	31	KK 03 28 90	Hex screw M20 x 90 mm w/nut	61	KK 03 27 52	Hex screw M16 x 50 mm (12.9)
7	KK 03 27 70	Hex screw M16 x 70 mm w/nut	32	KK 03 28 24	Hex screw M20 x 105 mm w/nut	62	KK 07 12 56	2 balls w/bolt M16 x 50 mm and locktite
8	KK 07 21 69	Plate	33	KK 07 02 34	Steering arm w/bearings Ø25	63	KK 06 16 37	Plate
9	KK 03 27 90	Hex screw M16 x 90 mm w/nut		KK 07 21 98	Steering arm w/bearings Ø30	64	KK 01 16 94	Bushing
10	KK 01 60 58	Flange nut	34	KK 08 15 49	U-bolt M12 w/lock nut	65	KK 07 14 03	Tube w/cone
11	KK 07 26 18	Slide rail, inner	35	KK 01 12 74	Circlip	66	KK 01 29 40	Washer
12	KK 07 20 00	Tube EG-85 (2 furrows)	36	KK 01 05 70	Bearing	67	KK 03 29 23	Hex screw M24 x 270 mm w/nut
	KK 07 20 01	Tube EG-85 (3 furrows)	37	KK 02 99 20	Grease nipple	68	KK 06 19 73	Fix for hose (6 hoses)
	KK 07 20 02	Tube EG-85 (4 furrows)	38	KK 01 07 00	Pin D12	69	KK 03 28 95	Hex screw M20 x 95 mm w/nut
	KK 07 20 06	Tube EG-100 (2 furrows)	39	KK 07 21 66	Plate	70	KK 08 13 69	Fixing bracket (From 18.06.01)
	KK 07 20 07	Tube EG-100 (3 furrows)	40	KK 03 27 45	Hex screw M16 x 45 mm w/nut	71	KK 08 16 22	Adjustable machine stand (From 01.08.01)
	KK 07 20 08	Tube EG-100 (4 furrows)	41	KK 08 16 15	Front piece w/bushing EG85			
13	KK 07 20 03	Parallel rod EG85 (2 furrows)		KK 08 16 16	Front piece w/bushing EG100	72	KK 03 27 60	Hex screw M16 x 60 mm (From 01.08.01)
	KK 07 20 04	Parallel rod EG85 (3 furrows)	42	KK 07 21 74	Screw	73	KK 07 43 19	Bushing (From 01.08.01)
	KK 07 20 05	Parallel rod EG85 (4 furrows)	43	KK 08 16 38	Machine stand for beam H = 650 (Before 01.08.01)	74	KK 01 58 25	Nut M16 (From 01.08.01)
	KK 07 20 09	Parallel rod EG100 (2 furrows)		KK 08 16 24	Tube for machine stand (From 01.08.01)	Not ill.	KK 08 01 87	Machine stand cpl. (From 01.08.01)
	KK 07 20 10	Parallel rod EG100 (3 furrows)	44	KK 07 17 14	Bolt			
	KK 07 20 11	Parallel rod EG100 (4 furrows)	45	KK 01 60 13	Nut M14			
14	KK 07 21 58	Fix for parallel rod	46	KK 01 10 18	Roll pin D10 x 40 mm			
15	KK 07 18 29	Axle D25 x 63 mm	47	KK 01 58 35	Nut M20			
16	KK 01 12 77	Circlip	48	KK 07 17 10	Plate			
17	KK 01 29 80	Washer	49	KK 07 17 12	Bolt			
18	KK 07 21 73	Tube for turnbuckle EG/LB-85	50	KK 07 17 13	Bolt			
	KK 07 18 36	Tube for turnbuckle EG/LB-100	51	KK 07 17 11	Spring			
	KK 07 08 06	Turnbuckle EG/LB-85 cpl.	52	KK 03 50 25	Cylinder screw M10 x 30 mm			
	KK 07 08 49	Turnbuckle EG/LB-100 cpl.	53	KK 01 60 06	Nut M10			
19	KK 07 16 64	Bushing	54	KK 35 11 39	Screw R			
20	KK 03 27 02	Hex screw M16 x 120 mm w/nut	55	KK 35 11 48	Nut			
21	KK 08 15 79	Spanner holder without lock hole	56	KK 35 11 44	Tube			
22	KK 07 02 33	Main support w/bushing	57	KK 35 11 40	Screw L			
23	KK 01 12 61	Circlip		KK 36 11 16	Turnbuckle cpl. (520 - 720)			
24	KK 03 28 08	Hex screw M20 x 160 mm w/nut						
25	KK 07 17 68	Tube						

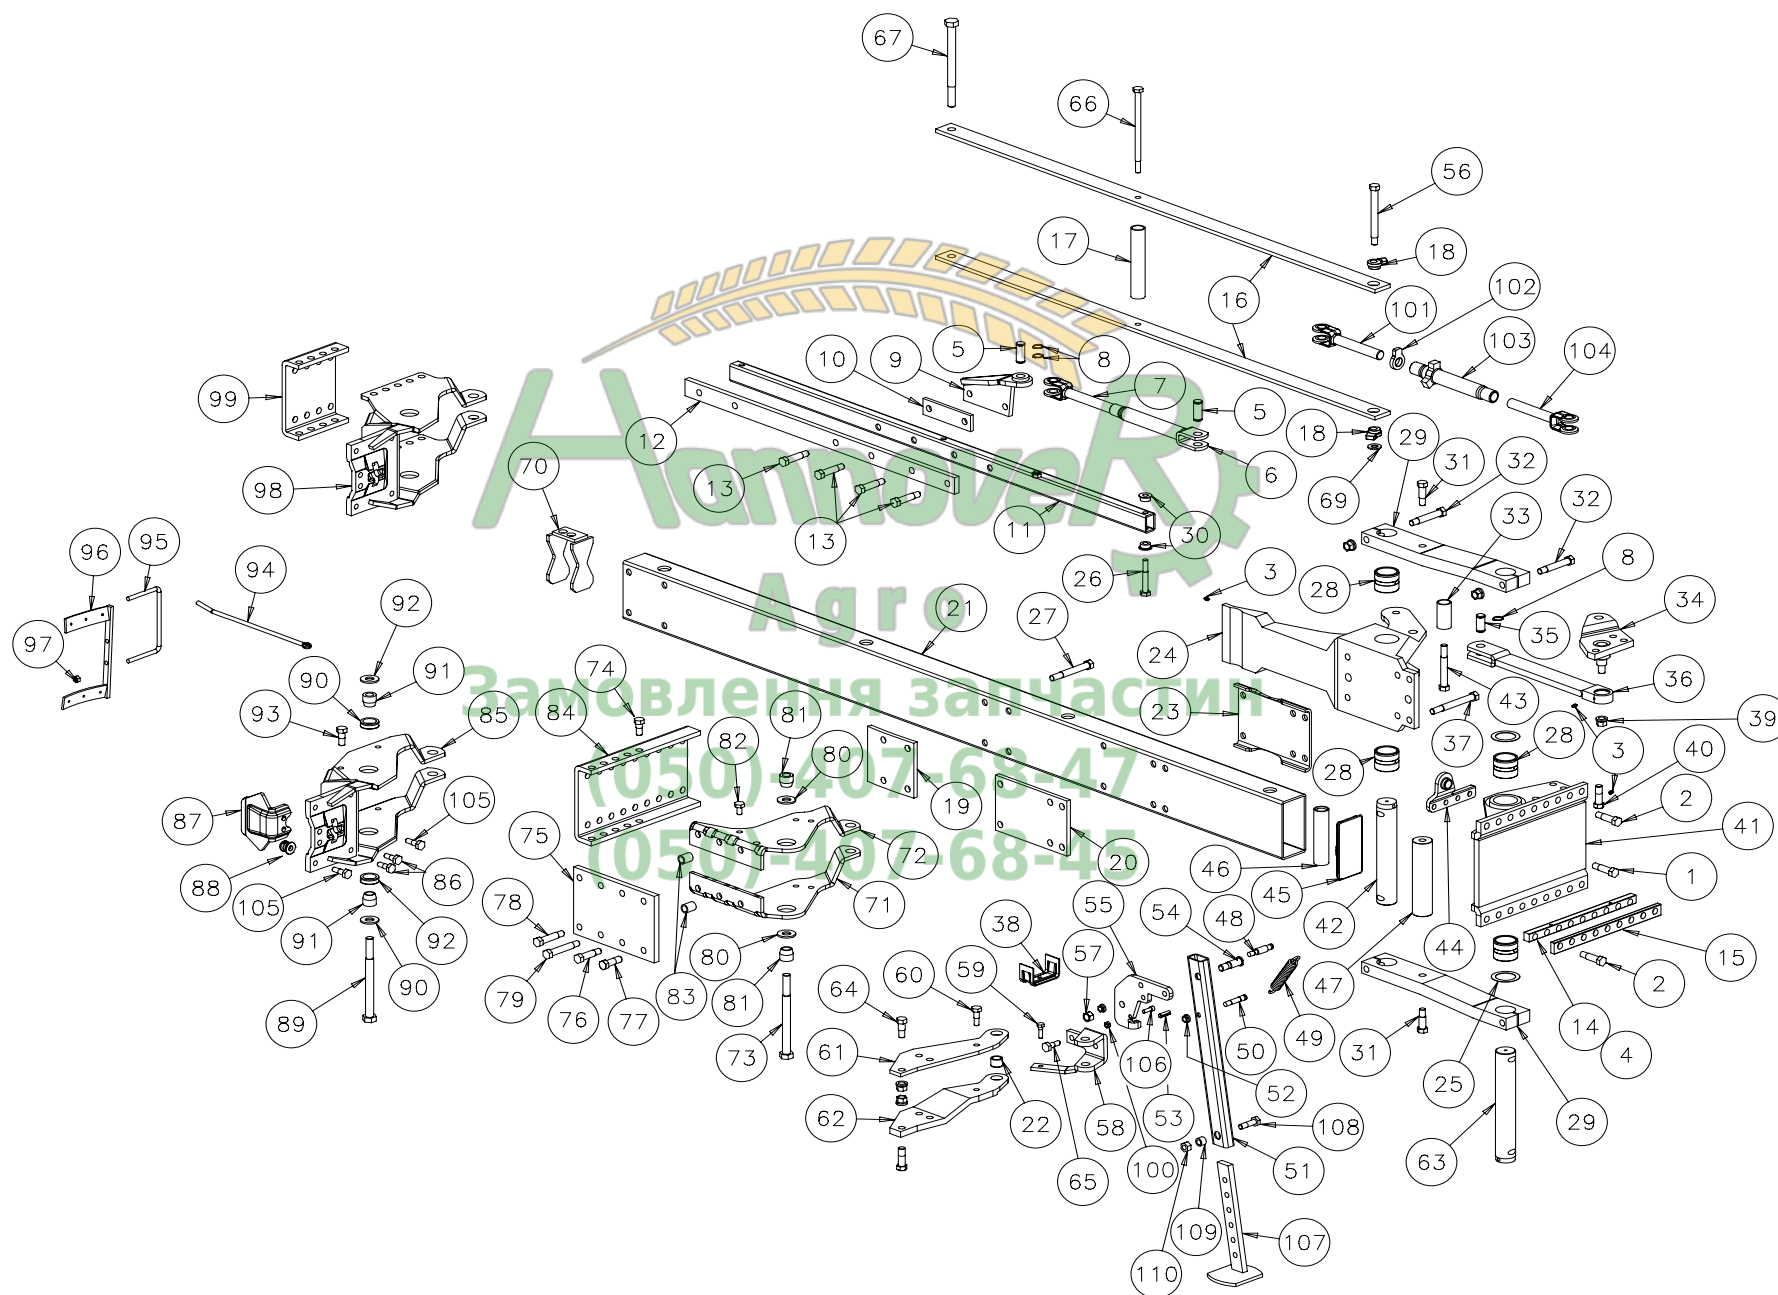


1	KK 03 27 85	Hex screw M16 x 85 mm w/nut (Before 01.08.96)	16	KK 07 18 43	Tie rod EG/LB-85 (5 furrows)	40	KK 03 51 73	Hex screw M20 x 60 mm w/flange nut
	KK 03 28 85	Hex screw M20 x 85 mm w/nut (From 01.08.96)		KK 07 18 44	Tie rod EG/LB-100 (5 furrows)	41	KK 07 02 26	Support w/bushing (Before 01.08.96)
2	KK 03 27 80	Hex screw M16 x 80 mm w/nut (Before 01.08.96)	17	KK 07 18 39	Tube 42.5 x 34.4 x 237 mm		KK 07 98 05	Support w/bushing (From 01.08.96)
	KK 03 28 75	Hex screw M20 x 75 mm w/nut (From 01.08.96)	18	KK 06 61 78	Eccenter	42	KK 07 18 72	Axle D60 mm (From 01.10.86)
3	KK 02 99 20	Grease nipple	19	KK 07 16 72	Plate, rear		KK 07 18 11	Axle D50 mm (Before 01.10.86)
4	KK 07 26 12	Slide rail D17 mm, inner, 5 holes (Before 01.08.96)	20	KK 07 18 27	Plate, front	43	KK 03 28 15	Hex screw M20 x 140 mm w/nut
	KK 07 26 23	Slide rail D20.5 mm, inner, 9 holes (From 01.08.96)	21	KK 07 11 46	Main tube EG/LB-85 (3 furrows)	44	KK 06 19 13	Fix for cylinder (Before 01.08.96)
5	KK 07 18 29	Axle D25 x 64 mm		KK 07 11 47	Main tube EG/LB-85 (4 furrows)		KK 07 15 69	Fix for cylinder (From 01.08.96)
	KK 01 29 23	Washer 16.5 x 31.5 x 1.8 mm		KK 07 11 48	Main tube EG/LB-85 (5 furrows)	45	KK 01 09 10	Cover for tube 100 x 120 mm
6	KK 07 18 36	Tube		KK 07 13 53	Main tube LB-85 (6 furrows)	46	KK 07 14 17	Tube 44.5 x 5 x 186 mm
7	KK 35 11 74	Screw R		KK 07 11 49	Main tube EG/LB-100 (3 furrows)	47	KK 07 18 09	Spacer
	KK 07 08 05	Turnbuckle cpl. (ill. 6 - 7)		KK 07 11 50	Main tube EG/LB-100 (4 furrows)	48	KK 07 17 13	Bolt
8	KK 01 12 77	Circlip		KK 07 11 51	Main tube EG/LB-100 (5 furrows)	49	KK 07 17 11	Spring
9	KK 07 18 21	Fix for parallel rod	22	KK 01 16 92	Bushing 25.4 x 35 x 25 mm	50	KK 07 17 14	Bolt
10	KK 07 18 24	Plate for parallel rod EG/LB-100	23	KK 07 18 26	Plate	51	KK 07 17 15	Machine stand for beam H = 700 (Before 01.08.01)
11	KK 07 11 52	Parallel rod EG/LB-85 (3 furrows)	24	KK 07 02 27	Support w/bushing, rear		KK 07 15 24	Machine stand for beam H = 800 (Before 01.08.01)
	KK 07 11 53	Parallel rod EG/LB-85 (4 furrows)	25	KK 01 29 56	Washer		KK 08 16 24	Tube for machine stand (From 01.08.01)
	KK 07 11 54	Parallel rod EG/LB-85 (5 furrows)	26	KK 03 51 61	Hex screw M16 x 100 mm w/locknut	52	KK 01 60 13	Flange nut M24
	KK 07 13 54	Parallel rod LB-85 (6 furrows)	27	KK 03 28 16	Hex screw M20 x 150 mm w/nut	53	KK 01 10 18	Roll pin D10 x 40 mm (Before 01.05.99)
	KK 07 11 55	Parallel rod EG/LB-100 (3 furrows)	28	KK 01 16 91	Bushing D60 x 72 x 60 mm	54	KK 07 17 12	Bolt
	KK 07 11 56	Parallel rod EG/LB-100 (4 furrows)		KK 01 16 87	Bushing D50 x 62 x 50 mm	55	KK 07 17 10	Fix for machine stand
	KK 07 11 57	Parallel rod EG/LB-100 (5 furrows)	29	KK 07 18 73	Rod (From 01.10.86)	56	KK 03 28 22	Hex screw M20 x 190 mm w/nut
12	KK 07 18 54	Support for parallel rod EG/LB-100		KK 07 18 06	Rod (Before 01.10.86)	57	KK 01 58 35	Nut M20
	KK 07 20 43	Support for parallel rod EG/LB-85	30	KK 07 16 64	Bushing	58	KK 07 21 75	Fix for machine stand (From 01.10.86)
13	KK 03 28 90	Hex screw M20 x 90 mm w-nut	31	KK 03 28 65	Hex screw M20 x 65 mm w/nut	59	KK 03 26 40	Hex screw M12 x 40 mm w/nut
14	KK 07 26 13	Slide rail D17 mm, inner, 4 holes, upper and lower (Before 01.08.96)	32	KK 03 51 79	Hex screw M20 x 120 mm w/flange nut (From 01.10.86)	60	KK 03 27 50	Hex screw M16 x 50 mm w/nut
	KK 07 26 23	Slide rail D20.5 mm, inner, 9 holes (From 01.08.96)		KK 03 51 78	Hex screw M20 x 110 mm w/flange nut (Before 01.10.86)	61	KK 07 18 57	Fix for cylinder, upper, EG/LB-85
15	KK 07 26 04	Slide rail D17 mm, outer, 9 holes, upper and lower (Before 01.08.96)	33	KK 07 18 28	Tube		KK 07 18 55	Fix for cylinder, upper, EG/LB-100
	KK 07 26 22	Slide rail D20.5 mm, outer, 9 holes (From 01.08.96)	34	KK 07 18 12	Fix for rod EG/LB-85	62	KK 07 18 58	Fix for cylinder, lower, EG/LB-85
				KK 07 18 15	Fix for rod EG/LB-100		KK 07 18 56	Fix for cylinder, lower, EG/LB-100
			35	KK 07 18 25	Axle D25 x 55 mm	63	KK 07 18 71	Axle D60 mm (From 01.10.86)
			36	KK 07 18 17	Rod EG/LB-85		KK 07 18 10	Axle D50 mm (Before 01.10.86)
				KK 07 18 19	Rod EG/LB-100	64	KK 03 51 65	Hex screw M20 x 50 mm w/lock nut
			37	KK 03 28 13	Hex screw M20 x 170 mm w/nut	65	KK 03 27 45	Hex screw M16 x 45 mm w/nut
			38	KK 07 21 76	Support	66	KK 03 27 28	Hex screw M16 x 280 mm w/nut
			39	KK 01 60 12	Flange nut			

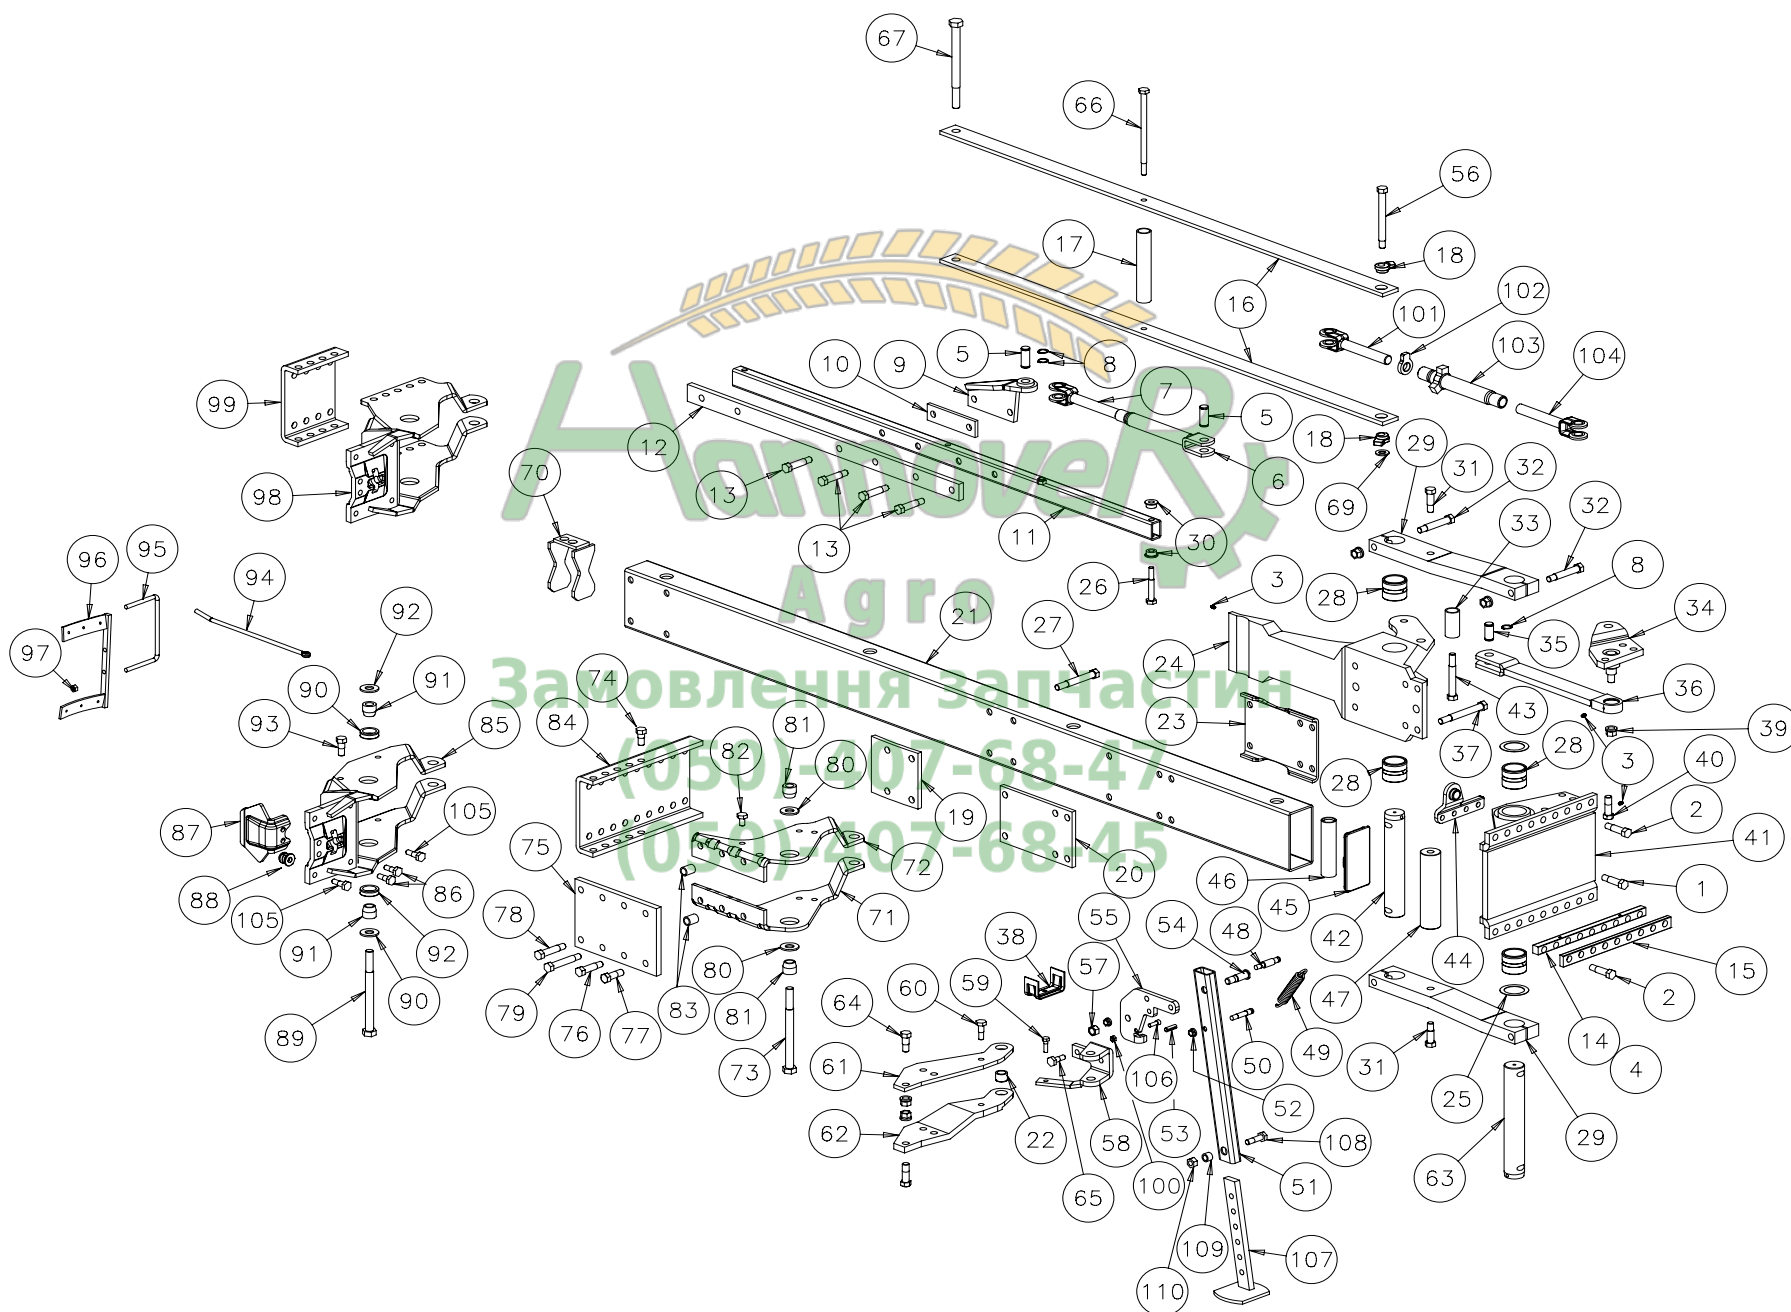

67	KK 03 29 29	Hex screw M24 x 290 mm w/nut	95	KK 07 14 91	U-bolt for indicator
68	KK 01 07 00	Ring pin	96	KK 07 14 95	Indicator
69	KK 01 29 60	Washer	97	KK 01 58 17	Nut M12
70	KK 07 29 95	Support for main tube	98	KK 07 21 96	Beam/wheel support w/bushing (Before 01.06.99)
Pos. no. 71 - 84 For LB plough only					
71	KK 07 22 01	Beam support w/bushing, lower front	KK 07 47 61	Beam/wheel support w/bushing (From 01.06.99) (Before 18.06.01)	
	KK 07 22 36	Beam support w/bushing, lower rear	KK 07 20 80	Beam/wheel support w/bushing and balls (From 18.06.01)	
72	KK 07 22 00	Beam support w/bushing, upper front			
	KK 07 22 35	Beam support w/bushing, upper rear	99	KK 08 13 69	Fixing bracket (From 18.06.01)
73	KK 03 29 23	Hex screw M24 x 270 mm w/nut	100	KK 01 60 06	Lock nut M10 (From 01.05.99)
74	KK 03 27 40	Hex screw M16 x 40 mm w/nut (Before 18.06.01)	101	KK 35 11 39	Screw R
	KK 03 28 40	Hex screw M20 x 40 mm w/nut (From 18.06.01)	102	KK 35 11 48	Nut
75	KK 07 18 98	Plate (for LB only)	103	KK 35 11 44	Tube
76	KK 03 28 80	Hex screw M20 x 80 mm w/nut	104	KK 35 11 40	Screw L
77	KK 03 28 60	Hex screw M20 x 60 mm w/nut	105	KK 03 27 52	Hex screw M16 x 50 mm
78	KK 03 28 95	Hex screw M20 x 95 mm w/nut	106	KK 03 50 25	Cylinder screw M10 x 30 mm (From 01.05.99)
79	KK 03 28 05	Hex screw M20 x 120 mm w/nut	107	KK 08 16 22	Adjustable machine stand (From 01.08.01)
80	KK 01 29 40	Washer	108	KK 03 27 60	Hex screw M16 x 60 mm (From 01.08.01)
81	KK 07 14 03	Tube w/cone	109	KK 07 43 19	Bushing (From 01.08.01)
82	KK 03 27 25	Hex screw M16 x 27 mm w/nut	110	KK 01 58 25	Nut M16 (From 01.08.01)
83	KK 06 15 15	Bushing			
84	KK 07 22 40	Fixing bracket (Before 01.06.99)	Not ill.	KK 36 11 16	Turnbuckle cpl. (520 - 720)
	KK 07 47 53	Fixing bracket (From 01.06.99) (Before 18.06.01)		KK 08 01 87	Machine stand cpl. (From 01.08.01)
	KK 08 13 78	Fixing bracket (From 18.06.01)			
Pos. no. 85 - 99 For EG plough only					
85	KK 07 18 60	Beam support w/bushing and balls			
86	KK 03 27 45	Hex screw M16 x 45 mm w/nut			
87	KK 06 16 37	Plate			
88	KK 07 12 56	2 balls w/bolt M16 x 50 mm and locktite			
89	KK 03 29 23	Hex screw M24 x 270 mm w/nut			
90	KK 01 29 40	Washer			
91	KK 07 14 03	Tube w/cone			
92	KK 01 16 94	Bushing			
93	KK 03 28 45	Hex screw M20 x 45 mm w/nut			
94	KK 07 18 53	Indicator			

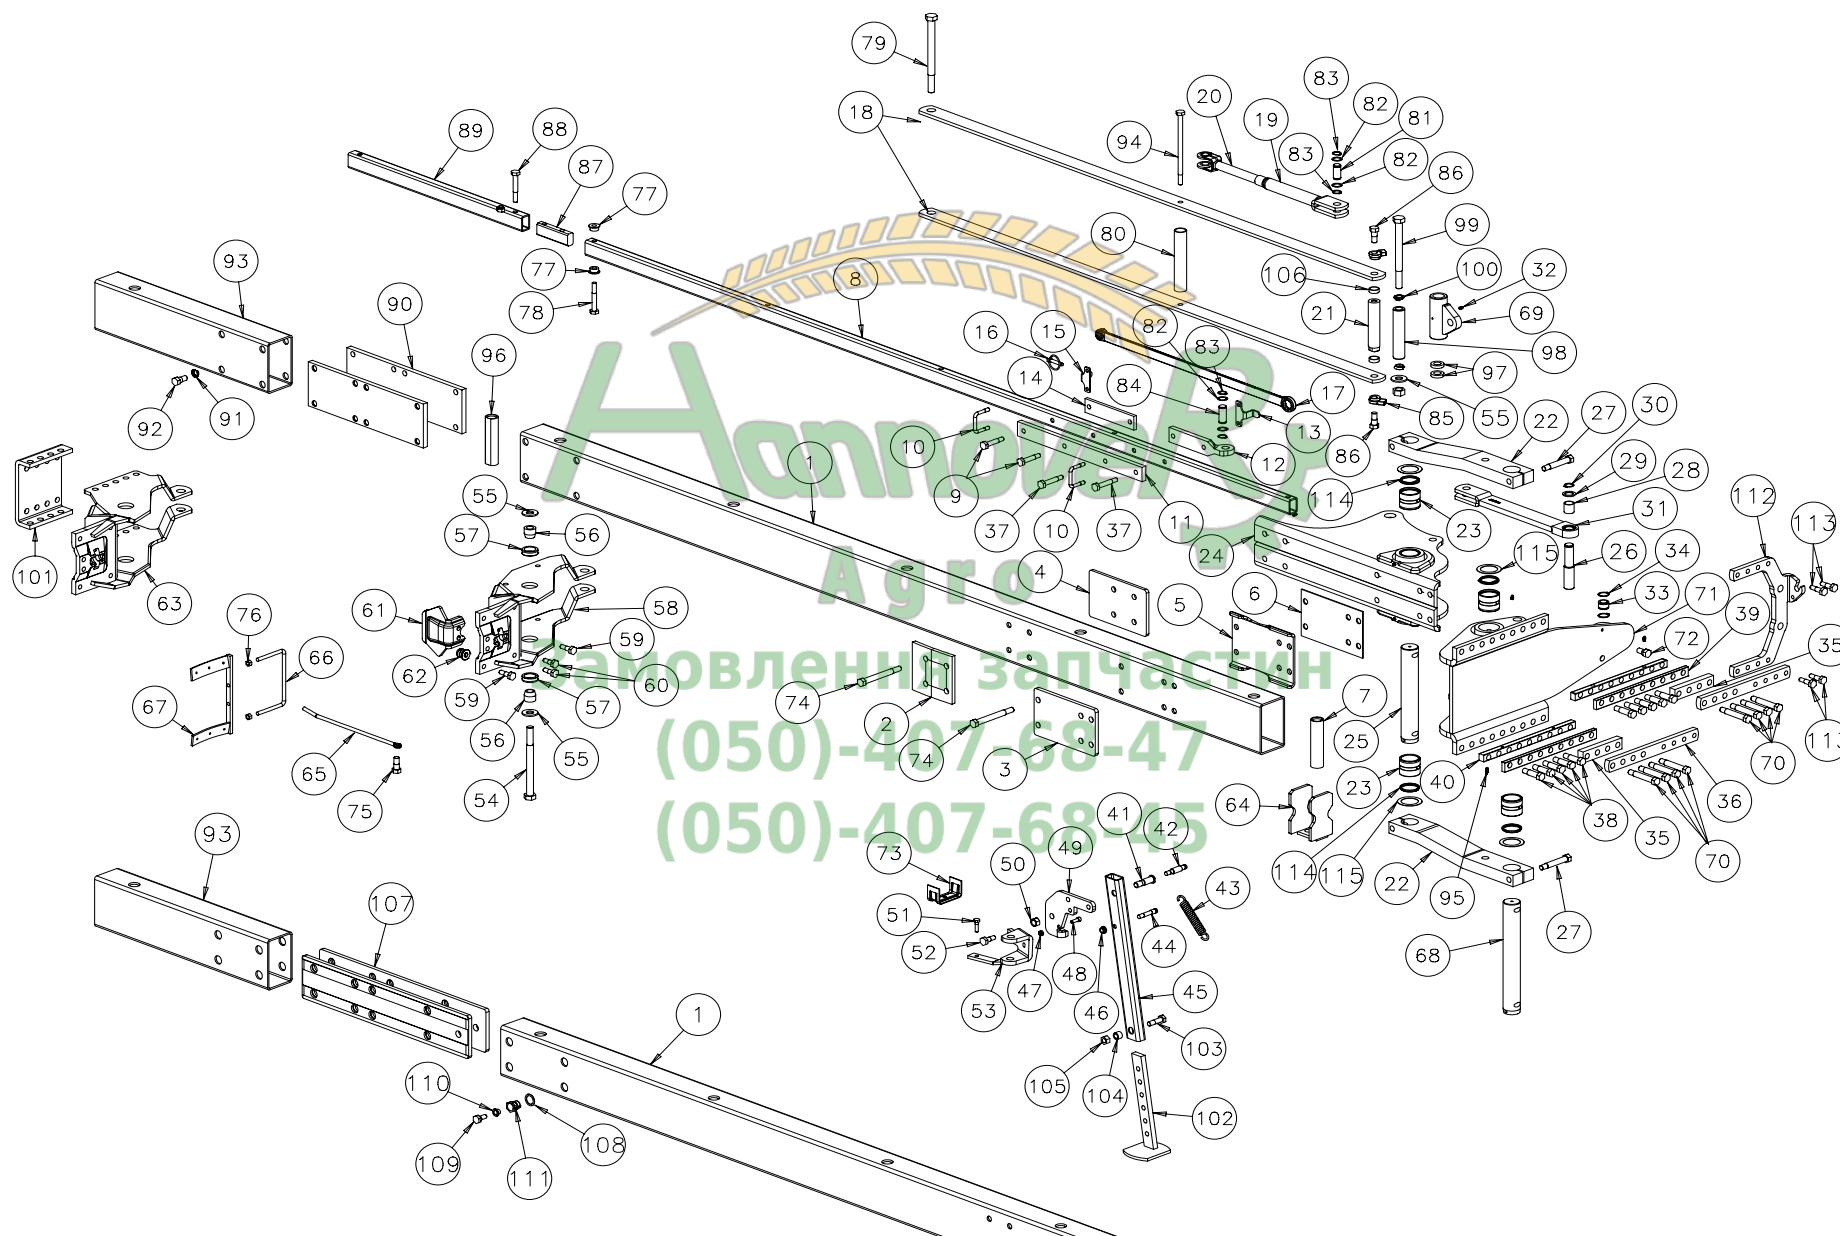


1	KK 08 23 00	Main tube EG-HD-85 (4 furrows) (Before 01.09.02)	18	KK 08 20 86	Tie rod for EG-85 (5 and 6 furrows) (Before 21.05.01)	44	KK 07 17 14	Bolt
	KK 08 23 22	Main tube EG-HD-85 (4 furrows) (From 01.09.02)		KK 08 23 13	Tie rod for EG-85 (5 and 6 furrows) (From 21.05.01)	45	KK 07 17 15	Machine stand H = 700 (Before 01.08.01)
	KK 08 23 01	Main tube EG-HD-85 (5 furrows) (Before 01.09.02)		KK 08 20 85	Tie rod for EG-100 (5 and 6 furrows) (Before 21.05.01)		KK 07 15 24	Machine stand H = 800 (Before 01.08.01)
	KK 08 23 23	Main tube EG-HD-85 (5 furrows) (From 01.09.02)		KK 08 23 17	Tie rod for EG-100 (5 and 6 furrows) (From 21.05.01)		KK 08 16 24	Tube for machine stand (From 01.08.01)
	KK 08 23 02	Main tube EG-HD-85 (6 furrows)	19	KK 08 20 76	Tube	46	KK 01 60 13	Flange nut M24
	KK 08 23 04	Main tube EG-HD-100 (4 furrows) (Before 01.09.02)	20	KK 35 11 74	Screw R	47	KK 01 60 06	Lock nut M10
	KK 08 23 24	Main tube EG-HD-100 (4 furrows) (From 01.09.02)	21	KK 08 20 75	Axle (Before 21.05.01)	48	KK 03 50 25	Cylinder screw M10 x 30 mm
	KK 08 23 05	Main tube EG-HD-100 (5 furrows) (Before 01.09.02)	22	KK 08 20 64	Rod	49	KK 07 17 10	Fix for machine stand
	KK 08 23 25	Main tube EG-HD-100 (5 furrows) (From 01.09.02)	23	KK 01 16 37	Bushing (Before 15.06.03)	50	KK 01 58 30	Nut M20
	KK 08 23 06	Main tube EG-HD-100 (6 furrows)		KK 01 16 44	Bronze bushing (From 15.06.03)	51	KK 03 26 40	Hex screw M12 x 40 mm w/nut
			24	KK 08 20 91	Support w/bushing, rear (Before 21.05.01)	52	KK 03 27 45	Hex screw M16 x 45 mm w/nut
				KK 08 23 20	Support w/bushing, rear (From 21.05.01)	53	KK 07 21 75	Fix for machine stand
2	KK 08 20 81	Plate, rear				54	KK 03 29 23	Hex screw M24 x 270 mm w/nut
3	KK 08 20 80	Plate, front	25	KK 08 20 66	Axle, rear (Before 15.06.03)	55	KK 01 29 40	Washer
4	KK 08 20 82	Plate, rear		KK 08 26 76	Axle, rear (From 15.06.03)	56	KK 07 14 03	Tube w/cone
5	KK 08 20 83	Plate	26	KK 08 20 59	Bolt	57	KK 01 16 94	Bushing
6	KK 08 20 84	Plate	27	KK 03 51 79	Hex screw M20 x 120 mm w/flange nut	58	KK 07 18 60	Beam support w/bushing and balls
7	KK 07 14 17	Bushing	28	KK 01 01 59	Bushing	59	KK 03 27 52	Hex screw M16 x 50 mm
8	KK 08 23 10	Parallel rod EG-85 (4 furrows)	29	KK 01 12 92	Washer	60	KK 03 27 45	Hex screw M16 x 45 mm w/nut
	KK 08 23 11	Parallel rod EG-85 (5 furrows)	30	KK 01 12 66	Circlip	61	KK 06 16 37	Plate
	KK 08 23 12	Parallel rod EG-85 (6 furrows)	31	KK 08 20 77	Rod EG-85	62	KK 07 12 56	2 balls w/bolt M16 x 50 mm and locktite
	KK 08 23 14	Parallel rod EG-100 (4 furrows)		KK 08 20 57	Rod EG-100	63	KK 07 47 61	Beam support w/bushing and balls, rear (Before 18.06.01)
	KK 08 23 15	Parallel rod EG-100 (5 furrows)	32	KK 02 99 20	Grease nipple		KK 07 20 80	Beam support w/bushing and balls, rear (From 18.06.01)
	KK 08 23 16	Parallel rod EG-100 (6 furrows)	33	KK 07 81 45	Bushing	64	KK 08 20 97	Support for main tube
9	KK 03 27 85	Hex screw M16 x 85 mm w/nut	34	KK 01 12 62	Circlip	65	KK 07 18 53	Indicator
10	KK 08 15 49	U-bolt	35	KK 08 14 83	Rail	66	KK 07 14 92	U-bolt
11	KK 08 20 96	Support for parallel rod	36	KK 08 14 64	Extender	67	KK 07 14 95	Indicator
12	KK 07 21 58	Fix for parallel rod	37	KK 03 27 95	Hex screw M16 x 95 mm w/nut	68	KK 08 20 65	Axle, front (Before 15.06.03)
13	KK 08 15 79	Spanner holder without lock hole	38	KK 03 28 75	Hex screw M20 x 75 mm w/nut		KK 08 26 75	Axle, front (From 15.06.03)
14	KK 07 16 17	Plate for parallel rod	39	KK 07 26 22	Slide rail D20.5 outer, 9 holes	69	KK 08 20 71	Fix EG-85
15	KK 08 15 78	Spanner holder w/lock hole	40	KK 07 26 23	Slide rail D20.5 inner, 9 holes		KK 08 20 70	Fix EG-100
16	KK 01 07 00	Ring pin D12	41	KK 07 17 12	Bolt	70	KK 03 28 05	Hex screw M20 x 120 mm w/nut
17	KK 01 06 50	Spanner	42	KK 07 17 13	Bolt	71	KK 08 20 90	Support w/bushing, front
			43	KK 07 17 11	Spring	72	KK 03 28 35	Hex screw M20 x 35 mm w/nut

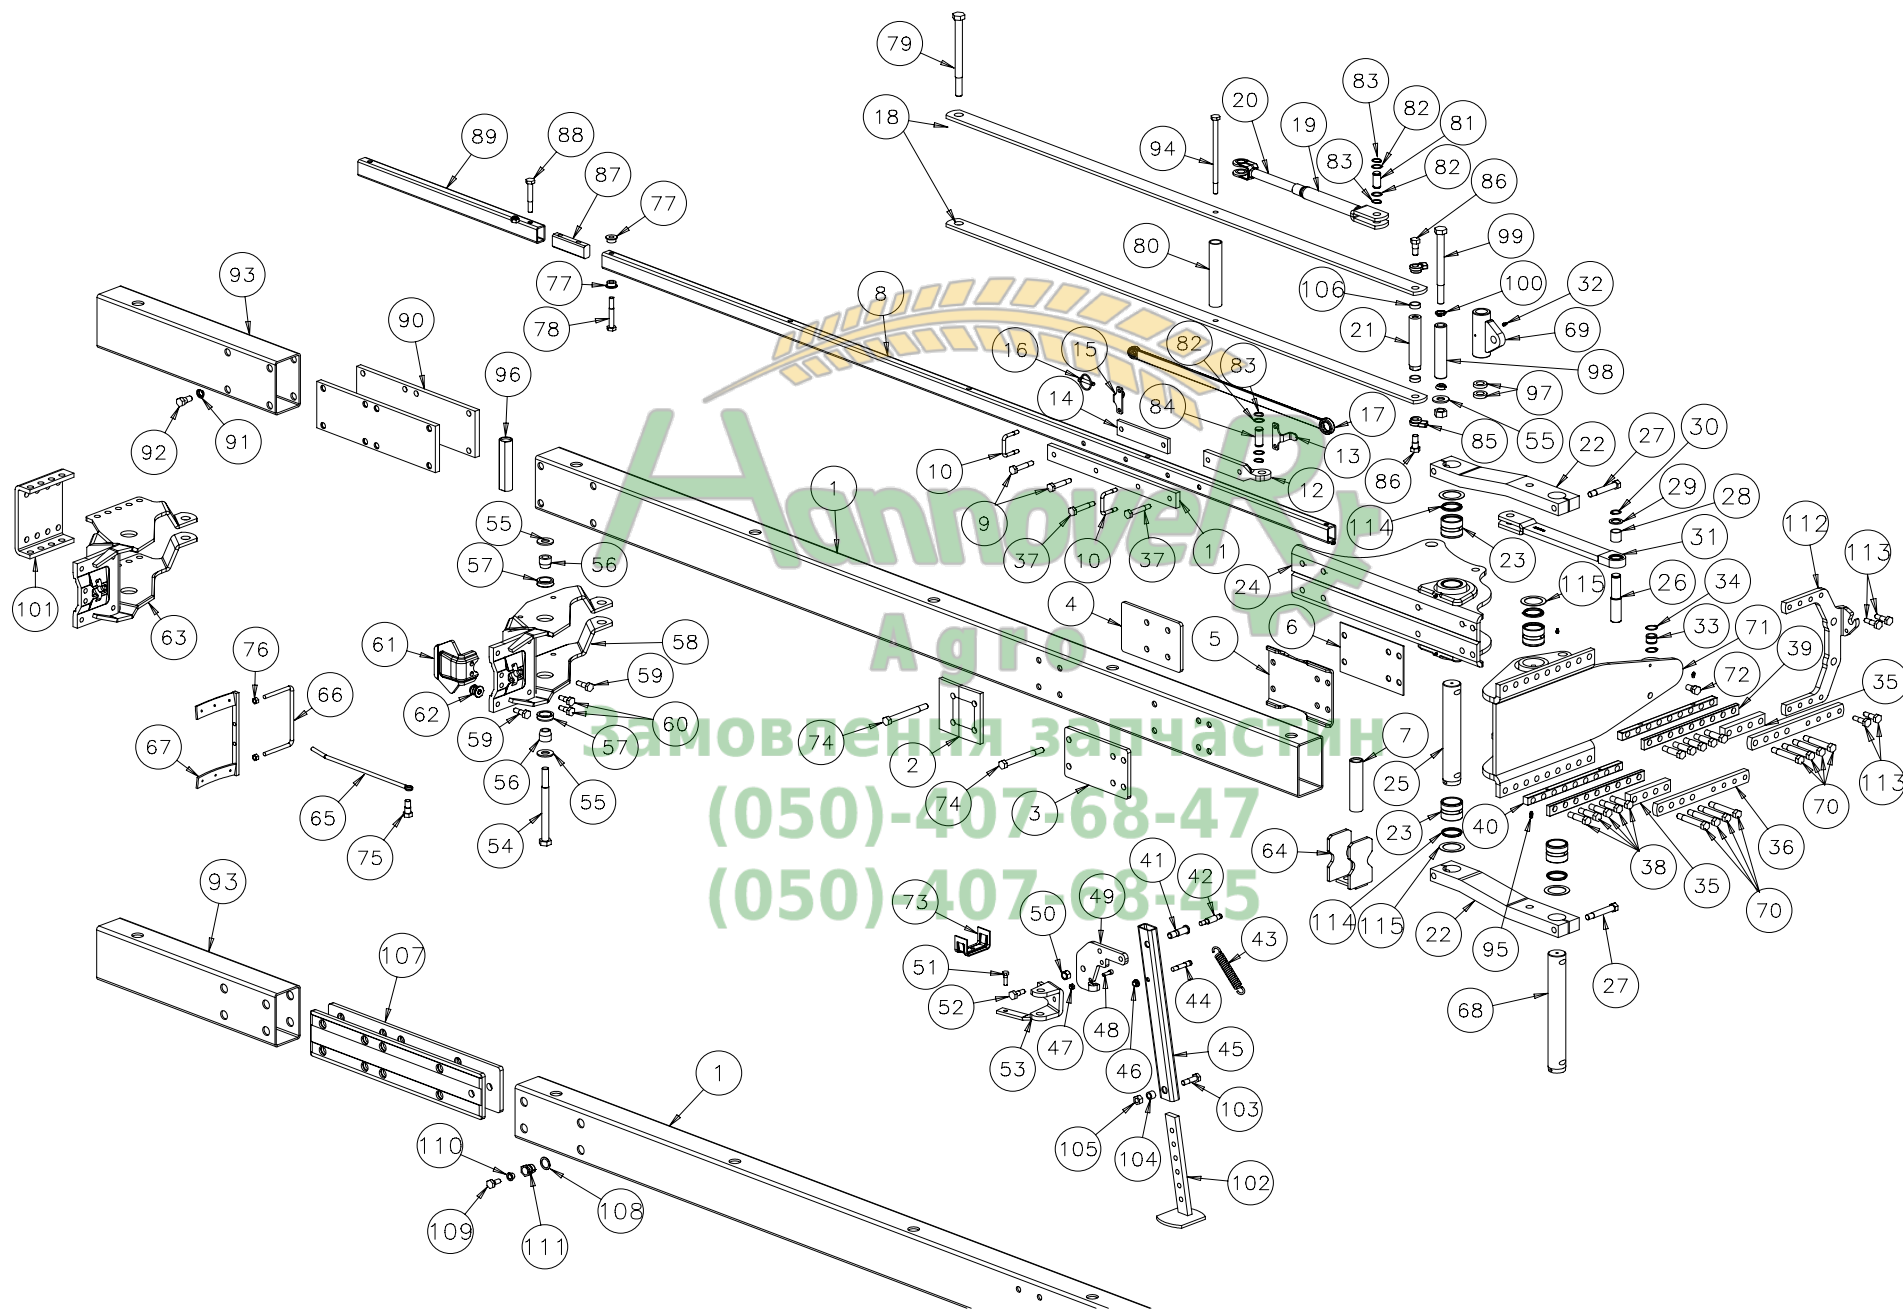


73	KK 07 21 76	Support	99	KK 03 29 26	Hex screw M24 x 265 mm w/nut (From 21.05.01)
74	KK 03 28 18	Hex screw M20 x 180 mm w/nut	100	KK 07 95 96	Conical bushing (From 21.05.01)
75	KK 03 28 45	Hex screw M20 x 45 mm w/nut	101	KK 08 13 69	Fixing bracket (From 18.06.01)
76	KK 01 58 17	Nut M12	102	KK 08 16 22	Adjustable machine stand (From 01.08.01)
77	KK 07 16 64	Bushing	103	KK 03 27 60	Hex screw M16 x 60 mm (From 01.08.01)
78	KK 03 51 61	Hex screw M16 x 100 mm w/lock nut	104	KK 07 43 19	Bushing (From 01.08.01)
79	KK 03 29 29	Hex screw M24 x 290 mm w/nut	105	KK 01 58 25	Nut M16 (From 01.08.01)
80	KK 07 18 39	Tube 42.5 x 34.4 x 237 mm	106	KK 01 01 66	Washer (From 21.08.00 - 21.05.01)
81	KK 07 18 25	Bolt	107	KK 08 26 30	Support ext. kit welded (From 01.09.02)
82	KK 01 29 80	Washer	108	KK 08 26 48	Washer
83	KK 01 12 77	Circlip	109	KK 03 27 35	Hex screw M16 x 35 mm
84	KK 07 18 29	Bolt	110	KK 08 26 47	Inner conical to screw ext. kit
85	KK 06 61 78	Eccentric (Before 21.05.01)	111	KK 08 26 46	Conical bushing D32 ext. kit
86	KK 03 28 45	Hex screw M20 x 45 mm w/nut (Before 21.05.01)	112	KK 08 14 63	Fixing plate
87	KK 07 11 58	Connecting piece (From 01.10.00)	113	KK 03 27 55	Hex screw M16 x 55 w/ nut
88	KK 03 27 02	Hex screw M16 x 110 mm w/nut (From 01.10.00)	114	KK 01 65 46	Scraper d60/ D68 (From 15.06.03)
89	KK 07 11 72	Parallel rod for -85 (From 01.10.00)	115	KK 01 29 56	Washer (From 15.06.03)
	KK 07 11 73	Parallel rod for -100 (From 01.10.00)			
90	KK 08 22 57	Connecting piece (From 01.10.00)			
91	KK 01 28 13	Conical bushing D20 (From 01.10.00)			
92	KK 03 28 40	Hex screw M20 x 40 mm w/nut (From 01.10.00)			
93	KK 08 22 58	Additional tube for -85 (From 01.10.00) (Before 01.09.02)			
	KK 08 25 28	Additional tube for -85 (From 01.09.02)			
	KK 08 22 59	Additional tube for - 100 (From 01.10.00) (Before 01.09.02)			
	KK 08 25 29	Additional tube for -100 (From 01.09.02)			
94	KK 03 27 28	Hex screw M16 x 280 mm w/nut			
95	KK 02 99 27	Grease nipple 45°			
96	KK 08 22 56	Bushing			
97	KK 01 29 68	Washer (for 4 furrows only) (Before 21.05.01)			
	KK 01 30 00	Washer (for 4 furrows only) (From 21.05.01)			
98	KK 08 20 67	Bushing D39.9 x d25 x 195 mm (From 21.05.01)			

Замовлення запчастин
(050)-407-68-47
(050)-407-68-45

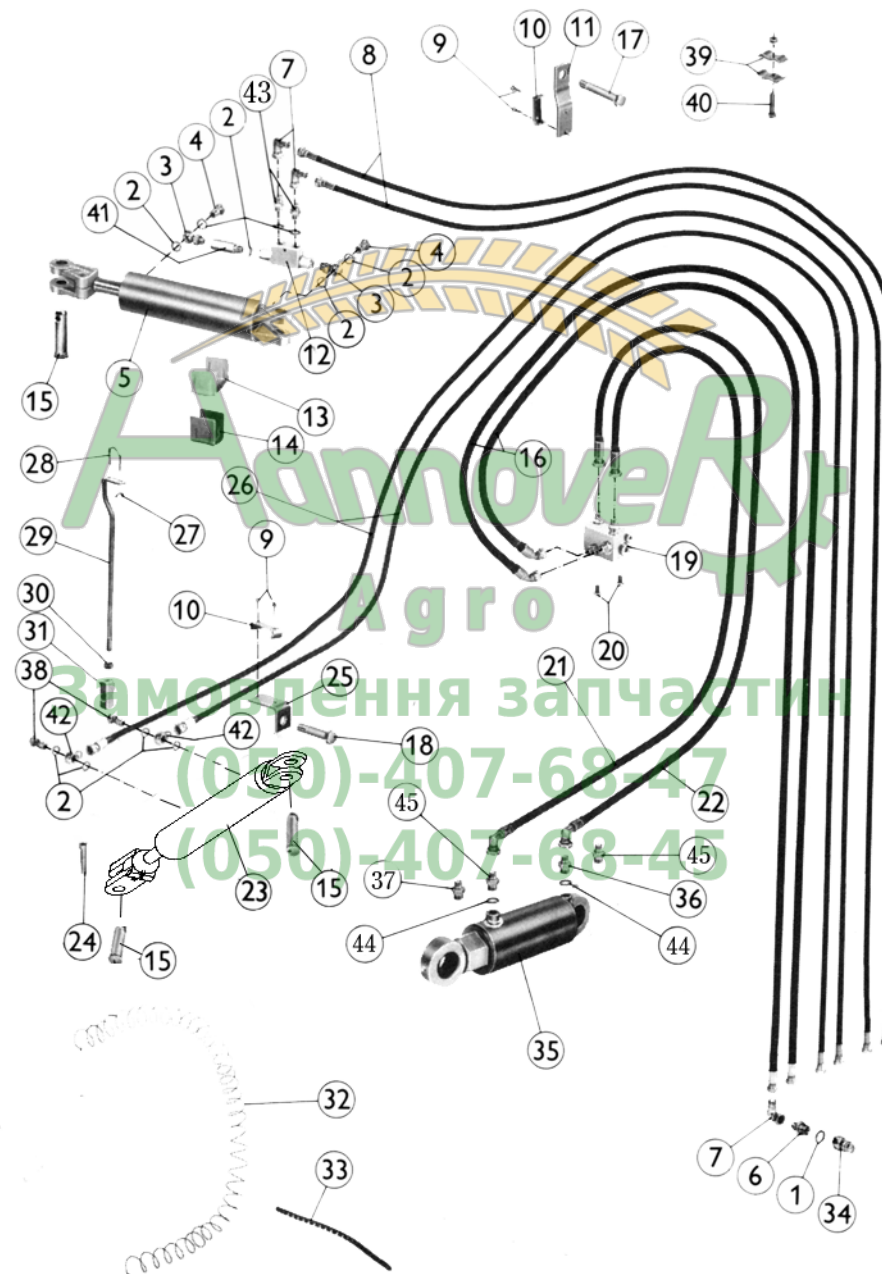


1	KK 01 15 65	Gasket ring 1/2"	27	KK 01 58 99	Wing nut M6
2	KK 01 15 85	Gasket ring 3/8"	28	KK 01 27 02	Clamp for hose holder
3	KK 01 25 48	Banjo 3/8"	29	KK 01 27 01	Hose holder
4	KK 01 20 59	Banjo bolt 3/8" x 31 mm	30	KK 01 58 17	Nut M12
5	KK 35 23 73	Hydraulic cylinder D75 x 200 mm w/90° twisted end cap cpl. (For furrow w/adjustment) (see plate no. 568) (Before 01.08.96)	31	KK 01 27 32	Fix for hose holder
	KK 35 37 06	Hydraulic cylinder D75 x 200 mm w/90° twisted end cap cpl. (For furrow w/adjustment) (see plate no. 890) (From 01.08.96) (Before 01.04.01)	32	KK 01 27 04	Hose assembly coil 30 x 1300 mm
	KK 35 39 06	Hydraulic cylinder D75 x 200 mm w/90° twisted end cap cpl. (For furrow w/adjustment) (see plate no. 1195) (From 01.04.01)		KK 01 23 36	Hose assembly coil 38 x 1300 mm
6	KK 01 20 60	Threaded coupling 3/8" - 1/2"	33	KK 01 15 96	Hose wrapper 12.5 x 250 mm
7	KK 01 20 56	Angle 3/8"	34	KK 01 21 14	Quick coupling
8	KK 01 26 51	Hose 1/4" L=3750 mm (For turning w/bodies over the frame)	35	KK 35 24 02	Turn-over cylinder D90 x 150 mm (see plate no. 1033) (Before 01.12.98)
	KK 01 27 87	Hose 1/4" L=3250 mm (For turning w/bodies under the frame)		KK 35 35 80	Turn-over cylinder D90 x 150 mm (see plate no. 1063) (From 01.12.98)
9	KK 03 33 25	Hex screw M6 x 25 mm	36	KK 01 21 04	Threaded coupling 3/8" - 1/2" w/2.0 mm choke (For turning w/bodies under the frame) (Before 01.12.98)
10	KK 01 25 20	Clamp for three hoses		KK 01 20 78	Threaded coupling 3/8" - 3/8" w/2.0 mm choke (For turning w/bodies under the frame) (From 01.12.98)
	KK 01 27 10	Clamp for six hoses	37	KK 01 20 70	Threaded coupling 3/8" - 1/2" w/1.7 mm choke (For turning w/bodies over the frame) (Before 01.12.98)
11	KK 06 19 44	Hose holder for three hoses (For turning w/bodies over the frame)		KK 01 20 77	Threaded coupling 3/8" - 3/8" w/1.7 mm choke (For turning w/bodies over the frame) (From 01.12.98)
12	KK 01 25 08	Lock valve	38	KK 01 20 81	Threaded coupling 3/8" x 31 mm w/1 mm choke
13	KK 07 21 77	Bracket for cylinder	39	KK 06 19 42	Clamp for two hoses
14	KK 07 21 78	Bracket for turnbuckle	40	KK 03 35 35	Hex screw M10 x 35 mm w/nut
15	KK 01 03 28	Bolt w/head 25.3 x 78 mm	41	KK 01 25 77	Threaded coupling 3/8" outer - 3/8" inner
16	KK 01 27 88	Hose 3/8" L=1500 mm	42	KK 01 20 62	Banjo 3/8" - 3/8"
17	KK 03 28 07	Hex screw M20 x 100 mm w/nut	43	KK 01 22 61	Threaded coupling 3/8" - 3/8"
18	KK 03 28 95	Hex screw M20 x 95 mm w/nut	44	KK 01 15 65	Gasket ring 1/2" (Before 01.12.98)
19	KK 01 27 40	Turn-over valve		KK 01 15 85	Gasket ring 3/8" (From 01.12.98)
20	KK 03 35 20	Hex screw M10 x 20 mm	45	KK 01 20 60	Threaded coupling 3/8" - 1/2" (Before 01.12.98)
21	KK 01 22 09	Hose 3/8" L=600 mm		KK 01 22 61	Threaded coupling 3/8" - 3/8" (From 01.12.98)
22	KK 01 22 08	Hose 3/8" L=500 mm			
23	KK 35 23 50	Hydraulic cylinder D50 x 200 mm cpl. (see plate no. 473) (Before 01.08.96)			
	KK 35 37 01	Hydraulic cylinder D50 x 200 mm cpl. (see plate no. 525) (From 01.08.96) (Before 01.04.01)			
	KK 35 39 01	Hydraulic cylinder D50 x 200 mm cpl. (see plate no. 1192) (From 01.04.01)			
24	KK 01 07 00	Pin (Before 01.08.97)			
	KK 01 10 20	Bushing (From 01.08.97)			
25	KK 06 19 43	Holder for three hoses			
	KK 06 19 40	Holder for six hoses			
26	KK 01 27 87	Hose 1/4" L=3250 mm			

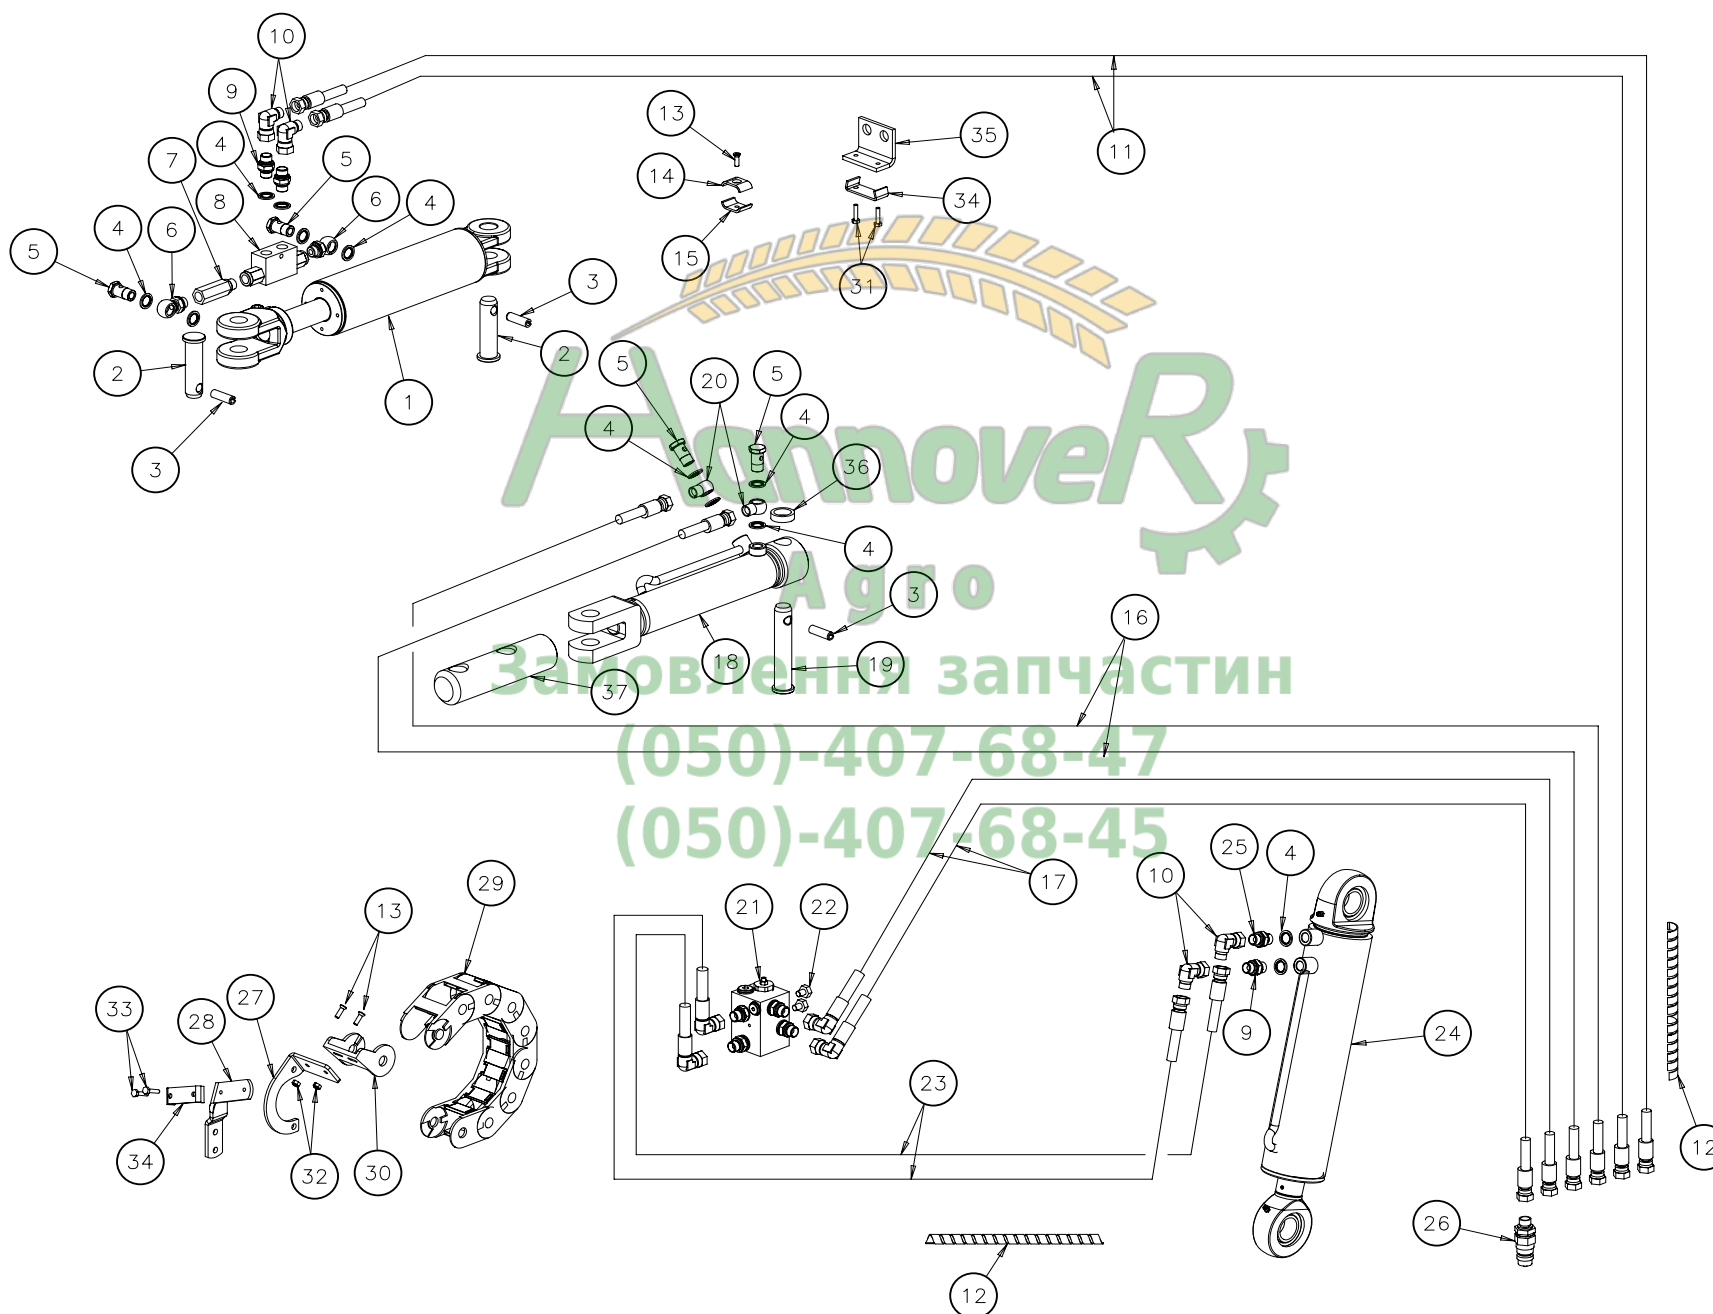


**1108 Hydraulic layout w/front furrow adjustment cylinder for headstock 200, EG/LB
(From 01.01.00)**

1	KK 35 37 06	Hydraulic cylinder D75 x 200 mm w/90° twisted end cap cpl. (see plate no. 890) (Before 01.04.01)	32	KK 01 60 18	Lock nut M6
	KK 35 39 06	Hydraulic cylinder D75 x 200 mm w/90° twisted end cap cpl. (see plate no. 1195) (From 01.04.01)	33	KK 03 33 25	Hex screw M6 x 25 mm (when using 1 - 3 hoses)
				KK 03 23 40	Hex screw M6 x 40 mm (when using 4 - 6 hoses)
2	KK 01 03 28	Bolt w/head D25.3 x 78 mm	34	KK 01 25 20	Clamb for 3 hoses 1/4"
3	KK 01 10 20	Pin D12 x 40 mm	35	KK 06 19 78	Connection angle for 3 hoses, H = 60
4	KK 01 15 85	Gasket ring 3/8"	36	KK 01 00 08	Bushing D35 x D26 x 10 mm
5	KK 01 20 59	Banjo bolt 3/8" x 31	37	KK 35 36 09	Rod bracket extension
6	KK 01 25 48	Banjo 3/8" w/adjustable end			
7	KK 01 25 77	Threaded coupling 3/8" outer - 3/8" inner	Not ill.	KK 01 35 39	Plastic chain for hose support cpl.
8	KK 01 25 08	Lock valve		KK 01 35 59	Plaxtic chain one piece
9	KK 01 22 61	Threaded coupling 3/8" - 3/8"			
10	KK 01 20 56	Angular coupling 3/8", 90°			
11	KK 01 27 52	Hose 1/4", L = 3500 mm			
12	KK 01 15 96	Hydraulic hose holder, L = 250 mm			
13	KK 03 33 21	Countersunk screw M6 x 20 mm			
14	KK 01 35 31	Clamb 1/4", D7			
15	KK 01 35 32	Clamb 1/4", D6			
	KK 01 35 40	Clamp 1/4" cpl.			
16	KK 01 27 86	Hose 1/4", L = 3000 mm (for ploughs w/alignment and furrow width adjustment)			
	KK 01 27 84	Hose 1/4", L = 2000 mm (for ploughs without alignment and furrow width adjustment)			
17	KK 01 22 12	Hose 3/8", L = 900 mm			
18	KK 35 36 81	Front furrow adjustment cylinder D50 x 200 mm cpl. (see plate no. 1112)			
19	KK 01 03 19	Bolt w/head D25.3 x 120 mm			
20	KK 01 20 62	Banjo 3/8", H = 17			
21	KK 01 27 40	Turn-over valve 3/8"			
22	KK 03 35 12	Hex screw M10 x 12 mm			
23	KK 01 15 41	Hose 3/8", L = 700 mm			
24	KK 35 36 64	Turn-over cylinder D80 x 300 mm cpl. (see plate no. 1111)			
25	KK 01 20 80	Threaded coupling 3/8", D3.0 mm choke (Before 01.04.02)			
	KK 01 20 78	Threaded coupling 3/8" - 3/8", D2.0 mm choke (From 01.04.02)			
26	KK 01 21 58	Quick coupling 1/2" - 3/8"			
27	KK 08 15 68	Bracket for hose support			
28	KK 08 15 66	Bracket for hoses			
29	KK 01 35 38	Plastic chain 440 mm			
30	KK 01 35 37	Bracket for plastic chain			
31	KK 03 33 25	Hex screw M6 x 25 mm			

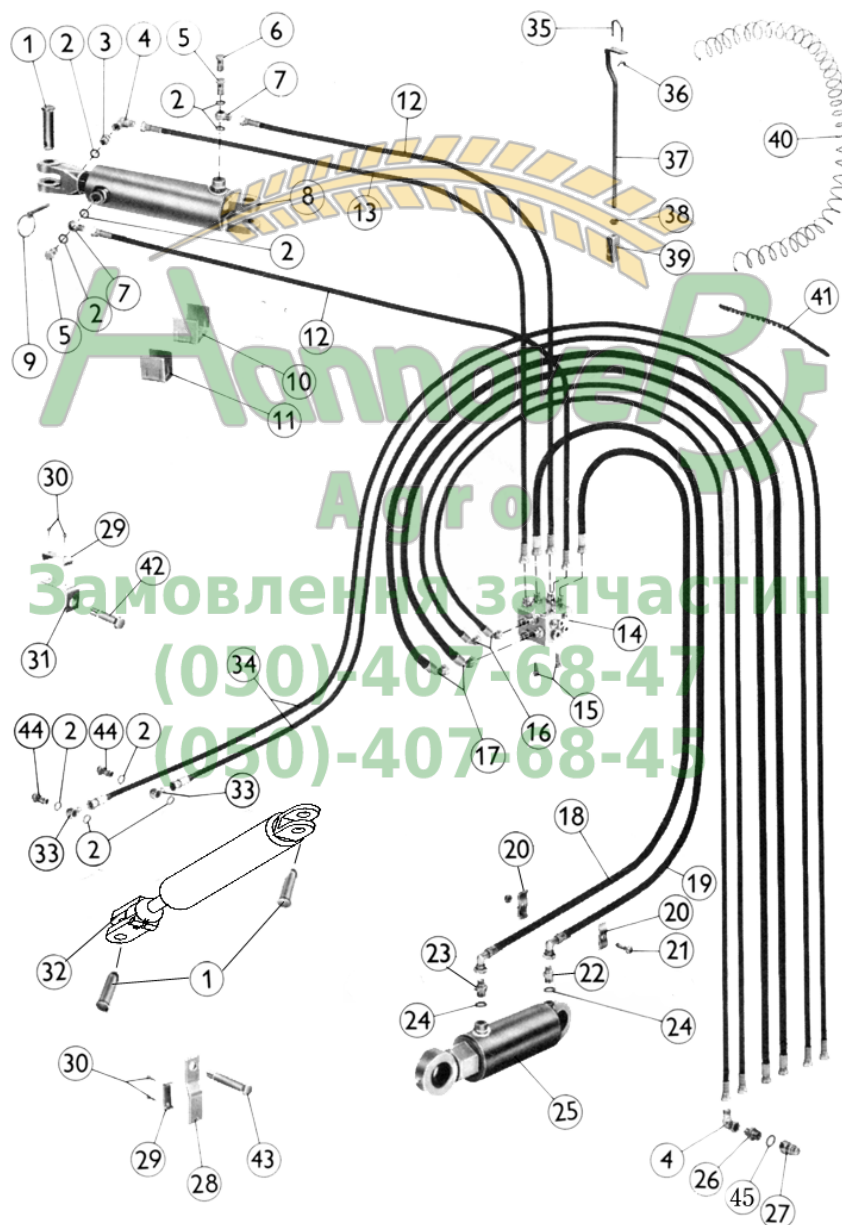


1	KK 01 03 28	Bolt w/head 25.3 x 78 mm		KK 01 20 77	Threaded coupling 3/8" - 3/8" w/1.7 mm choke (Sequence memory valve) (From 01.12.98)	
2	KK 01 15 85	Gasket ring 3/8"		24	KK 01 15 65	Gasket ring 1/2" (Before 01.12.98)
3	KK 01 22 61	Threaded coupling 3/8" - 3/8"			KK 01 15 85	Gasket ring 3/8" (From 01.12.98)
4	KK 01 20 56	Angle 3/8" 60 gr. 3/8" swivel		25	KK 35 24 02	Turn-over cylinder D90 x 150 mm (see plate no. 1033) (Before 01.12.98)
5	KK 01 20 59	Banjobolt 3/8" x 31 mm (Memory valve)			KK 35 35 80	Turn-over cylinder D90 x 150 mm (see plate no. 1063) (From 01.12.98)
6	KK 01 20 83	Banjobolt 3/8" x 31 mm w/1.7 mm choke (Sequence memory valve)		26	KK 01 20 60	Threaded coupling 3/8" - 1/2"
7	KK 01 20 62	Banjo 3/8" - 3/8"		27	KK 01 21 14	Quick coupling
8	KK 35 33 75	Memory cylinder D80/D36 x 200 mm cpl. (see plate no. 306) (Before 01.03.98)		28	KK 06 19 44	Fix for three hoses
	KK 35 38 01	Memory cylinder D80 x 200 mm cpl. (see plate no. 1035) (From 01.03.98) (Before 01.04.01)		29	KK 01 25 20	Clamp for three hoses
	KK 36 39 10	Memory cylinder D80 x 200 mm cpl. (see plate no. 1196) (From 01.04.01)			KK 01 27 10	Clamp for six hoses
9	KK 01 07 00	Pin (Before 01.08.97)		30	KK 03 33 25	Hex screw M6 x 25 mm
	KK 01 10 20	Washer (From 01.08.97)		31	KK 06 19 43	Holder for three hoses
10	KK 07 21 76	Bracket for memory cylinder			KK 06 19 40	Holder for six hoses
11	KK 07 21 78	Bracket for turnbuckle		32	KK 35 23 50	Hydraulic cylinder D50 x 200 mm cpl. (see plate no. 473) (Before 01.08.96)
12	KK 01 27 86	Hose 1/4" L=3000 mm (Memory valve)			KK 35 37 01	Hydraulic cylinder D50 x 200 mm cpl. (see plate no. 525) (From 01.08.96) (Before 01.04.01)
	KK 01 27 75	Hose 1/4" L=2500 mm (Sequence memory valve)			KK 35 39 01	Hydraulic cylinder D50 x 200 mm cpl. (see plate no. 1192) (From 01.04.01)
13	KK 01 27 87	Hose 1/4" L=3250 mm (Memory valve)		33	KK 01 20 62	Banjo 3/8" - 3/8"
	KK 01 27 76	Hose 1/4" L=2750 mm (Sequence memory valve)		34	KK 01 27 87	Hose 1/4" L=3250 mm
14	KK 01 27 41	Memory valve		35	KK 01 27 02	Clamp for hose holder
	KK 01 27 43	Sequence memory valve		36	KK 01 58 99	Wing nut M6
15	KK 03 35 20	Hex screw M10 x 20 mm		37	KK 01 27 01	Hose holder
16	KK 01 27 77	Hose 1/4" L=1500 mm		38	KK 01 58 17	Nut M12
17	KK 01 27 88	Hose 3/8" L=1500 mm		39	KK 01 27 32	Fix for hose holder
18	KK 01 22 09	Hose 3/8" L=600 mm		40	KK 01 27 04	Hose assembly coil 30 x 1300 mm
19	KK 01 22 08	Hose 3/8" L=500 mm			KK 01 23 36	Hose assembly coil 38 x 1300 mm
20	KK 06 19 42	Clamp for two hoses		41	KK 01 15 96	Hose wrapper 12.5 x 250 mm
21	KK 03 35 35	Hex screw M10 x 35 mm w/nut		42	KK 03 28 95	Hex screw M20 x 95 mm w/nut
22	KK 01 21 04	Threaded coupling 3/8" - 1/2" w/2.0 mm choke (Memory valve) (Before 01.12.98)		43	KK 03 28 07	Hex screw M20 x 100 mm w/nut
	KK 01 20 78	Threaded coupling 3/8" - 3/8" w/2.0 mm choke (Memory valve) (From 01.12.98)		44	KK 01 20 81	Banjo bolt 3/8" x 31 mm w/1 mm choke
	KK 01 20 60	Threaded coupling 3/8" - 1/2" (Sequence memory valve) (Before 01.12.98)		45	KK 01 15 65	Gasket ring 1/2"
	KK 01 22 61	Threaded coupling 3/8" - 3/8" (Sequence memory valve) (From 01.12.98)				
23	KK 01 20 60	Threaded coupling 3/8" - 1/2" (Memory valve) (Before 01.12.98)				
	KK 01 22 61	Threaded coupling 3/8" - 3/8" (Memory valve) (From 01.12.98)				
	KK 01 20 70	Threaded coupling 3/8" - 1/2" w/1.7 mm choke (Sequence memory valve) (Before 01.12.98)				

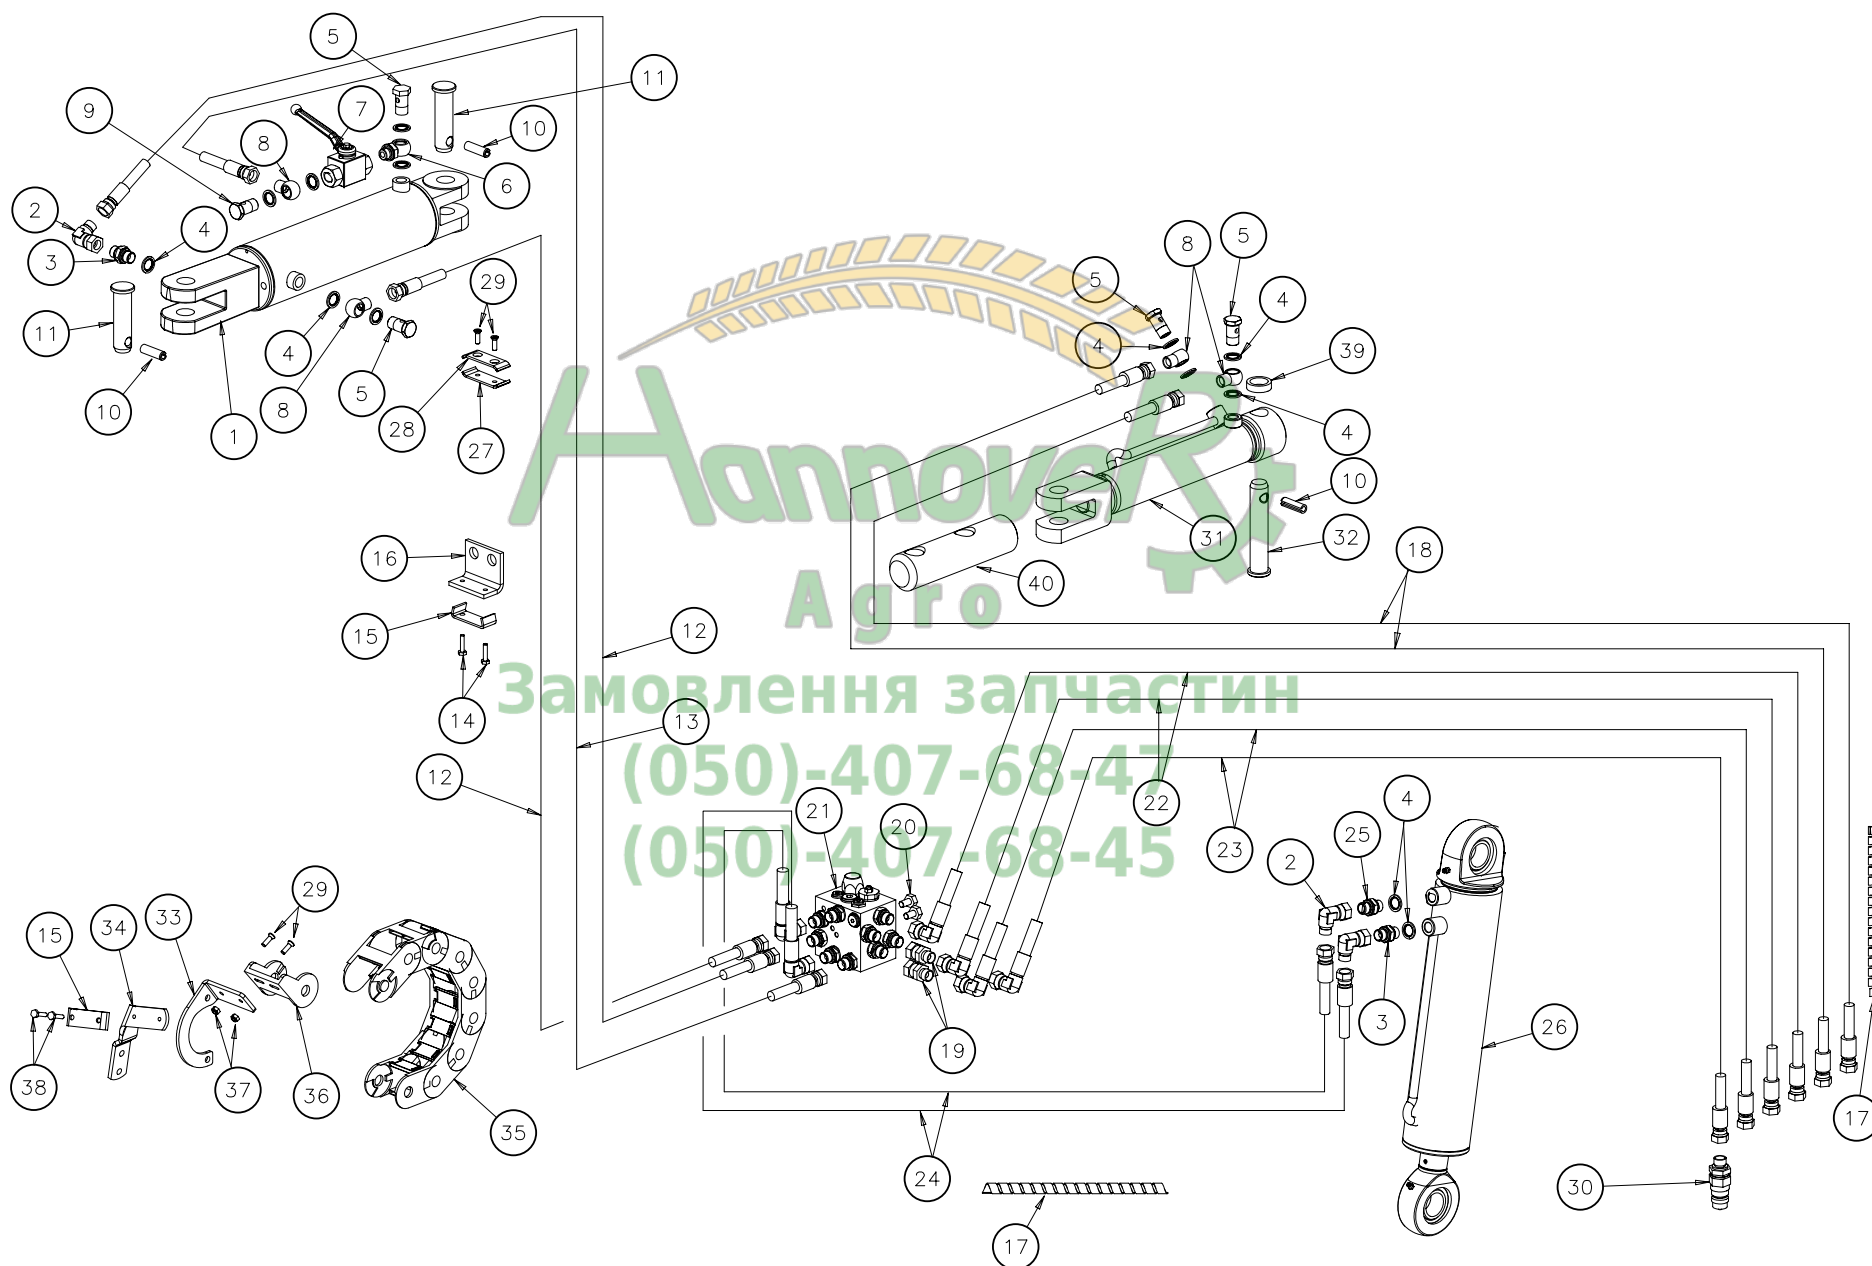


1109 Hydraulic layout for sequence memory valve w/front furrow adjustment cylinder for headstock 200, EG/LB (From 01.01.00)



1	KK 35 38 01	Memory cylinder D80 x 200 mm cpl. (see plate no. 1035) (Before 01.04.01)	31	KK 35 36 81	Front furrow adjustment cylinder D50 x 200 mm cpl. (see plate no. 1112)
	KK 35 39 10	Memory cylinder D80 x 200 mm cpl. (see plate no. 1196) (From 01.04.01) (Before 02.01.02)	32	KK 01 03 19	Bolt w/head D25.3 x 120 mm
	KK 35 45 02	Memory cylinder D80 x 200 mm cpl. (see plate no. 1218) (From 02.01.02)	33	KK 08 15 68	Bracket for hose support
2	KK 01 20 56	Angular coupling 3/8"	34	KK 08 15 66	Bracket for hoses
3	KK 01 22 61	Threaded coupling 3/8" - 3/8"	35	KK 01 35 38	Plastic chain 440 mm
4	KK 01 15 85	Gasket ring 3/8"	36	KK 01 35 37	Bracket for plastic chain
5	KK 01 20 59	Banjo bolt 3/8" x 31	37	KK 01 60 18	Lock nut M6
6	KK 01 25 48	Banjo 3/8" w/adjustable end	38	KK 03 33 25	Hex screw M6 x 25 mm (when using 1 - 3 hoses)
7	KK 01 27 23	Valve w/handle 3/8"		KK 03 23 40	Hex screw M6 x 40 mm (when using 4 - 6 hoses)
8	KK 01 20 62	Banjo 3/8", H = 17	39	KK 01 00 08	Washer
9	KK 01 20 82	Banjo bolt 3/8" x 31, D1.4 choke (for sequence memory valve only)	40	KK 35 36 09	Rod bracet extension
10	KK 01 10 20	Pin D12 x 40 mm	Not ill.	KK 01 35 39	Plastic chain for hose support cpl.
11	KK 01 03 28	Bolt w/head D25.3 x 78 mm		KK 01 35 59	Plastic chain one piece
12	KK 01 27 76	Hose 1/4", L = 2750 mm		KK 01 27 34	Strip, blue 5 x 200 mm
13	KK 01 27 87	Hose 1/4", L = 3250 mm		KK 01 27 35	Strip, red 5 x 200 mm
14	KK 03 33 25	Hex screw M6 x 25 mm			
15	KK 01 25 20	Clamb for 3 hoses 1/4"			
16	KK 06 19 78	Connection angle for 3 hoses, H = 60			
17	KK 01 15 96	Hydraulic hose holder, L = 250 mm			
18	KK 01 27 86	Hose 1/4", L = 3000 mm (for ploughs w/alignment and furrow width adjustment)			
	KK 01 27 84	Hose 1/4", L = 2000 mm (for ploughs without alignment and furrow width adjustment)			
19	KK 01 23 19	Swivel 3/8"			
20	KK 03 35 12	Hex screw M10 x 12 mm			
21	KK 01 27 43	Sequence memory valve 3/8"			
	KK 01 27 41	Memory valve 3/8"			
22	KK 01 22 12	Hose 3/8", L = 900 mm			
23	KK 01 27 89	Hose 1/4", L = 900 mm			
24	KK 01 15 41	Hose 3/8", L = 700 mm			
25	KK 01 20 80	Threaded coupling 3/8", D3.0 mm choke(Before 01.04.02)			
	KK 01 20 78	Threaded coupling 3/8" - 3/8", D2.0 mm choke (From 01.04.02)			
26	KK 35 36 64	Turn-over cylinder D80 x 300 mm cpl. (see plate no. 1111)			
27	KK 01 35 34	Clamp 1/4" x 3 - M6			
28	KK 01 35 33	Clamp 1/4" x 3 - M7			
29	KK 03 33 21	Countersunk screw M6 x 20 mm			
	KK 01 35 41	Clamp 1/4" cpl.			
30	KK 01 21 58	Quick coupling 1/2" - 3/8"			

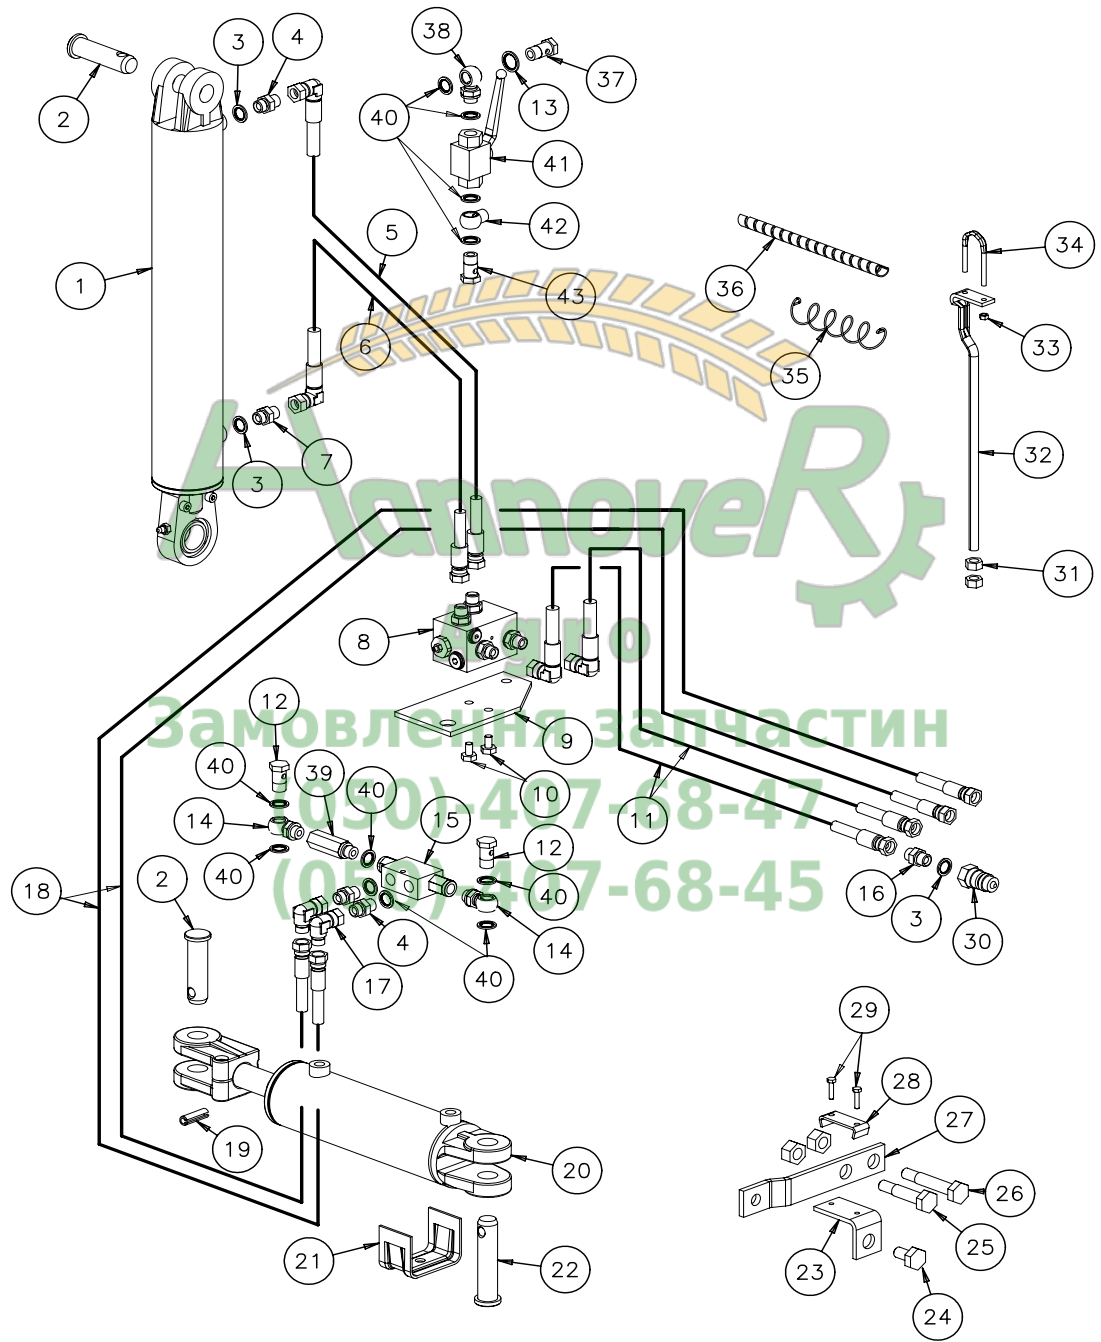

1	KK 35 24 01	Turn-over cylinder D75 x 400 mm (see plate no. 369) (Before 01.07.97)	20	KK 35 23 72	Hydraulic cylinder for furrow width adjustment D75 x 200 mm (see plate no. 568) (Before 01.08.96)
	KK 35 37 08	Turn-over cylinder D75 x 400 mm (see plate no. 1005) (From 01.07.97)		KK 35 37 04	Hydraulic cylinder for furrow width adjustment D75 x 200 mm (see plate no. 890) (From 01.08.96) (Before 01.04.01)
2	KK 01 03 28	Bolt w/head 25.3 x 78 mm		KK 35 39 04	Hydraulic cylinder for furrow width adjustment D75 x 200 mm (see plate no. 1195) (From 01.04.01)
3	KK 01 15 65	Gasket ring 1/4" (Before 01.07.97)			
	KK 01 15 85	Gasket ring 3/8" (From 01.07.97)			
4	KK 01 20 60	Threaded coupling 3/8" - 1/2" (for turning w/bodies under the frame) (Before 01.07.97)	21	KK 07 21 77	Bracket for cylinder
	KK 01 22 61	Threaded coupling 3/8" - 3/8" (for turning w/bodies under the frame) (From 01.07.97)	22	KK 01 03 18	Bolt w/head 25.3 x 100 mm
	KK 01 21 04	Threaded coupling 3/8" - 1/2" w/2.0 mm choke (for turning w/bodies over the frame) (Before 01.07.97)	23	KK 06 19 43	Holder for three hoses (For turning w/bodies over the frame)
	KK 01 20 78	Threaded coupling 3/8" - 1/2" w/2.0 mm choke (for turning w/bodies over the frame) (From 01.07.97)	24	KK 03 27 25	Hex screw M16 x 27 mm (For turning w/bodies over the frame)
5	KK 01 22 12	Hose 3/8" L=900 mm	25	KK 03 27 75	Hex screw M16 x 75 mm w/nut (For turning w/bodies over the frame)
6	KK 01 22 09	Hose 3/8" L=600 mm	26	KK 03 27 90	Hex screw M16 x 90 mm w/nut (For turning w/bodies over the frame)
7	KK 01 21 04	Threaded coupling 3/8" - 1/2" w/2.0 mm choke (For turning w/bodies under the frame) (Before 01.07.97)	27	KK 06 19 45	Extension for hose holder (For turning w/bodies over the frame)
	KK 01 20 78	Threaded coupling 3/8" - 3/8" w/2.0 mm choke (For turning w/bodies under the frame) (From 01.07.97)	28	KK 01 25 20	Clamp for three hoses (For turning w/bodies over the frame)
	KK 01 20 60	Threaded coupling 3/8" - 1/2" (For turning w/bodies over the frame) (Before 01.07.97)	29	KK 03 33 25	Hex screw M6 x 25 mm (For turning w/bodies over the frame)
	KK 01 22 61	Threaded coupling 3/8" - 3/8" (For turning w/bodies over the frame) (From 01.07.97)	30	KK 01 21 14	Quick coupling plug
8	KK 01 27 40	Turn-over valve 3/8"	31	KK 01 58 17	Nut M12
9	KK 07 16 97	Holder for turn-over valve	32	KK 01 27 01	Hose holder
10	KK 03 35 16	Hex screw M10 x 16 mm	33	KK 01 58 99	Wing nut M6
11	KK 01 27 88	Hose 3/8" L=1500 mm	34	KK 01 27 02	Clamp for hose holder
12	KK 01 21 48	Banjo bolt 1/2" w/2.0 mm choke (Before 01.07.97)	35	KK 01 27 04	Hose assembly coil 30 x 1300 mm
	KK 01 20 84	Banjo bolt 3/8" w/2.0 mm choke (From 01.07.97)	36	KK 01 15 96	Hose wrapper 12.5 x 250 mm
13	KK 01 21 77	Gasket ring	37	KK 01 21 44	Banjobolt 1/2" (Before 01.07.97)
14	KK 01 25 48	Banjo 3/8"		KK 01 20 59	Banjobolt 3/8" (From 01.07.97)
15	KK 01 25 08	Lock valve	38	KK 01 27 28	Banjo 1/2" (Before 01.07.97)
16	KK 01 20 60	Threaded coupling 3/8" - 1/2" (Before 01.07.97)		KK 01 25 48	Banjo 3/8" (From 01.07.97)
	KK 01 22 61	Threaded coupling 3/8" - 3/8" (From 01.07.97)	39	KK 01 25 77	Threaded coupling 3/8" outer - 3/8" inner
17	KK 01 20 56	Angle 3/8"	40	KK 01 15 85	Gasket ring 3/8"
18	KK 01 27 76	Hose 1/4" L = 2750 mm (for turning w/bodies under the frame)	41	KK 01 27 23	Valve w/handle 3/8"
	KK 01 27 52	Hose 1/4" L=3500 mm (for turning w/bodies over the frame)	42	KK 01 20 62	Banjo 3/8"
19	KK 01 07 00	Pin D12 (Before 01.08.97)	43	KK 01 20 59	Banjobolt 3/8" x 31
	KK 01 10 20	Roll pin D12 x 40 mm (From 01.08.97)			

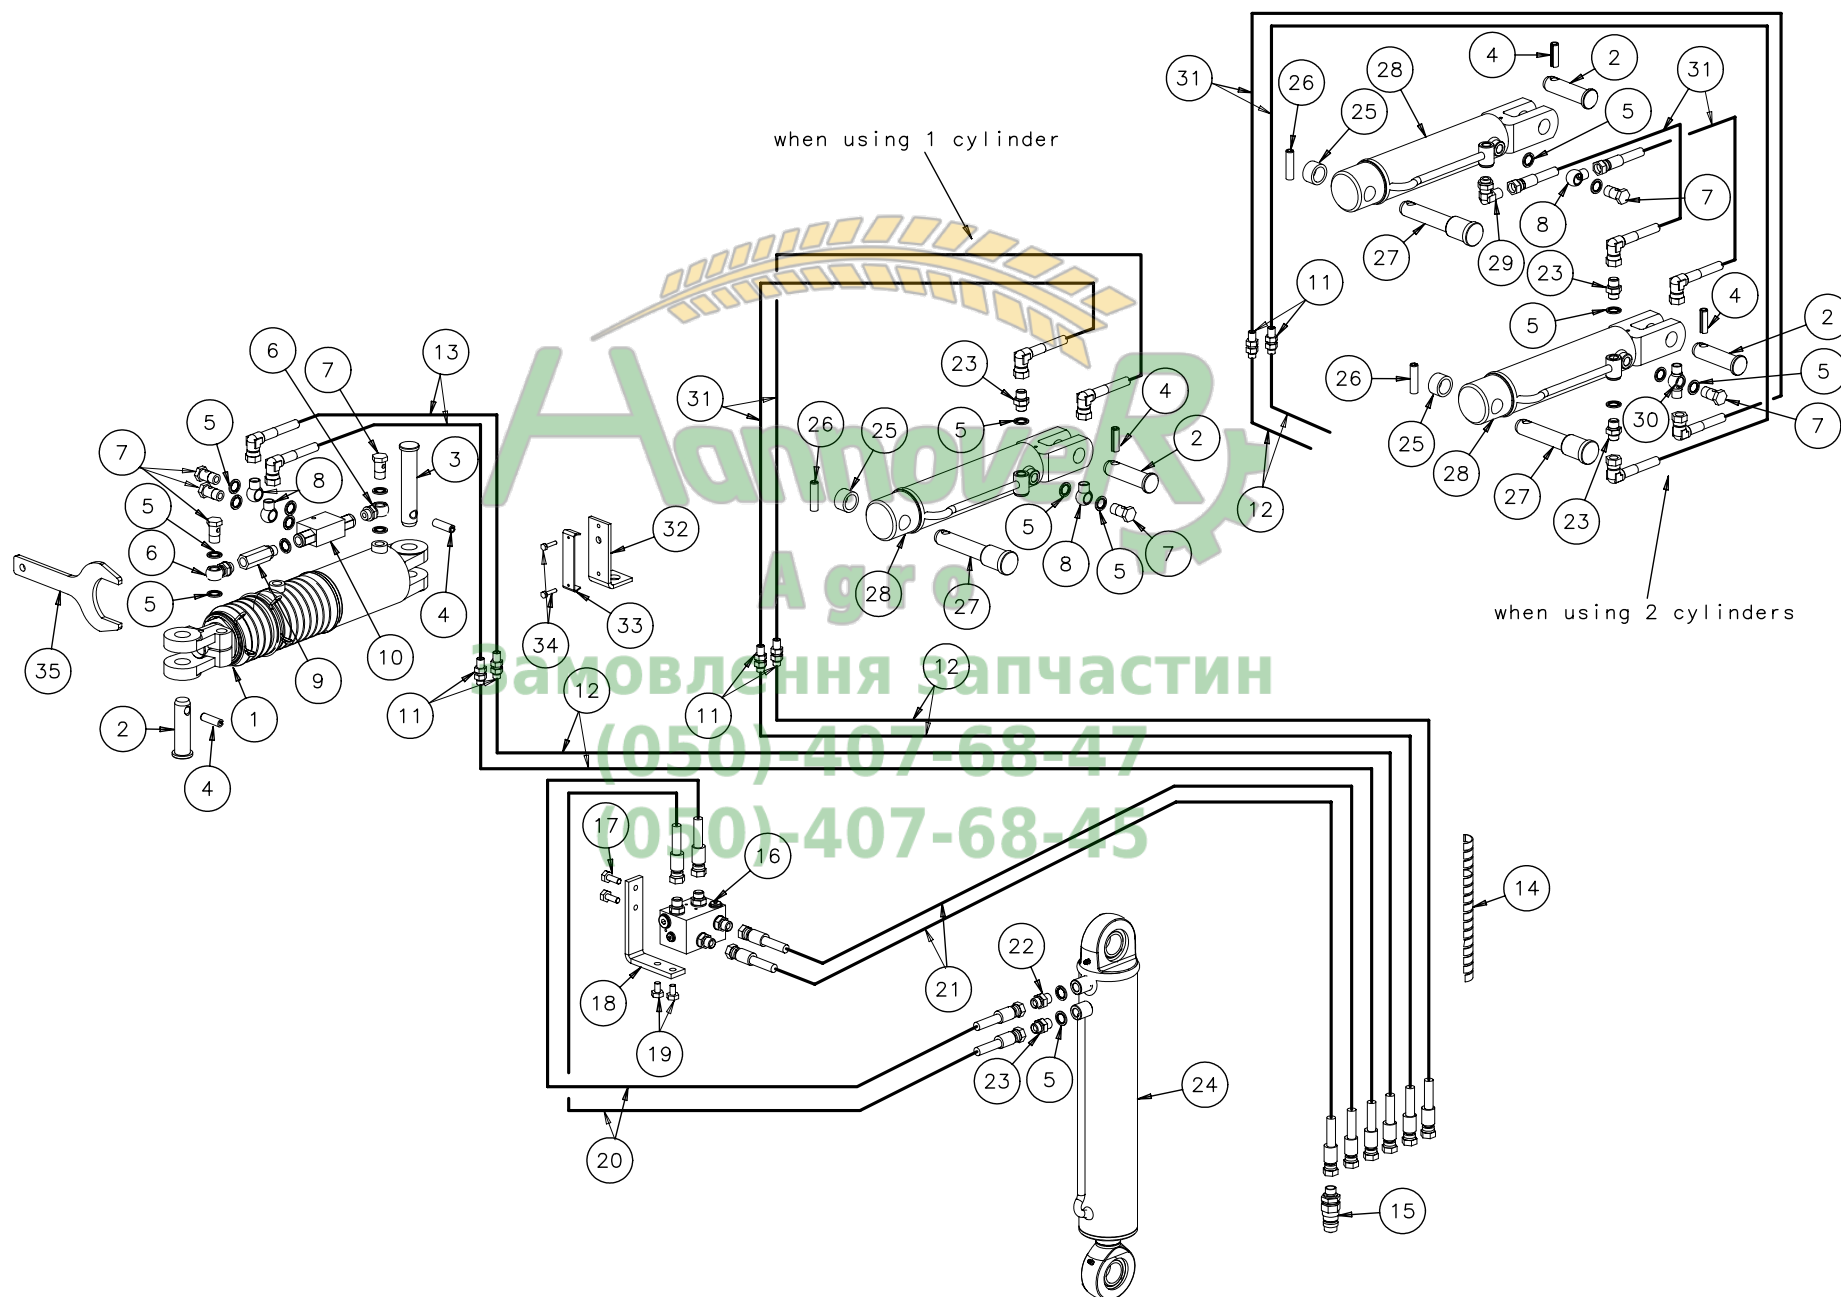


**1125 Hydraulic layout w/front furrow adjustment cylinder for headstock 300, EG-LB
(From 01.04.00)**




1	KK 35 38 04	Hydraulic cylinder w/stop and bellow D80 x 200 mm cpl. (see plate no. 1062)	Not ill.	KK 01 27 34	Strip, blue 5 x 200 mm
2	KK 01 03 28	Bolt w/head D25.3 x 78 mm		KK 01 27 35	Strip, red 5 x 200 mm
3	KK 01 03 19	Bolt w/head D25.3 x 120 mm		KK 01 35 29	Strip, yellow 5 x 200 mm
4	KK 01 10 20	Roll pin D12 x 40 mm		KK 30 90 29	Strip, PLT4HC 7.5 x 340 mm
5	KK 01 15 85	Gasket ring 3/8"		KK 01 35 00	Hydraulic hose holder, black D32 x 250 mm
6	KK 01 25 48	Banjo w/adjustable end 3/8"			
7	KK 01 20 59	Banjo bolt 3/8" x 31			
8	KK 01 20 62	Banjo 3/8", H = 17			
9	KK 01 25 77	Threaded coupling 3/8" - 3/8", L = 59			
10	KK 01 25 08	Lock valve 3/8"			
11	KK 01 27 07	Bulkhead pipe 3/8" w/nut			
12	KK 01 27 85	Hose 1/4", L = 2250 mm			
13	KK 01 26 63	Hose 1/4", L = 750 mm			
14	KK 01 15 96	Hydraulic hose holder, L = 250 mm			
15	KK 01 21 58	Quick coupling 1/2" - 3/8"			
16	KK 01 27 40	Turn-over valve 3/8"			
17	KK 03 35 25	Hex screw M10 x 25 mm			
18	KK 08 14 81	Bracket for valve			
19	KK 03 35 16	Hex screw M10 x 16 mm			
20	KK 01 27 78	Hose 3/8", L = 1000 mm			
21	KK 01 27 73	Hose 3/8", L = 1300 mm			
22	KK 01 20 80	Threaded coupling 3/8", D3.0 mm choke (Before 01.04.02)			
	KK 01 20 78	Threaded coupling 3/8" - 3/8", D2.0 mm choke (From 01.04.02)			
23	KK 01 22 61	Threaded coupling 3/8" - 3/8"			
24	KK 35 36 65	Turn-over cylinder D80 x 300 mm cpl. (see plate no. 1111)			
25	KK 10 66 07	Bushing D35 x D25.7 x 20 mm			
26	KK 01 10 21	Roll pin D12 x 50 mm			
27	KK 08 14 65	Bolt w/head D35 x D25.3 x 138 mm			
28	KK 35 36 80	Front furrow adjustment cylinder D63 x 200 mm cpl. (see plate no. 1123)			
29	KK 01 27 30	Angle 3/8" w/contra nut			
30	KK 01 25 70	Double banjo 3/8" - 3/8", H = 17			
31	KK 01 26 78	Hose 1/4", L = 250 mm			
32	KK 06 19 40	Connection angle for 6 hoses			
33	KK 01 27 10	Clamp for 6 hoses, 1/4"			
34	KK 03 33 25	Hex screw M6 x 25 mm			
35	KK 01 06 55	Spanner			



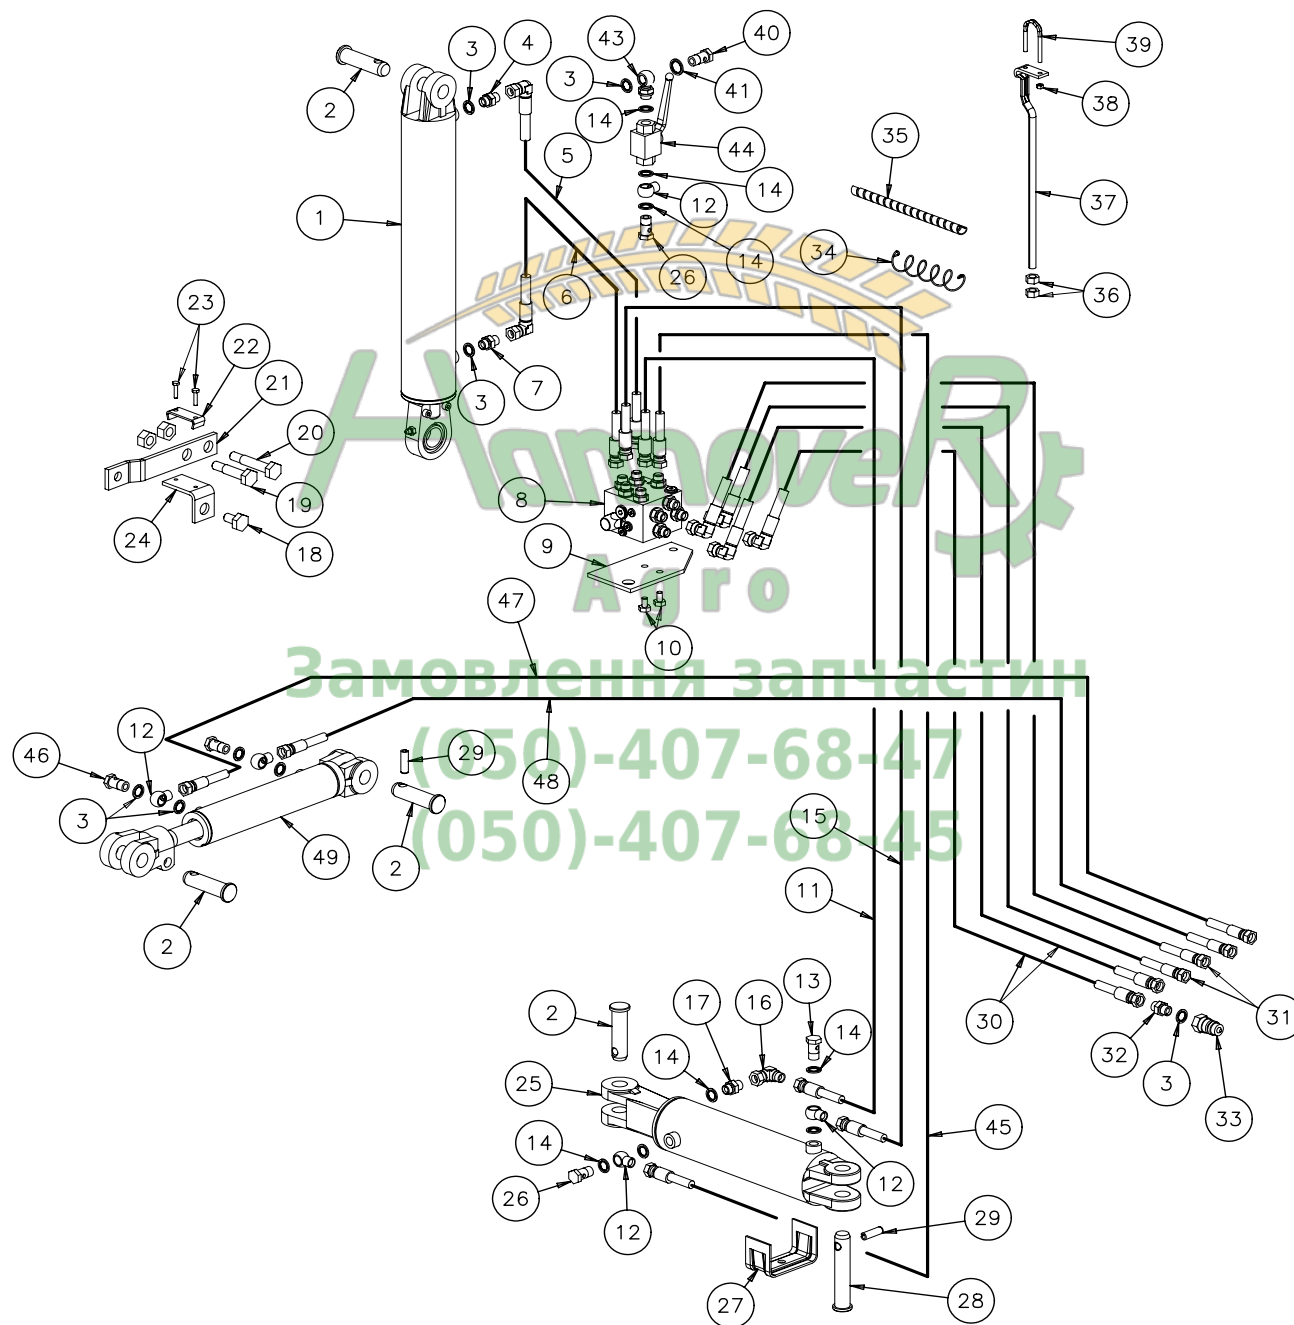

1	KK 35 24 01	Turn-over cylinder D75 x 400 mm (see plate no. 369) (Before 01.07.97)	25	KK 35 33 75	Memory cylinder D80 x 200 mm cpl. (see plate no. 306) (Before 01.03.98)
	KK 35 37 08	Turn-over cylinder D75 x 400 mm (see plate no. 1005) (From 01.07.97)		KK 35 38 01	Memory cylinder D80 x 200 mm cpl. (see plate no. 1035) (From 01.03.98) (Before 01.04.01)
2	KK 01 03 28	Bolt w/head 25.3 x 78 mm		KK 35 39 10	Memory cylinder D80 x 200 mm cpl. (see plate no. 1196) (From 01.04.01)
3	KK 01 15 65	Gasket ring 1/2" (Before 01.07.97)	26	KK 01 20 59	Banjo bolt 3/8" x 31 mm
	KK 01 15 85	Gasket ring 3/8" (From 01.07.97)	27	KK 07 21 76	Bracket for memory cylinder
4	KK 01 21 04	Threaded coupling 3/8" - 1/2" w/2 mm choke (For sequence-memory valve) (Before 01.07.97)	28	KK 01 03 19	Bolt w/head 25.3 x 120 mm
	KK 01 20 78	Threaded coupling 3/8" - 3/8" w/2 mm choke (For sequence-memory valve) (From 01.07.97)	29	KK 01 07 00	Pin (Before 01.08.97)
5	KK 01 22 09	Hose 3/8" L=600 mm		KK 01 10 20	Pin (From 01.08.97)
6	KK 01 22 12	Hose 3/8" L=900 mm	30	KK 01 27 88	Hose 3/8" L=1500 mm
7	KK 01 20 60	Threaded coupling 3/8" - 1/2" (Before 01.07.97)	31	KK 01 27 77	Hose 1/4" L=1500 mm
	KK 01 22 61	Threaded coupling 3/8" - 3/8" (From 01.07.97)	32	KK 01 20 60	Threaded coupling 3/8" - 1/2" (Before 01.07.97)
8	KK 01 27 41	Memory valve 3/8"		KK 01 22 61	Threaded coupling 3/8" - 3/8" (From 01.07.97)
	KK 01 27 43	Sequence memory valve	33	KK 01 21 14	Quick coupling
9	KK 07 16 97	Holder for memory valve	34	KK 01 27 04	Hose assembly coil 30 x 1300 mm
10	KK 03 35 16	Hex screw M10 x 16 mm		KK 01 23 36	Hose assembly coil 38 x 1300 mm (For hydraulic alignment)
11	KK 01 27 84	Hose 1/4" L=2000 mm (For memory valve)	35	KK 01 15 96	Hose wrapper 12.5 x 250 mm
	KK 01 27 76	Hose 1/4" L=2750 mm (For sequence-memory valve)	36	KK 01 58 17	Nut M12
12	KK 01 20 62	Banjo 3/8"	37	KK 01 27 01	Hose holder
13	KK 01 20 59	Banjo bolt 3/8" x 31 mm	38	KK 01 58 99	Wing nut M6
	KK 01 20 83	Banjo bolt 3/8" x 31 w/1.7 mm choke	39	KK 01 27 02	Clamp for hose holder
14	KK 01 15 85	Gasket ring 3/8"	40	KK 01 21 44	Banjo bolt 1/2" (Before 01.07.97)
15	KK 01 27 75	Hose 1/4" L=2500 mm (For memory valve)		KK 01 20 59	Banjo bolt 3/8" (From 01.07.97)
	KK 01 27 87	Hose 1/4" L=3250 mm (For sequence-memory valve)	41	KK 01 21 77	Gasket ring
16	KK 01 20 56	Angle 3/8"	43	KK 01 27 28	Banjo 1/2" (Before 01.07.97)
17	KK 01 22 61	Threaded coupling 3/8" - 3/8"		KK 01 25 48	Banjo 3/8 " (From 01.07.97)
18	KK 03 27 25	Hex screw M16 x 27 mm (For sequence-memory valve)	44	KK 01 27 23	Tap 3/8"
19	KK 03 27 75	Hex screw M16 x 75 mm (For sequence-memory valve) (Before 01.08.96)	45	KK 01 27 84	Hose 1/4" L=2000 mm (For memory valve)
	KK 03 28 90	Hex screw M20 x 90 mm (From 01.08.96)		KK 01 27 86	Hose 1/4" L=3000 mm (For sequence-memory valve)
20	KK 03 27 90	Hex screw M16 x 90 mm (For sequence-memory valve) (Before 01.08.96)	46	KK 01 20 81	Banjo bolt 3/8" x 31 mm w/1 mm choke
	KK 03 28 90	Hex screw M20 x 90 mm (From 01.08.96)	47	KK 01 27 52	Hose 1/4" L = 3500 mm
21	KK 06 19 45	Extention for hose holder (For sequence-memory valve)	48	KK 01 27 87	Hose 1/4" L = 3250 mm
22	KK 01 25 20	Clamp for three hoses (For sequence-memory valve)	49	KK 35 37 01	Hydraulic cylinder D50 x 200 mm cpl. (see plate no. 525) (Before 01.04.01)
	KK 01 27 10	Clamp for six hoses (For sequence-memory valve w/hydraulic alignment)		KK 35 39 01	Hydraulic cylinder D50 x 200 mm cpl. (see plate no. 1192) (From 01.04.01)
23	KK 03 33 25	Hex screw M6 x 25 mm			
24	KK 06 19 43	Holder for three hoses (For sequence-memory valve)			
	KK 06 19 40	Holder for six hoses (For sequence-memory valve w/hydraulic alignment)			

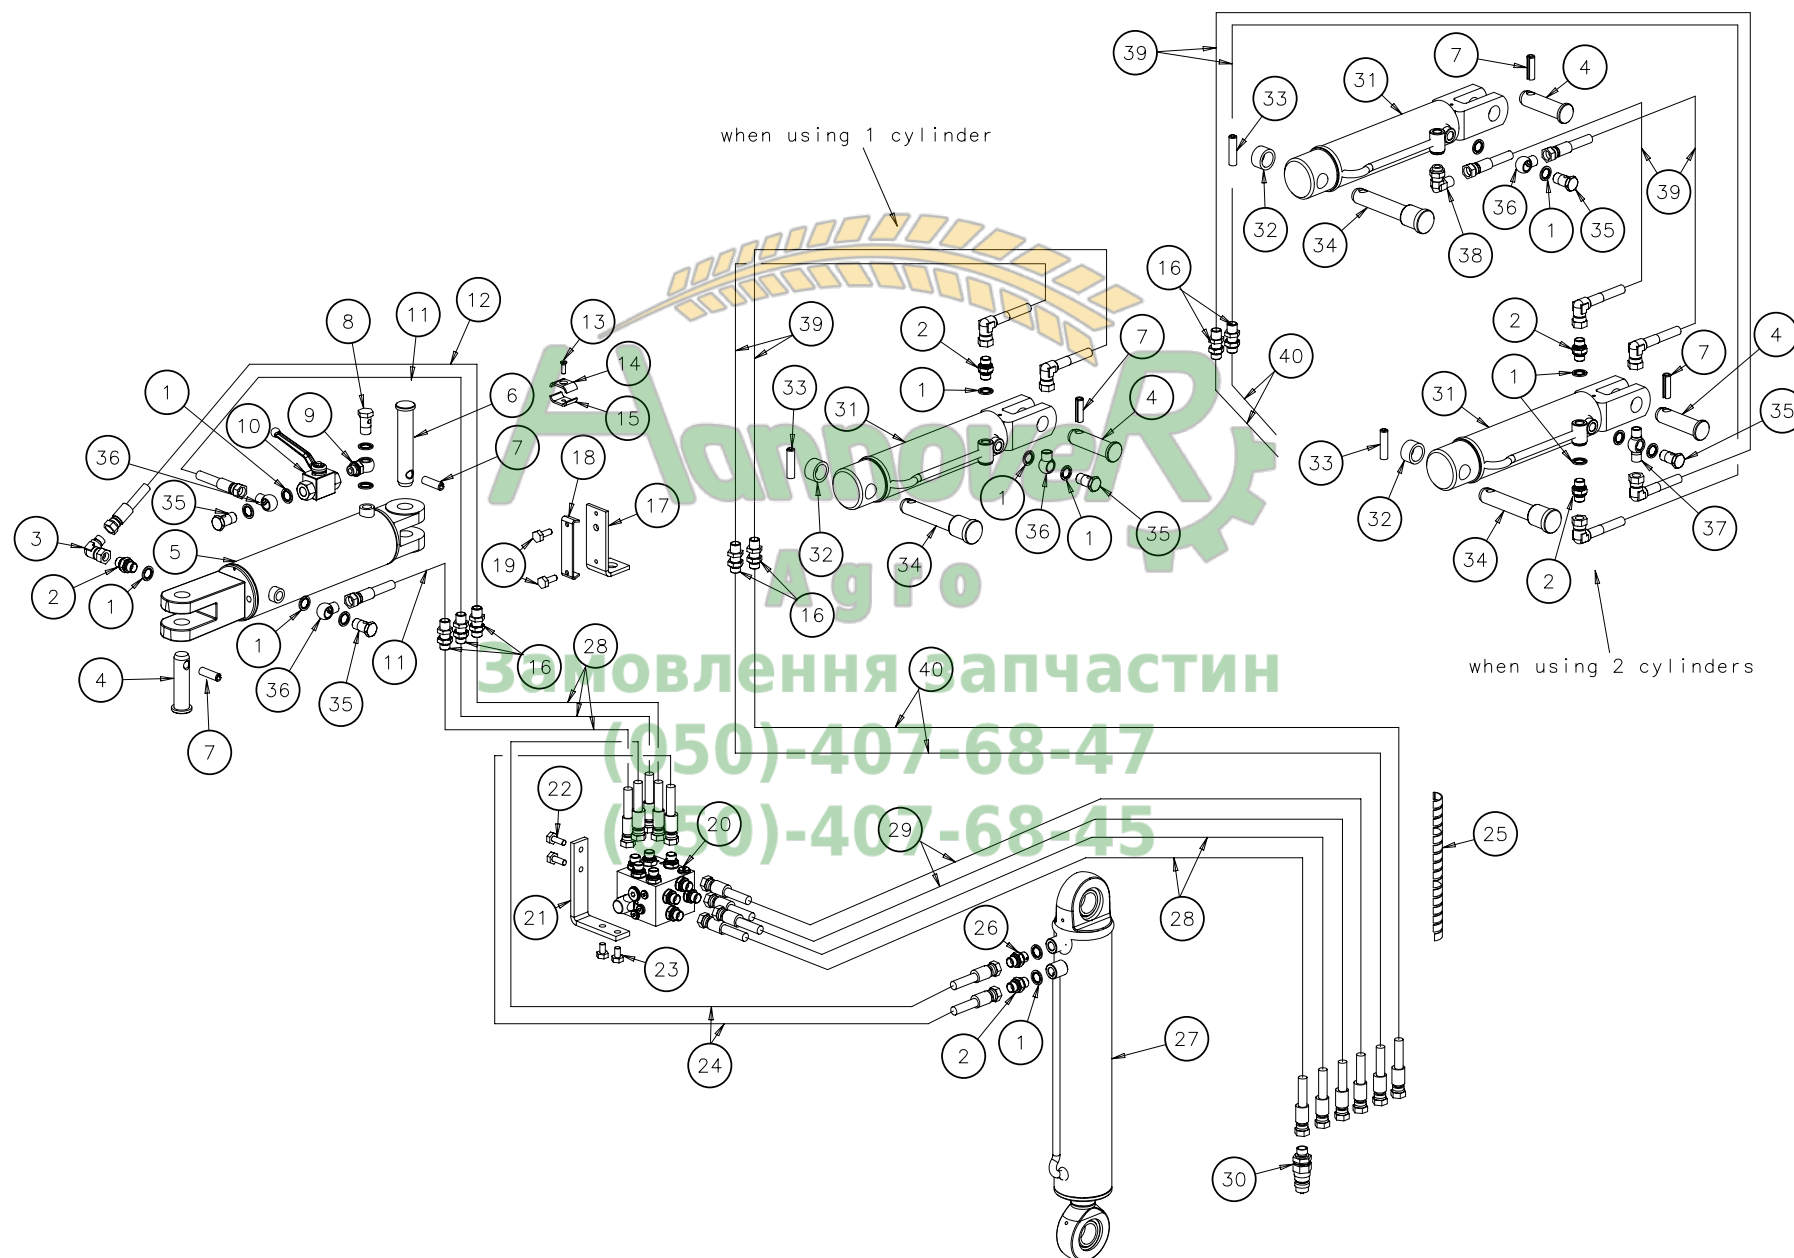

1124 Hydraulic layout for sequence memory valve w/front furrow adjustment cylinder for headstock 300, EG-LB (From 01.04.00)


1	KK 01 15 85	Gasket ring 3/8"	33	KK 01 10 21	Roll pin D12 x 50 mm
2	KK 01 22 61	Threaded coupling 3/8" - 3/8"	34	KK 08 14 65	Bolt w/head D35 x D25.3 x 138 mm
3	KK 01 20 56	Angular coupling 3/8"	35	KK 01 20 59	Banjo bolt 3/8" x 31
4	KK 01 03 28	Bolt w/head D25.3 x 78 mm	36	KK 01 20 62	Banjo 3/8", H = 17
5	KK 35 38 01	Memory cylinder D80 x 200 mm cpl. (see plate no. 1035) (Before 01.04.01)	37	KK 01 25 70	Double banjo 3/8" - 3/8", H = 17
	KK 35 39 10	Memory cylinder D80 x 200 mm cpl. (see plate no. 1196) (From 01.04.01) (Before 02.01.02)	38	KK 01 27 30	Angle 3/8" w/contra nut
	KK 35 45 02	Memory cylinder D80 x 200 mm cpl. (see plate no. 1218) (From 02.01.02)	39	KK 01 26 78	Hose 1/4", L = 250 mm
6	KK 01 03 19	Bolt w/head D25.3 x 120 mm	40	KK 01 27 85	Hose 1/4", L = 2250 mm
7	KK 01 10 20	Roll pin D12 x 40 mm	Not ill.	KK 01 27 34	Strip, blue 5 x 200 mm
8	KK 01 20 82	Banjo bolt 3/8" x 31, D1.4 choke (when turning the bodies over the frame)		KK 01 27 35	Strip, red 5 x 200 mm
	KK 01 20 59	Banjo bolt 3/8" x 31 (when turning the bodies under the frame)		KK 30 90 29	Strip, PLT4HC 7.5 x 340 mm
9	KK 01 25 48	Banjo 3/8" w/adjustable end		KK 01 35 29	Strip, yellow 5 x 200 mm
10	KK 01 27 23	Valve w/handle 3/8"		KK 01 35 00	Hose band D32 x 250 mm
11	KK 01 26 71	Hose 1/4", L = 1000 mm			
12	KK 01 26 77	Hose 1/4", L = 1250 mm			
13	KK 03 33 21	Countersunk screw M6 x 20 mm			
14	KK 01 35 31	Clamp 1/4" x 2 - M7			
15	KK 01 35 32	Clamp 1/4" x 2 - M6			
	KK 01 35 40	Clamp 1/4" x 2 cpl.			
16	KK 01 27 07	Bulkhead pipe 3/8" w/nut			
17	KK 06 19 40	Connection angle for 6 hoses			
18	KK 01 27 10	Clamp for 6 hoses, 1/4"			
19	KK 03 33 25	Hex screw M6 x 25 mm			
20	KK 01 27 43	Sequence memory valve 3/8" (when turning the bodies over the frame)			
	KK 01 27 41	Memory valve 3/8" (when turning the bodies under the frame)			
21	KK 08 14 81	Bracket for valve			
22	KK 03 35 25	Hex screw M10 x 25 mm			
23	KK 03 35 16	Hex screw M10 x 16 mm			
24	KK 01 27 78	Hose 3/8", L = 1000 mm			
25	KK 01 15 96	Hydraulic hose holder, L = 250 mm			
26	KK 01 20 80	Threaded coupling 3/8", D3.0 choke			
27	KK 35 36 65	Turn-over cylinder D80 x 300 mm cpl. (see plate no. 1111)			
28	KK 01 26 77	Hose 1/4", L = 1250 mm			
29	KK 01 27 73	Hose 3/8", L = 1300 mm			
30	KK 01 21 58	Quick coupling 1/2" - 3/8"			
31	KK 35 36 80	Front furrow adjustment cylinder D63 x 200 mm cpl. (see plate no. 1123)			
32	KK 10 66 07	Bushing D35 x D25.7 x 20 mm			




1	KK 35 21 66	Cylinder tube D75 mm
2	KK 01 18 02	O-ring D70 x 3 mm
3	KK 35 21 61	End cap
4	KK 01 15 65	Gasket ring 1/2"
5	KK 01 15 94	Plug
6	KK 01 58 18	Nut M12
7	KK 35 21 64	Tie rod
8	KK 01 19 06	Piston packing
9	KK 35 21 69	Piston rod w/piston
10	KK 01 19 50	Packing for piston rod D36/D44 x 6 mm
11	KK 35 21 72	Clevis cap w/packings
12	KK 01 19 11	Scraper packing D36/D45 x 7/10 mm
13	KK 01 60 40	Nut R1"
14	KK 35 21 75	Clevis (Before 01.09.98)
	KK 35 21 97	Clevis (From 01.09.98)
Not ill.	KK 01 19 40	Packings cpl.
	KK 35 23 72	Cylinder D75 x 200 mm
	KK 35 23 73	Cylinder D75 x 200 mm w/twisted end cap



Замовлення запчастин
(050)-407-68-47
(050)-407-68-45

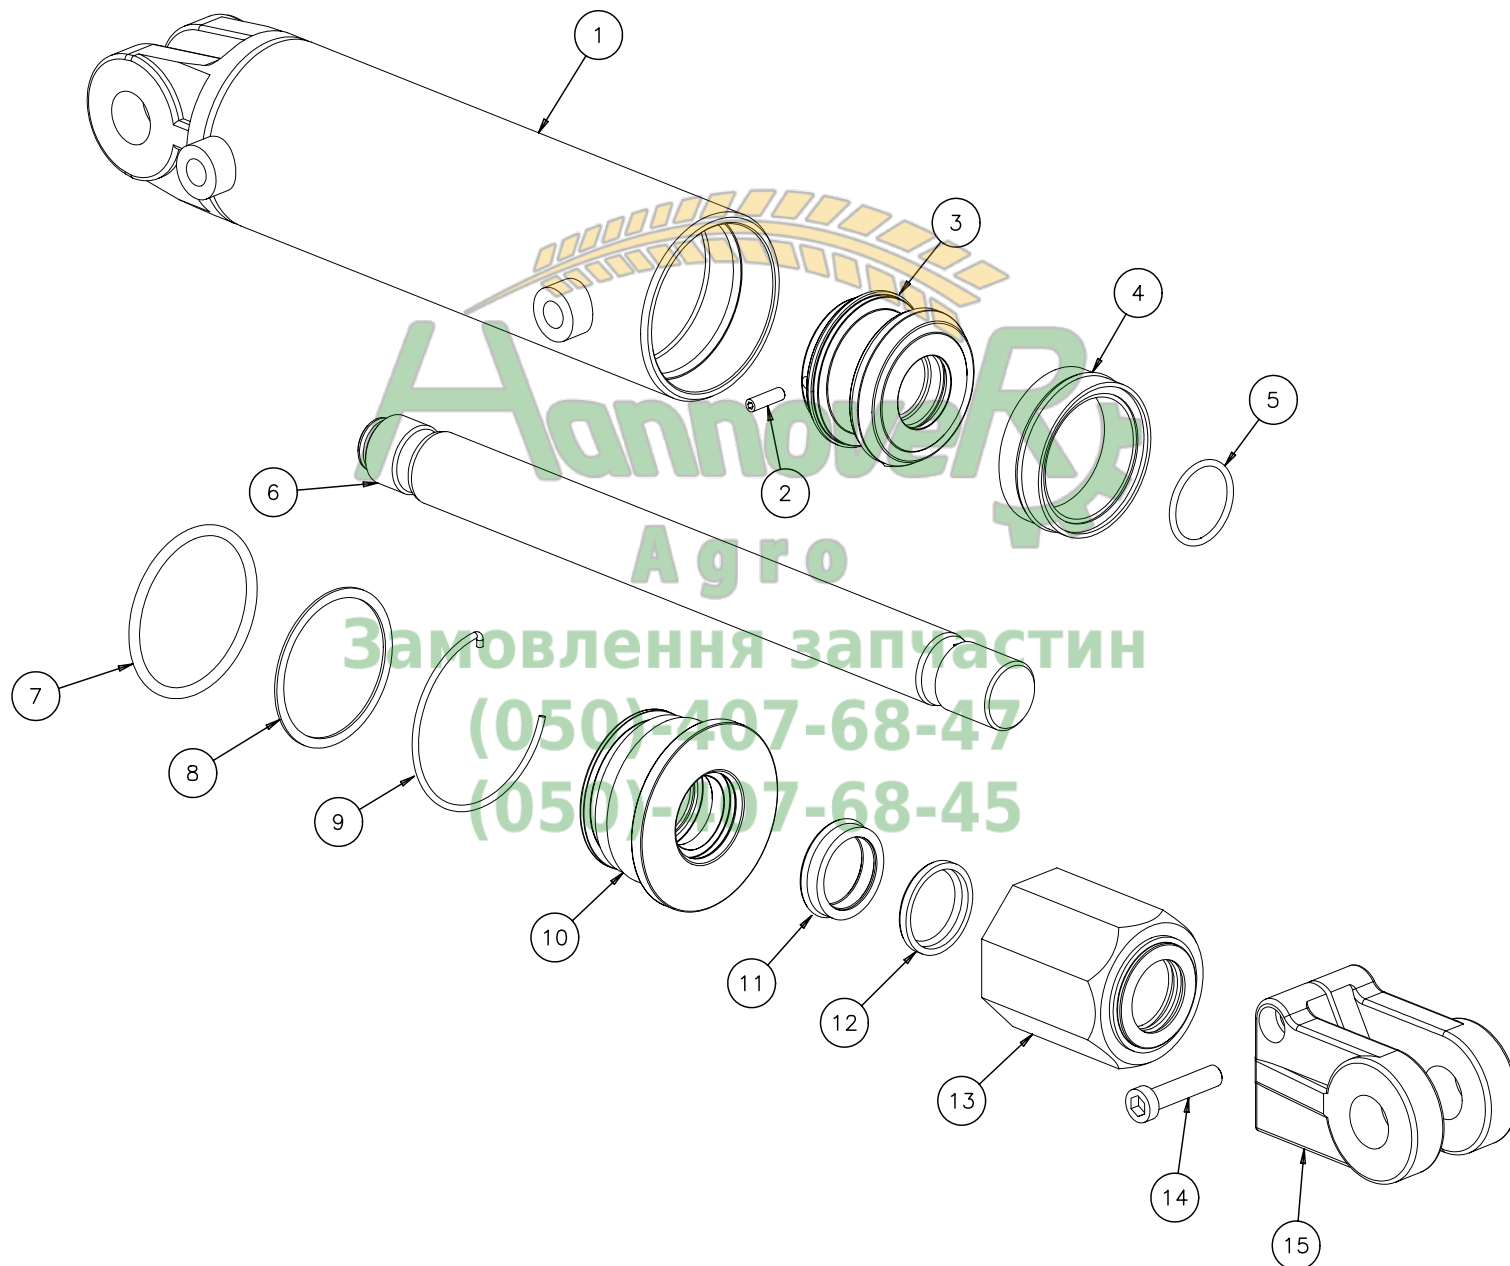


1	KK 35 37 32	Cylinder tube for art.no 353704 (cylinder D75 x 200 mm without stop) and 353705 (cylinder D75 x 200 mm w/stop)
	KK 35 37 35	Cylinder tube for art.no 353706 (cylinder D75 x 200 mm w/90° twisted end cap)
	KK 35 37 36	Cylinder tube for art.no 353707 (cylinder D75 x 400 mm w/90° twisted end cap)
2	KK 03 20 06	Screw w/inner hex M6 x 20 mm
3	KK 35 37 27	Piston
4	KK 01 17 36	Piston packing
5	KK 01 17 37	O-ring
6	KK 35 37 44	Piston rod for art.no 353705 (cylinder D75 x 200 mm w/stop)
	KK 35 37 43	Piston rod for art.no 353704 and 353706 (cylinders D75 x 200 mm without stop)
	KK 35 37 46	Piston rod for art.no 353707 (cylinder D75 x 400 mm w/twisted end cap)
7	KK 01 17 38	O-ring
8	KK 01 17 43	Ring
9	KK 01 17 46	Ring (Before 15.03.99)
	KK 35 37 93	Lock spring (From 15.03.99)
10	KK 35 37 26	Packing seal
11	KK 01 17 44	Piston rod packing
12	KK 01 17 45	Scraper
13	KK 35 37 45	Stop for art.no 353705 (cylinder D75 x 200 mm w/stop)
14	KK 03 20 16	Screw w/inner hex M10 x 45 mm
15	KK 35 37 28	Clevis
Not ill.	KK 35 37 29	Packings cpl.
	KK 35 37 04	Cylinder D75 x 200 mm without stop, cpl.
	KK 35 37 05	Cylinder D75 x 200 mm w/stop, cpl.
	KK 35 37 06	Cylinder D75 x 200 mm w/90° twisted end cap, cpl.
	KK 35 37 07	Cylinder D75 x 400 mm w/90° twisted end cap, cpl.

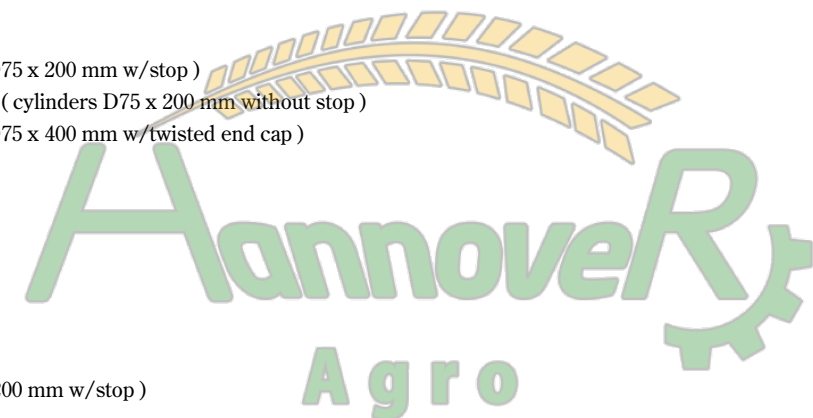

Замовлення запчастин

(050)-407-68-47


(050)-407-68-45

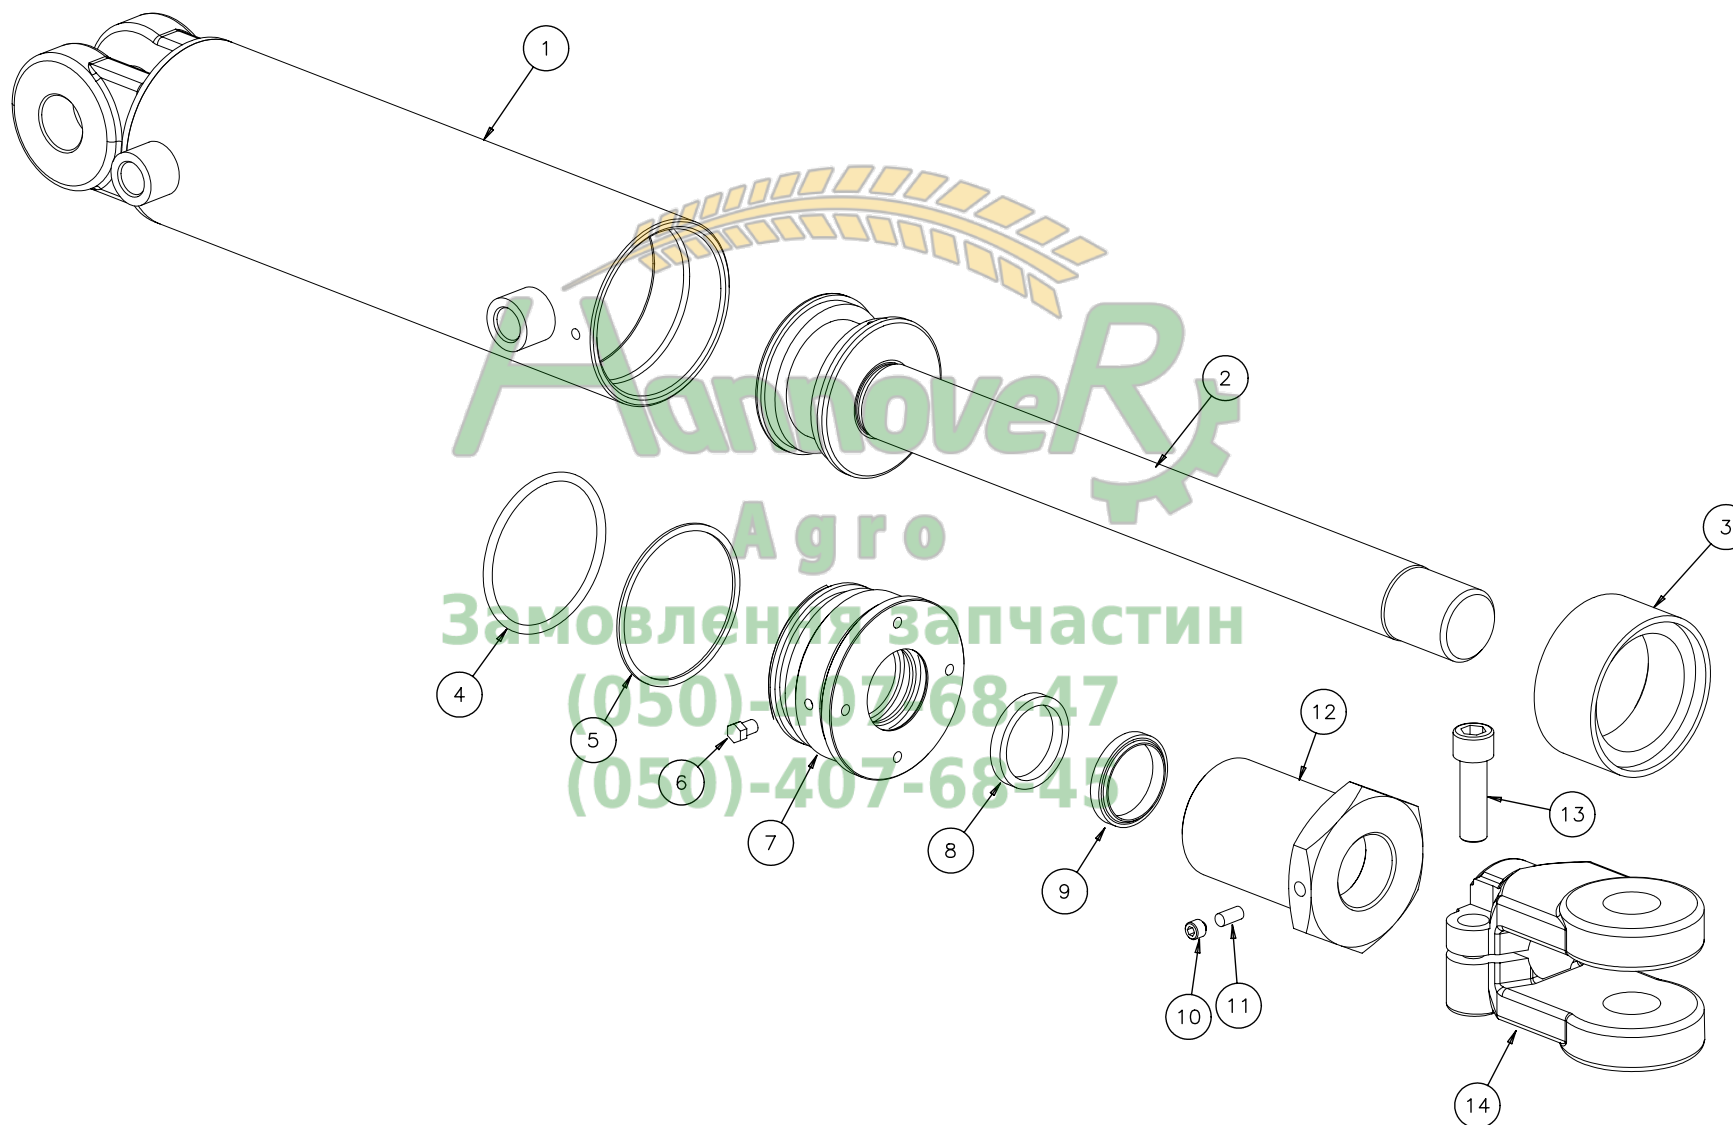

1	KK 35 39 38	Cylinder tube (for cylinder KK 35 39 04 and KK 35 39 05)
	KK 35 39 39	Cylinder tube (for cylinder KK 35 39 06)
2	KK 35 39 40	Piston rod (for cylinder KK 35 39 04 and KK 35 39 06)
	KK 35 39 41	Piston rod (for cylinder KK 35 39 05)
3	KK 01 30 93	Piston packing
4	KK 01 30 96	O-ring D67 x 4 mm
5	KK 01 30 95	Support ring
6	KK 03 33 06	Hex screw M6 x 8 mm
7	KK 35 39 27	Packing seal
8	KK 01 30 94	Piston rod packing
9	KK 01 30 92	Scraper
10	KK 03 21 10	Set screw M8 x 8 mm (for cylinder KK 35 39 05)
11	KK 35 39 46	Pin for stop (for cylinder KK 35 39 05)
12	KK 35 39 45	Stop (for cylinder KK 35 39 05)
13	UH 82 56 40	Cylinder screw M12 x 40 mm
14	KK 35 39 23	Clevis

Not ill.	KK 01 30 87	Packings cpl.
	KK 35 39 04	Hydraulic cylinder D75 x 200 mm cpl.
	KK 35 39 05	Hydraulic cylinder D75 x 200 mm w/stop cpl.
	KK 35 39 06	Hydraulic cylinder D75 x 200 mm w/90° twisted end cap cpl.



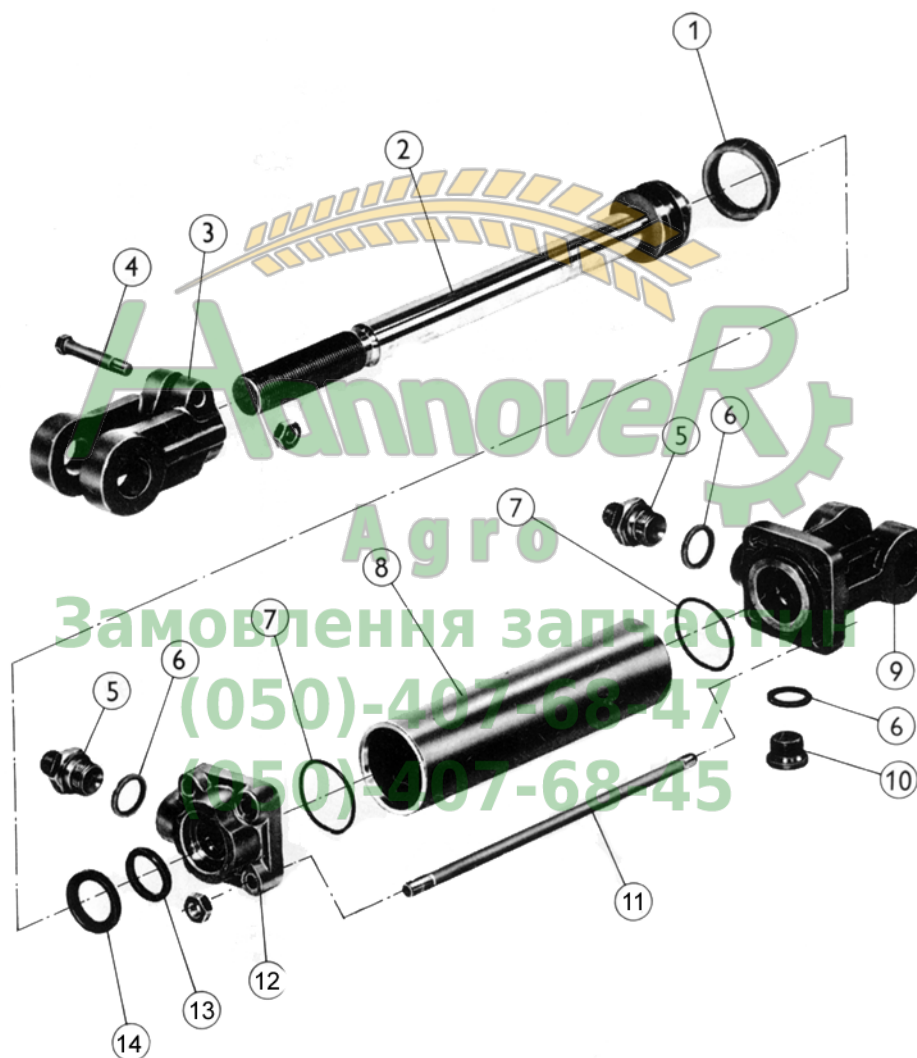

1	KK 01 19 15	Packing (Before 01.11.90)
	KK 01 19 59	Packing (From 01.11.90)
2	KK 35 22 66	Piston rod w/piston (From 01.11.90)
3	KK 35 22 60	Rod clevis
4	KK 03 25 50	Hex screw M10 x 50 mm w/nut
5	KK 01 20 60	Threaded coupling
6	KK 01 15 65	Gasket ring 1/2"
7	KK 01 18 10	O-ring D44 x 3 mm
8	KK 35 22 80	Cylinder tube
9	KK 35 22 52	Clevis cap
10	KK 01 15 94	Plug
11	KK 35 22 90	Tie rod w/nut
12	KK 35 22 58	Rod cap
13	KK 01 19 52	Packing
14	KK 01 19 09	Scraper
Not ill.	KK 35 23 50	Cylinder D50 x 200 mm without threaded coupling cpl.
	KK 35 23 52	Cylinder D50 x 200 mm w/twisted end cap cpl.
	KK 01 19 69	Packings cpl. (From 01.11.90)
	KK 01 19 75	Seal kit cpl. (Before 01.11.90)



Замовлення запчастин
(050)-407-68-47
(050)-407-68-45



1	KK 35 37 30	Cylinder tube (for cylinder KK 35 37 01 and KK 35 37 02)
	KK 35 37 31	Cylinder tube (for cylinder KK 35 37 03)
2	KK 03 20 02	Screw M6 x 10 mm
3	KK 35 37 21	Piston
4	KK 01 17 30	Piston packing
5	KK 01 17 29	O-ring
6	KK 35 37 40	Piston rod (for cylinder KK 35 37 01 and KK 35 37 03)
	KK 35 37 41	Piston rod (for cylinder KK 35 37 02)
7	KK 01 17 98	O-ring
8	KK 01 17 99	Support ring
9	KK 01 17 33	Ring (Before 15.03.99)
	KK 35 37 92	Lock spring (From 15.03.99)
10	KK 35 37 20	Packing seal
11	KK 01 17 31	Piston rod packing
12	KK 01 17 32	Scraper
13	KK 03 20 16	Screw M10 x 45 mm
14	KK 35 37 22	Clevis

Not ill.	KK 35 37 42	Stop (for cylinder KK 35 37 02)
	KK 35 37 25	Packings cpl.
	KK 35 37 01	Hydraulic cylinder for furrow with adjustment D50 x 200 mm cpl.
	KK 35 37 02	Hydraulic cylinder D50 x 200 mm w/stop cpl.
	KK 35 37 03	Hydraulic cylinder D50 x 200 mm w/90° twisted end cap cpl.



Замовлення запчастин
(050)-407-68-47
(050)-407-68-45



1	KK 35 39 34	Cylinder tube (for cylinder KK 35 39 01 and KK 35 39 02)
	KK 35 39 35	Cylinder tube (for cylinder KK 35 39 03)
2	KK 01 03 90	Piston packing
3	KK 35 39 36	Piston rod (for cylinder KK 35 39 01 and KK 35 39 03)
	KK 35 39 37	Piston rod (for cylinder KK 35 39 02)
4	KK 01 65 17	O-ring D42 x 4 mm
5	KK 03 33 06	Hex screw M6 x 8 mm
6	KK 35 39 26	Packing seal
7	KK 01 30 91	Piston rod packing
8	KK 01 30 89	Scraper
9	KK 03 21 10	Set screw M8 x 8 mm
10	KK 35 39 46	Pin for stop (for cylinder KK 35 39 02)
11	KK 35 39 44	Stop (for cylinder KK 35 39 02)
12	UH 82 56 40	Cylinder screw M12 x 40 mm (for cylinder KK 35 39 02)
13	KK 35 39 22	Clevis
Not ill.	KK 01 30 86	Packings cpl.
	KK 35 39 01	Hydraulic cylinder D50 x 200 mm cpl.
	KK 35 39 02	Hydraulic cylinder D50 x 200 mm w/stop cpl.
	KK 35 39 03	Hydraulic cylinder D50 x 200 mm w/90° twisted end cap cpl.




Замовлення запчастин
(050)-407-68-47
(050)-407-68-45



1	KK 01 12 61	Circlip
2	KK 01 12 23	Bearing
6	KK 02 99 20	Grease nipple
7	KK 35 21 34	Cylinder tube
8	KK 01 19 07	Packing
9	KK 35 21 56	Piston rod w/piston
10	KK 35 21 35	Rod head
11	KK 01 10 32	Roll pin D10 x 50 mm
12	KK 01 18 94	O-ring
13	KK 35 21 36	Collar
14	KK 01 19 11	Scraper packing
15	KK 35 21 42	Rod cap w/packings
16	KK 01 19 50	Packing for piston rod
17	KK 01 18 63	Supporting ring
18	KK 01 18 11	O-ring
19	KK 01 17 52	Supporting ring
Not ill.	KK 01 19 48	Packings cpl
	KK 35 24 02	Turn-over cylinder D90 x 150 mm




Замовлення запчастин
(050)-407-68-47
(050)-407-68-45

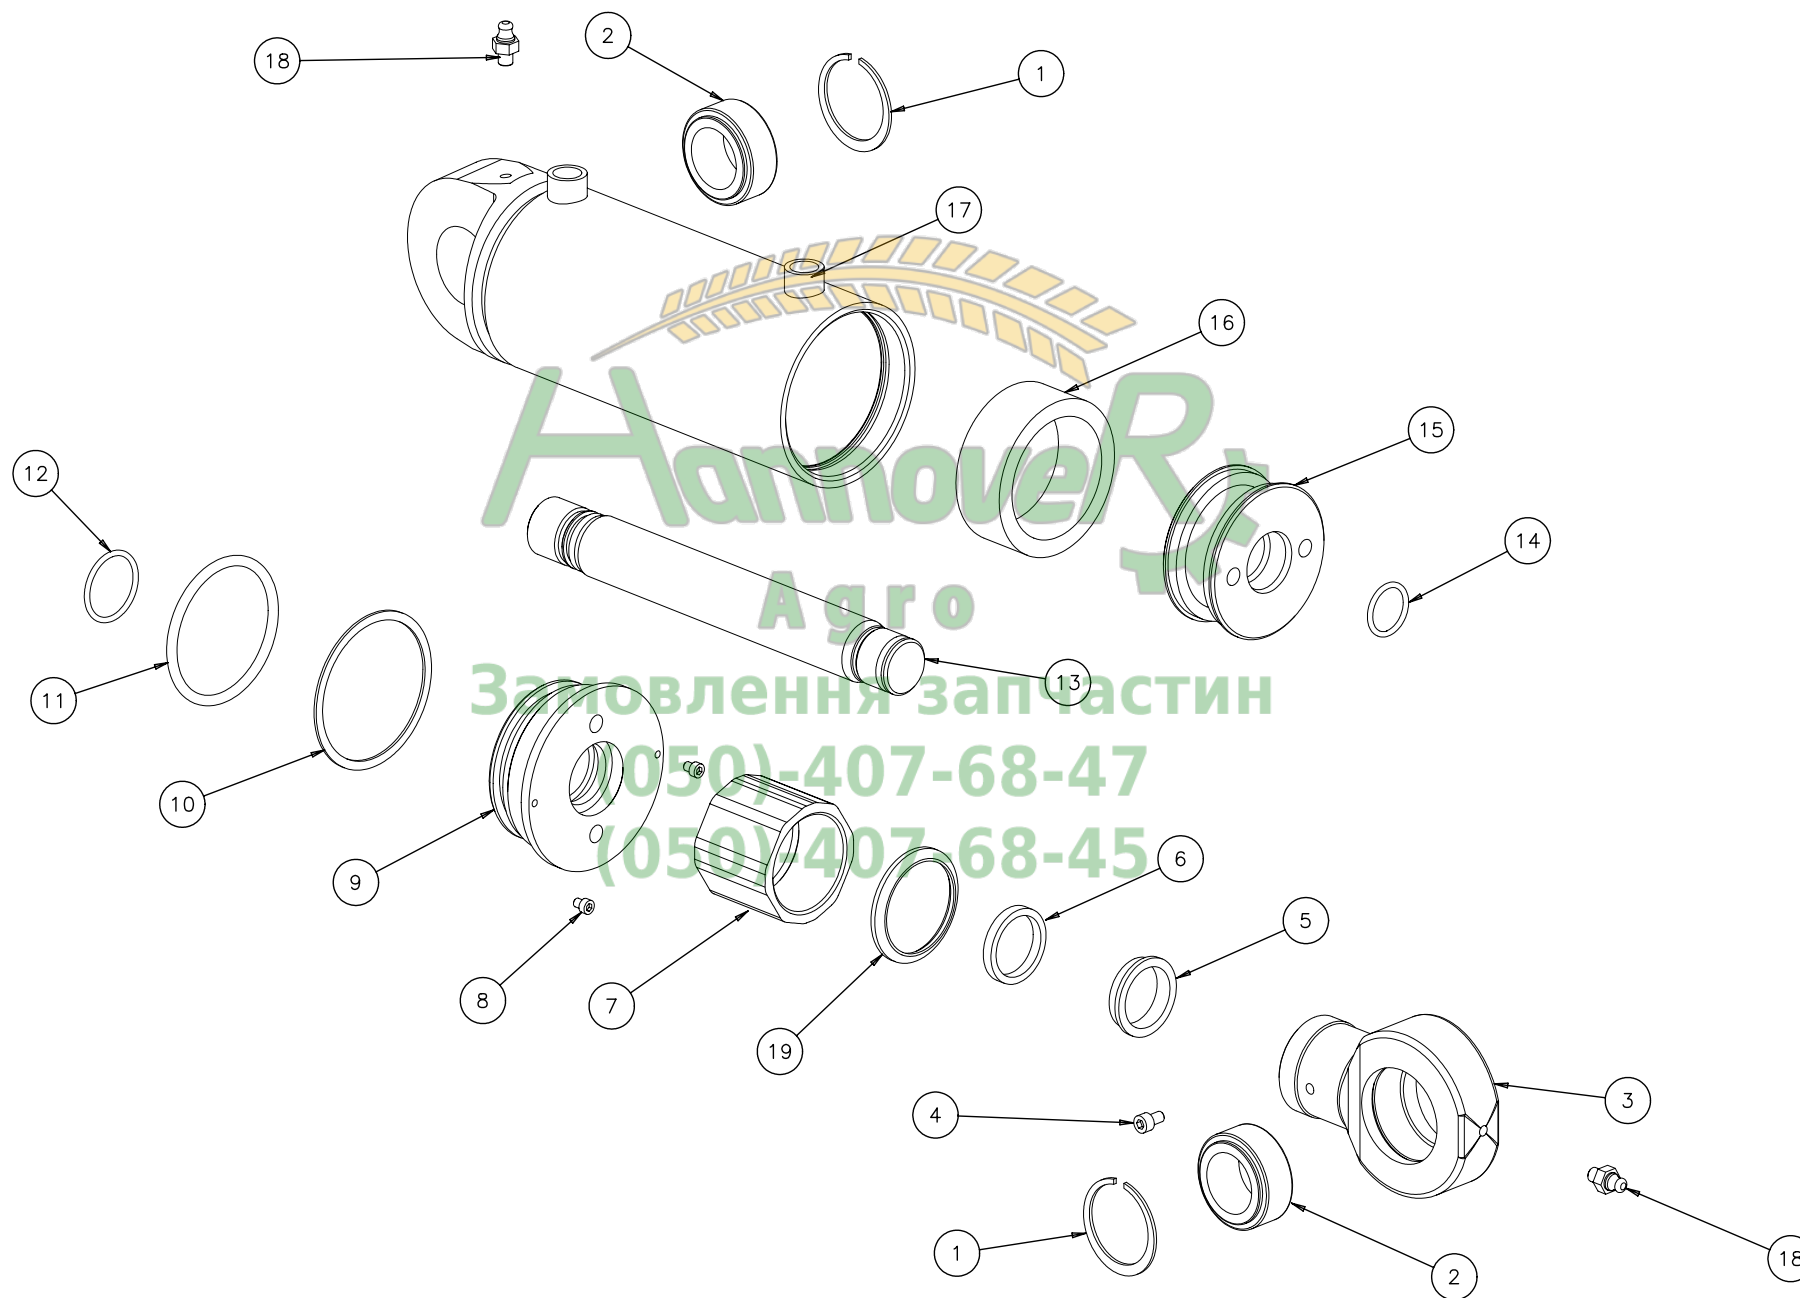

1	KK 01 12 61	Circlip
2	KK 01 12 23	Bearing
3	KK 35 35 96	Rod head
4	KK 03 20 02	Screw M6 x 10 mm
5	KK 01 65 22	Scraper
6	KK 01 65 23	Packing for piston rod
7	KK 35 35 97	Collar
8	KK 03 20 07	Screw M5 x 6 mm
9	KK 35 35 93	Rod cap
10	KK 01 65 25	Support ring
11	KK 01 65 24	O-ring D79.2 x D5.7
12	KK 01 17 37	O-ring D35 x D3
13	KK 35 35 95	Piston rod
14	KK 01 65 26	O-ring D28 x D3
15	KK 35 35 94	Piston
16	KK 01 65 27	Packing
17	KK 35 35 92	Cylinder tube
18	KK 02 99 18	Grease nipple
19	KK 35 36 77	Scraper plastic ring
Not ill.	KK 01 36 02	Packings cpl.
	KK 35 35 80	Turn-over cylinder D90 x 150 mm



Замовлення запчастин
(050)-407-68-47
(050)-407-68-45

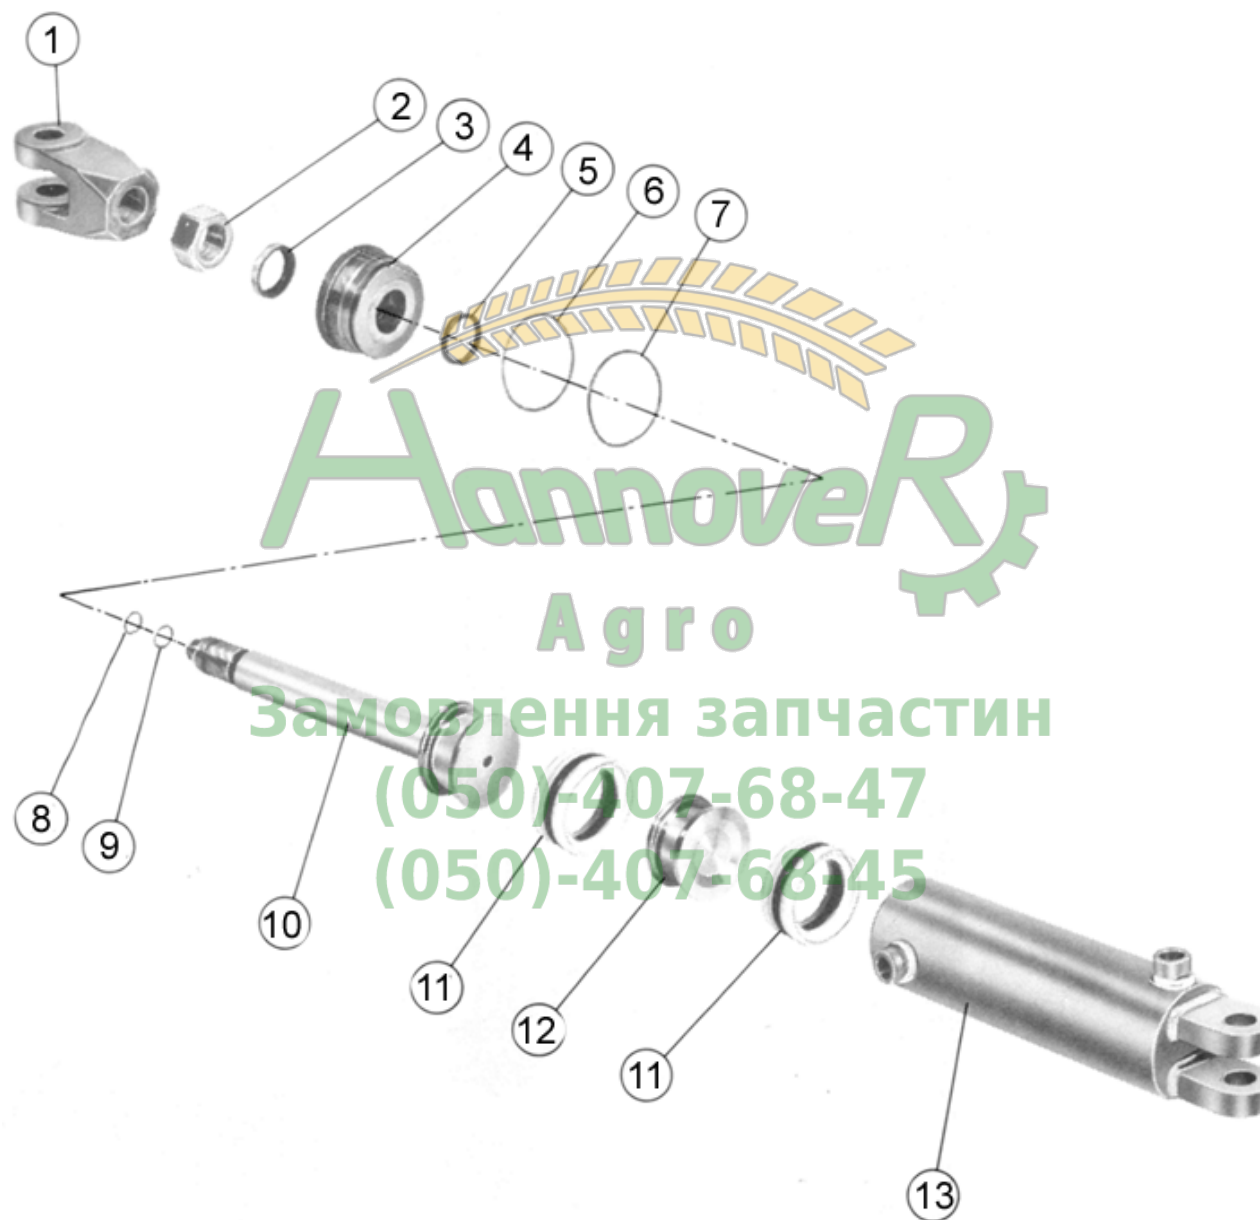

1	KK 35 33 77	Clevis
2	KK 01 60 40	Nut
3	KK 01 19 11	Scraper D36/D45 x 7/10 mm
4	KK 35 24 52	Rod cap w/packings
5	KK 01 19 50	Piston rod packing 36 x 44 x 6 mm
6	KK 01 18 76	Ring D75 x 2.5 x 1.3 mm
7	KK 01 18 24	O-ring D74.5 x 3 mm
8	KK 01 18 23	O-ring D15.4 x 2.4 mm
9	KK 01 18 75	Ring D16 x 2 mm
10	KK 35 24 51	Piston rod
11	KK 01 19 18	Piston packing D80/D60 x 22.4 mm
12	KK 35 24 54	Piston for memory
13	KK 35 33 76	Cylinder tube
Not ill.	KK 01 19 24	Packings cpl.
	KK 35 33 75	Cylinder D80 x 200 mm




Замовлення запчастин
(050)-407-68-47
(050)-407-68-45



1	KK 35 37 52	Cylinder tube
2	KK 03 20 02	Hex screw M6 x 10 mm
3	KK 35 37 55	Piston
4	KK 01 65 09	Piston packing
5	KK 01 65 10	O-ring D40 x 3 mm
6	KK 01 65 15	O-ring D39 x 3 mm
7	KK 35 37 53	Piston rod
8	KK 01 65 11	O-ring D79 x 5 mm
9	KK 01 65 12	Support ring
10	KK 01 65 08	Aluminium ring D95 x 1.2 mm
11	KK 35 37 54	Packing seal
12	KK 01 65 13	Piston rod packing
13	KK 01 65 14	Scraper
14	KK 03 20 06	Hex screw M6 x 20 mm
15	KK 35 37 57	Clevis
Not ill.	KK 35 37 58	Packing set cpl.
	KK 35 38 01	Memory cylinder D80 x 200 mm cpl.



Замовлення запчастин
(050)-407-68-47
(050)-407-68-45

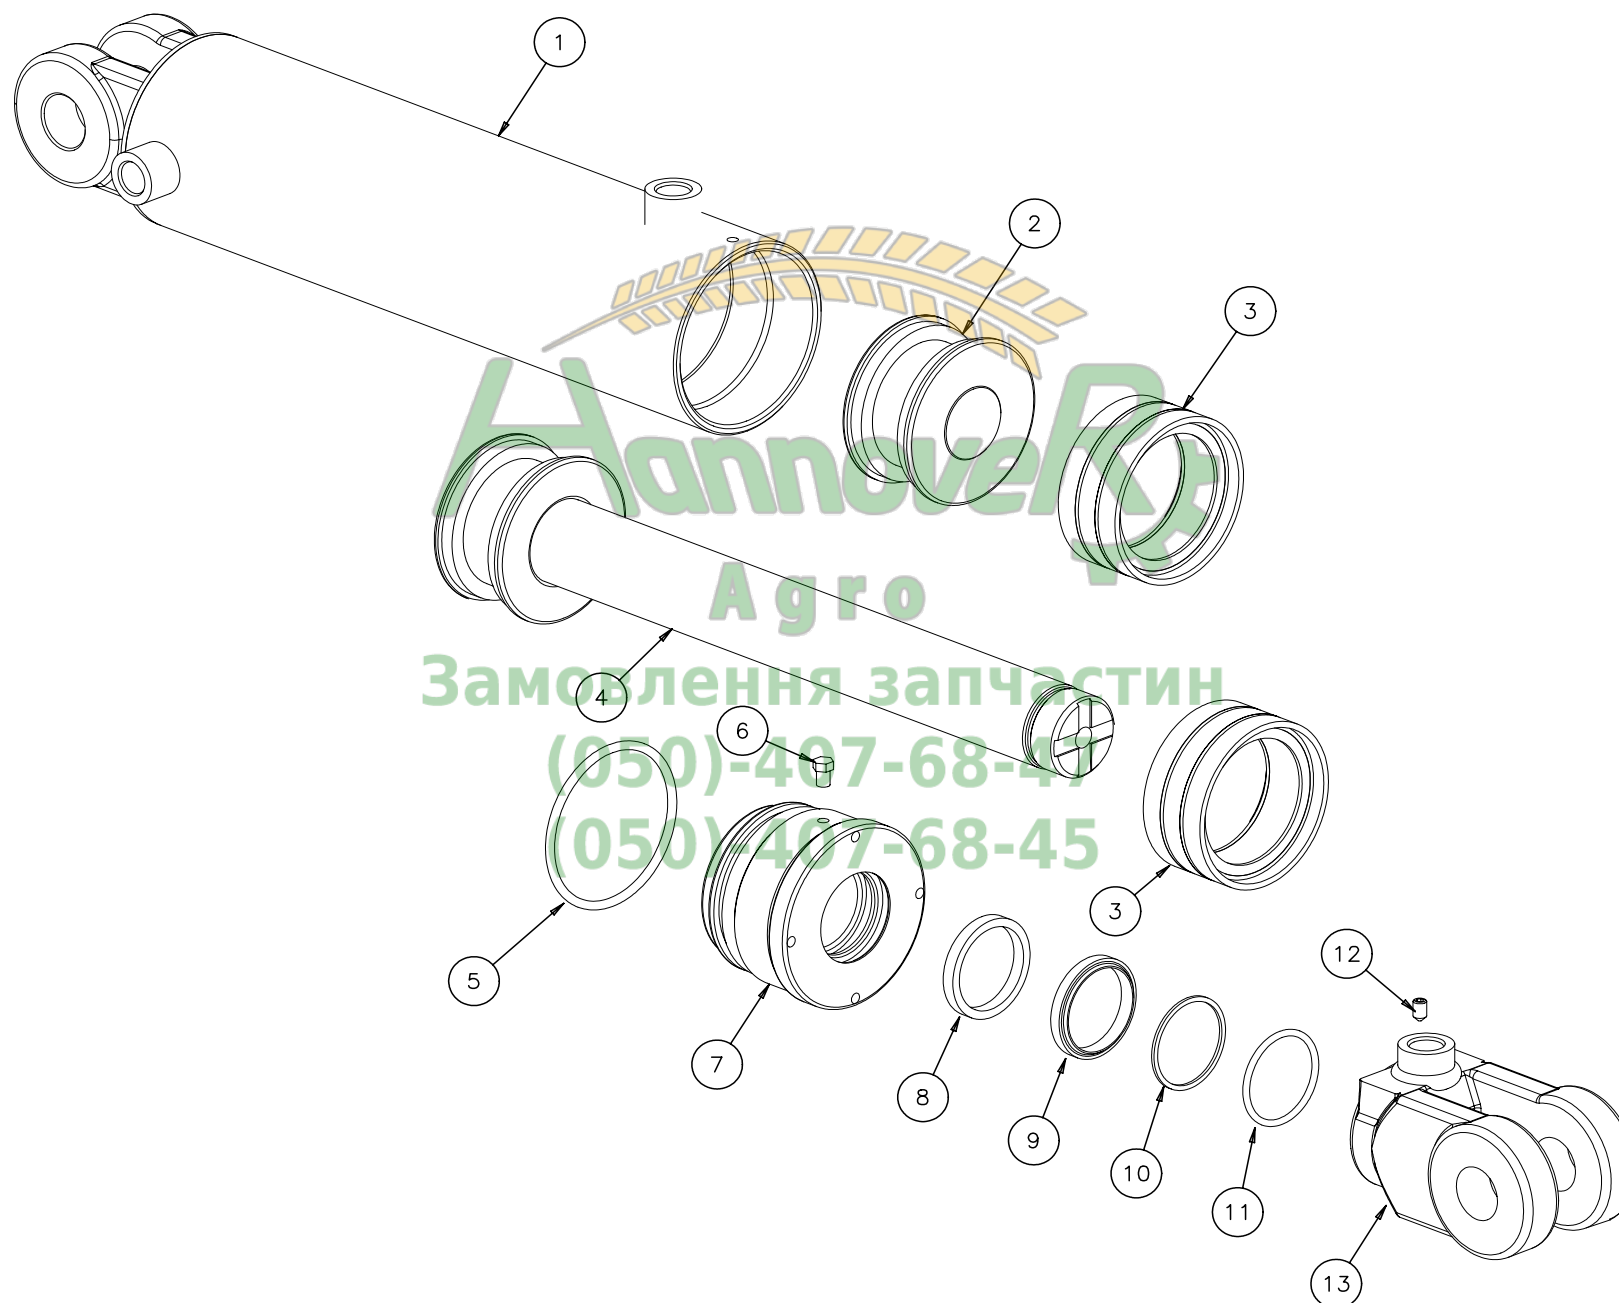

1	KK 35 39 42	Cylinder tube
2	KK 35 39 33	Memory piston
3	KK 01 36 07	Piston packing
4	KK 35 39 43	Piston rod
5	KK 01 30 98	O-ring D72 x 4 mm
6	KK 03 33 06	Hex screw M6 x 8 mm
7	KK 35 39 28	Packing seal
8	KK 01 36 08	Piston rod packing
9	KK 01 36 09	Scraper
10	KK 01 30 99	Support ring
11	KK 01 30 97	O-ring D40 x 3 mm
12	KK 03 40 07	Set screw M6 x 8 mm
13	KK 35 39 25	Clevis
Not ill.	KK 01 30 88	Packings cpl.
	KK 35 39 10	Memory cylinder D80 x 200 mm cpl.



Замовлення запчастин
(050)-407-68-47
(050)-407-68-45



1	KK 35 36 40	Clevis
2	KK 01 17 97	O-ring D30 x 2.5
3	KK 03 20 08	Set screw M5 x 8 mm
4	KK 35 36 75	Rod cap
5	KK 01 19 12	Scraper
6	KK 01 19 51	Rod packing
7	KK 01 18 76	Support ring
8	KK 01 18 24	O-ring D74.5 x 3
9	KK 35 45 31	Piston rod w/piston
10	KK 01 19 18	Piston packing
11	KK 35 36 41	Piston D80
12	KK 35 45 32	Cylinder tube
Not ill.	KK 01 30 82	Packing set cpl.
	KK 35 45 02	Memory cylinder D80 x 200 mm cpl.



Замовлення запчастин
(050)-407-68-47
(050)-407-68-45



1	KK 35 21 55	Cylinder tube
2	KK 01 15 65	Gasket ring 1/2"
3	KK 01 20 60	Threaded coupling 3/8" - 1/2"
4	KK 01 20 70	Threaded coupling 3/8" - 1/2" (From serial no. 5668)
	KK 01 21 04	Threaded coupling 3/8" - 1/2" (Before serial no. 5668)
5	KK 01 19 06	Packing
6	KK 35 21 37	Piston rod w/piston
7	KK 01 18 02	O-ring
8	KK 01 18 61	Supporting ring 70 x 2.5 x 1.3 mm
9	KK 35 21 57	Rod cap w/packings
10	KK 01 19 50	Seal for piston rod
11	KK 01 19 11	Scraper packing
12	KK 01 12 61	Circlip
13	KK 02 99 20	Grease nipple
14	KK 35 21 53	Rod head
15	KK 01 12 23	Bearing
16	KK 03 50 10	Cylinder screw M8 x 90 mm
Not ill.	KK 01 19 26	Packings 75 mm cpl.
	KK 35 24 01	Hydraulic cylinder D75 x 400 mm cpl.



Замовлення запчастин
(050)-407-68-47
(050)-407-68-45



1	KK 35 21 53	Rod head
2	KK 02 99 20	Grease nipple
3	KK 01 17 45	Scraper 35 x 43 mm
4	KK 01 17 44	Seal for piston rod
5	KK 35 37 26	Rod cap
6	KK 01 17 46	Ring (Before 15.03.99)
	KK 35 37 93	Lock ring (From 15.03.99)
7	KK 01 17 43	Support ring
8	KK 01 17 38	O-ring
9	KK 35 37 47	Piston rod
10	KK 35 37 37	Cylinder tube
11	KK 01 17 36	Packing
12	KK 03 20 06	Cylinder screw M6 x 20 mm
13	KK 35 37 27	Piston D75/35
14	KK 01 17 37	O-ring
15	KK 03 50 15	Cylinder screw M8 x 25 mm
16	KK 01 12 61	Circlip
17	KK 01 12 23	Bearing

Not ill.	KK 35 37 29	Packings set D75 mm cpl. (ill. no. 3, 4, 7, 8, 11 and 14)
	KK 35 37 08	Hydraulic cylinder D75 x 420 mm cpl. (ill. no. 1 - 17)



Замовлення запчастин
(050)-407-68-47
(050)-407-68-45



1	KK 35 36 71	Cylinder tube (for turn-over cylinder KK 35 36 64)
	KK 35 36 78	Cylinder tube (for turn-over cylinder KK 35 36 65)
2	KK 35 36 72	Piston rod w/piston (for turn-over cylinder KK 35 36 64)
	KK 35 36 79	Piston rod w/piston (for turn-over cylinder KK 35 36 65)
3	KK 03 20 01	Set screw M6 x 6 mm
4	KK 01 19 18	Piston packing
5	KK 01 18 24	O-ring D74.5
6	KK 01 18 76	Support ring
7	KK 35 36 75	Rod cap
8	KK 03 20 08	Set screw M5 x 8 mm
9	KK 01 19 51	Rod packing
10	KK 01 19 12	Scraper
11	KK 02 99 18	Grease nipple M6
12	KK 35 36 73	Rod bearing
13	KK 01 12 61	Circlip
14	KK 01 12 23	Spherical ball bearing
Not ill.	KK 01 30 66	Packing set cpl.
	KK 35 36 64	Turn-over cylinder D80 x 300 mm cpl. (for headstock mod. 200)
	KK 35 36 65	Turn-over cylinder D80 x 375 mm cpl. (for headstock mod. 300)



Замовлення запчастин
(050)-407-68-47
(050)-407-68-45




1	KK 35 36 82	Cylinder tube D50
2	KK 35 36 84	Piston
3	KK 01 30 69	Piston packing
4	KK 01 30 70	O-ring D23
5	KK 35 36 83	Piston rod
6	KK 01 17 69	O-ring D44.5
7	KK 35 36 85	Rod cap
8	KK 01 26 32	Support ring
9	KK 01 30 68	Seal for piston rod
10	KK 01 19 62	Scraper
11	KK 03 21 06	Pin M6 x 12 mm
12	KK 35 36 76	Clevis

Not ill.	KK 01 30 67	Packing set cpl.
	KK 35 36 81	Front furrow adjustment cylinder D50 x 200 mm cpl.



Замовлення запчастин
(050)-407-68-47
(050)-407-68-45

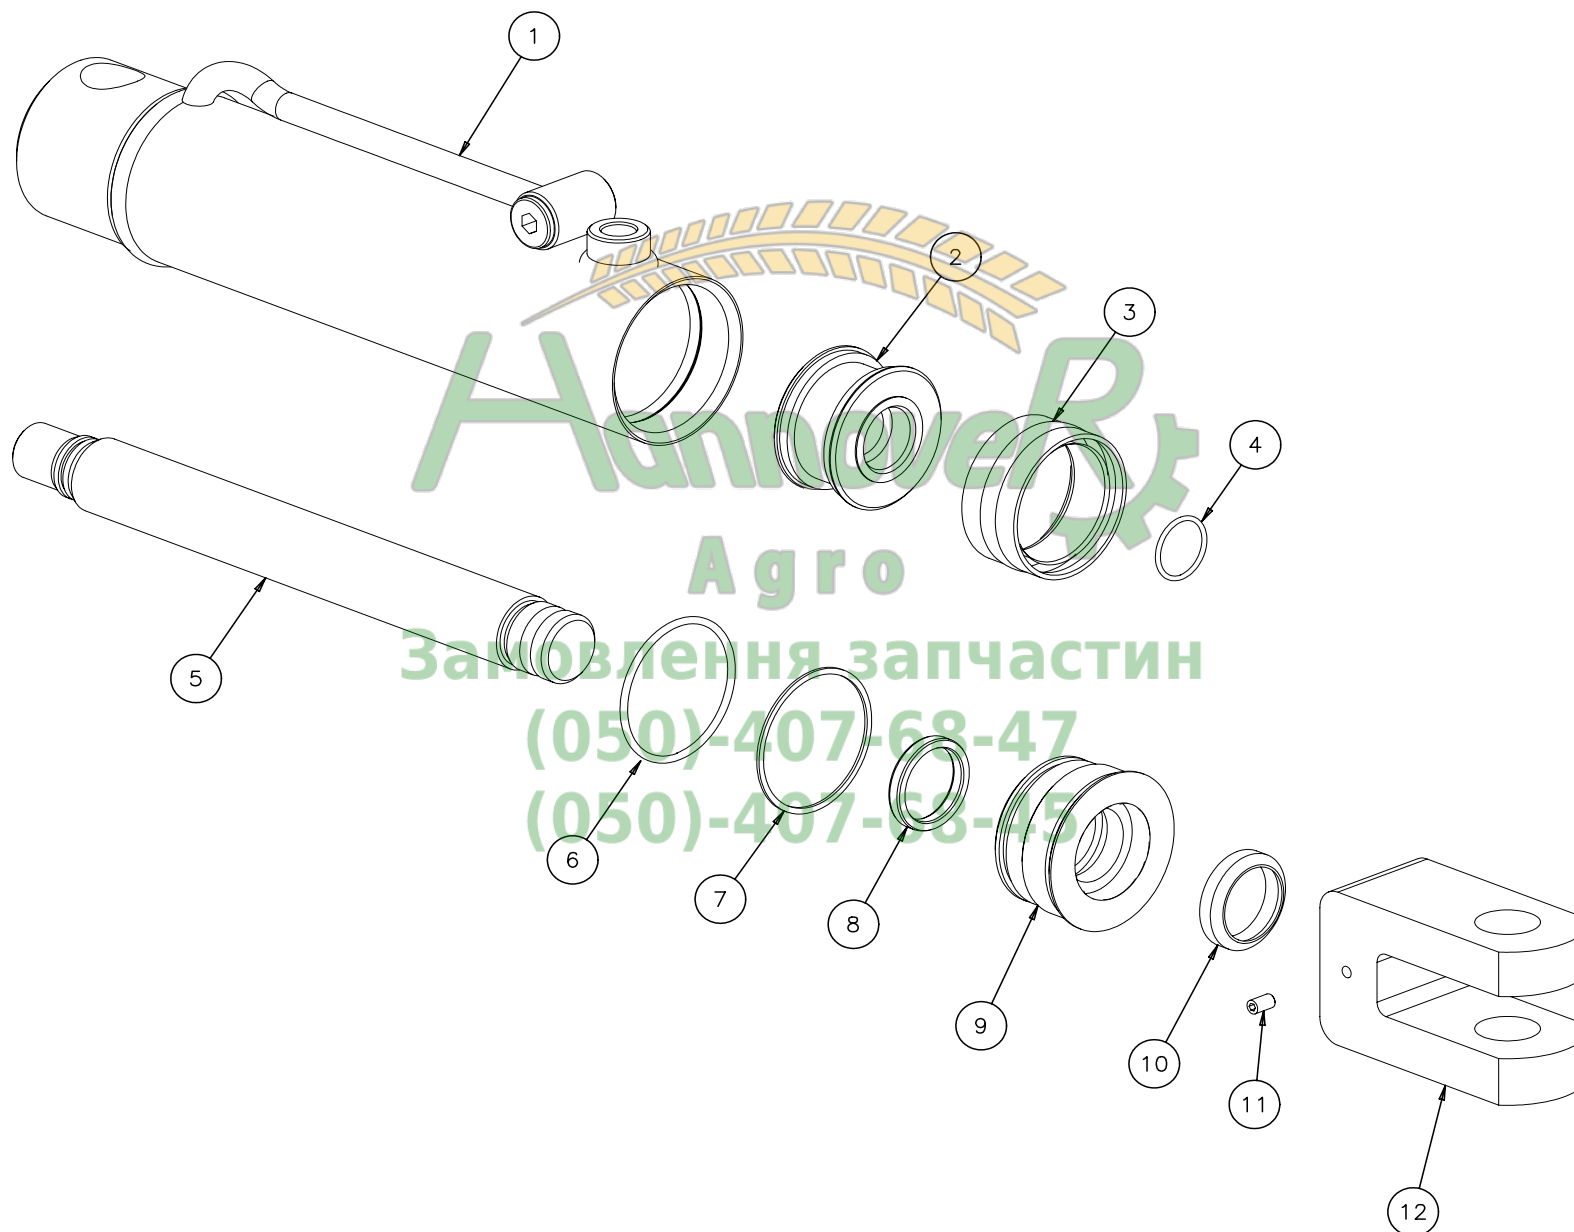


1	KK 35 36 87	Cylinder tube
2	KK 35 36 69	Piston
3	KK 01 20 19	Piston packing
4	KK 01 30 65	O-ring D24 x 2
5	KK 35 36 68	Piston rod
6	KK 01 18 21	O-ring D57.2 x 3
7	KK 01 18 73	Support ring
8	KK 01 19 53	Seal for piston rod
9	KK 35 36 70	Rod cap
10	KK 01 19 13	Scraper
11	KK 03 20 02	Set screw M6 x 10 mm
12	KK 35 36 76	Clevis

Not ill.	KK 01 20 10	Packings set cpl.
	KK 35 36 80	Front furrow adjustment cylinder D63 x 200 mm cpl.




Замовлення запчастин
(050)-407-68-47
(050)-407-68-45

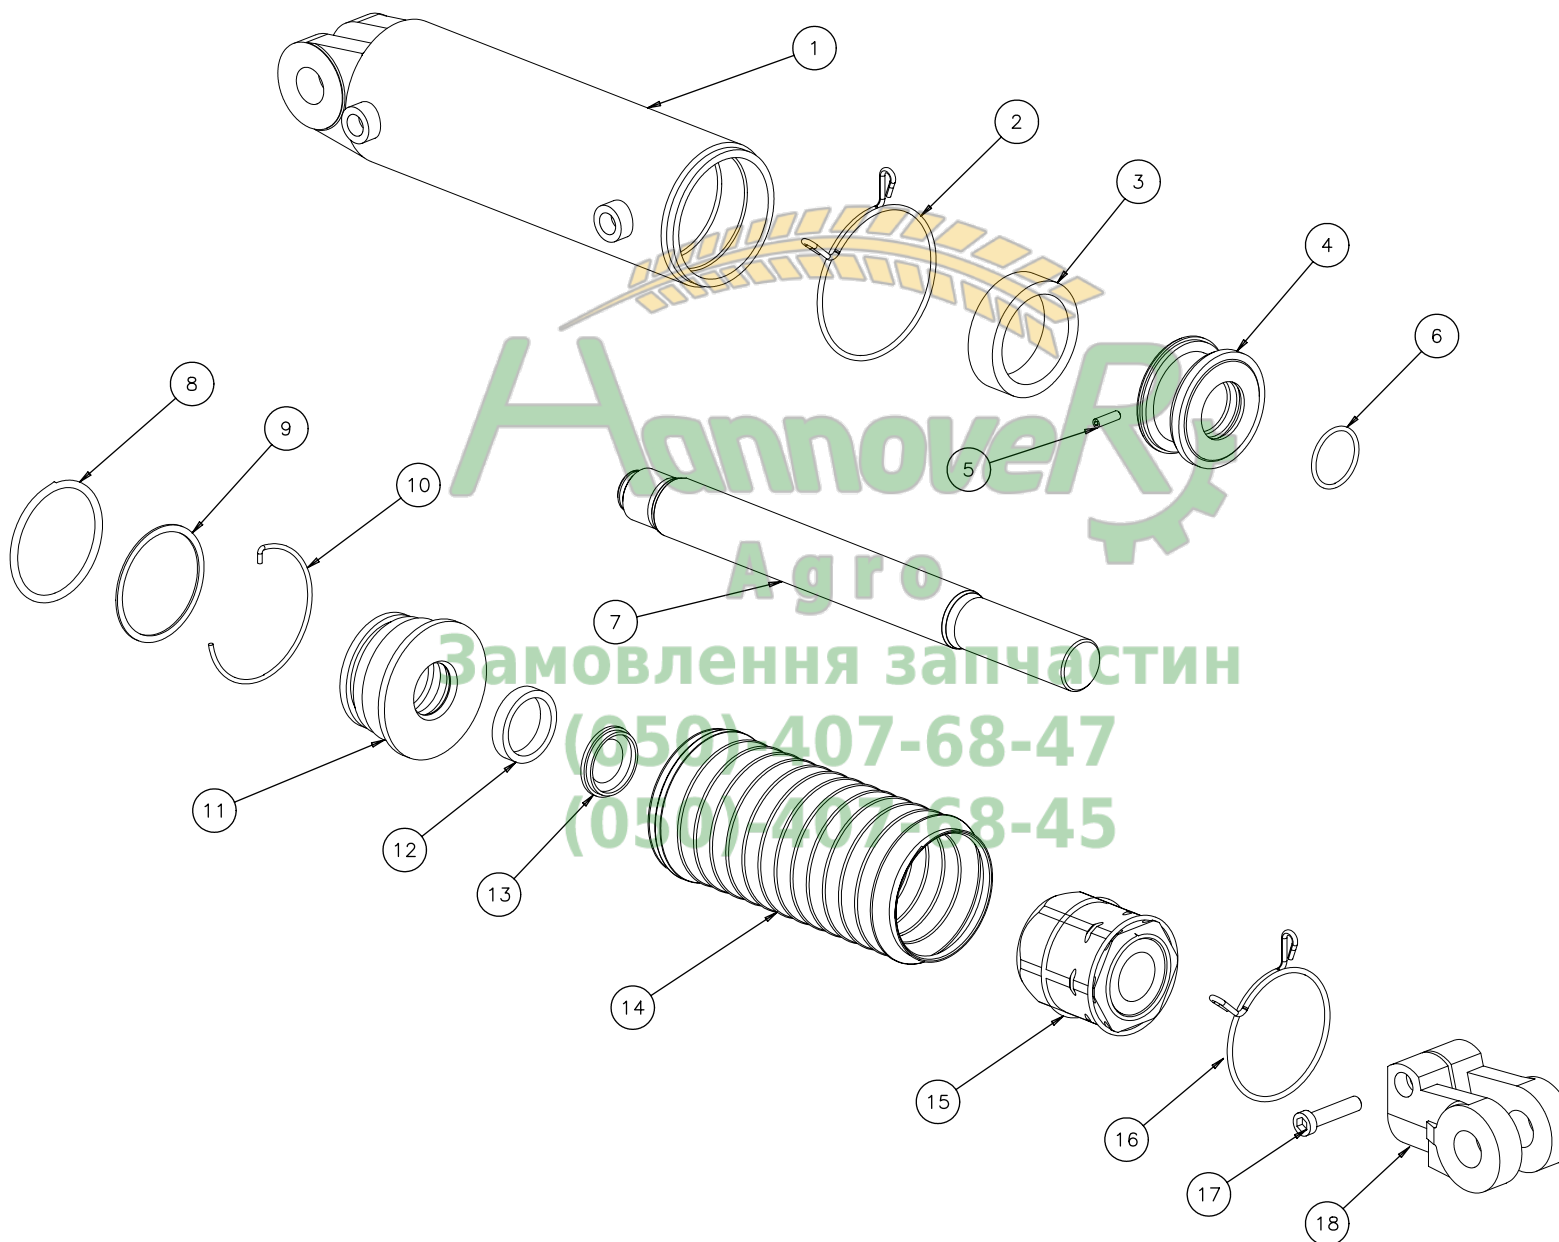


1	KK 35 37 74	Cylinder tube
2	KK 01 35 27	Thread clamp D95
3	KK 01 65 09	Piston packing set
4	KK 35 37 55	Piston
5	KK 03 20 06	Screw M6 x 20 mm
6	KK 01 65 10	O-ring D40
7	KK 35 37 75	Piston rod
8	KK 01 65 11	O-ring D75
9	KK 01 65 12	Support ring
10	KK 35 37 94	Lock ring
11	KK 35 37 54	End cap
12	KK 01 65 13	Piston rod packing
13	KK 01 65 14	Scraper
14	KK 01 35 25	Bellow
15	KK 35 37 76	Stopping nut
16	KK 01 35 26	Clamp D80
17	KK 03 20 16	Screw M10 x 45 mm
18	KK 35 37 51	Clevis
Not ill.	KK 01 36 03	Packings set cpl.
	KK 35 38 04	Hydraulic cylinder D80 x 200 mm cpl.




Замовлення запчастин
(050)-407-68-47
(050)-407-68-45

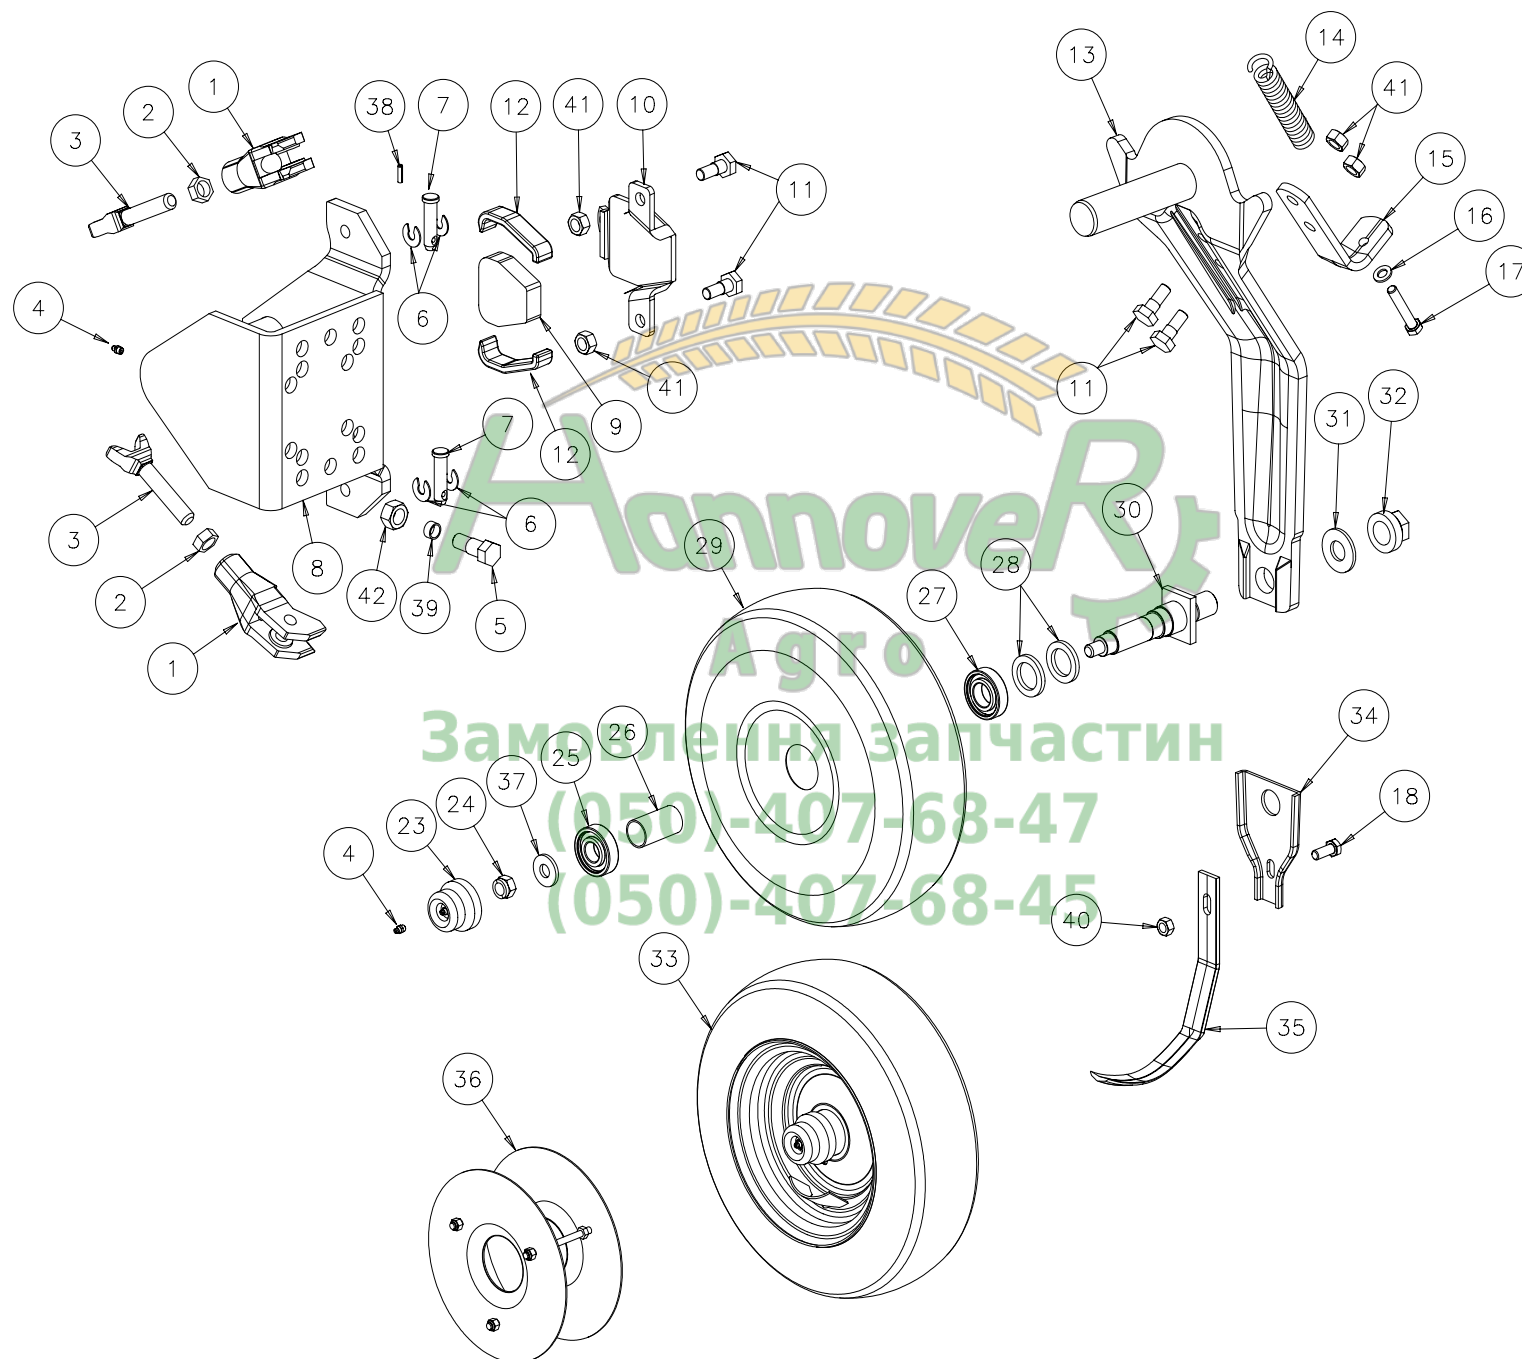


1	KK 06 40 30	Clevis	34	KK 07 17 40	Scraper holder
2	KK 01 58 34	Nut M20	35	KK 07 40 54	Scraper for steel wheel
3	KK 06 40 24	Stop screw		KK 07 17 29	Scraper for rubber wheel
	KK 06 40 47	Clevis cpl. (ill. 1 - 3)	36	KK 01 14 00	Cover kit cpl. 6,00 x 9
4	KK 02 99 20	Grease nipple	37	KK 01 29 22	Washer
5	KK 03 27 50	Hex screw M16 x 50 mm w/nut (Before 01.06.99)	38	KK 01 10 61	Roll pin D6 x 22 mm (From 18.05.99)
	KK 03 28 50	Hex screw M20 x 50 mm w/nut (From 01.06.99)	39	KK 01 16 36	Bushing (From 01.06.99)
6	KK 01 12 72	Circlip	40	KK 01 58 17	Nut M12
7	KK 01 04 61	Axle 16 x 47 mm (Before 18.05.99)	41	KK 01 58 25	Nut M16
	KK 01 02 55	Bolt w/head D16 x 51 mm (From 18.05.99)	42	KK 01 58 30	Nut M20
8	KK 06 40 75	Support (Before 01.06.99)			
	KK 07 47 74	Support (From 01.06.99)	Not ill.	KK 06 04 49	Depth wheel, steel 500 x 165 cpl. (Before 01.06.99)
9	KK 06 40 87	Silent block		KK 07 47 90	Depth wheel, steel 500 x 165 for beam H = 700 mm cpl. (From 01.06.99)
10	KK 06 40 78	Holder for silent block		KK 07 47 91	Depth wheel, steel 500 x 165 for beam H = 800 mm cpl. (From 01.06.99)
11	KK 03 27 40	Hex screw M16 x 40 mm w/nut		KK 06 04 69	Depth wheel, rubber 6.00 x 9 cpl. (Before 01.06.99)
12	KK 06 40 86	Lock for cushion		KK 07 47 94	Depth wheel, 6.00 x 9 for beam H = 700 mm cpl. (From 01.06.99)
13	KK 06 40 55	Wheel arm H = 700 mm		KK 07 47 95	Depth wheel, 6.00 x 9 for beam H = 800 mm cpl. (From 01.06.99)
	KK 07 40 55	Wheel arm H = 800 mm		KK 07 47 99	Screw and bushing set cpl. (From 01.06.99)
14	KK 06 40 89	Spring			
15	KK 06 40 88	Bracket for spring			
16	KK 01 29 19	Washer			
17	KK 03 36 70	Hex screw, wholly threaded M12 x 70 mm			
18	KK 03 15 30	Hex screw M12 x 30 mm			
23	KK 01 11 67	End cap			
24	KK 01 60 10	Lock nut M16			
25	KK 01 12 31	Bearing			
26	KK 01 00 96	Spacing tube			
27	KK 01 12 00	Bearing			
28	KK 01 08 06	2 packing sets			
29	KK 07 40 52	Wheel, steel			
	KK 07 04 59	Wheel cpl. w/ axle, steel			
30	KK 07 40 53	Axle			
31	KK 01 29 40	Washer			
32	KK 01 60 22	Flange nut M30			
33	KK 09 42 06	Tyre 6,00 x 9			
	KK 01 13 78	Rim			
	KK 09 42 07	Inner tube			
	KK 07 04 94	Wheel w/axle and tyre cpl.			

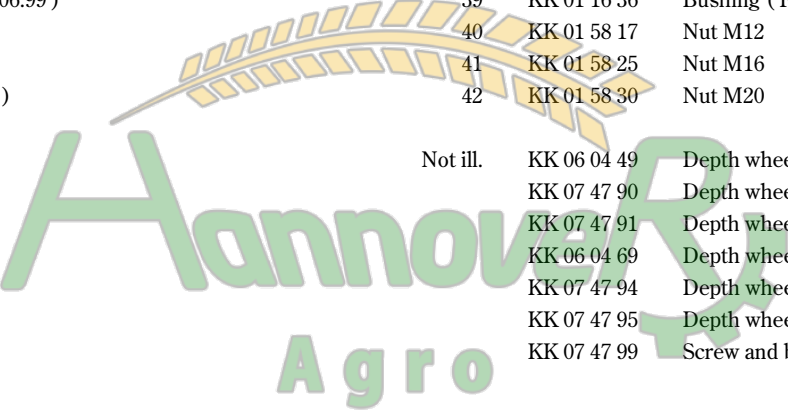

 Hannover
 Agro
 Замовлення запчастин
 (050)-407-68-47
 (050)-407-68-45

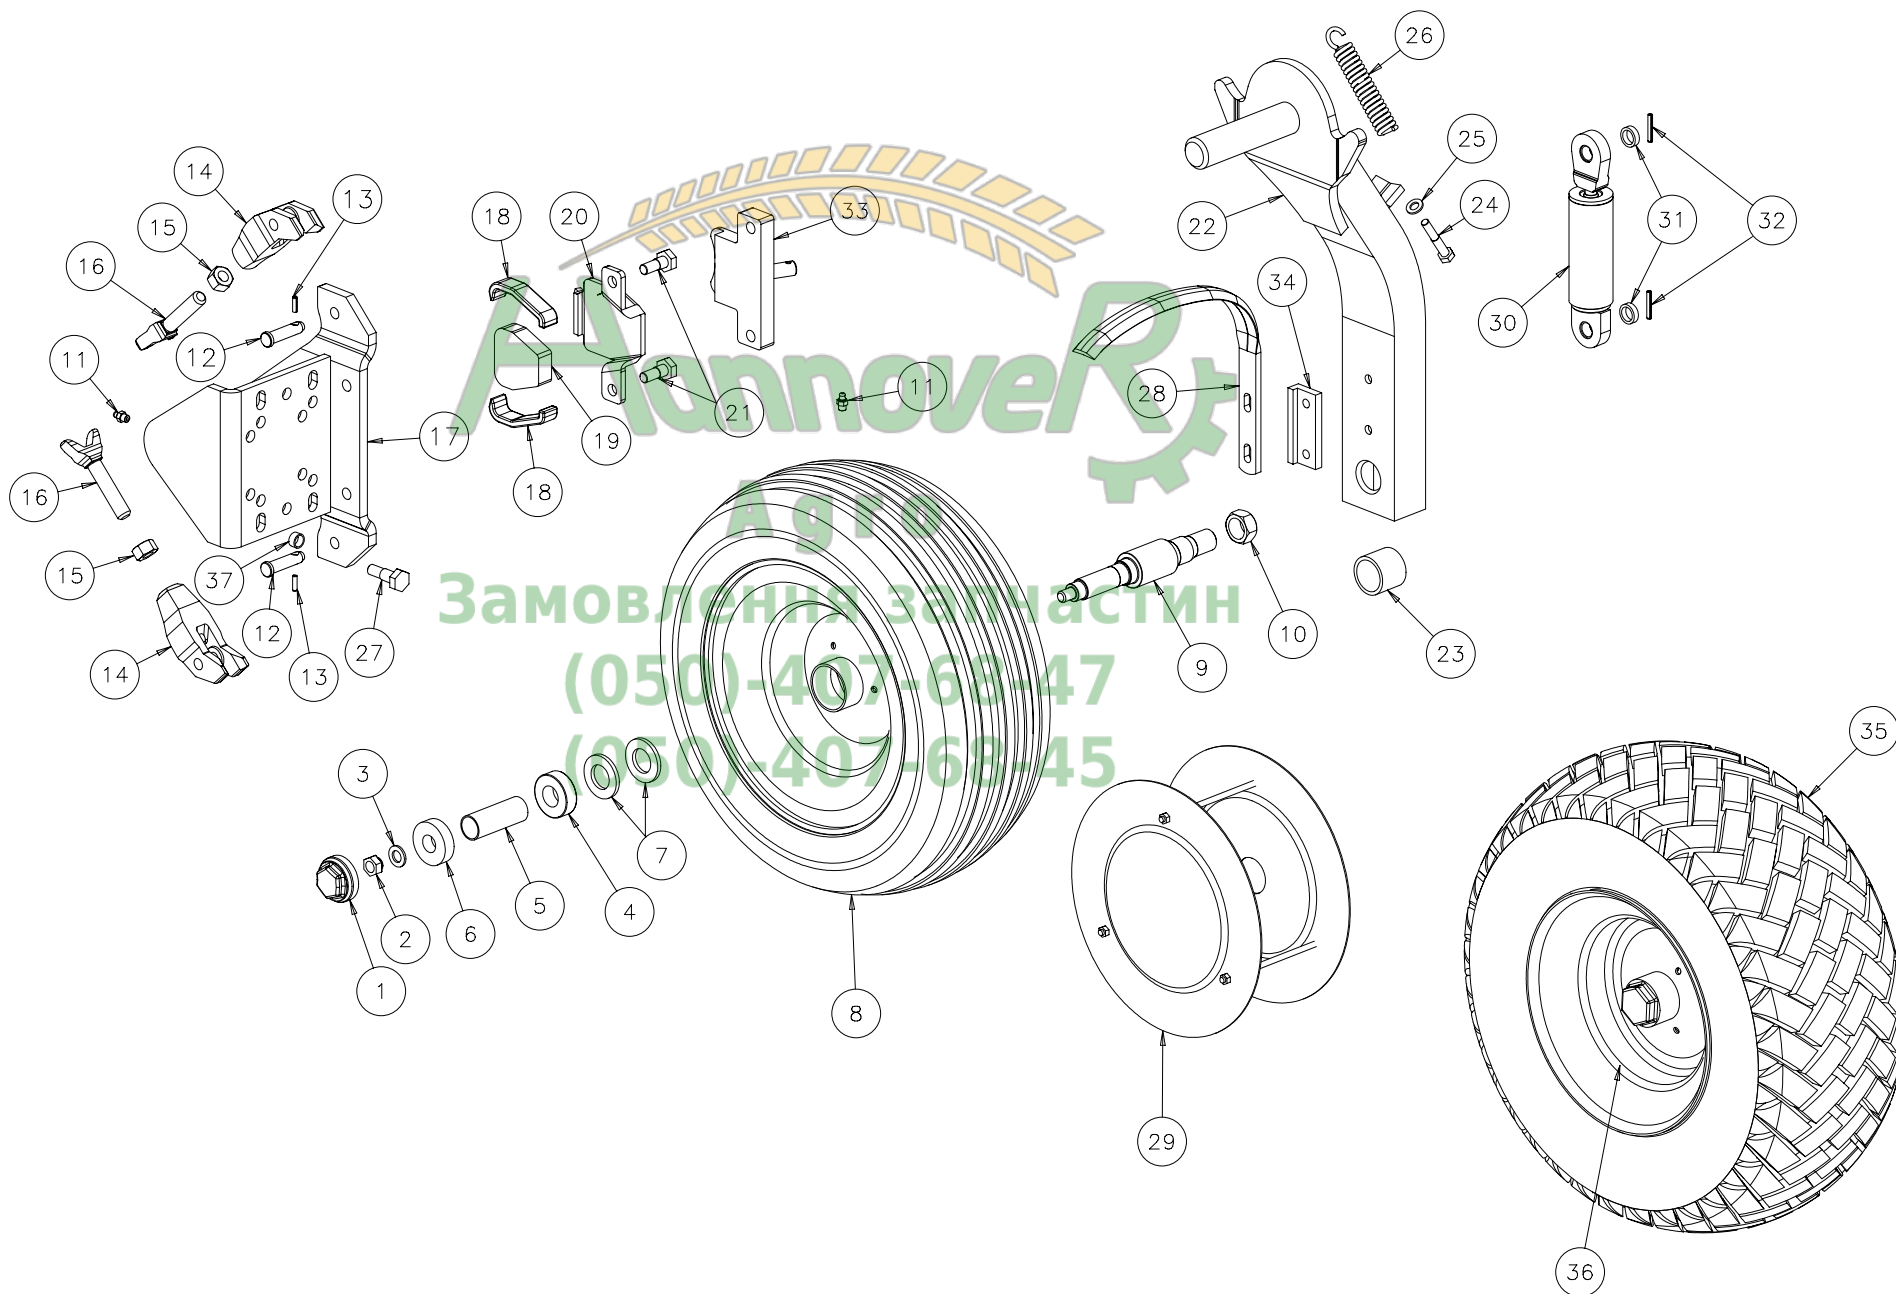


1	KK 01 11 57	End cap		KK 07 46 24	Scraper for wheel 26 x 12-12
2	KK 01 60 10	Nut M16		KK 07 46 17	Scraper for wheel 26 x 12-12 cpl.
3	KK 01 29 27	Washer	29	KK 01 14 01	Cover kit 200 x 14,5 cpl.
4	KK 01 12 00	Bearing		KK 01 14 02	Cover kit 26 x 12-12 cpl.
5	KK 01 00 31	Spacing tube for wheel 200 x 14.5	30	KK 35 35 40	Shock absorber
	KK 01 00 67	Spacing tube for wheel 26 x 12-12	31	KK 07 48 06	Bushing for shock absorber
6	KK 01 12 31	Bearing	32	KK 01 10 42	Roll pin for shock absorber
7	KK 01 08 06	Packing	33	KK 07 48 10	Bracket for wheelarm (for hydraulic shock absorber)
8	KK 01 13 03	Tyre 200 x 14.5	34	KK 07 40 48	Fixing for scraper
	KK 01 13 05	Inner tube for 200 x 14.5	35	KK 01 13 46	Tyre for wheel 26 x 12-12
	KK 01 13 31	Rim w/bearinga for 200 x 14.5		KK 01 13 49	Inner tube for wheel 26 x 12-12
9	KK 06 42 22	Axle for wheel LP-200 x 14,5	36	KK 01 14 19	Rim w/bearings for 26 x 12-12
	KK 06 42 23	Axle for wheel LP-26 x 12-12	37	KK 01 16 36	Bushing (From 01.06.99)
10	KK 01 60 37	Cone nut M30			
11	KK 02 99 20	Grease nipple	Not ill.	KK 03 26 95	Hex screw M12 x 95 mm w/nut (for scraper fixing)
12	KK 01 02 55	Bolt w/ head		KK 03 26 85	Hex screw M12 x 85 mm w/nut (for scraper fixing)
13	KK 01 10 61	Roll pin		KK 07 47 99	Screw and bushing set cpl. (From 01.06.99)
14	KK 06 40 30	Clevis		KK 07 48 17	Rubber wheel 200 x 14 .5, H = 700 cpl.
15	KK 01 58 32	Nut M20		KK 07 48 18	Rubber wheel 200 x 14 .5, H = 800 cpl.
16	KK 06 40 36	Stop screw		KK 07 48 19	Rubber wheel 26 x 12 - 12, H = 700 cpl.
	KK 06 40 39	Clevis cpl.		KK 07 48 20	Rubber wheel 26 x 12 - 12, H = 800 cpl.
17	KK 06 40 75	Support			
18	KK 06 40 86	Protection for damper block			
19	KK 06 40 87	Damper block			
20	KK 06 40 78	Holder for damper block			
21	KK 03 27 40	Hex screw M16 x 40 mm w/nut			
	KK 03 27 60	Hex screw M16 x 60 mm w/nut (for hydraulic shock absorber)			
22	KK 06 40 81	Wheel arm H = 700 mm			
	KK 07 48 01	Wheel arm for hydr. shock absorber H = 700 mm			
	KK 06 40 74	Wheel arm H = 800 mm			
	KK 07 48 02	Wheel arm for hydr. shock absorber H = 800 mm			
23	KK 06 40 73	Tube			
24	KK 03 36 70	Hex screw M12 x 70 mm			
25	KK 01 29 19	Washer			
26	KK 06 40 89	Spring			
27	KK 03 27 50	Hex screw M16 x 50 mm w/nut			
28	KK 07 40 47	Scraper blade for wheel 200 x 14.5			
	KK 07 40 49	Scraper for wheel 200 x 14.5 cpl.			

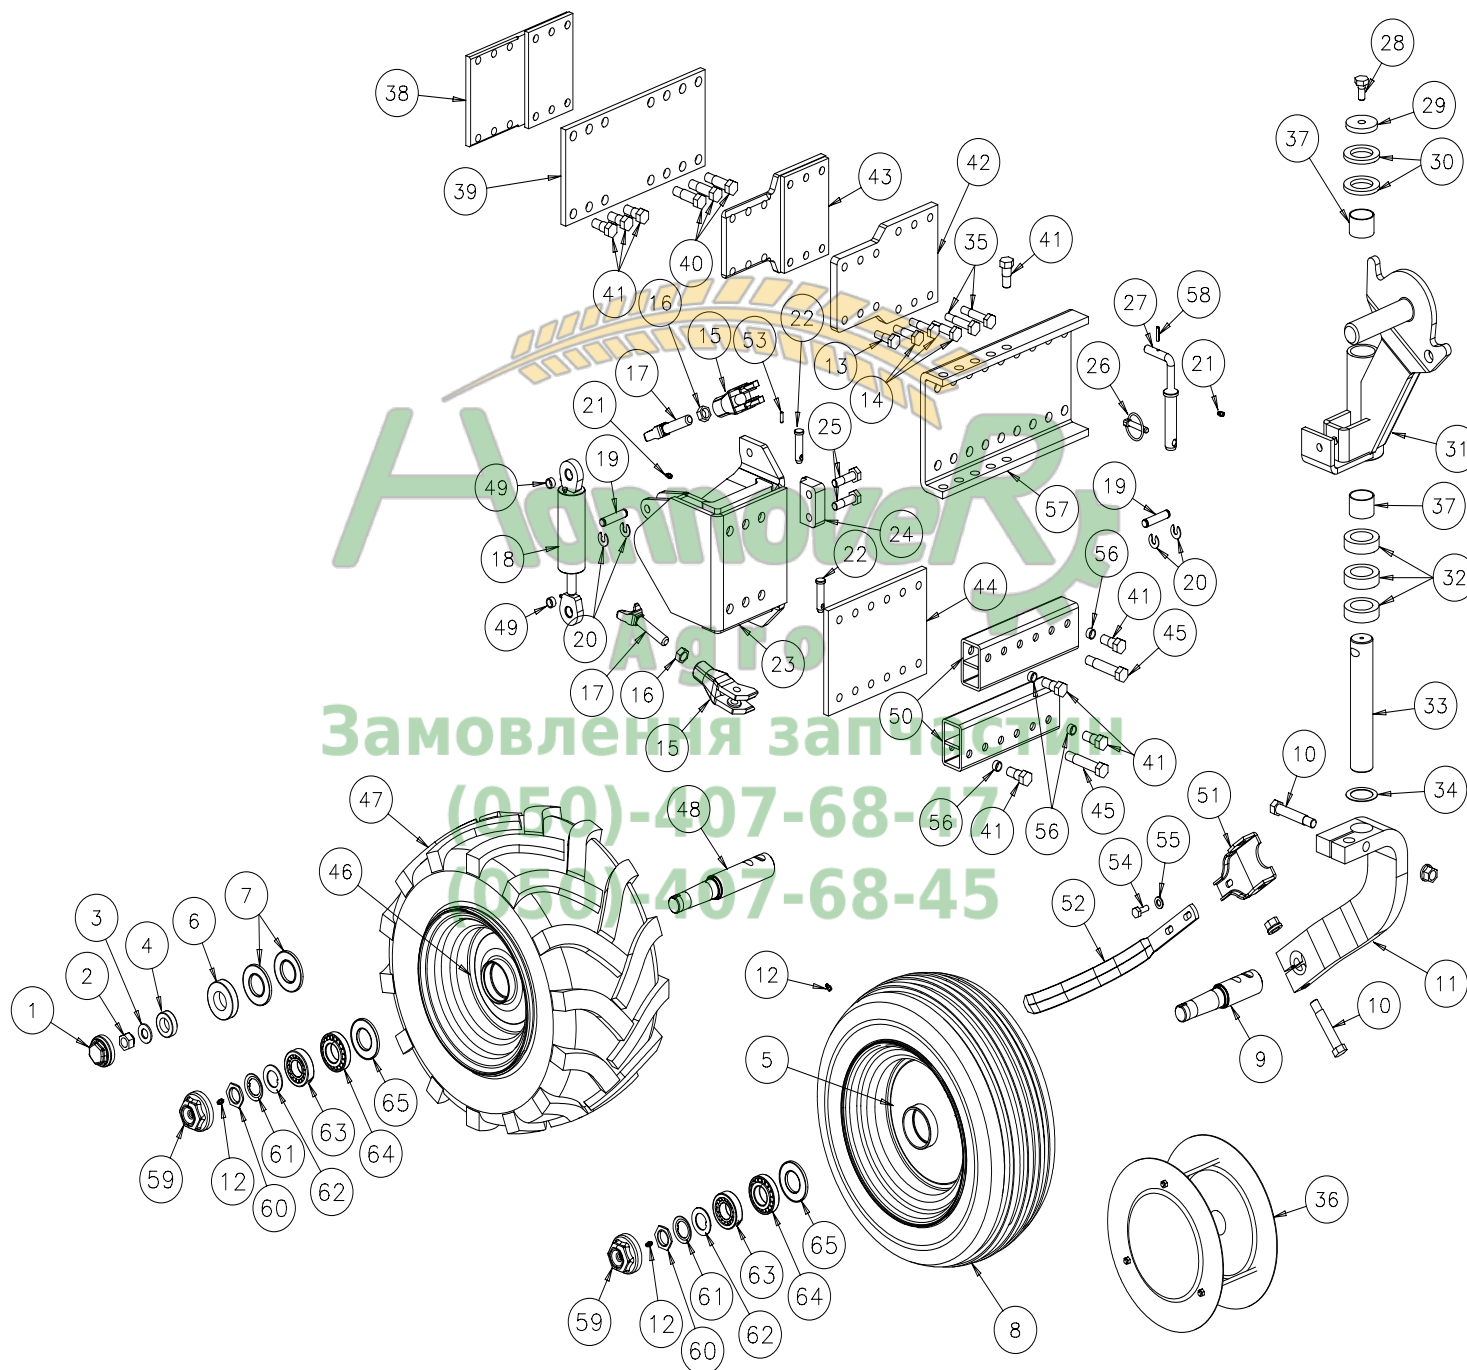


1	KK 01 11 57	End cap (Before 21.05.02)	27	KK 07 40 65	Lock bolt	44	KK 07 40 42	Plate for wheel 200 x 14.5 (Replaces 068578 from 03.01.92, Serial no. LB2320, LD5916 and EG4925)
2	KK 01 60 00	Lock nut M20 (Before 21.05.02)	28	KK 03 27 35	Hex screw M16 x 35 mm w/nut		KK 07 40 43	Plate for wheel 26 x 12-12 (Replaces 068578 from 03.01.92, Serial no. LB2320, LD5916 and EG4925)
3	KK 01 29 34	Washer (Before 21.05.02)	29	KK 01 29 24	Washer			
4	KK 01 12 00	Bearing (Before 21.05.02)	30	KK 06 82 51	Thrustwasher			
5	KK 01 13 79	Rim 200 x 14.5 (Before 21.05.02)	31	KK 07 40 70	Depth/transport wheelarm w/bushing			
	KK 08 41 06	Rim 200 x 14.5 (From 21.05.02)	32	KK 01 07 49	Bearing	45	KK 03 27 60	Hex screw M16 x 60 mm w/nut (Before 04.01.96, Serial no. LB3311)
6	KK 01 05 17	Bearing(Before 21.05.02)	33	KK 07 86 08	Axle D50 x 284 mm		KK 03 27 02	Hex screw M16 x 100 mm w/nut (From 04.01.96, Serial no. LB3311)
7	KK 01 11 68	Packing(Before 21.05.02)	34	KK 01 29 55	Washer		KK 03 28 07	Hex screw M20 x 100 mm w/nut (From 01.06.99)
8	KK 01 13 03	Tyre 200 x 14.5	35	KK 03 27 80	Hex screw M16 x 80 mm w/nut (Before serial no. ES1700)			
	KK 01 13 05	Inner tube 200 x 14.5	36	KK 01 14 01	Cover kit cpl.	46	KK 01 14 19	Rim 26 x 12-12 (Before 27.05.02)
9	KK 07 40 80	Axle 200 x 14.5 (Before 21.05.02)	37	KK 01 16 52	Bushing		KK 08 41 07	Rim 26 x 12-12 (From 27.05.02)
	KK 08 41 10	Axle 200 x 14.5 (From 21.05.02)	38	KK 07 58 47	Plate for wheel (for ES only) (From serial no. ES1700)	47	KK 01 13 46	Tyre 26 x 12-12 (Before 27.05.02)
10	KK 03 51 78	Hex screw M20 x 110 mm w/nut		KK 07 47 84	Plate for wheel (for ES only) (From 01.06.99) (Before 01.11.00)		KK 01 35 00	Tyre 26 x 12-12 (From 27.05.02)
11	KK 07 40 79	Wheel arm		KK 07 49 61	Plate for wheel (for LS only) (Before 01.06.99)	48	KK 01 13 49	Inner tube 26 x 12-12
12	KK 02 99 20	Grease nipple		KK 07 47 86	Plate for wheel (for LS only) (From 01.06.99)		KK 07 40 93	Axle 26 x 12-12 (Before 27.05.02)
13	KK 03 27 50	Hex screw M16 x 50 mm w/nut (Before serial no. ES1700)				49	KK 08 41 11	Axle 26 x 12-12 (From 27.05.02)
14	KK 03 27 65	Hex screw M16 x 65 mm w/nut (Before serial no. ES1700)	39	KK 07 58 49	Plate for wheel (for ES only) (From serial no. ES1700)	50	KK 01 16 13	Bushing D16/D20 x 17 mm w/flange
15	KK 06 40 30	Clevis		KK 07 47 85	Plate for wheel (for ES only) (From 01.06.99)		KK 07 40 42	Tube (Before 01.04.96)
16	KK 01 58 34	Nut M20		KK 07 49 64	Plate for wheel (for LS only) (Before 01.06.99)		KK 07 46 90	Tube (E/F, ED, EG, LB, LD only for) (From 01.04.96)
17	KK 06 40 36	Stop screw		KK 07 47 87	Plate for wheel (for LS only) (From 01.06.99) (Before 15.08.00)		KK 07 47 80	Tube (LB and LD only for wheel 200 x 14.5) (From 01.06.99)
	KK 06 40 39	Clevis cpl.					KK 07 40 43	Tube (Before 01.04.96)
18	KK 35 21 45	Shock absorber (Before 01.08.98)	40	KK 03 27 70	Hex screw M16 x 70 mm w/nut (From serial no.ES1700 and LS plough)		KK 07 46 93	Tube (E/F, ED, EG, LB, LD only for wheel 26 x 12-12) (From 01.04.96)
	KK 35 35 77	Shock absorber (From 01.08.98)		KK 03 28 70	Hex screw M20 x 70 mm w/nut (From 01.06.99)		KK 07 47 82	Tube (ED, EG, LB, LD only for wheel 26 x 12 - 12) (From 01.06.99)
	KK 35 39 20	Shock absorber (From 01.01.01)	41	KK 03 27 45	Hex screw M16 x 45 mm w/nut (From serial no.ES1700 and LS plough)	51	KK 07 40 37	Scraper bracket (for wheel 200 x 14.5)
19	KK 01 04 64	Axle		KK 03 28 45	Hex screw M20 x 45 mm w/nut (From 01.06.99)		KK 07 39 91	Scraper bracket (for wheel 26 x 12 - 12)
20	KK 01 12 72	Circlip	42	KK 07 58 42	Plate for wheel (Before serial no. ES1700)	52	KK 07 40 47	Scraper (for wheel 200 x 14.5)
21	KK 02 99 20	Grease nipple					KK 07 46 24	Scraper (for wheel 26 x 12 - 12)
22	KK 01 04 61	Axle (Before 18.05.99)	43	KK 07 58 45	Plate for wheel (Before serial no. ES1700)	53	KK 01 10 61	Roll pin D6 x 22 mm (From 18.05.99)
	KK 01 02 55	Bolt w/head D16 x 51 mm (From 18.05.99)				54	KK 03 34 30	Lock screw M12 x 30 mm
23	KK 07 40 60	Support (Before 01.06.99)				55	KK 01 29 19	Washer
	KK 07 47 72	Support (From 01.06.99)				56	KK 01 16 36	Bushing (From 01.06.99)
24	KK 07 40 78	Lock piece						
	KK 07 40 36	Lock piece for wheel w/scraper						
25	KK 03 27 60	Hex screw M16 x 60 mm w/nut						
26	KK 01 07 00	Pin M12						

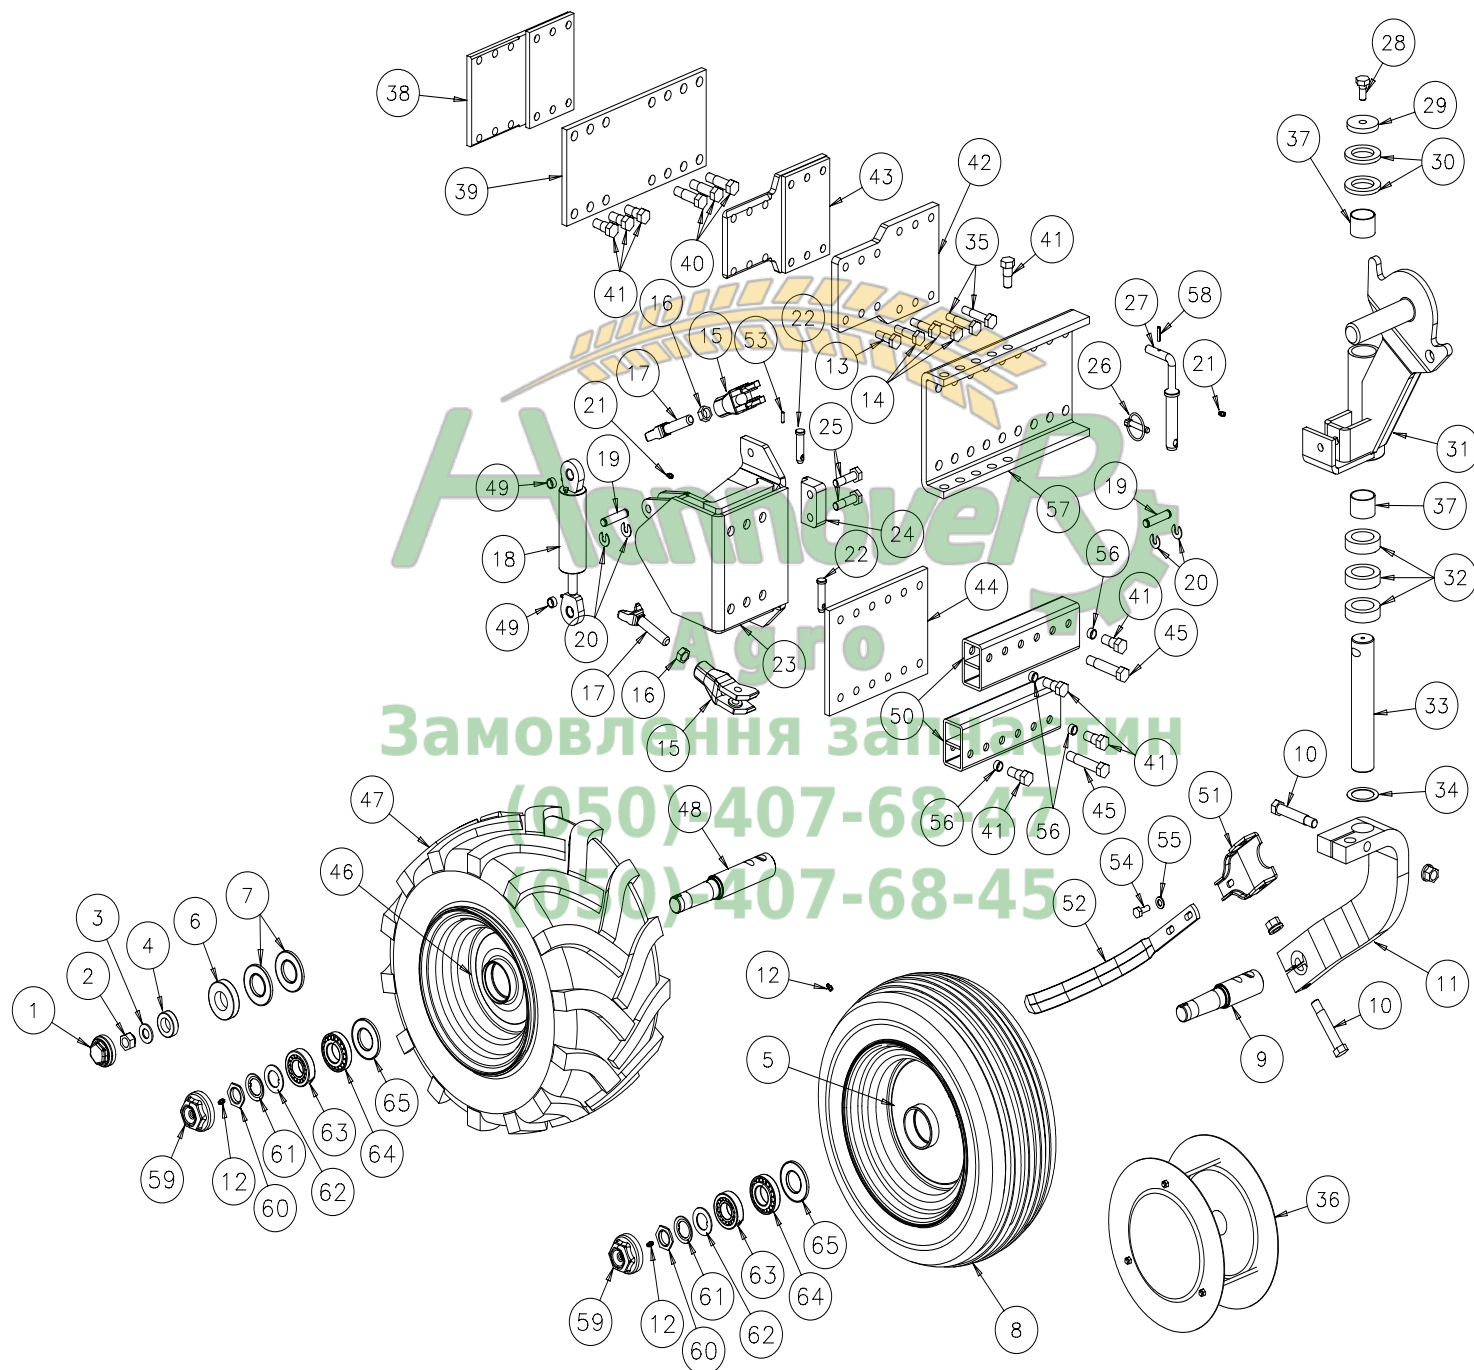


57	KK 08 13 78	Plate for wheel (for LS and LM only) (From 15.08.00)	KK 07 04 91	Depth/transport wheel 200 x 14.5 cpl. (Before 01.06.99)
	KK 08 13 78	Plate for wheel (for ES and EM only) (From 01.11.00) (For LB, LD and EG, from 18.06.01)	KK 07 47 96	Depth/transport wheel 200 x 14.5 for beam H = 700/800 mm cpl. (From 01.06.99)
	KK 07 47 53	Plate for wheel 200 x 14.5 (for LB and LD only) (Before 18.06.01)	KK 01 19 39	Packing for shock absorber for part no. 35 21 45 and 35 27 77
	KK 07 22 40	Plate for wheel 26 x 12 - 12 (for ED, EG, LB and LD)	KK 07 48 40	Scraper for depth/transport wheel 200 x 14.5 cpl.
58	KK 01 10 35	Pin D6 x 30 mm	KK 07 47 99	Screw and bushing set cpl. (From 01.06.99)
59	KK 01 31 06	Z-lamell (From 21.05.02)		
60	KK 01 12 15	Conical bearing (From 21.05.02)		
61	KK 01 05 91	Conical bearing (From 21.05.02)		
62	KK 01 31 02	Washer MK6 (From 21.05.02)		
63	KK 01 31 04	Washer D42 x d30 x 3 (From 21.05.02)		
64	KK 01 31 03	Lock nut M30		
65	KK 01 31 05	Hub cap (From 21.05.02)		
Not ill.	KK 01 14 18	Wheel w/axle 26 x 12-12 (Before 21.05.02)		
	KK 08 41 01	Wheel w/axle 26 x 12-12 (From 27.05.02)		
	KK 07 04 93	Wheel w/axle 200 x 14.5 (Before 27.05.02)		
	KK 08 41 00	Wheel w/axle 200 x 14.5 (From 27.05.02)		
	KK 07 40 41	Depth/transport wheel 26 x 12-12 cpl. (Before 01.06.99)		
	KK 07 47 97	Depth/transport wheel 26 x 12-12 for beam H = 700/800 mm cpl. (From 01.06.99)		

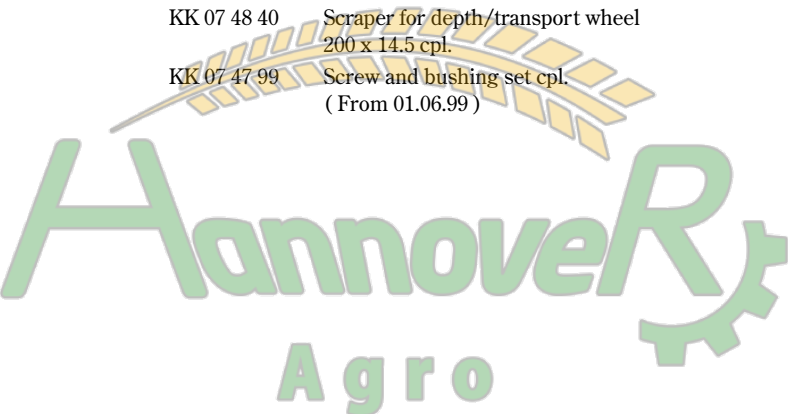

А н н о в е R
А г р о
Замовлення запчастин
(050)-407-68-47
(050)-407-68-45

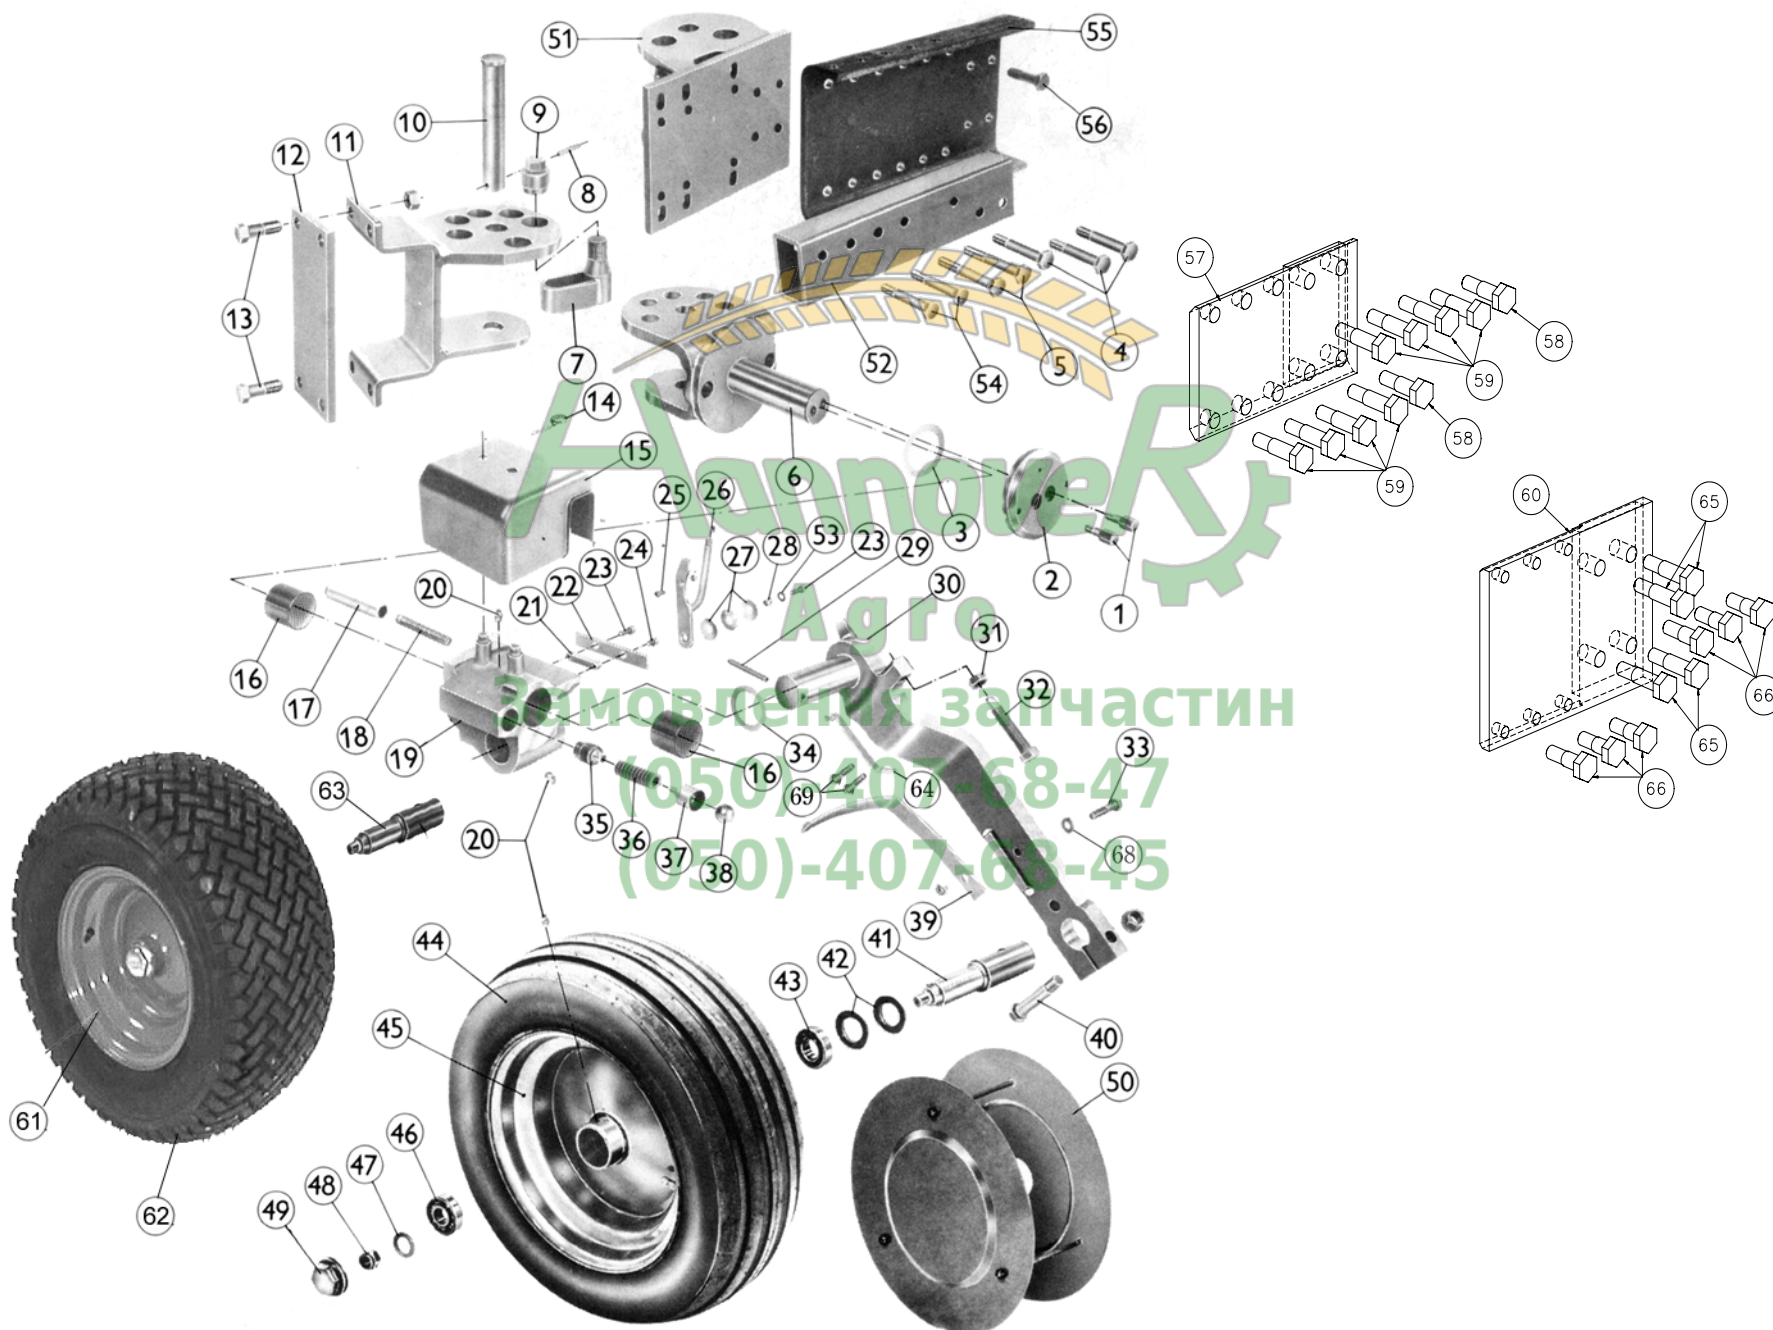

1	KK 03 50 40	Hex screw w/cone M14 x 35 mm	30	KK 07 46 55	Wheel arm H=700 mm (From 01/01/95, serial no E41970, F17952, EG6271 and LB3033)	53	KK 01 29 94	Washer 8.4 x 16 x 1.5
2	KK 07 46 78	Plate (From 02/01/95, serial no EG6310, E41999, F18020, LB3045)				54	KK 03 27 90	Hex screw M16 x 90 mm w/nut
	KK 07 45 88	Plate (Before 02/01/95, serial no EG6310, E41999, F18020, LB3045)		KK 07 46 52	Wheel arm H=800 mm (From 01/01/95, serial no E41970, F17952, EG6271 and LB3033)	55	KK 07 46 48	Plate for rear mounted wheel (for LB plough)
3	KK 01 29 56	Washer 60 x 85 x 1 mm		KK 07 45 08	Wheel arm H=700 mm (Before 01/01/95, serial no E41970, F17952, EG6271 and LB3033)	56	KK 03 27 50	Hex screw M16 x 50 mm w/nut (for LB plough)
4	KK 03 27 95	Hex screw M16 x 95 mm w/nut				57	KK 07 59 08	Plate (Before serial no. ES1700)
5	KK 03 27 02	Hex screw M16 x 110 mm w/nut				58	KK 03 27 55	Hex screw M16 x 55 mm w/nut
6	KK 07 45 07	Bracket w/axle				59	KK 03 27 65	Hex screw M16 x 65 mm (for ES and LS plough, before 01.08.98) (for ED and LD plough, from 01.08.98)
7	KK 07 45 27	Cone bolt	31	KK 01 58 34	Nut M20			
8	KK 01 10 16	Roll pin 8 x 45 mm	32	KK 06 70 49	Adjustment screw M20 x 110 mm			
9	KK 07 45 18	Cone nut	33	KK 03 26 50	Hex screw M12 x 50 mm w/nut	60	KK 07 58 97	Plate (From serial no. ES1700)
10	KK 07 45 49	Bolt D35 mm		KK 03 26 55	Hex screw M12 x 55 mm w/nut (w/scrapper)		KK 07 46 45	Plate (for ED and LD plough) (From 01.08.98)
11	KK 07 45 35	Bracket	34	KK 01 29 55	Washer 50 x 70 x 1 mm	61	KK 01 14 19	Rim w/bearing for 26 x 12-12
	KK 07 46 40	Bracket (for VD plough only) (150 x 150)	35	KK 07 45 87	Stretching screw	62	KK 01 13 46	Tyre 26 x 12-12
12	KK 07 45 33	Plate for bracket	36	KK 07 45 94	Spring D26 x 76 mm		KK 01 13 49	Inner tube 26 x 12-12
	KK 07 46 44	Plate for bracket (for VD plough only) (150 x 150)	37	KK 07 46 77	Pin (From 02/01/95, serial no EG6310, E41999, F18020, LB3045)	63	KK 07 40 93	Axle 26 x 12-12
13	KK 03 28 75	Hex screw M20 x 75 mm w/nut		KK 07 45 86	Pin (Before 02/01/95, serial no EG6310, E41999, F18020, LB3045)	64	KK 07 46 13	Leaf spring (From 01.04.97)
	KK 03 28 24	Hex screw M20 x 105 mm w/nut (for VD plough only) (150 x 150)				65	KK 03 27 65	Hex screw M16 x 65 mm (for ES and LS plough) (From 01.08.98)
14	KK 02 97 70	Pin	38	KK 07 45 92	Ball D30	66	KK 03 27 45	Hex screw M16 x 45 mm (for ES and LS plough) (From 01.08.98)
15	KK 07 45 40	Cover	39	KK 07 40 47	Scraper			
16	KK 01 16 66	Slidebearing		KK 07 46 24	Scraper (for wheel 26 x 12 - 12)		KK 03 27 50	Hex screw M16 x 50 mm (for LS plough) (From 01.08.98)
17	KK 07 45 48	Bolt	40	KK 03 51 78	Hex screw M20 x 110 mm w/lock nut			
18	KK 07 45 93	Spring for bolt	41	KK 07 40 80	Axle for 200 x 14.5	68	KK 01 29 19	Washer (w/scrapper)
19	KK 07 45 01	Main bearinghouse	42	KK 01 11 68	Z - lamell	69	KK 03 35 16	Hex screw M10 x 16 mm w/nut (From 01.04.97.)
20	KK 02 99 20	Greasenipple M8 x 1	43	KK 01 05 17	Bearing			
21	KK 07 45 90	Pawl	44	KK 01 13 03	Tyre 200 x 14.5			
22	KK 07 45 89	Slidecover		KK 01 13 05	Inne tube 200 x 14.5	Not ill.	KK 07 46 37	Combi wheel cpl. 200 x 14.5 (H=700 mm)
23	KK 03 20 10	Umbrakoscrew M8 x 20 mm	45	KK 01 13 79	Rim w/bearing for 200 x 14.5		KK 07 46 39	Combi wheel cpl. 26 x 12-12 (H=700 mm)
24	KK 03 20 13	Umbrakoscrew M8 x 15 mm	46	KK 01 12 00	Ball bearing 6206		KK 07 46 66	Combi wheel cpl. 200 x 14.5 (H=800 mm)
25	KK 03 20 03	Umbrakoscrew M6 x 12 mm	47	KK 01 29 34	Washer 20.5 x 40 x 3.4 mm		KK 07 46 68	Combi wheel cpl. 26 x 12-12 (H=800 mm)
26	KK 07 45 21	Plate	48	KK 01 60 00	Lock nut		KK 07 46 14	Scraper for wheel 26 x 12-12 cpl.
27	KK 01 28 70	Discspring	49	KK 01 11 57	Cap		KK 07 48 40	Scraper for wheel 200 x 14.5 cpl.
28	KK 07 45 24	Spacing tube for discspring	50	KK 01 14 01	Cover cpl. 200 x 14.5			
29	KK 01 10 00	Roll pin 8 x 80 mm	51	KK 07 45 95	Bracket, rear			
			52	KK 07 46 51	Tube for rear mounted wheel (for EG plough)			

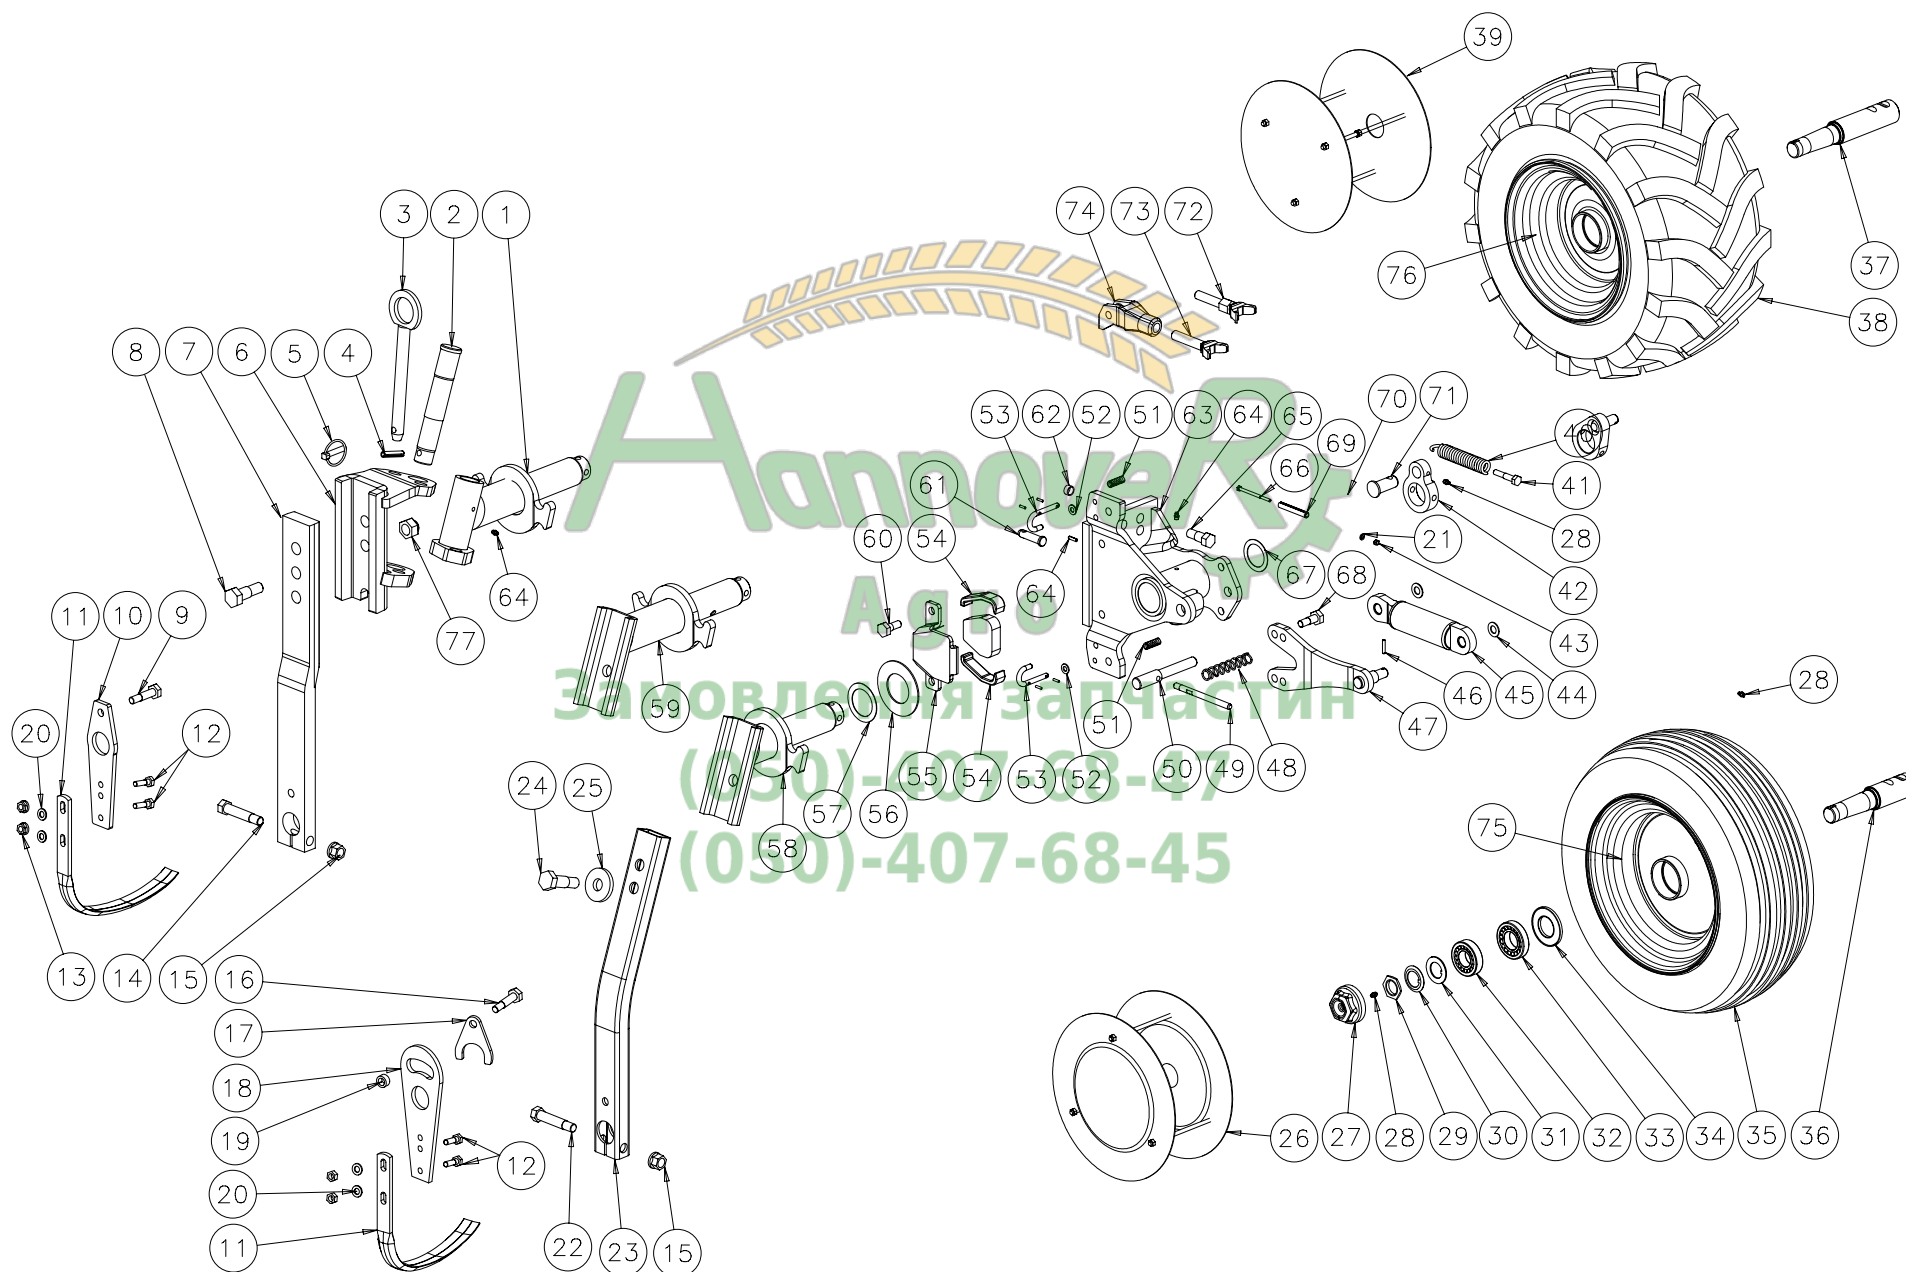

1	KK 07 48 56	Axle w/bearing cpl. (for depth/transport wheel)	28	KK 02 99 32	Grease nipple	50	KK 07 48 73	Axle
2	KK 07 48 75	Axle	29	KK 01 60 00	Lock nut M20 (Before 01.01.02)	51	KK 01 37 00	Spring
3	KK 07 48 93	Axle		KK 01 31 03	Lock nut KM6 M30 (Rebuilding kit EO/LO. Check dimension !)	52	KK 01 29 16	Washer
4	KK 01 10 48	Roll pin D12 x 60 mm		KK 01 31 09	Lock nut KM7 M35 (From 21.05.02)	53	KK 07 48 76	Lock
5	KK 01 07 00	Pin D12	30	KK 01 29 34	Lock washer (Before 21.05.02)	54	KK 06 40 86	Protection for damper block (From 01.05.00)
6	KK 07 48 64	Switch bracket		KK 01 31 04	Lock washer D42 x d30 x 3 (Rebuilding kit EO/LO. Check dimension !)	55	KK 06 40 79	Holder for damper block (From 01.05.00)
7	KK 07 48 65	Wheel arm (for depth/transport wheel)		KK 01 31 08	Lock washer D58 x d35 x 2,5 (From 21.05.02)	56	KK 01 30 04	Washer
8	KK 03 29 80	Hex screw M24 x 80 mm w/nut				57	KK 01 29 56	Washer
9	KK 03 27 65	Hex screw M16 x 65 mm w/nut (From 01.04.01)	31	KK 01 31 02	Washer MB6 (Rebuilding kit EO/LO. Check dimension !)	58	KK 07 48 41	Axle w/short bracket shaft cpl. (for depth wheel 200 x 14.5)
10	KK 07 48 44	Bracket for scraper (From 01.04.01)		KK 01 31 10	Washer MB7 (From 21.05.02)	59	KK 07 48 62	Axle w/bracket shaft cpl. (for depth wheel 26 x 12-12)
11	KK 07 48 38	Scraper (for wheel 200 x 14.5)	32	KK 01 12 00	Bearing (Before 21.05.02)	60	KK 03 27 40	Hex screw M16 x 40 mm w/nut (From 01.05.00)
	KK 07 48 43	Scraper (for wheel 26 x 12-12) (Before 01.01.02)	33	KK 01 05 91	Conical bearing (From 21.05.02)			
	KK 07 46 24	Scraper (for wheel 26 x 12-12) (From 01.01.02)		KK 01 05 17	Bearing (Before 21.05.02)	61	KK 01 02 55	Bolt D16 x 51 mm
				KK 01 12 15	Conical bearing (From 21.05.02)	62	KK 01 16 36	Bushing D20 x D16 x 10 mm
12	KK 03 26 40	Hex screw M12 x 40 mm w/nut	34	KK 01 11 68	Z - lamell	63	KK 07 48 50	Wheel bracket, rear mounted depth wheel
13	KK 01 60 38	Flange nut M12 (From 01.04.01)	35	KK 01 13 03	Tyre 200 x 14.5			
14	KK 03 28 07	Hex screw M20 x 100 mm w/nut		KK 01 13 05	Inner tube 200 x 14.5		KK 07 48 39	Wheel bracket, rear mounted depth wheel w/bearing
15	KK 01 60 12	Flange nut M20	36	KK 07 40 80	Axle 200 x 14.5 (Before 21.05.02)	64	KK 02 99 20	Grease nipple
16	KK 03 27 70	Hex screw M16 x 70 mm w/nut (for depth/transport wheel) (Before 01.04.01)		KK 08 41 10	Axle 200 x 14.5 (From 21.05.02)	65	KK 03 28 50	Hex screw M20 x 50 mm w/nut
	KK 03 27 75	Hex screw M16 x 75 mm w/nut (for depth wheel) (Before 01.04.01)	37	KK 07 40 93	Axle 26 x 12-12 (Before 27.05.02)	66	KK 03 23 90	Hex screw M6 x 90 mm
				KK 08 41 11	Axle 26 x 12-12 (From 27.05.02)	67	KK 01 29 55	Washer
17	KK 07 48 35	Clamp bracket (Before 01.04.01)	38	KK 01 13 46	Tyre 26 x 12-12 (Before 27.05.02)	68	KK 03 27 45	Hex screw M16 x 45 mm w/nut
18	KK 07 48 36	Bracket for scraper (Before 01.04.01)		KK 01 31 00	Tyre 26 x 12-12 (From 27.05.02)	69	KK 01 10 52	Roll pin D12 x 80 mm
19	KK 10 68 63	Bushing (Before 01.04.01)	39	KK 01 13 49	Inner tube 26 x 12-12	70	KK 07 48 67	Crank for shock absorber
20	KK 01 29 19	Washer (Before 01.04.01)		KK 01 14 02	Cover kit cpl.	71	KK 08 40 40	Rotation bolt (From 01.05.00)
21	KK 01 29 11	Washer 6,4 x 12,5 x 1,5 mm	40	KK 06 40 89	Spring (From 01.05.00)	72	KK 06 40 97	Crank screw cpl.
22	KK 03 28 90	Hex screw M20 x 90 mm w/nut	41	KK 03 26 65	Hex screw M12 x 60 mm (From 01.05.00)	73	KK 06 40 24	Stop screw
23	KK 07 48 66	Wheel arm (for depth wheel)	42	KK 08 40 43	Crank (From 01.05.00)	74	KK 06 40 30	Clevis
24	KK 03 29 80	Hex screw M24 x 80 mm w/nut	43	KK 01 60 18	Lock nut M6	75	KK 01 13 79	Rim 200 x 14.5 (Before 21.05.02)
25	KK 07 90 63	Washer	44	KK 01 29 31	Washer		KK 08 41 06	Rim 200 x 14.5 (From 21.05.02)
26	KK 01 14 01	Cover kit cpl.	45	KK 35 36 30	Shock absorber	76	KK 01 14 19	Rim 26 x 12-12 (Before 27.05.02)
27	KK 01 11 57	Hub cap (Before 01.01.02)	46	KK 01 10 35	Roll pin D6 x 30 mm		KK 08 41 07	Rim 26 x 12-12 (From 27.05.02)
	KK 01 31 05	Hub cap (From 21.05.02)	47	KK 07 48 70	Bracket arm for shock absorber		KK 07 48 86	Clamp w/fixing lug (200 mm tube)
			48	KK 35 60 42	Spring	77	KK 01 60 01	Lock nut M24
			49	KK 07 48 74	Handle			

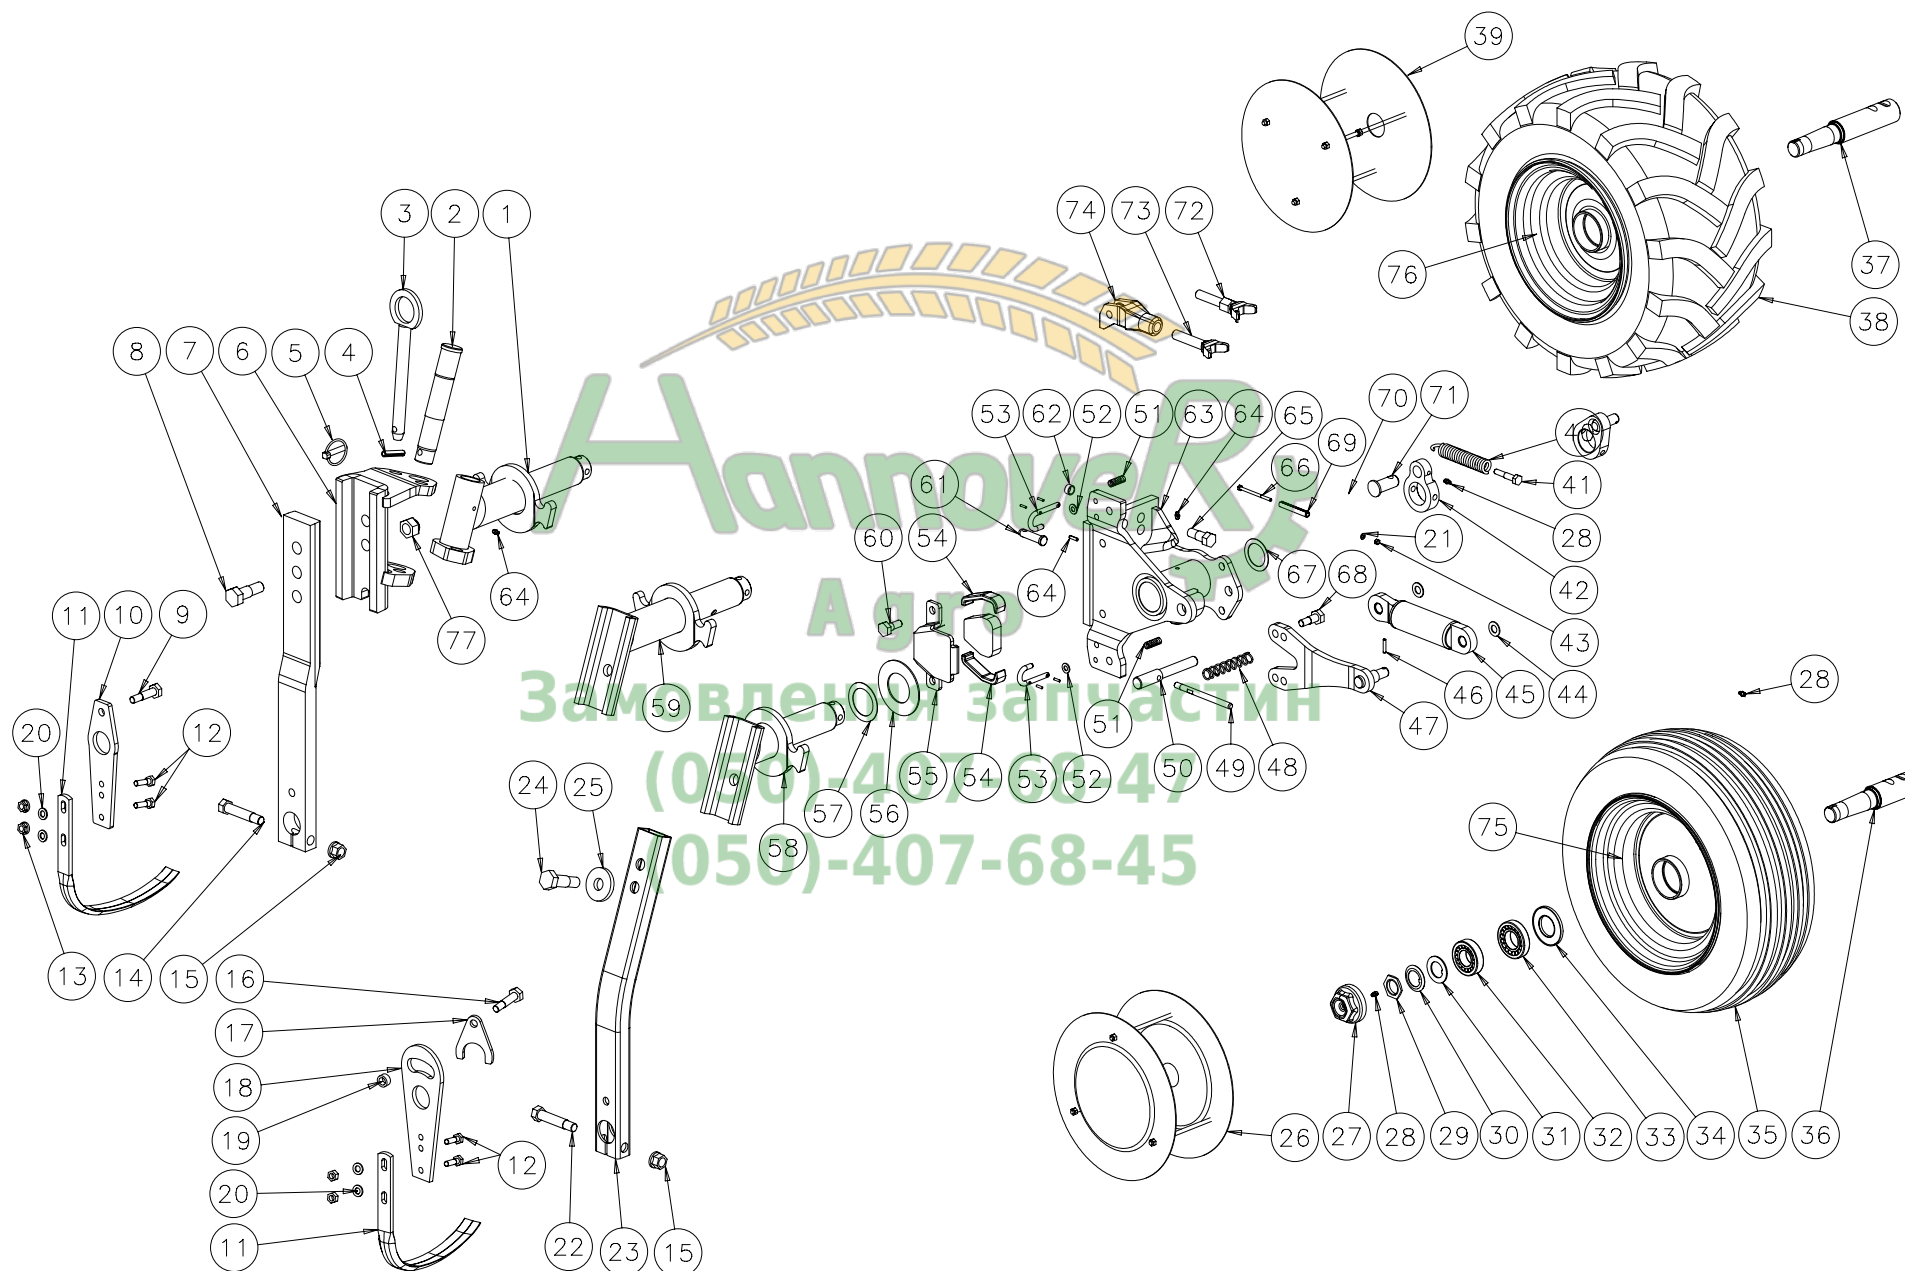

Not ill.	KK 06 40 47	Stop cpl.
	KK 08 40 00	Depth wheel 200 x 14.5 rear mounted without shock absorber cpl.
	KK 08 40 01	Depth wheel 200 x 14.5 rear mounted w/shock absorber cpl.
	KK 08 40 02	Depth wheel 26 x 12-12 rear mounted w/shock absorber cpl.
	KK 08 40 03	Depth wheel 200 x 14.5 frame mounted without shock absorber cpl.
	KK 08 40 10	Depth/transport wheel 200 x 14.5 rear mounted without shock absorber cpl.
	KK 08 40 11	Depth/transport wheel 200 x 14.5 rear mounted w/shock absorber cpl.
	KK 08 40 12	Depth/transport wheel 26 x 12-12 rear mounted w/shock absorber cpl.
	KK 08 40 13	Depth/transport wheel 200 x 14.5 frame mounted without shock absorber cpl.
	KK 08 41 00	Wheel 200 x 14.5 cpl. w/axle (From 21.05.02)
	KK 08 41 01	Wheel 26 x 12-12 cpl. w/axle (From 27.05.02)



Замовлення запчастин
(050)-407-68-47
(050)-407-68-45



Замовлення запчастин

(050)-407-68-47

(050)-407-68-45



Замовлення запчастин


(050)-407-68-47

(050)-407-68-45



1	KK 03 27 16	Hex screw M16 x 140 mm w/nut (VD, VX, ED and LD plough)	24	KK 07 48 90	Clamp (150 mm tube)
	KK 03 27 19	Hex screw M16 x 190 mm w/nut (EM/LM plough)		KK 07 48 87	Clamp (200 mm tube)
	KK 03 27 27	Hex screw M16 x 160 mm w/nut (ED/LD-HD plough)	25	KK 07 48 89	Clamp w/fixing lug (150 mm tube)
				KK 07 48 86	Clamp w/fixing lug (200 mm tube)
2	KK 01 03 15	Bolt D25.3 x 60 mm	26	KK 07 48 81	Plate, over (for ES and LS plough)
3	KK 07 08 05	Adjustable stay			
4	KK 01 10 20	Roll pin D12 x 40 mm			
5	KK 07 48 80	Wheel bracket, frame mounted wheel			
6	KK 07 48 85	Plate, lower (ED and LD plough)			
	KK 07 49 71	Plate, lower (ED/LD-HD, 200 tube)			
7	KK 07 48 84	Plate, upper (ED and LD plough)			
	KK 07 49 70	Plate, upper (ED/LD-HD, 200 tube)			
8	KK 07 48 88	Plate (for VD and VX plough)			
9	KK 07 48 91	Plate (for EM/LM plough)			
10	KK 07 48 82	Plate, under (for ES and LS plough)			
11	KK 01 30 05	Washer			
12	KK 01 16 14	Bushing D30 x D16 x 28 mm			
13	KK 03 27 65	Hex screw M16 x 65 mm w/nut			
14	KK 01 16 15	Bushing D40 x D24 x 15.5 mm			
15	KK 03 29 25	Hex screw M24 x 250 mm w/nut			
16	KK 03 29 20	Hex screw M24 x 200 mm w/nut			
17	KK 03 28 22	Hex screw M20 x 190 mm w/nut			
18	KK 03 28 36	Hex screw M20 x 240 mm w/nut			
19	KK 08 40 42	Pin (From 01.05.00)			
20	KK 06 82 51	Washer			
21	KK 08 40 84	Stop screw (for ES/LS ploughs only) (From 01.04.01)			
22	KK 07 48 46	Transportation support (for ES/LS ploughs only) (From 01.04.01)			
23	KK 06 18 99	Contra nut M24 (for ES/LS ploughs only) (From 01.04.01)			



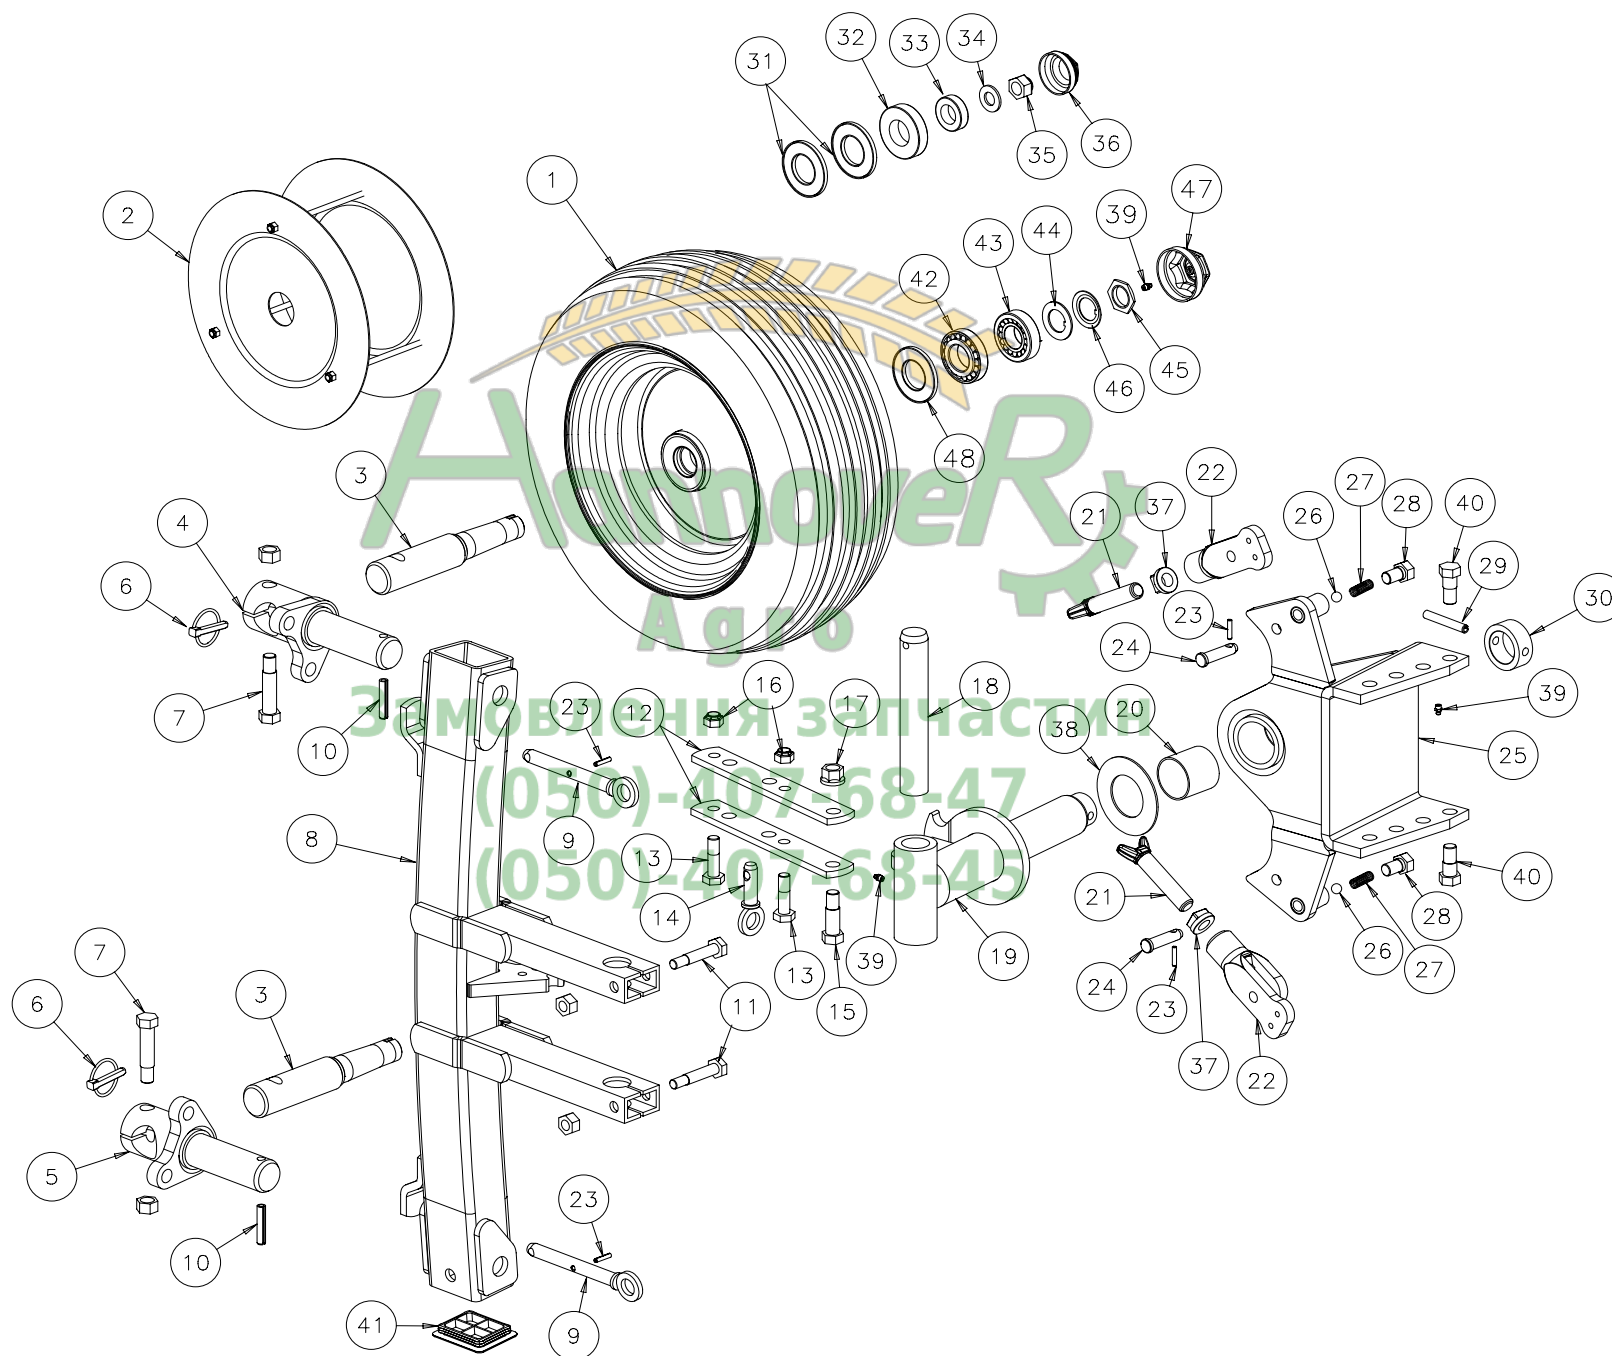


1	KK 01 13 03	Tyre 200 x 14.5	25	KK 08 40 50	Wheel holder
	KK 01 13 46	Tyre 26 x 12-12 (Before 15.03.02)	26	KK 01 05 89	Ball D15
	KK 01 31 00	Tyre 26 x 12-12 (From 15.03.02)	27	KK 01 37 02	Spring
	KK 01 13 05	Inner tube for 200 x 14.5	28	KK 03 28 30	Hex screw M20 x 30 mm
	KK 01 13 49	Inner tube for 26 x 12-12	29	KK 01 10 52	Pin D12 x 80 mm
	KK 01 13 79	Rim 200 x 14.5 (Before 15.03.02)	30	KK 08 40 77	Lock ring
	KK 08 41 06	Rim 200 x 14.5 (From 15.03.02)	31	KK 01 11 68	Packing (Before 05.09.01)
	KK 01 14 19	Rim 26 x 12-12 (Before 15.03.02)	32	KK 01 05 17	Bearing (Before 05.09.01)
	KK 08 41 07	Rim 26 x 12-12 (From 15.03.02)	33	KK 01 12 00	Bearing (Before 05.09.01)
2	KK 01 14 01	Cover kit cpl.	34	KK 01 29 34	Washer (Before 05.09.01)
3	KK 08 40 80	Axle D50 x 285 mm for 200 x 14.5 (Before 05.09.01)	35	KK 01 60 00	Lock nut M20 (Before 05.09.01)
	KK 08 40 92	Axle 200 x 14.5 (From 05.09.01) (Before 15.03.02)	36	KK 01 11 57	End cap (Before 05.09.01)
	KK 08 41 12	Axle 200 x 14.5 (From 15.03.02)	37	KK 06 18 99	Contra nut M24
	KK 08 40 81	Axle D50 x 335 mm for 26 x 12 - 12 (Before 05.09.01)	38	KK 01 30 04	Washer
	KK 08 40 93	Axle 26 x 12-12 (From 05.09.01) (Before 15.03.02)	39	KK 02 99 20	Grease nipple
	KK 08 41 13	Axle 26 x 12-12 (From 15.03.02)	40	KK 03 28 45	Hex screw M20 x 45 mm w/nut
4	KK 08 40 62	Axle, lower	41	KK 01 09 06	Plastic part
5	KK 08 40 61	Axle, upper	42	KK 01 12 15	Conical bushing D80 (From 05.09.01)
6	KK 01 07 00	Ring pin D12	43	KK 01 12 28	Conical bushing D62 (From 05.09.01) (Before 15.03.02)
7	KK 03 28 90	Hex screw M20 x 90 mm w/nut		KK 01 05 91	Conical bearing (From 15.03.02)
8	KK 08 40 70	Wheel arm, H = 700	44	KK 01 31 02	Washer (From 05.09.01)
	KK 08 40 45	Wheel arm, H = 800 (From 01.11.01)	45	KK 01 31 03	Lock nut M30 (From 05.09.01)
9	KK 08 40 67	Bolt w/adjusting handle	46	KK 01 31 04	Washer D42 x d30 x 3 (From 05.09.01)
10	KK 01 10 48	Roll pin D12 x 60 mm	47	KK 01 31 05	Hub cap (From 15.03.02)
11	KK 03 27 85	Hex screw M16 x 85 mm w/nut	48	KK 01 31 06	Z-lamell (From 15.03.02)
12	KK 08 40 65	Adjustable plate			
13	KK 03 27 60	Hex screw M16 x 60 mm w/lock nut	Not ill.	KK 08 40 15	Depth wheel double w/wheel 200 x 14.5, H = 700
14	KK 08 40 69	Bolt w/adjusting handle		KK 08 40 16	Depth wheel double w/wheel 26 x 12-12, H = 700
15	KK 03 28 65	Hex screw M20 x 65 mm w/lock nut		KK 08 40 18	Depth/transport wheel 200 x 14.5, H = 800 (From 01.11.01)
16	KK 01 60 25	Lock nut M16		KK 08 40 19	Depth/transport wheel 26 x 12-12, H = 800 (From 01.11.01)
17	KK 01 60 00	Lock nut M20		KK 08 40 91	Depth stop cpl.
18	KK 08 40 66	Axle D40 x 245 mm		KK 08 41 02	Wheel 200 x 14.5 cpl. w/axle (for EO/LO plough) (From 15.03.02)
19	KK 08 40 55	Axle cpl.		KK 08 41 03	Wheel 26 x 12-12 cpl. w/axle R. (From 15.03.02)
20	KK 01 16 33	Bearing		KK 08 41 04	Wheel 26 x 12-12 cpl. w/axle L. (From 15.03.02)
21	KK 08 80 63	Stop screw			
22	KK 08 40 90	Depth wheel stop			
23	KK 01 10 35	Pin D6 x 30 mm			
24	KK 01 02 55	Bolt w/head D16 x 51 mm			



Kverneland
EG85




Kverneland
EG100

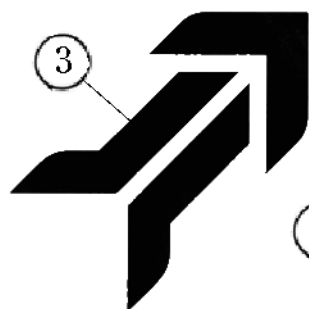


4

5

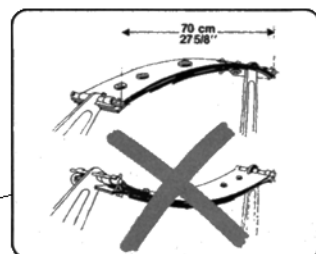

14

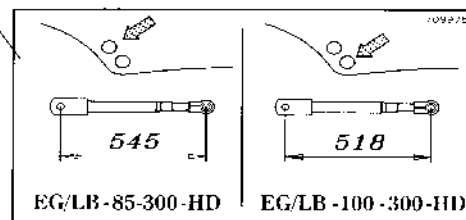

13

Mod. EG-85-160-330mm
Mod. EG-100-160-435mm

7



6

1

2

8


9

10

11

12

15

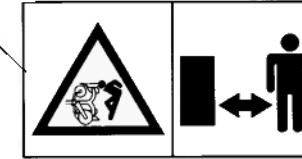

1	KK 70 95 82	Kverneland EG85
2	KK 70 95 83	Kverneland EG100
3	KK 70 97 37	Arrow
4	KK 70 98 31	Kverneland w/arrow
5	KK 70 92 34	Info., spring
6	KK 70 94 79	Info., nuts
7	KK 70 98 33	Info., hoses
8	KK 70 98 43	Safety sign, parking support
9	KK 70 98 23	Safety sign, crush danger
10	KK 70 98 42	Safety sign, reversible plough
11	KK 70 98 44	Safety sign, read instruction manual
12	KK 70 98 41	Safety sign, danger, tractor/implement
13	KK 70 94 59	Info. turnbuckle EG85/100-160
	KK 70 96 29	Info. turnbuckle EG/LB85/100-240
	KK 70 96 30	Info. turnbuckle EG/LB85/100/115-200
14	KK 70 99 78	Info. holes for turnbuckle EB/LB-300
15	KK 70 98 95	Safety sign, sharp edges



Замовлення запчастин
(050)-407-68-47
(050)-407-68-45

Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page
	58	KK 01 02 93	43	KK 01 05 17123		KK 01 07 00	55	KK 01 10 20	69	KK 01 12 00121		KK 01 12 74	51	KK 01 14 02115	
KK 01 00 08	41	KK 01 02 93	47	KK 01 05 17131		KK 01 07 00	57	KK 01 10 20	71	KK 01 12 00123		KK 01 12 77	49	KK 01 14 02123	
KK 01 00 08	63	KK 01 03 15129		KK 01 05 32	25	KK 01 07 00	61	KK 01 10 20	73	KK 01 12 00131		KK 01 12 77	51	KK 01 14 18119	
KK 01 00 08	67	KK 01 03 15	41	KK 01 05 32	27	KK 01 07 00	65	KK 01 10 20	75	KK 01 12 15119		KK 01 12 77	53	KK 01 14 19115	
KK 01 00 31115		KK 01 03 15	45	KK 01 05 66	41	KK 01 07 00	69	KK 01 10 21	41	KK 01 12 15123		KK 01 12 77	59	KK 01 14 19121	
KK 01 00 42	41	KK 01 03 18	41	KK 01 05 66	43	KK 01 07 00	73	KK 01 10 21	47	KK 01 12 15131		KK 01 12 92	23	KK 01 14 19123	
KK 01 00 42	43	KK 01 03 18	49	KK 01 05 70	49	KK 01 07 49117		KK 01 10 21	71	KK 01 12 23101		KK 01 12 92	57	KK 01 14 19131	
KK 01 00 67115		KK 01 03 18	69	KK 01 05 70	51	KK 01 07 72 23		KK 01 10 21	75	KK 01 12 23103		KK 01 13 03115		KK 01 15 41	63
KK 01 00 96113		KK 01 03 19	41	KK 01 05 72	25	KK 01 07 75 23		KK 01 10 32	89	KK 01 12 23105		KK 01 13 03117		KK 01 15 41	67
KK 01 01 52	43	KK 01 03 19	63	KK 01 05 72	27	KK 01 08 06113		KK 01 10 35119		KK 01 12 23	89	KK 01 13 03121		KK 01 15 65101	
KK 01 01 53	43	KK 01 03 19	67	KK 01 05 88	47	KK 01 08 06115		KK 01 10 35123		KK 01 12 23	91	KK 01 13 03123		KK 01 15 65	61
KK 01 01 54	47	KK 01 03 19	71	KK 01 05 89131		KK 01 08 18	27	KK 01 10 35131		KK 01 12 28131		KK 01 13 03131		KK 01 15 65	61
KK 01 01 55	11	KK 01 03 19	73	KK 01 05 91119		KK 01 08 51	35	KK 01 10 37	21	KK 01 12 31113		KK 01 13 05115		KK 01 15 65	65
KK 01 01 55	13	KK 01 03 19	75	KK 01 05 91123		KK 01 09 06131		KK 01 10 42115		KK 01 12 31115		KK 01 13 05117		KK 01 15 65	65
KK 01 01 55	19	KK 01 03 28	61	KK 01 05 91131		KK 01 09 10	49	KK 01 10 42	21	KK 01 12 52	41	KK 01 13 05121		KK 01 15 65	69
KK 01 01 55	7	KK 01 03 28	63	KK 01 06 06	41	KK 01 09 10	51	KK 01 10 48123		KK 01 12 52	43	KK 01 13 05123		KK 01 15 65	73
KK 01 01 56	11	KK 01 03 28	65	KK 01 06 06	43	KK 01 09 10	53	KK 01 10 48131		KK 01 12 52	47	KK 01 13 05131		KK 01 15 65	77
KK 01 01 56	13	KK 01 03 28	67	KK 01 06 06	45	KK 01 09 58	41	KK 01 10 52123		KK 01 12 59	25	KK 01 13 31115		KK 01 15 65	83
KK 01 01 56	19	KK 01 03 28	69	KK 01 06 06	47	KK 01 09 58	43	KK 01 10 52131		KK 01 12 59	27	KK 01 13 46115		KK 01 15 85	61
KK 01 01 56	7	KK 01 03 28	71	KK 01 06 50	41	KK 01 09 58	47	KK 01 10 61113		KK 01 12 61101		KK 01 13 46121		KK 01 15 85	61
KK 01 01 57	35	KK 01 03 28	73	KK 01 06 50	45	KK 01 10 00121		KK 01 10 61115		KK 01 12 61103		KK 01 13 46123		KK 01 15 85	63
KK 01 01 58	43	KK 01 03 28	75	KK 01 06 50	51	KK 01 10 01	43	KK 01 10 61117		KK 01 12 61105		KK 01 13 46131		KK 01 15 85	65
KK 01 01 59	57	KK 01 03 30	45	KK 01 06 50	57	KK 01 10 02	41	KK 01 10 64	37	KK 01 12 61	49	KK 01 13 49115		KK 01 15 85	65
KK 01 01 66	59	KK 01 03 32	41	KK 01 06 55	41	KK 01 10 09	41	KK 01 11 22	47	KK 01 12 61	51	KK 01 13 49121		KK 01 15 85	67
KK 01 02 55113		KK 01 03 32	45	KK 01 06 55	71	KK 01 10 16121		KK 01 11 57115		KK 01 12 61	89	KK 01 13 49123		KK 01 15 85	69
KK 01 02 55115		KK 01 03 37	43	KK 01 07 00117		KK 01 10 16	43	KK 01 11 57117		KK 01 12 61	91	KK 01 13 49131		KK 01 15 85	69
KK 01 02 55117		KK 01 03 38	43	KK 01 07 00123		KK 01 10 18	49	KK 01 11 57121		KK 01 12 62	43	KK 01 13 78113		KK 01 15 85	71
KK 01 02 55123		KK 01 03 45	35	KK 01 07 00131		KK 01 10 18	51	KK 01 11 57123		KK 01 12 62	45	KK 01 13 79117		KK 01 15 85	73
KK 01 02 55131		KK 01 03 71	47	KK 01 07 00	31	KK 01 10 18	53	KK 01 11 57131		KK 01 12 62	47	KK 01 13 79121		KK 01 15 85	73
KK 01 02 78	31	KK 01 03 72	47	KK 01 07 00	33	KK 01 10 20129		KK 01 11 67113		KK 01 12 62	57	KK 01 13 79123		KK 01 15 85	75
KK 01 02 78	33	KK 01 03 73	47	KK 01 07 00	35	KK 01 10 20	41	KK 01 11 68117		KK 01 12 66	23	KK 01 13 79131		KK 01 15 94	77
KK 01 02 82	31	KK 01 03 90	87	KK 01 07 00	41	KK 01 10 20	41	KK 01 11 68121		KK 01 12 66	25	KK 01 14 00113		KK 01 15 94	83
KK 01 02 82	33	KK 01 04 61113		KK 01 07 00	43	KK 01 10 20	45	KK 01 11 68123		KK 01 12 66	27	KK 01 14 01115		KK 01 15 96	61
KK 01 02 88	33	KK 01 04 61117		KK 01 07 00	45	KK 01 10 20	61	KK 01 11 68131		KK 01 12 66	57	KK 01 14 01117		KK 01 15 96	63
KK 01 02 88	41	KK 01 04 64117		KK 01 07 00	47	KK 01 10 20	63	KK 01 12 00113		KK 01 12 72113		KK 01 14 01121		KK 01 15 96	65
KK 01 02 91	33	KK 01 05 17117		KK 01 07 00	49	KK 01 10 20	65	KK 01 12 00115		KK 01 12 72117		KK 01 14 01123		KK 01 15 96	67
KK 01 02 91	41	KK 01 05 17121		KK 01 07 00	51	KK 01 10 20	67	KK 01 12 00117		KK 01 12 74	49	KK 01 14 01131		KK 01 15 96	69

Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page
KK 01 15 96 71		KK 01 17 43 79		KK 01 18 95 41		KK 01 20 56 65		KK 01 20 62 75		KK 01 21 44 73		KK 01 25 08 61		KK 01 27 02 65	
KK 01 15 96 73		KK 01 17 44103		KK 01 19 06101		KK 01 20 56 67		KK 01 20 70101		KK 01 21 48 69		KK 01 25 08 63		KK 01 27 02 69	
KK 01 15 96 75		KK 01 17 44 79		KK 01 19 06 77		KK 01 20 56 69		KK 01 20 70 61		KK 01 21 58 63		KK 01 25 08 69		KK 01 27 02 73	
KK 01 16 14129		KK 01 17 45103		KK 01 19 07 89		KK 01 20 56 73		KK 01 20 70 65		KK 01 21 58 67		KK 01 25 08 71		KK 01 27 04 61	
KK 01 16 15129		KK 01 17 45 79		KK 01 19 09 83		KK 01 20 56 75		KK 01 20 77 61		KK 01 21 58 71		KK 01 25 20 61		KK 01 27 04 65	
KK 01 16 33131		KK 01 17 46103		KK 01 19 11101		KK 01 20 59 61		KK 01 20 77 65		KK 01 21 58 75		KK 01 25 20 63		KK 01 27 04 69	
KK 01 16 36113		KK 01 17 46 79		KK 01 19 11 77		KK 01 20 59 63		KK 01 20 78 61		KK 01 21 77 69		KK 01 25 20 65		KK 01 27 04 73	
KK 01 16 36115		KK 01 17 50 25		KK 01 19 11 89		KK 01 20 59 65		KK 01 20 78 63		KK 01 21 77 73		KK 01 25 20 67		KK 01 27 07 71	
KK 01 16 36117		KK 01 17 50 27		KK 01 19 11 93		KK 01 20 59 67		KK 01 20 78 65		KK 01 22 08 61		KK 01 25 20 69		KK 01 27 07 75	
KK 01 16 36123		KK 01 17 52 89		KK 01 19 12105		KK 01 20 59 69		KK 01 20 78 67		KK 01 22 08 65		KK 01 25 20 73		KK 01 27 10 61	
KK 01 16 37 57		KK 01 17 69107		KK 01 19 12 99		KK 01 20 59 69		KK 01 20 78 69		KK 01 22 09 61		KK 01 25 48 61		KK 01 27 10 65	
KK 01 16 44 57		KK 01 17 97 99		KK 01 19 13109		KK 01 20 59 71		KK 01 20 78 69		KK 01 22 09 65		KK 01 25 48 63		KK 01 27 10 71	
KK 01 16 52117		KK 01 17 98 85		KK 01 19 15 83		KK 01 20 59 73		KK 01 20 78 71		KK 01 22 09 69		KK 01 25 48 67		KK 01 27 10 73	
KK 01 16 66121		KK 01 17 99 85		KK 01 19 18105		KK 01 20 59 73		KK 01 20 78 73		KK 01 22 09 73		KK 01 25 48 69		KK 01 27 10 75	
KK 01 16 82 49		KK 01 18 02101		KK 01 19 18 93		KK 01 20 59 73		KK 01 20 80 63		KK 01 22 12 63		KK 01 25 48 69		KK 01 27 23 67	
KK 01 16 82 51		KK 01 18 02 77		KK 01 19 18 99		KK 01 20 59 75		KK 01 20 80 67		KK 01 22 12 67		KK 01 25 48 71		KK 01 27 23 69	
KK 01 16 87 53		KK 01 18 10 83		KK 01 19 24 93		KK 01 20 59 75		KK 01 20 80 71		KK 01 22 12 69		KK 01 25 48 73		KK 01 27 23 73	
KK 01 16 91 53		KK 01 18 11 89		KK 01 19 26101		KK 01 20 60101		KK 01 20 80 75		KK 01 22 12 73		KK 01 25 48 75		KK 01 27 23 75	
KK 01 16 92 53		KK 01 18 21109		KK 01 19 39119		KK 01 20 60 61		KK 01 20 81 61		KK 01 22 61 61		KK 01 25 70 71		KK 01 27 26 41	
KK 01 16 94 49		KK 01 18 23 93		KK 01 19 40 77		KK 01 20 60 61		KK 01 20 81 65		KK 01 22 61 61		KK 01 25 70 75		KK 01 27 28 69	
KK 01 16 94 51		KK 01 18 24105		KK 01 19 48 89		KK 01 20 60 65		KK 01 20 81 73		KK 01 22 61 63		KK 01 25 77 61		KK 01 27 28 73	
KK 01 16 94 55		KK 01 18 24 93		KK 01 19 50101		KK 01 20 60 65		KK 01 20 82 67		KK 01 22 61 65		KK 01 25 77 63		KK 01 27 30 71	
KK 01 16 94 57		KK 01 18 24 99		KK 01 19 50 77		KK 01 20 60 65		KK 01 20 82 75		KK 01 22 61 65		KK 01 25 77 69		KK 01 27 30 75	
KK 01 17 23 37		KK 01 18 61101		KK 01 19 50 89		KK 01 20 60 69		KK 01 20 83 65		KK 01 22 61 65		KK 01 25 77 71		KK 01 27 32 61	
KK 01 17 29 85		KK 01 18 63 89		KK 01 19 50 93		KK 01 20 60 69		KK 01 20 83 73		KK 01 22 61 67		KK 01 26 32107		KK 01 27 32 65	
KK 01 17 30 85		KK 01 18 66 25		KK 01 19 51105		KK 01 20 60 69		KK 01 20 84 69		KK 01 22 61 69		KK 01 26 51 61		KK 01 27 34 67	
KK 01 17 31 85		KK 01 18 66 27		KK 01 19 51 99		KK 01 20 60 73		KK 01 21 04101		KK 01 22 61 69		KK 01 26 63 71		KK 01 27 34 71	
KK 01 17 32 85		KK 01 18 73109		KK 01 19 52 83		KK 01 20 60 73		KK 01 21 04 61		KK 01 22 61 69		KK 01 26 71 75		KK 01 27 34 75	
KK 01 17 33 85		KK 01 18 75 93		KK 01 19 53109		KK 01 20 60 83		KK 01 21 04 65		KK 01 22 61 71		KK 01 26 77 75		KK 01 27 35 67	
KK 01 17 36103		KK 01 18 76105		KK 01 19 59 83		KK 01 20 62 61		KK 01 21 04 69		KK 01 22 61 73		KK 01 26 77 75		KK 01 27 35 71	
KK 01 17 36 79		KK 01 18 76 93		KK 01 19 62107		KK 01 20 62 63		KK 01 21 04 69		KK 01 22 61 73		KK 01 26 78 71		KK 01 27 35 75	
KK 01 17 37103		KK 01 18 76 99		KK 01 19 69 83		KK 01 20 62 65		KK 01 21 04 73		KK 01 22 61 73		KK 01 26 78 75		KK 01 27 40 61	
KK 01 17 37 79		KK 01 18 90 41		KK 01 19 75 83		KK 01 20 62 65		KK 01 21 14 61		KK 01 22 61 75		KK 01 27 01 61		KK 01 27 40 63	
KK 01 17 37 91		KK 01 18 90 43		KK 01 20 10109		KK 01 20 62 67		KK 01 21 14 65		KK 01 23 19 67		KK 01 27 01 65		KK 01 27 40 69	
KK 01 17 38103		KK 01 18 91 41		KK 01 20 19109		KK 01 20 62 69		KK 01 21 14 69		KK 01 23 36 61		KK 01 27 01 69		KK 01 27 40 71	
KK 01 17 38 79		KK 01 18 91 43		KK 01 20 56 61		KK 01 20 62 71		KK 01 21 14 73		KK 01 23 36 65		KK 01 27 01 73		KK 01 27 41 65	
KK 01 17 43103		KK 01 18 94 89		KK 01 20 56 63		KK 01 20 62 73		KK 01 21 44 69		KK 01 23 36 73		KK 01 27 02 61		KK 01 27 41 67	

Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page
KK 01 27 41 73		KK 01 27 87 73		KK 01 29 31123		KK 01 30 00 59		KK 01 31 04123		KK 01 33 46 7		KK 01 36 09 97		KK 01 58 30 15	
KK 01 27 41 75		KK 01 27 88 61		KK 01 29 31 37		KK 01 30 01 15		KK 01 31 04131		KK 01 33 46 9		KK 01 37 00123		KK 01 58 30 25	
KK 01 27 43 65		KK 01 27 88 65		KK 01 29 34117		KK 01 30 04123		KK 01 31 05119		KK 01 33 61 11		KK 01 37 02131		KK 01 58 30 25	
KK 01 27 43 67		KK 01 27 88 69		KK 01 29 34121		KK 01 30 04131		KK 01 31 05123		KK 01 33 61 13		KK 01 37 10 47		KK 01 58 30 45	
KK 01 27 43 73		KK 01 27 88 73		KK 01 29 34123		KK 01 30 05129		KK 01 31 05131		KK 01 33 61 19		KK 01 37 50 47		KK 01 58 30 57	
KK 01 27 43 75		KK 01 27 89 67		KK 01 29 34131		KK 01 30 10 43		KK 01 31 06119		KK 01 33 61 7		KK 01 58 13 17		KK 01 58 32115	
KK 01 27 52 63		KK 01 28 13 59		KK 01 29 36 43		KK 01 30 62 43		KK 01 31 06131		KK 01 33 85 11		KK 01 58 13 17		KK 01 58 32 5	
KK 01 27 52 69		KK 01 28 70121		KK 01 29 40113		KK 01 30 64 43		KK 01 31 08123		KK 01 33 85 13		KK 01 58 13 37		KK 01 58 34113	
KK 01 27 52 73		KK 01 29 06 29		KK 01 29 40 49		KK 01 30 65109		KK 01 31 09123		KK 01 33 85 19		KK 01 58 16 29		KK 01 58 34117	
KK 01 27 73 71		KK 01 29 11123		KK 01 29 40 51		KK 01 30 66105		KK 01 31 10123		KK 01 33 85 7		KK 01 58 17113		KK 01 58 34121	
KK 01 27 73 75		KK 01 29 13 21		KK 01 29 40 55		KK 01 30 67107		KK 01 32 28 11		KK 01 35 00 71		KK 01 58 17 17		KK 01 58 34 13	
KK 01 27 75 65		KK 01 29 16123		KK 01 29 40 55		KK 01 30 68107		KK 01 32 28 13		KK 01 35 00 75		KK 01 58 17 17		KK 01 58 34 15	
KK 01 27 75 73		KK 01 29 19113		KK 01 29 40 57		KK 01 30 69107		KK 01 32 28 13		KK 01 35 25111		KK 01 58 17 17		KK 01 58 34 9	
KK 01 27 76 65		KK 01 29 19115		KK 01 29 42 47		KK 01 30 70107		KK 01 32 28 15		KK 01 35 26111		KK 01 58 17 17		KK 01 58 35 49	
KK 01 27 76 67		KK 01 29 19117		KK 01 29 51 31		KK 01 30 82 99		KK 01 32 28 17		KK 01 35 27111		KK 01 58 17 17		KK 01 58 35 51	
KK 01 27 76 69		KK 01 29 19121		KK 01 29 51 33		KK 01 30 86 87		KK 01 32 28 19		KK 01 35 29 71		KK 01 58 17 19		KK 01 58 35 53	
KK 01 27 76 73		KK 01 29 19123		KK 01 29 55117		KK 01 30 87 81		KK 01 32 28 7		KK 01 35 29 75		KK 01 58 17 25		KK 01 58 41 29	
KK 01 27 77 65		KK 01 29 19 13		KK 01 29 55121		KK 01 30 88 97		KK 01 32 28 9		KK 01 35 31 63		KK 01 58 17 55		KK 01 58 99 61	
KK 01 27 77 73		KK 01 29 19 15		KK 01 29 55123		KK 01 30 89 87		KK 01 32 34 13		KK 01 35 31 75		KK 01 58 17 59		KK 01 58 99 65	
KK 01 27 78 71		KK 01 29 19 5		KK 01 29 56121		KK 01 30 91 87		KK 01 32 34 15		KK 01 35 32 63		KK 01 58 17 61		KK 01 58 99 69	
KK 01 27 78 75		KK 01 29 19 9		KK 01 29 56123		KK 01 30 92 81		KK 01 32 34 5		KK 01 35 32 75		KK 01 58 17 65		KK 01 58 99 73	
KK 01 27 84 63		KK 01 29 21 37		KK 01 29 56 53		KK 01 30 93 81		KK 01 32 34 9		KK 01 35 33 67		KK 01 58 17 69		KK 01 60 00117	
KK 01 27 84 67		KK 01 29 22113		KK 01 29 56 59		KK 01 30 94 81		KK 01 33 32 13		KK 01 35 34 67		KK 01 58 17 73		KK 01 60 00121	
KK 01 27 84 73		KK 01 29 22 13		KK 01 29 60 55		KK 01 30 95 81		KK 01 33 32 15		KK 01 35 37 63		KK 01 58 18 77		KK 01 60 00123	
KK 01 27 84 73		KK 01 29 22 15		KK 01 29 63 35		KK 01 30 96 81		KK 01 33 32 15		KK 01 35 37 67		KK 01 58 25113		KK 01 60 00131	
KK 01 27 85 71		KK 01 29 22 17		KK 01 29 68 47		KK 01 30 97 97		KK 01 33 32 17		KK 01 35 38 63		KK 01 58 25 17		KK 01 60 00131	
KK 01 27 85 75		KK 01 29 22 5		KK 01 29 68 59		KK 01 30 98 97		KK 01 33 32 5		KK 01 35 38 67		KK 01 58 25 17		KK 01 60 01123	
KK 01 27 86 63		KK 01 29 22 9		KK 01 29 70 43		KK 01 30 99 97		KK 01 33 32 9		KK 01 35 39 63		KK 01 58 25 17		KK 01 60 04 25	
KK 01 27 86 65		KK 01 29 23 53		KK 01 29 78 43		KK 01 31 00123		KK 01 33 32 9		KK 01 35 39 67		KK 01 58 25 19		KK 01 60 05 43	
KK 01 27 86 67		KK 01 29 24117		KK 01 29 78 45		KK 01 31 00131		KK 01 33 33 13		KK 01 35 40 63		KK 01 58 25 19		KK 01 60 05 43	
KK 01 27 86 73		KK 01 29 27115		KK 01 29 78 47		KK 01 31 02119		KK 01 33 33 7		KK 01 35 40 75		KK 01 58 25 19		KK 01 60 06 49	
KK 01 27 87 61		KK 01 29 27 5		KK 01 29 79 41		KK 01 31 02123		KK 01 33 33 9		KK 01 35 41 67		KK 01 58 25 29		KK 01 60 06 51	
KK 01 27 87 61		KK 01 29 27 9		KK 01 29 79 43		KK 01 31 02131		KK 01 33 46 11		KK 01 35 59 63		KK 01 58 25 49		KK 01 60 06 55	
KK 01 27 87 65		KK 01 29 29 11		KK 01 29 80 49		KK 01 31 03119		KK 01 33 46 13		KK 01 35 59 67		KK 01 58 25 51		KK 01 60 06 57	
KK 01 27 87 65		KK 01 29 29 13		KK 01 29 80 51		KK 01 31 03123		KK 01 33 46 15		KK 01 36 02 91		KK 01 58 25 55		KK 01 60 10113	
KK 01 27 87 67		KK 01 29 29 19		KK 01 29 80 59		KK 01 31 03131		KK 01 33 46 19		KK 01 36 07 97		KK 01 58 25 59		KK 01 60 10115	
KK 01 27 87 73		KK 01 29 29 7		KK 01 29 94121		KK 01 31 04119		KK 01 33 46 7		KK 01 36 08 97		KK 01 58 30113		KK 01 60 12123	

Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page
KK 01 60 12 41		KK 01 65 13111		KK 02 99 20 45		KK 03 20 16 85		KK 03 27 19129		KK 03 27 50113		KK 03 27 70 49		KK 03 28 13 53	
KK 01 60 12 53		KK 01 65 13 95		KK 02 99 20 47		KK 03 20 50 43		KK 03 27 25 45		KK 03 27 50115		KK 03 27 70 51		KK 03 28 15 53	
KK 01 60 13 17		KK 01 65 14111		KK 02 99 20 49		KK 03 20 51 43		KK 03 27 25 47		KK 03 27 50117		KK 03 27 75 11		KK 03 28 16 53	
KK 01 60 13 37		KK 01 65 14 95		KK 02 99 20 51		KK 03 20 51 47		KK 03 27 25 5		KK 03 27 50121		KK 03 27 75123		KK 03 28 18 59	
KK 01 60 13 49		KK 01 65 15 95		KK 02 99 20 53		KK 03 21 06107		KK 03 27 25 55		KK 03 27 50121		KK 03 27 75 13		KK 03 28 22129	
KK 01 60 13 51		KK 01 65 17 87		KK 02 99 20 57		KK 03 21 10 81		KK 03 27 25 69		KK 03 27 50 13		KK 03 27 75 19		KK 03 28 22 53	
KK 01 60 13 53		KK 01 65 22 91		KK 02 99 20 89		KK 03 21 10 87		KK 03 27 25 73		KK 03 27 50 17		KK 03 27 75 69		KK 03 28 24121	
KK 01 60 13 57		KK 01 65 23 91		KK 02 99 22 43		KK 03 23 40 63		KK 03 27 25 9		KK 03 27 50 19		KK 03 27 75 7		KK 03 28 24 31	
KK 01 60 15 11		KK 01 65 24 91		KK 02 99 22 49		KK 03 23 40 67		KK 03 27 27129		KK 03 27 50 53		KK 03 27 75 73		KK 03 28 24 33	
KK 01 60 15 13		KK 01 65 25 91		KK 02 99 27 49		KK 03 23 90123		KK 03 27 28 53		KK 03 27 50 7		KK 03 27 80117		KK 03 28 24 49	
KK 01 60 15 17		KK 01 65 26 91		KK 02 99 27 51		KK 03 24 40 41		KK 03 27 28 59		KK 03 27 50 9		KK 03 27 80 53		KK 03 28 24 51	
KK 01 60 15 19		KK 01 65 27 91		KK 02 99 27 59		KK 03 24 40 43		KK 03 27 30 13		KK 03 27 52 49		KK 03 27 85131		KK 03 28 30131	
KK 01 60 15 7		KK 01 65 46 59		KK 02 99 32123		KK 03 24 40 43		KK 03 27 30 15		KK 03 27 52 51		KK 03 27 85 53		KK 03 28 30 25	
KK 01 60 18123		KK 02 97 27 21		KK 03 09 60 41		KK 03 24 70 43		KK 03 27 35117		KK 03 27 52 55		KK 03 27 85 57		KK 03 28 30 43	
KK 01 60 18 63		KK 02 97 27 21		KK 03 09 70 41		KK 03 24 70 43		KK 03 27 35 13		KK 03 27 52 57		KK 03 27 90121		KK 03 28 35 37	
KK 01 60 18 67		KK 02 97 70121		KK 03 10 30 27		KK 03 25 50 83		KK 03 27 35 43		KK 03 27 55121		KK 03 27 90 49		KK 03 28 35 57	
KK 01 60 22113		KK 02 97 70 41		KK 03 13 40 23		KK 03 26 02 47		KK 03 27 35 5		KK 03 27 55 39		KK 03 27 90 51		KK 03 28 36129	
KK 01 60 22 43		KK 02 99 18105		KK 03 15 30113		KK 03 26 30 41		KK 03 27 35 59		KK 03 27 55 59		KK 03 27 90 69		KK 03 28 40 21	
KK 01 60 25131		KK 02 99 18 47		KK 03 17 30 23		KK 03 26 40123		KK 03 27 35 9		KK 03 27 60115		KK 03 27 90 73		KK 03 28 40 25	
KK 01 60 31 23		KK 02 99 18 91		KK 03 17 40 23		KK 03 26 40 41		KK 03 27 40 11		KK 03 27 60117		KK 03 27 95121		KK 03 28 40 47	
KK 01 60 31 25		KK 02 99 20101		KK 03 20 01105		KK 03 26 40 49		KK 03 27 40113		KK 03 27 60131		KK 03 27 95 29		KK 03 28 40 55	
KK 01 60 31 27		KK 02 99 20103		KK 03 20 02109		KK 03 26 40 53		KK 03 27 40115		KK 03 27 60 37		KK 03 27 95 57		KK 03 28 40 59	
KK 01 60 37115		KK 02 99 20113		KK 03 20 02 85		KK 03 26 40 57		KK 03 27 40123		KK 03 27 60 41		KK 03 28 03 49		KK 03 28 45131	
KK 01 60 38123		KK 02 99 20115		KK 03 20 02 91		KK 03 26 50121		KK 03 27 40 13		KK 03 27 60 49		KK 03 28 05 35		KK 03 28 45 37	
KK 01 60 40 77		KK 02 99 20117		KK 03 20 02 95		KK 03 26 55121		KK 03 27 40 15		KK 03 27 60 51		KK 03 28 05 47		KK 03 28 45 41	
KK 01 60 40 93		KK 02 99 20117		KK 03 20 03121		KK 03 26 55 21		KK 03 27 40 19		KK 03 27 60 55		KK 03 28 05 55		KK 03 28 45 55	
KK 01 60 58 49		KK 02 99 20121		KK 03 20 06103		KK 03 26 65123		KK 03 27 40 55		KK 03 27 60 59		KK 03 28 05 57		KK 03 28 45 59	
KK 01 60 58 51		KK 02 99 20123		KK 03 20 06111		KK 03 26 65 21		KK 03 27 40 7		KK 03 27 65 11		KK 03 28 07123		KK 03 28 45 59	
KK 01 65 08 95		KK 02 99 20131		KK 03 20 06 79		KK 03 26 85115		KK 03 27 45121		KK 03 27 65117		KK 03 28 07 35		KK 03 28 50113	
KK 01 65 09111		KK 02 99 20 21		KK 03 20 06 95		KK 03 26 95115		KK 03 27 45123		KK 03 27 65121		KK 03 28 07 41		KK 03 28 50123	
KK 01 65 09 95		KK 02 99 20 23		KK 03 20 07 91		KK 03 27 02121		KK 03 27 45 49		KK 03 27 65121		KK 03 28 07 43		KK 03 28 50 39	
KK 01 65 10111		KK 02 99 20 25		KK 03 20 08105		KK 03 27 02 27		KK 03 27 45 51		KK 03 27 65123		KK 03 28 07 61		KK 03 28 55 21	
KK 01 65 10 95		KK 02 99 20 27		KK 03 20 08 99		KK 03 27 02 39		KK 03 27 45 53		KK 03 27 65129		KK 03 28 07 65		KK 03 28 55 35	
KK 01 65 11111		KK 02 99 20 41		KK 03 20 10121		KK 03 27 02 49		KK 03 27 45 55		KK 03 27 65 13		KK 03 28 08 49		KK 03 28 55 37	
KK 01 65 11 95		KK 02 99 20 41		KK 03 20 13121		KK 03 27 02 51		KK 03 27 45 57		KK 03 27 65 19		KK 03 28 08 51		KK 03 28 55 41	
KK 01 65 12111		KK 02 99 20 43		KK 03 20 16111		KK 03 27 02 59		KK 03 27 45 57		KK 03 27 65 7		KK 03 28 11 31		KK 03 28 60 21	
KK 01 65 12 95		KK 02 99 20 43		KK 03 20 16 79		KK 03 27 16129		KK 03 27 50 11		KK 03 27 70123		KK 03 28 11 33		KK 03 28 60 41	

Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page
KK 03 28 60 45		KK 03 29 29 59		KK 03 32 51 5		KK 03 35 16 69		KK 03 51 65 53		KK 06 01 19 21		KK 06 19 78 63		KK 06 40 39117	
KK 03 28 60 55		KK 03 29 56 33		KK 03 32 51 9		KK 03 35 16 71		KK 03 51 73 53		KK 06 02 39 45		KK 06 19 78 67		KK 06 40 47113	
KK 03 28 65131		KK 03 29 56 35		KK 03 32 56 13		KK 03 35 16 73		KK 03 51 75 27		KK 06 02 52 45		KK 06 20 25 13		KK 06 40 47125	
KK 03 28 65 41		KK 03 29 80123		KK 03 32 56 17		KK 03 35 16 75		KK 03 51 78117		KK 06 04 49113		KK 06 20 25 9		KK 06 40 55113	
KK 03 28 65 53		KK 03 29 80123		KK 03 32 56 5		KK 03 35 20 61		KK 03 51 78121		KK 06 04 69113		KK 06 21 53 45		KK 06 40 73115	
KK 03 28 70 35		KK 03 30 04 13		KK 03 32 56 9		KK 03 35 20 65		KK 03 51 78 53		KK 06 06 24 23		KK 06 30 90 11		KK 06 40 74115	
KK 03 28 70 37		KK 03 30 06 17		KK 03 32 86 13		KK 03 35 25 71		KK 03 51 79 53		KK 06 06 57 29		KK 06 30 90 13		KK 06 40 75113	
KK 03 28 75121		KK 03 30 06 29		KK 03 32 86 15		KK 03 35 25 75		KK 03 51 79 57		KK 06 07 03 21		KK 06 30 90 13		KK 06 40 75115	
KK 03 28 75 37		KK 03 30 07 29		KK 03 32 86 17		KK 03 35 35 61		KK 03 52 09 21		KK 06 12 78 37		KK 06 30 90 15		KK 06 40 78113	
KK 03 28 75 45		KK 03 30 16 17		KK 03 32 86 5		KK 03 35 35 65		KK 05 07 06 21		KK 06 12 80 21		KK 06 30 90 17		KK 06 40 78115	
KK 03 28 75 53		KK 03 31 00 13		KK 03 32 86 9		KK 03 35 40 25		KK 05 30 90 11		KK 06 12 91 21		KK 06 30 90 19		KK 06 40 79123	
KK 03 28 75 57		KK 03 31 00 15		KK 03 32 95 13		KK 03 36 25 47		KK 05 30 90 13		KK 06 12 91 41		KK 06 30 90 5		KK 06 40 81115	
KK 03 28 80 55		KK 03 31 00 5		KK 03 32 95 17		KK 03 36 30 43		KK 05 30 90 13		KK 06 15 15 55		KK 06 30 90 7		KK 06 40 86113	
KK 03 28 85 37		KK 03 31 00 9		KK 03 32 95 5		KK 03 36 30 43		KK 05 30 90 15		KK 06 16 37 49		KK 06 30 90 9		KK 06 40 86115	
KK 03 28 85 53		KK 03 31 07 15		KK 03 32 95 9		KK 03 36 30 47		KK 05 30 90 17		KK 06 16 37 51		KK 06 30 91 15		KK 06 40 86123	
KK 03 28 90123		KK 03 31 07 17		KK 03 33 06 81		KK 03 36 70113		KK 05 30 90 19		KK 06 16 37 55		KK 06 30 91 17		KK 06 40 87113	
KK 03 28 90131		KK 03 31 07 5		KK 03 33 06 87		KK 03 36 70115		KK 05 30 90 5		KK 06 16 37 57		KK 06 30 91 5		KK 06 40 87115	
KK 03 28 90 37		KK 03 31 07 9		KK 03 33 06 97		KK 03 37 41 43		KK 05 30 90 7		KK 06 18 99129		KK 06 30 92 15		KK 06 40 88113	
KK 03 28 90 49		KK 03 31 07 9		KK 03 33 21 63		KK 03 40 07 97		KK 05 30 90 9		KK 06 18 99131		KK 06 30 92 17		KK 06 40 89113	
KK 03 28 90 51		KK 03 31 08 15		KK 03 33 21 67		KK 03 42 25 29		KK 05 33 87 13		KK 06 19 13 53		KK 06 30 92 5		KK 06 40 89115	
KK 03 28 90 53		KK 03 31 11 17		KK 03 33 21 75		KK 03 42 28 29		KK 05 33 87 5		KK 06 19 40 61		KK 06 33 88 13		KK 06 40 89123	
KK 03 28 90 73		KK 03 31 16 17		KK 03 33 25 61		KK 03 42 50 29		KK 05 33 87 9		KK 06 19 40 65		KK 06 33 88 5		KK 06 40 97123	
KK 03 28 90 73		KK 03 31 17 17		KK 03 33 25 63		KK 03 44 46 29		KK 05 61 12 23		KK 06 19 40 71		KK 06 33 88 9		KK 06 42 22115	
KK 03 28 95 49		KK 03 31 18 13		KK 03 33 25 63		KK 03 50 10101		KK 05 61 14 23		KK 06 19 40 73		KK 06 36 07 15		KK 06 42 23115	
KK 03 28 95 51		KK 03 31 19 13		KK 03 33 25 65		KK 03 50 15103		KK 05 61 15 23		KK 06 19 40 75		KK 06 36 07 7		KK 06 43 17 45	
KK 03 28 95 55		KK 03 31 73 15		KK 03 33 25 67		KK 03 50 20 21		KK 05 61 16 23		KK 06 19 42 61		KK 06 36 07 9		KK 06 43 19 33	
KK 03 28 95 61		KK 03 31 74 13		KK 03 33 25 67		KK 03 50 21 21		KK 05 61 56 23		KK 06 19 42 65		KK 06 38 01 5		KK 06 43 19 37	
KK 03 28 95 65		KK 03 31 75 15		KK 03 33 25 69		KK 03 50 25 49		KK 05 68 73 29		KK 06 19 43 61		KK 06 38 01 5		KK 06 43 19 41	
KK 03 29 20129		KK 03 31 75 15		KK 03 33 25 71		KK 03 50 25 51		KK 05 70 63 21		KK 06 19 43 65		KK 06 40 24113		KK 06 43 19 45	
KK 03 29 23 49		KK 03 31 75 17		KK 03 33 25 73		KK 03 50 25 55		KK 05 70 64 21		KK 06 19 43 69		KK 06 40 24123		KK 06 43 20 33	
KK 03 29 23 51		KK 03 31 75 5		KK 03 33 25 75		KK 03 50 25 57		KK 05 70 65 21		KK 06 19 43 73		KK 06 40 30113		KK 06 43 20 33	
KK 03 29 23 55		KK 03 31 75 9		KK 03 33 32 5		KK 03 50 31 23		KK 05 70 66 21		KK 06 19 44 61		KK 06 40 30115		KK 06 43 20 37	
KK 03 29 23 55		KK 03 31 81 15		KK 03 34 16 43		KK 03 50 31 25		KK 05 70 67 21		KK 06 19 44 65		KK 06 40 30117		KK 06 43 20 41	
KK 03 29 23 57		KK 03 31 85 15		KK 03 34 30117		KK 03 50 40121		KK 05 70 68 21		KK 06 19 45 69		KK 06 40 30123		KK 06 43 20 45	
KK 03 29 25129		KK 03 32 51 13		KK 03 35 12 63		KK 03 51 61 53		KK 05 70 89 21		KK 06 19 45 73		KK 06 40 36115		KK 06 43 21 33	
KK 03 29 26 59		KK 03 32 51 15		KK 03 35 12 67		KK 03 51 61 59		KK 06 01 08 21		KK 06 19 70 49		KK 06 40 36117		KK 06 43 21 33	
KK 03 29 29 55		KK 03 32 51 17		KK 03 35 16121		KK 03 51 65 21		KK 06 01 09 21		KK 06 19 73 51		KK 06 40 39115		KK 06 43 21 37	

Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page
KK 06 43 21	41	KK 06 68 68	29	KK 07 02 34	51	KK 07 10 36	39	KK 07 14 17	51	KK 07 17 13	49	KK 07 18 29	53	KK 07 19 30	41
KK 06 43 21	45	KK 06 68 69	29	KK 07 02 46	49	KK 07 10 37	39	KK 07 14 17	53	KK 07 17 13	51	KK 07 18 29	59	KK 07 19 35	41
KK 06 43 23	33	KK 06 68 73	29	KK 07 02 47	49	KK 07 10 45	39	KK 07 14 17	57	KK 07 17 13	53	KK 07 18 36	49	KK 07 19 38	41
KK 06 43 23	33	KK 06 68 80	29	KK 07 02 92	15	KK 07 10 47	39	KK 07 14 80	45	KK 07 17 13	57	KK 07 18 36	51	KK 07 19 42	49
KK 06 43 23	37	KK 06 68 81	29	KK 07 02 93	15	KK 07 10 48	39	KK 07 14 83	45	KK 07 17 14	49	KK 07 18 36	53	KK 07 19 42	51
KK 06 43 23	41	KK 06 70 16	21	KK 07 02 94	15	KK 07 10 64	39	KK 07 14 91	55	KK 07 17 14	51	KK 07 18 39	53	KK 07 20 00	49
KK 06 43 23	45	KK 06 70 25	21	KK 07 03 88	9	KK 07 10 65	39	KK 07 14 92	57	KK 07 17 14	53	KK 07 18 39	59	KK 07 20 00	51
KK 06 43 43	31	KK 06 70 26	21	KK 07 03 89	9	KK 07 11 46	53	KK 07 14 95	55	KK 07 17 14	57	KK 07 18 43	53	KK 07 20 01	49
KK 06 43 43	33	KK 06 70 31	21	KK 07 03 90	5	KK 07 11 47	53	KK 07 14 95	57	KK 07 17 15	49	KK 07 18 44	53	KK 07 20 01	51
KK 06 43 60	33	KK 06 70 31	43	KK 07 03 91	5	KK 07 11 48	53	KK 07 14 96	45	KK 07 17 15	53	KK 07 18 53	55	KK 07 20 02	49
KK 06 43 60	41	KK 06 70 31	47	KK 07 03 92	9	KK 07 11 49	53	KK 07 15 00	15	KK 07 17 15	57	KK 07 18 53	57	KK 07 20 02	51
KK 06 43 60	45	KK 06 70 39	21	KK 07 03 93	9	KK 07 11 50	53	KK 07 15 24	49	KK 07 17 29	113	KK 07 18 54	53	KK 07 20 03	49
KK 06 61 02	23	KK 06 70 40	21	KK 07 03 94	5	KK 07 11 51	53	KK 07 15 24	53	KK 07 17 40	113	KK 07 18 55	53	KK 07 20 03	51
KK 06 61 08	23	KK 06 70 49	121	KK 07 03 95	5	KK 07 11 52	53	KK 07 15 24	57	KK 07 17 65	45	KK 07 18 56	53	KK 07 20 04	49
KK 06 61 40	23	KK 06 70 51	21	KK 07 03 96	9	KK 07 11 53	53	KK 07 15 69	49	KK 07 17 68	49	KK 07 18 57	53	KK 07 20 04	51
KK 06 61 42	23	KK 06 70 57	21	KK 07 03 97	9	KK 07 11 54	53	KK 07 15 69	53	KK 07 17 68	51	KK 07 18 58	53	KK 07 20 05	49
KK 06 61 43	23	KK 06 70 59	21	KK 07 03 98	9	KK 07 11 55	53	KK 07 16 17	57	KK 07 17 93	35	KK 07 18 60	49	KK 07 20 05	51
KK 06 61 45	23	KK 06 70 60	21	KK 07 03 99	9	KK 07 11 56	53	KK 07 16 52	45	KK 07 17 94	31	KK 07 18 60	51	KK 07 20 06	49
KK 06 61 70	25	KK 06 70 68	21	KK 07 04 58	45	KK 07 11 57	53	KK 07 16 64	49	KK 07 17 94	33	KK 07 18 60	55	KK 07 20 06	51
KK 06 61 75	23	KK 06 70 70	21	KK 07 04 59	113	KK 07 11 58	39	KK 07 16 64	51	KK 07 17 94	35	KK 07 18 60	57	KK 07 20 07	49
KK 06 61 75	25	KK 06 70 75	21	KK 07 04 91	119	KK 07 11 58	59	KK 07 16 64	53	KK 07 18 06	53	KK 07 18 71	53	KK 07 20 07	51
KK 06 61 75	27	KK 06 70 76	21	KK 07 04 93	119	KK 07 11 72	39	KK 07 16 64	59	KK 07 18 09	53	KK 07 18 72	53	KK 07 20 08	49
KK 06 61 78	23	KK 06 70 77	21	KK 07 04 94	113	KK 07 11 72	59	KK 07 16 72	53	KK 07 18 10	53	KK 07 18 73	53	KK 07 20 08	51
KK 06 61 78	25	KK 06 70 80	21	KK 07 06 39	29	KK 07 11 73	39	KK 07 16 97	69	KK 07 18 11	53	KK 07 18 80	45	KK 07 20 09	49
KK 06 61 78	53	KK 06 70 90	21	KK 07 06 40	5	KK 07 11 73	59	KK 07 16 97	73	KK 07 18 12	53	KK 07 18 98	55	KK 07 20 09	51
KK 06 61 78	59	KK 06 70 92	21	KK 07 06 40	9	KK 07 12 56	49	KK 07 17 10	49	KK 07 18 15	53	KK 07 19 00	41	KK 07 20 10	49
KK 06 61 82	23	KK 06 82 51	117	KK 07 06 41	5	KK 07 12 56	51	KK 07 17 10	51	KK 07 18 17	53	KK 07 19 04	41	KK 07 20 10	51
KK 06 61 82	25	KK 06 82 51	129	KK 07 06 41	9	KK 07 12 56	55	KK 07 17 10	53	KK 07 18 19	53	KK 07 19 04	43	KK 07 20 11	49
KK 06 61 85	23	KK 06 86 40	41	KK 07 06 42	5	KK 07 12 56	57	KK 07 17 10	57	KK 07 18 21	53	KK 07 19 10	41	KK 07 20 11	51
KK 06 61 89	23	KK 07 01 63	41	KK 07 06 42	9	KK 07 13 53	53	KK 07 17 11	49	KK 07 18 24	53	KK 07 19 12	31	KK 07 20 34	39
KK 06 61 89	25	KK 07 01 64	41	KK 07 06 53	29	KK 07 13 54	53	KK 07 17 11	51	KK 07 18 25	53	KK 07 19 13	31	KK 07 20 35	39
KK 06 61 90	23	KK 07 01 65	41	KK 07 08 05	129	KK 07 14 03	49	KK 07 17 11	53	KK 07 18 25	59	KK 07 19 14	31	KK 07 20 43	53
KK 06 61 90	25	KK 07 02 26	53	KK 07 08 05	53	KK 07 14 03	51	KK 07 17 11	57	KK 07 18 26	53	KK 07 19 17	41	KK 07 20 80	49
KK 06 68 11	29	KK 07 02 27	53	KK 07 08 06	49	KK 07 14 03	55	KK 07 17 12	49	KK 07 18 27	53	KK 07 19 18	41	KK 07 20 80	51
KK 06 68 11	29	KK 07 02 33	49	KK 07 08 06	51	KK 07 14 03	55	KK 07 17 12	51	KK 07 18 28	53	KK 07 19 24	41	KK 07 20 80	55
KK 06 68 12	29	KK 07 02 33	51	KK 07 08 49	49	KK 07 14 03	57	KK 07 17 12	53	KK 07 18 29	49	KK 07 19 25	41	KK 07 20 80	57
KK 06 68 61	29	KK 07 02 34	49	KK 07 08 49	51	KK 07 14 17	49	KK 07 17 12	57	KK 07 18 29	51	KK 07 19 26	41	KK 07 21 58	49

Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page
KK 07 21 58 51		KK 07 22 68 41		KK 07 26 36 45		KK 07 30 54 15		KK 07 30 81 17		KK 07 32 46 15		KK 07 33 01 15		KK 07 34 70 13	
KK 07 21 58 57		KK 07 22 73 37		KK 07 28 11 45		KK 07 30 54 17		KK 07 30 81 9		KK 07 32 50 5		KK 07 33 01 17		KK 07 34 70 15	
KK 07 21 66 49		KK 07 22 74 37		KK 07 28 12 45		KK 07 30 54 9		KK 07 30 88 13		KK 07 32 51 5		KK 07 33 01 5		KK 07 34 71 13	
KK 07 21 66 51		KK 07 22 75 37		KK 07 28 13 45		KK 07 30 55 13		KK 07 30 88 15		KK 07 32 56 17		KK 07 33 01 9		KK 07 34 71 15	
KK 07 21 67 49		KK 07 22 76 37		KK 07 29 95 55		KK 07 30 55 15		KK 07 30 88 17		KK 07 32 56 5		KK 07 33 03 15		KK 07 36 07 15	
KK 07 21 67 51		KK 07 22 77 37		KK 07 30 00 5		KK 07 30 55 17		KK 07 30 88 5		KK 07 32 57 17		KK 07 33 04 15		KK 07 36 07 7	
KK 07 21 68 49		KK 07 22 78 37		KK 07 30 01 5		KK 07 30 55 9		KK 07 30 88 9		KK 07 32 57 5		KK 07 33 10 5		KK 07 36 07 9	
KK 07 21 68 51		KK 07 22 79 37		KK 07 30 02 17		KK 07 30 56 13		KK 07 30 89 13		KK 07 32 60 5		KK 07 33 10 9		KK 07 36 08 13	
KK 07 21 69 49		KK 07 22 80 31		KK 07 30 02 5		KK 07 30 56 15		KK 07 30 89 15		KK 07 32 61 5		KK 07 33 11 5		KK 07 36 08 15	
KK 07 21 69 51		KK 07 22 81 31		KK 07 30 03 17		KK 07 30 56 17		KK 07 30 89 17		KK 07 32 63 5		KK 07 33 11 9		KK 07 36 08 17	
KK 07 21 70 49		KK 07 22 91 37		KK 07 30 03 5		KK 07 30 56 9		KK 07 30 89 5		KK 07 32 64 5		KK 07 33 28 13		KK 07 36 08 5	
KK 07 21 70 51		KK 07 22 92 41		KK 07 30 04 17		KK 07 30 57 13		KK 07 30 89 9		KK 07 32 66 5		KK 07 33 29 13		KK 07 36 08 9	
KK 07 21 71 49		KK 07 22 93 41		KK 07 30 04 5		KK 07 30 57 15		KK 07 30 91 13		KK 07 32 66 9		KK 07 33 32 15		KK 07 36 09 13	
KK 07 21 71 51		KK 07 24 21 41		KK 07 30 05 17		KK 07 30 57 17		KK 07 30 91 15		KK 07 32 67 5		KK 07 33 33 15		KK 07 36 09 15	
KK 07 21 73 49		KK 07 25 08 41		KK 07 30 05 5		KK 07 30 57 9		KK 07 30 91 17		KK 07 32 67 9		KK 07 33 38 13		KK 07 36 09 17	
KK 07 21 73 51		KK 07 25 26 41		KK 07 30 06 17		KK 07 30 62 13		KK 07 30 91 5		KK 07 32 72 13		KK 07 33 39 13		KK 07 36 09 5	
KK 07 21 74 49		KK 07 25 27 41		KK 07 30 06 5		KK 07 30 62 15		KK 07 30 91 9		KK 07 32 72 15		KK 07 33 50 13		KK 07 36 09 9	
KK 07 21 74 51		KK 07 25 28 45		KK 07 30 07 17		KK 07 30 62 17		KK 07 30 92 13		KK 07 32 73 13		KK 07 33 51 13		KK 07 36 14 13	
KK 07 21 75 49		KK 07 25 36 41		KK 07 30 07 5		KK 07 30 62 9		KK 07 30 92 15		KK 07 32 73 15		KK 07 33 52 13		KK 07 36 14 15	
KK 07 21 75 53		KK 07 25 37 41		KK 07 30 08 5		KK 07 30 63 13		KK 07 30 92 17		KK 07 32 75 13		KK 07 33 53 13		KK 07 36 14 17	
KK 07 21 75 57		KK 07 25 39 41		KK 07 30 09 5		KK 07 30 63 15		KK 07 30 92 19		KK 07 32 75 15		KK 07 33 54 13		KK 07 36 14 7	
KK 07 21 76 53		KK 07 26 04 53		KK 07 30 16 15		KK 07 30 63 17		KK 07 30 92 9		KK 07 32 76 13		KK 07 34 06 5		KK 07 36 14 9	
KK 07 21 76 59		KK 07 26 12 53		KK 07 30 30 17		KK 07 30 63 9		KK 07 32 24 9		KK 07 32 76 15		KK 07 34 07 5		KK 07 36 15 13	
KK 07 21 76 65		KK 07 26 13 53		KK 07 30 30 5		KK 07 30 64 13		KK 07 32 25 9		KK 07 32 78 13		KK 07 34 11 5		KK 07 36 15 15	
KK 07 21 76 73		KK 07 26 17 49		KK 07 30 31 17		KK 07 30 64 15		KK 07 32 27 9		KK 07 32 79 13		KK 07 34 12 5		KK 07 36 15 17	
KK 07 21 77 61		KK 07 26 17 51		KK 07 30 31 5		KK 07 30 64 17		KK 07 32 28 9		KK 07 32 80 5		KK 07 34 14 5		KK 07 36 15 5	
KK 07 21 77 69		KK 07 26 18 49		KK 07 30 40 5		KK 07 30 64 9		KK 07 32 30 17		KK 07 32 81 5		KK 07 34 15 5		KK 07 36 15 9	
KK 07 21 78 61		KK 07 26 18 51		KK 07 30 41 5		KK 07 30 65 13		KK 07 32 30 9		KK 07 32 86 5		KK 07 34 17 9		KK 07 36 16 13	
KK 07 21 78 65		KK 07 26 22 53		KK 07 30 42 17		KK 07 30 65 15		KK 07 32 31 17		KK 07 32 87 5		KK 07 34 18 9		KK 07 36 16 17	
KK 07 21 96 55		KK 07 26 22 57		KK 07 30 42 5		KK 07 30 65 17		KK 07 32 31 9		KK 07 32 90 5		KK 07 34 35 9		KK 07 36 16 5	
KK 07 21 98 51		KK 07 26 23 53		KK 07 30 43 17		KK 07 30 65 9		KK 07 32 36 9		KK 07 32 90 9		KK 07 34 36 9		KK 07 36 16 9	
KK 07 22 00 55		KK 07 26 23 53		KK 07 30 43 5		KK 07 30 80 13		KK 07 32 37 9		KK 07 32 91 5		KK 07 34 40 9		KK 07 36 34 11	
KK 07 22 01 55		KK 07 26 23 57		KK 07 30 44 17		KK 07 30 80 15		KK 07 32 39 9		KK 07 32 91 9		KK 07 34 41 9		KK 07 36 34 13	
KK 07 22 35 55		KK 07 26 27 41		KK 07 30 44 5		KK 07 30 80 17		KK 07 32 40 9		KK 07 33 00 15		KK 07 34 64 13		KK 07 36 34 19	
KK 07 22 36 55		KK 07 26 32 41		KK 07 30 45 17		KK 07 30 80 9		KK 07 32 41 9		KK 07 33 00 17		KK 07 34 64 15		KK 07 36 34 7	
KK 07 22 40 119		KK 07 26 34 33		KK 07 30 45 5		KK 07 30 81 13		KK 07 32 42 9		KK 07 33 00 5		KK 07 34 65 13		KK 07 36 35 11	
KK 07 22 40 55		KK 07 26 34 41		KK 07 30 54 13		KK 07 30 81 15		KK 07 32 45 15		KK 07 33 00 9		KK 07 34 65 15		KK 07 36 35 13	

Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page
KK 07 36 35	19	KK 07 38 36	15	KK 07 43 41	45	KK 07 45 24121		KK 07 46 55121		KK 07 48 20115		KK 07 49 14 41		KK 07 68 18 29	
KK 07 36 35	7	KK 07 38 42	9	KK 07 43 42	45	KK 07 45 27121		KK 07 46 66121		KK 07 48 35123		KK 07 49 61117		KK 07 68 25 29	
KK 07 38 00	13	KK 07 39 91117		KK 07 43 50	37	KK 07 45 33121		KK 07 46 68121		KK 07 48 36123		KK 07 49 64117		KK 07 68 26 29	
KK 07 38 00	5	KK 07 40 36117		KK 07 43 51	37	KK 07 45 35121		KK 07 46 77121		KK 07 48 38123		KK 07 49 70129		KK 07 68 33 29	
KK 07 38 00	9	KK 07 40 37117		KK 07 43 52	37	KK 07 45 40121		KK 07 46 78121		KK 07 48 39123		KK 07 49 71129		KK 07 68 34 29	
KK 07 38 01	13	KK 07 40 41119		KK 07 43 53	37	KK 07 45 48121		KK 07 46 90117		KK 07 48 40119		KK 07 58 47117		KK 07 68 58 29	
KK 07 38 01	5	KK 07 40 42117		KK 07 43 54	33	KK 07 45 49121		KK 07 46 93117		KK 07 48 40121		KK 07 58 49117		KK 07 68 58 29	
KK 07 38 01	9	KK 07 40 43117		KK 07 43 54	37	KK 07 45 70 41		KK 07 47 53119		KK 07 48 41123		KK 07 58 60 41		KK 07 68 59 29	
KK 07 38 03	15	KK 07 40 47115		KK 07 43 54	41	KK 07 45 71 41		KK 07 47 53 55		KK 07 48 43123		KK 07 58 61 41		KK 07 68 72 29	
KK 07 38 03	5	KK 07 40 47117		KK 07 43 55	37	KK 07 45 73 47		KK 07 47 61 49		KK 07 48 44123		KK 07 58 97121		KK 07 69 43 29	
KK 07 38 03	5	KK 07 40 47121		KK 07 43 56	37	KK 07 45 76 41		KK 07 47 61 51		KK 07 48 46129		KK 07 59 08121		KK 07 69 44 29	
KK 07 38 04	9	KK 07 40 48115		KK 07 43 57	37	KK 07 45 80 41		KK 07 47 61 55		KK 07 48 50123		KK 07 59 15 41		KK 07 81 45 57	
KK 07 38 04	9	KK 07 40 49115		KK 07 43 58	37	KK 07 45 84 37		KK 07 47 61 57		KK 07 48 56123		KK 07 60 60 27		KK 07 86 08117	
KK 07 38 05	15	KK 07 40 52113		KK 07 43 59	37	KK 07 45 86121		KK 07 47 72117		KK 07 48 62123		KK 07 60 63 27		KK 07 90 63123	
KK 07 38 05	9	KK 07 40 53113		KK 07 43 63	37	KK 07 45 87121		KK 07 47 74113		KK 07 48 64123		KK 07 60 75 27		KK 07 95 96 59	
KK 07 38 07	5	KK 07 40 54113		KK 07 43 64	37	KK 07 45 88121		KK 07 47 80117		KK 07 48 65123		KK 07 60 76 27		KK 07 98 05 53	
KK 07 38 08	5	KK 07 40 55113		KK 07 43 77	31	KK 07 45 89121		KK 07 47 82117		KK 07 48 66123		KK 07 60 82 27		KK 08 01 87 49	
KK 07 38 10	15	KK 07 40 60117		KK 07 43 77	33	KK 07 45 90121		KK 07 47 84117		KK 07 48 67123		KK 07 60 97 27		KK 08 01 87 51	
KK 07 38 11	15	KK 07 40 65117		KK 07 43 78	31	KK 07 45 92121		KK 07 47 85117		KK 07 48 70123		KK 07 62 10 27		KK 08 01 87 55	
KK 07 38 12	15	KK 07 40 70117		KK 07 43 78	33	KK 07 45 93121		KK 07 47 86117		KK 07 48 73123		KK 07 62 11 27		KK 08 01 87 59	
KK 07 38 13	15	KK 07 40 78117		KK 07 43 79 31		KK 07 45 94121		KK 07 47 87117		KK 07 48 74123		KK 07 62 12 27		KK 08 13 69 49	
KK 07 38 15	15	KK 07 40 79117		KK 07 43 79	33	KK 07 45 95121		KK 07 47 90113		KK 07 48 74 47		KK 07 62 13 27		KK 08 13 69 51	
KK 07 38 16	15	KK 07 40 80117		KK 07 43 95	33	KK 07 46 13121		KK 07 47 91113		KK 07 48 75123		KK 07 64 00 27		KK 08 13 69 55	
KK 07 38 17	15	KK 07 40 80121		KK 07 43 95	33	KK 07 46 14121		KK 07 47 94113		KK 07 48 76123		KK 07 64 06 25		KK 08 13 69 59	
KK 07 38 20	15	KK 07 40 80123		KK 07 43 95	35	KK 07 46 17115		KK 07 47 95113		KK 07 48 80129		KK 07 64 06 27		KK 08 13 78119	
KK 07 38 21	15	KK 07 40 93121		KK 07 43 95	41	KK 07 46 24115		KK 07 47 96119		KK 07 48 81129		KK 07 64 07 25		KK 08 13 78119	
KK 07 38 22	15	KK 07 40 93123		KK 07 43 96	33	KK 07 46 24117		KK 07 47 97119		KK 07 48 82129		KK 07 64 07 27		KK 08 13 78 55	
KK 07 38 26	13	KK 07 41 73 41		KK 07 43 96	33	KK 07 46 24121		KK 07 47 99113		KK 07 48 84129		KK 07 64 09 25		KK 08 14 10 47	
KK 07 38 26	9	KK 07 41 84 41		KK 07 43 96	41	KK 07 46 24123		KK 07 47 99115		KK 07 48 85129		KK 07 64 09 27		KK 08 14 20 47	
KK 07 38 26	9	KK 07 43 19 43		KK 07 43 97	33	KK 07 46 37121		KK 07 47 99119		KK 07 48 86123		KK 07 64 10 25		KK 08 14 30 47	
KK 07 38 29	13	KK 07 43 19 49		KK 07 43 97	35	KK 07 46 39121		KK 07 48 01115		KK 07 48 86129		KK 07 64 10 27		KK 08 14 31 47	
KK 07 38 29	9	KK 07 43 19 51		KK 07 43 97	41	KK 07 46 40121		KK 07 48 02115		KK 07 48 87129		KK 07 64 99 25		KK 08 14 32 47	
KK 07 38 30	5	KK 07 43 19 55		KK 07 45 01121		KK 07 46 44121		KK 07 48 06115		KK 07 48 88129		KK 07 64 99 27		KK 08 14 33 47	
KK 07 38 31	5	KK 07 43 19 59		KK 07 45 07121		KK 07 46 45121		KK 07 48 10115		KK 07 48 89129		KK 07 65 75 27		KK 08 14 34 47	
KK 07 38 31	9	KK 07 43 32 31		KK 07 45 08121		KK 07 46 48121		KK 07 48 17115		KK 07 48 90129		KK 07 68 12 29		KK 08 14 37 47	
KK 07 38 34	15	KK 07 43 32 33		KK 07 45 18121		KK 07 46 51121		KK 07 48 18115		KK 07 48 91129		KK 07 68 13 29		KK 08 14 39 35	
KK 07 38 35	15	KK 07 43 40 45		KK 07 45 21121		KK 07 46 52121		KK 07 48 19115		KK 07 48 93123		KK 07 68 17 29		KK 08 14 40 35	

Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page
KK 08 14 42	35	KK 08 14 99	47	KK 08 15 71	43	KK 08 20 71	57	KK 08 23 24	57	KK 08 34 17	17	KK 08 40 80131		KK 08 61 10	25
KK 08 14 43	35	KK 08 15 17	43	KK 08 15 72	43	KK 08 20 75	57	KK 08 23 25	57	KK 08 34 18	17	KK 08 40 81131		KK 08 61 11	25
KK 08 14 49	35	KK 08 15 20	43	KK 08 15 74	43	KK 08 20 76	57	KK 08 25 28	59	KK 08 38 02	17	KK 08 40 84129		KK 08 61 12	25
KK 08 14 50	43	KK 08 15 27	43	KK 08 15 78	51	KK 08 20 77	57	KK 08 25 29	59	KK 08 38 03	17	KK 08 40 90131		KK 08 61 13	25
KK 08 14 50	47	KK 08 15 29	43	KK 08 15 78	57	KK 08 20 80	57	KK 08 26 30	59	KK 08 38 04	17	KK 08 40 91131		KK 08 61 14	25
KK 08 14 52	35	KK 08 15 30	43	KK 08 15 79	51	KK 08 20 81	57	KK 08 26 46	59	KK 08 38 05	17	KK 08 40 92131		KK 08 61 15	25
KK 08 14 53	35	KK 08 15 31	43	KK 08 15 79	57	KK 08 20 82	57	KK 08 26 47	59	KK 08 38 06	17	KK 08 40 93131		KK 08 68 01	29
KK 08 14 55	47	KK 08 15 32	43	KK 08 15 80	33	KK 08 20 83	57	KK 08 26 48	59	KK 08 38 07	17	KK 08 41 00119		KK 08 80 63131	
KK 08 14 57	43	KK 08 15 33	43	KK 08 15 81	33	KK 08 20 84	57	KK 08 26 75	57	KK 08 38 08	17	KK 08 41 00125		KK 09 42 06113	
KK 08 14 57	47	KK 08 15 33	47	KK 08 15 82	43	KK 08 20 85	57	KK 08 26 76	57	KK 08 38 09	5	KK 08 41 01119		KK 09 42 07113	
KK 08 14 58	43	KK 08 15 34	33	KK 08 15 83	33	KK 08 20 86	57	KK 08 29 20	47	KK 08 38 10	5	KK 08 41 01125		KK 10 66 07	71
KK 08 14 58	47	KK 08 15 35	33	KK 08 15 87	43	KK 08 20 90	57	KK 08 32 10	17	KK 08 40 00125		KK 08 41 02131		KK 10 66 07	75
KK 08 14 59	47	KK 08 15 36	43	KK 08 15 87	47	KK 08 20 91	57	KK 08 32 11	17	KK 08 40 01125		KK 08 41 03131		KK 10 68 63123	
KK 08 14 61	35	KK 08 15 37	33	KK 08 15 88	43	KK 08 20 93	59	KK 08 32 12	17	KK 08 40 02125		KK 08 41 04131		KK 12 60 95	41
KK 08 14 63	59	KK 08 15 39	43	KK 08 15 88	47	KK 08 20 96	57	KK 08 32 13	17	KK 08 40 03125		KK 08 41 06117		KK 12 60 95	41
KK 08 14 64	57	KK 08 15 40	43	KK 08 15 90	43	KK 08 20 97	57	KK 08 32 14	17	KK 08 40 10125		KK 08 41 06123		KK 12 60 95	43
KK 08 14 65	47	KK 08 15 43	43	KK 08 15 90	47	KK 08 22 56	59	KK 08 32 15	17	KK 08 40 11125		KK 08 41 06131		KK 30 90 29	71
KK 08 14 65	71	KK 08 15 45	43	KK 08 16 15	51	KK 08 22 57	59	KK 08 32 16	17	KK 08 40 12125		KK 08 41 07123		KK 30 90 29	75
KK 08 14 65	75	KK 08 15 47	43	KK 08 16 16	51	KK 08 22 58	59	KK 08 32 17	17	KK 08 40 13125		KK 08 41 07131		KK 35 11 39	41
KK 08 14 66	47	KK 08 15 49	51	KK 08 16 22	49	KK 08 22 59	59	KK 08 32 18	17	KK 08 40 15131		KK 08 41 10117		KK 35 11 39	45
KK 08 14 67	47	KK 08 15 49	57	KK 08 16 22	51	KK 08 23 00	57	KK 08 32 20	17	KK 08 40 16131		KK 08 41 10123		KK 35 11 39	49
KK 08 14 70	43	KK 08 15 50	33	KK 08 16 22	55	KK 08 23 01	57	KK 08 32 21	17	KK 08 40 18131		KK 08 41 11123		KK 35 11 39	51
KK 08 14 70	47	KK 08 15 52	33	KK 08 16 22	59	KK 08 23 02	57	KK 08 32 22	17	KK 08 40 19131		KK 08 41 12131		KK 35 11 39	55
KK 08 14 71	43	KK 08 15 54	33	KK 08 16 24	49	KK 08 23 04	57	KK 08 32 23	17	KK 08 40 40123		KK 08 41 13131		KK 35 11 40	41
KK 08 14 71	47	KK 08 15 55	43	KK 08 16 24	51	KK 08 23 05	57	KK 08 32 24	17	KK 08 40 42129		KK 08 50 76	29	KK 35 11 40	45
KK 08 14 73	43	KK 08 15 56	43	KK 08 16 24	53	KK 08 23 06	57	KK 08 32 28	5	KK 08 40 43123		KK 08 60 80	25	KK 35 11 40	49
KK 08 14 73	47	KK 08 15 57	43	KK 08 16 24	57	KK 08 23 10	57	KK 08 32 29	5	KK 08 40 45131		KK 08 60 81	25	KK 35 11 40	51
KK 08 14 78	43	KK 08 15 60	33	KK 08 16 38	51	KK 08 23 11	57	KK 08 32 35	17	KK 08 40 50131		KK 08 60 82	25	KK 35 11 40	55
KK 08 14 78	47	KK 08 15 62	33	KK 08 20 09	47	KK 08 23 12	57	KK 08 32 35	7	KK 08 40 55131		KK 08 60 83	25	KK 35 11 44	41
KK 08 14 79	43	KK 08 15 65	43	KK 08 20 46	47	KK 08 23 13	57	KK 08 33 00	17	KK 08 40 61131		KK 08 60 84	25	KK 35 11 44	45
KK 08 14 79	47	KK 08 15 66	63	KK 08 20 57	57	KK 08 23 14	57	KK 08 33 01	17	KK 08 40 62131		KK 08 60 85	25	KK 35 11 44	49
KK 08 14 80	47	KK 08 15 66	67	KK 08 20 59	57	KK 08 23 15	57	KK 08 34 06	17	KK 08 40 65131		KK 08 60 89	25	KK 35 11 44	51
KK 08 14 81	71	KK 08 15 67	43	KK 08 20 64	57	KK 08 23 16	57	KK 08 34 07	17	KK 08 40 66131		KK 08 60 90	25	KK 35 11 44	55
KK 08 14 81	75	KK 08 15 68	63	KK 08 20 65	57	KK 08 23 17	57	KK 08 34 08	17	KK 08 40 67131		KK 08 61 00	27	KK 35 11 48	41
KK 08 14 83	57	KK 08 15 68	67	KK 08 20 66	57	KK 08 23 20	57	KK 08 34 09	17	KK 08 40 69131		KK 08 61 01	25	KK 35 11 48	43
KK 08 14 95	47	KK 08 15 69	43	KK 08 20 67	59	KK 08 23 22	57	KK 08 34 15	17	KK 08 40 70131		KK 08 61 01	27	KK 35 11 48	45
KK 08 14 96	47	KK 08 15 70	43	KK 08 20 70	57	KK 08 23 23	57	KK 08 34 16	17	KK 08 40 77131		KK 08 61 03	27	KK 35 11 48	47

Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page
KK 35 11 48 49		KK 35 23 50 65		KK 35 35 95 91		KK 35 36 81107		KK 35 37 27103		KK 35 37 76111		KK 35 39 25 97		KK 36 11 16 49	
KK 35 11 48 51		KK 35 23 50 83		KK 35 35 96 91		KK 35 36 81 63		KK 35 37 27 79		KK 35 37 92 85		KK 35 39 26 87		KK 36 11 16 51	
KK 35 11 48 55		KK 35 23 52 83		KK 35 35 97 91		KK 35 36 81 67		KK 35 37 28 79		KK 35 37 93103		KK 35 39 27 81		KK 36 11 16 55	
KK 35 11 74 53		KK 35 23 72 69		KK 35 36 09 63		KK 35 36 82107		KK 35 37 29103		KK 35 37 93 79		KK 35 39 28 97		KK 36 39 10 65	
KK 35 11 74 57		KK 35 23 72 77		KK 35 36 09 67		KK 35 36 83107		KK 35 37 29 79		KK 35 37 94111		KK 35 39 33 97		KK 70 92 34133	
KK 35 21 34 89		KK 35 23 73 61		KK 35 36 30123		KK 35 36 84107		KK 35 37 30 85		KK 35 38 01 65		KK 35 39 34 87		KK 70 94 59133	
KK 35 21 35 89		KK 35 23 73 77		KK 35 36 40 99		KK 35 36 85107		KK 35 37 31 85		KK 35 38 01 67		KK 35 39 35 87		KK 70 94 79133	
KK 35 21 36 89		KK 35 24 01101		KK 35 36 41 99		KK 35 36 87109		KK 35 37 32 79		KK 35 38 01 73		KK 35 39 36 87		KK 70 95 82133	
KK 35 21 37101		KK 35 24 01 69		KK 35 36 64105		KK 35 37 01 61		KK 35 37 35 79		KK 35 38 01 75		KK 35 39 37 87		KK 70 95 83133	
KK 35 21 42 89		KK 35 24 01 73		KK 35 36 64 63		KK 35 37 01 65		KK 35 37 36 79		KK 35 38 01 95		KK 35 39 38 81		KK 70 96 29133	
KK 35 21 45117		KK 35 24 02 61		KK 35 36 64 67		KK 35 37 01 73		KK 35 37 37103		KK 35 38 04 71		KK 35 39 39 81		KK 70 96 30133	
KK 35 21 53101		KK 35 24 02 65		KK 35 36 65105		KK 35 37 01 85		KK 35 37 40 85		KK 35 39 01 61		KK 35 39 40 81		KK 70 97 37133	
KK 35 21 53103		KK 35 24 02 89		KK 35 36 65 71		KK 35 37 02 85		KK 35 37 41 85		KK 35 39 01 65		KK 35 39 41 81		KK 70 98 23133	
KK 35 21 55101		KK 35 24 51 93		KK 35 36 65 75		KK 35 37 03 85		KK 35 37 42 85		KK 35 39 01 73		KK 35 39 42 97		KK 70 98 31133	
KK 35 21 56 89		KK 35 24 52 93		KK 35 36 68109		KK 35 37 04 69		KK 35 37 43 79		KK 35 39 01 87		KK 35 39 43 97		KK 70 98 33133	
KK 35 21 57101		KK 35 24 54 93		KK 35 36 69109		KK 35 37 04 79		KK 35 37 44 79		KK 35 39 02 87		KK 35 39 44 87		KK 70 98 41133	
KK 35 21 61 77		KK 35 29 22 47		KK 35 36 70109		KK 35 37 05 79		KK 35 37 45 79		KK 35 39 03 87		KK 35 39 45 81		KK 70 98 42133	
KK 35 21 64 77		KK 35 33 75 65		KK 35 36 71105		KK 35 37 06 61		KK 35 37 46 79		KK 35 39 04 69		KK 35 39 46 81		KK 70 98 43133	
KK 35 21 66 77		KK 35 33 75 73		KK 35 36 72105		KK 35 37 06 63		KK 35 37 47103		KK 35 39 04 81		KK 35 39 46 87		KK 70 98 44133	
KK 35 21 69 77		KK 35 33 75 93		KK 35 36 73105		KK 35 37 06 79		KK 35 37 51111		KK 35 39 05 81		KK 35 45 02 67		KK 70 98 95133	
KK 35 21 72 77		KK 35 33 76 93		KK 35 36 75105		KK 35 37 07 79		KK 35 37 52 95		KK 35 39 06 61		KK 35 45 02 75		KK 70 99 78133	
KK 35 21 75 77		KK 35 33 77 93		KK 35 36 75 99		KK 35 37 08103		KK 35 37 53 95		KK 35 39 06 63		KK 35 45 02 99		UH 82 56 40 81	
KK 35 21 97 77		KK 35 35 40115		KK 35 36 76107		KK 35 37 08 69		KK 35 37 54111		KK 35 39 06 81		KK 35 45 31 99		UH 82 56 40 87	
KK 35 22 52 83		KK 35 35 77117		KK 35 36 76109		KK 35 37 08 73		KK 35 37 54 95		KK 35 39 10 67		KK 35 45 32 99			
KK 35 22 58 83		KK 35 35 80 61		KK 35 36 77 91		KK 35 37 20 85		KK 35 37 55111		KK 35 39 10 73		KK 35 60 42123			
KK 35 22 60 83		KK 35 35 80 65		KK 35 36 78105		KK 35 37 21 85		KK 35 37 55 95		KK 35 39 10 75		KK 35 60 42 41			
KK 35 22 66 83		KK 35 35 80 91		KK 35 36 79105		KK 35 37 22 85		KK 35 37 57 95		KK 35 39 10 97		KK 35 60 42 43			
KK 35 22 80 83		KK 35 35 92 91		KK 35 36 80109		KK 35 37 25 85		KK 35 37 58 95		KK 35 39 20117		KK 35 60 42 47			
KK 35 22 90 83		KK 35 35 93 91		KK 35 36 80 71		KK 35 37 26103		KK 35 37 74111		KK 35 39 22 87		KK 36 11 16 41			
KK 35 23 50 61		KK 35 35 94 91		KK 35 36 80 75		KK 35 37 26 79		KK 35 37 75111		KK 35 39 23 81		KK 36 11 16 45			