

Spare Parts List

Model MZ/ME

Mounted Plough

Hannover
Agro


733028

Замовлення запчастин
(050)-407-68-47
(050)-407-68-45



Notes

GB Model	GB Interbody clearance	GB Headstock
D Modell	D Körperlängsabstand	D Drehwerk
F Modèle	F Dégagement sous age	F Type de tête
E Modelo	E Separación entre cuerpos	E Tipo de cabezal

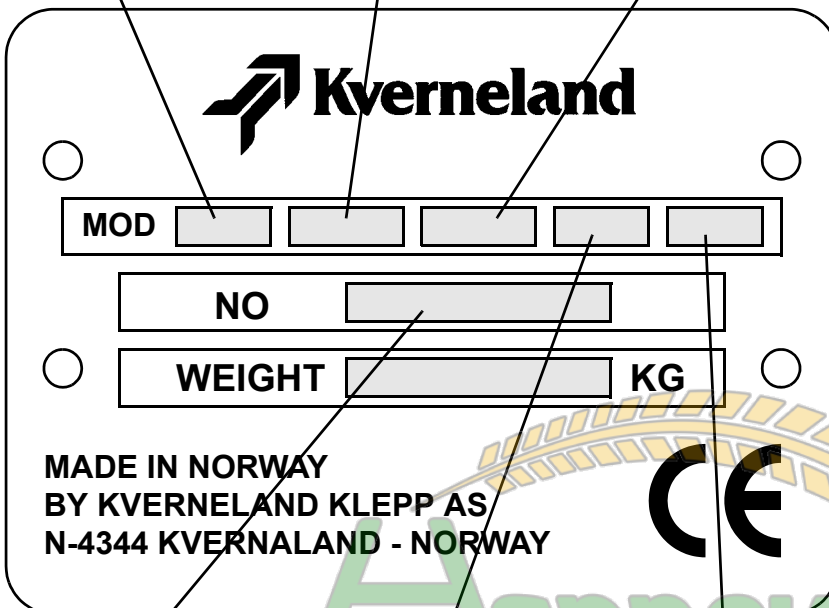

GB Serial number	Type: HD=Heavy Duty SL=Vibromat OL=On-land	GB Body no.
D Seriennummer		D Körper no.
F Numéro de série		F Type no.
E Numero de serie		E Tipo no.

- (GB)** Complete model code and serial number must be stated to avoid mistakes when ordering spare parts and misunderstandings regarding service consultations. The identification plate is located on the headstock.
- (F)** Le code complet et le numéro de série doivent être indiqués pour éviter des erreurs lors de la commande de pièces de rechange et des malentendus concernant des demandes de Service-Après-Vente. La plaque d'identité est située sur la tête.
- (D)** Um bei Ersatzteilbestellungen und Serviceleistungen Fehler und Mißverständnisse zu vermeiden ist es erforderlich, daß die genaue Bezeichnung und die Seriennummer angegeben werden. Die Plakette befindet sich am Drehwerk.
- (E)** Debe figura el código completo del modelo y el número de serie para evitar errores al pedir las piezas de recambio y al hacer consultas técnicas. La placa de identificación esta situada en el cabezal.

Plate		Page
244	Bodies no 6, 7, 8, 9 and 28	4
367	Bodies no 12, 15 and 19	8
494	Body no 14 (Plastic mouldboard)	12
414	Body no 20 (Finger Body) (Before 01.03.99)	14
1089	Bodies no. 29 and no. 30.....	16
1079	Body no. 25	20
176	Disc coulter 18" and 20" (Before 01.02.99)	22
1071	Disc coulter 18" and 20", conventional plough (From 01.02.99)	24
177	Spring loaded disc coulter 18" and 20" (Before 01.01.99)	26
1072	Springloaded disc coulter 18" and 20", conventional plough (From 01.01.99)	28
93	Manure skimmer / Maize skimmer	30
68	Special parts for auto-reset mechanism (for MZ plough)	32
182	Frame	34
183	Special parts with hydraulic layout	36
225	Hydraulic cylinder D50 x 200 mm (Before 01.08.96)	38
525	Hydraulic cylinder D50 x 200 mm (353701 - 353703) (From 01.08.96) (Before 01.04.01) 40	
1192	Hydraulic cylinder D50 x 200 mm (353901 - 353903) (From 01.04.01)	42
180	Depth wheel 500 x 165 and 6.00 x 9	44
211	Special parts for ME 12" - 13" plough	46
1051	Transfers	48
	Index.....	50




1	KK 07 30 00	Share 12" R (30 cm)	KK 07 38 03	Stay R + L for body no. 6, 7 and 8 A - saddle, L = 560 (And no. 9 before 01.12.95)	KK 07 06 41	Trashboard, L cpl.		
	KK 07 30 01	Share 12" L (30 cm)			KK 07 06 42	Trashboard, R + L cpl.		
	KK 07 30 02	Share 14" R (35 cm)	KK 07 38 31	Stay R + L for body no. 9 E - saddle, L = 725 (From 01.12.95)	17	KK 03 33 32	Cone screw M14 x 34 mm w/nut	
	KK 07 30 03	Share 14" L (35 cm)			18	KK 03 27 25	Hex screw M16 x 27 mm w/nut	
	KK 07 30 04	Share 16" R (40 cm)	KK 07 38 30	Stay R + L for body no. 9 A - saddle, L = 710 (From 01.12.95)	19	KK 03 31 07	Oval screw M12 x 35 mm w/nut	
	KK 07 30 05	Share 16" L (40 cm)			20	KK 01 32 34	Cone screw M12 x 38 mm w/nut	
	KK 07 30 06	Share 18" R (45 cm)	KK 06 38 01	Extra stay R + L, no. 9 E - saddle L = 550 (From 01.12.95)	21	KK 07 30 91	Share knife, R	
	KK 07 30 07	Share 18" L (45 cm)				KK 07 30 92	Share knife, L	
	KK 07 30 08	Share 20" R (50 cm)	KK 07 03 94	Extra stay R for body no. 9 E - saddle, cpl. w. bracket (pos. 12) (From 01.12.95)		KK 06 30 91	Share knife, R (for Sweden)	
	KK 07 30 09	Share 20" L (50 cm)	KK 07 03 95	Extra stay L for body no. 9 E - saddle, cpl. w. bracket (pos. 12) (From 01.12.95)		KK 06 30 92	Share knife, L (for Sweden)	
2	KK 05 30 90	Reversible point, R			23	KK 07 36 09	Landside, long R + L	
	KK 06 30 90	Reversible point, L	KK 07 38 03	Extra stay R + L, no. 9 A - saddle L = 560 (From 01.12.95)	24	KK 07 32 66	Bracket for stay, body no. 6 and 9, R	
3	KK 07 34 06	Saddle, R (for E-saddle)				KK 07 32 67	Bracket for stay, body no. 6 and 9, L	
	KK 07 34 07	Saddle, L (for E-saddle)	KK 07 03 90	Extra stay R for body no. 9 A - saddle, cpl. w. bracket (pos. 12) (From 01.12.95)	25	KK 07 34 14	Connecting plate, 16" - 20", R	
	KK 07 34 11	Saddle, R (for A-saddle)				KK 07 34 15	Connecting plate, 16" - 20", L	
	KK 07 34 12	Saddle, L (for A-saddle)	KK 07 03 91	Extra stay L for body no. 9 A - saddle, cpl. w. bracket (pos. 12) (From 01.12.95)	26	KK 07 30 40	Flush fit share 12", R	
4	KK 01 33 32	Cone screw M14 x 34 mm w/nut				KK 07 30 41	Flush fit share 12", L	
5	KK 03 31 00	Oval screw M12 x 30 mm w/nut	KK 08 38 09	Stay R + L for body no. 28 A - saddle (From 01.03.03)		KK 07 30 42	Flush fit share 14", R	
6	KK 07 32 60	Mouldboard 12" - 16" no. 6, R	KK 08 38 10	Stay R + L for body no. 28 E - saddle (From 01.03.03)		KK 07 30 43	Flush fit share 14", L	
	KK 07 32 61	Mouldboard 12" - 16" no. 6, L				KK 07 30 44	Flush fit share 16", R	
	KK 07 32 63	Mouldboard 12" - 14" no. 7, R	10	KK 07 36 08	Landside, R and L, short		KK 07 30 45	Flush fit share 16", L
	KK 07 32 64	Mouldboard 12" - 14" no. 7, L	11	KK 01 58 32	Nut M20 mm	27	KK 07 30 30	Flush point, R
	KK 07 32 80	Mouldboard 12" no. 8, R	12	KK 07 38 00	Bracket for stay, R for body no. 6, 7, 8 (And no. 9 before 01.12.95)		KK 07 30 31	Flush point, L
	KK 07 32 81	Mouldboard 12" no. 8, L				28	KK 01 29 27	Washer 17 x 30 x 3 mm (for use with two stays)
	KK 07 32 86	Mouldboard 14" - 18" no. 8, R	KK 07 38 01	Bracket for stay, L for body no. 6, 7, 8 (And no. 9 before 01.12.95)	30	KK 07 36 15	Furrow widener, R	
	KK 07 32 87	Mouldboard 14" - 18" no. 8, L				KK 07 36 16	Furrow widener, L	
	KK 07 32 90	Mouldboard 14" - 20" no. 9, R	KK 07 38 07	Bracket for stay, R for body no. 9 (From 01.12.95)	31	KK 07 30 88	Landside knife w/screw, R	
	KK 07 32 91	Mouldboard 14" - 20" no. 9, L				KK 07 30 89	Landside knife w/screw, L	
	KK 08 32 28	Mouldboard no. 28, R (From 01.03.03)	KK 07 38 08	Bracket for stay, L for body no. 9 (From 01.12.95)	32	KK 03 32 51	Screw M16 x 50 mm w/nut (for E-saddle) (Before 01.02.00)	
	KK 08 32 29	Mouldboard no. 28, L (From 01.03.03)				KK 03 32 56	Screw M16 x 55 mm w/ nut (for E-saddle) (From 01.02.00)	
7	KK 07 32 50	Shinpiece for no. 8, R	13	KK 01 29 19	Washer 12.5 x 23 x 3.2 mm		KK 03 32 86	Screw M16 x 85 mm w/nut (for A-saddle) (Before 01.02.00)
	KK 07 32 51	Shinpiece for no. 8, L	14	KK 05 33 87	Mouldboard extension, R		KK 03 32 95	Screw M16 x 95 mm w/nut (for A-saddle) (From 01.02.00)
	KK 07 32 56	Shinpiece for no. 6 and 9, R		KK 06 33 88	Mouldboard extension, L			
	KK 07 32 57	Shinpiece for no. 6 and 9, L	15	KK 07 33 10	Bracket for trashboard, R			
8	KK 03 27 35	Hex screw M16 x 35 mm w/nut		KK 07 33 11	Bracket for trashboard, L			
9	KK 06 38 01	Stay R + L for body no. 6, 7 and 8 E - saddle, L = 550 (And no. 9 before 01.12.95)	16	KK 07 33 00	Trashboard, R			
				KK 07 33 01	Trashboard L	33	KK 03 31 75	Screw M14 x 50 mm w/nut
				KK 07 06 40	Trashboard, R cpl.	34	KK 01 29 22	Washer 17 x 40 x 4.58 mm




35	KK 06 36 07	Plate
	KK 07 36 07	Plate cpl.
36	KK 01 33 46	Screw M14 x 45 mm w/nut
37	KK 07 36 14	Wearing plate
38	KK 01 33 33	Cone screw M14 x 34 mm
39	KK 08 32 35	Mouldboard knife R and L (From 01.12.01)
Pos. 100 - 107 Eco-share from 01.04.00		
100	KK 05 30 90	Reversible point, R
	KK 06 30 90	Reversible point, L
101	KK 01 32 28	Cone screw M12 x 34 mm w/nut
102	KK 07 36 34	Eco-share, R
	KK 07 36 35	Eco-share, L
103	KK 01 01 55	Bushing (for ploughs w/share bolt beam)
	KK 01 01 56	Bushing (for ploughs w/A-beam)
104	KK 03 27 40	Hex screw M16 x 40 mm w/nut (for ploughs w/E-saddle) (Before 01.03.00)
	KK 03 27 50	Hex screw M16 x 50 mm w/nut (for ploughs w/E-saddle) (From 01.03.00)
	KK 03 27 65	Hex screw M16 x 65 mm w/nut (for ploughs w/share bolt beam)
	KK 03 27 75	Hex screw M16 x 75 mm w/nut (for ploughs w/A-beam)
105	KK 01 33 46	Cone screw M14 x 45 mm w/flange nut (for ploughs w/E-saddle) (Before 01.03.00)
	KK 01 33 61	Cone screw M14 x 60 mm w/flange nut (for ploughs w/E-saddle) (From 01.03.00)
	KK 01 33 85	Cone screw M14 x 85 mm w/flange nut (for ploughs w/share bolt beam and A-beam)
106	KK 01 60 15	Flange nut M14
107	KK 01 29 29	Washer (for ploughs w/E-saddle) (From 01.03.00)



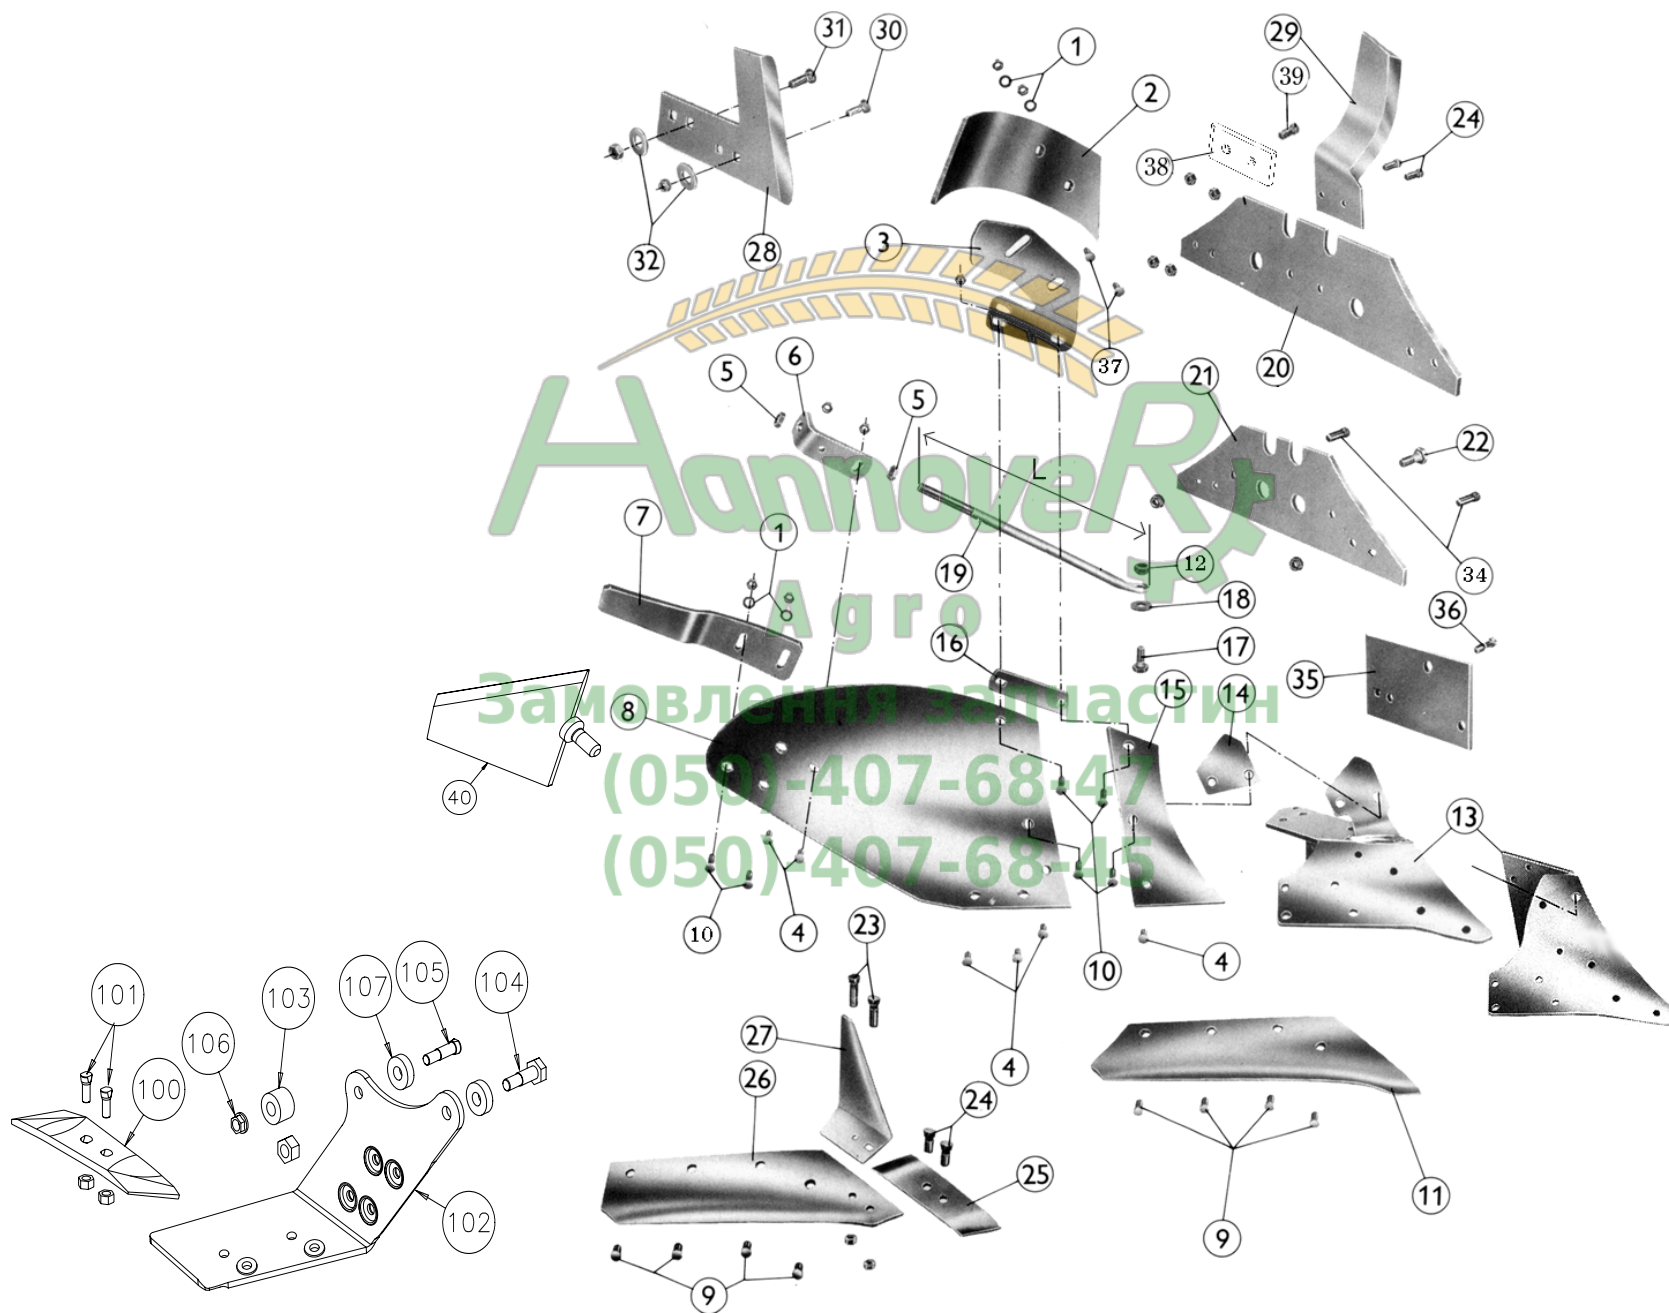

1	KK 01 29 19	Washer	KK 07 32 31	Shinpiece no. 19, L	KK 07 03 93	Extra stay L for body no. 19 A - saddle cpl.		
2	KK 07 33 00	Trashboard, R	16	KK 07 32 39	Connecting piece no. 12 and 15, R	w. bracket (pos. 6) (From 01.12.95)		
	KK 07 33 01	Trashboard, L		KK 07 32 40	Connecting piece no. 12 and 15, L	20	KK 07 36 09	Landside, long, R + L
	KK 07 06 40	Trashboard, R cpl.		KK 07 32 66	Connecting piece no. 19, R	21	KK 07 36 08	Landside, short, R + L
	KK 07 06 41	Trashboard, L cpl.		KK 07 32 67	Connecting piece no. 19, L	22	KK 03 27 25	Hex screw M16 x 27 mm
	KK 07 06 42	Trashboard, R + L cpl.	17	KK 03 27 50	Hex screw M16 x 50 mm w/nut (for use with two stays)	23	KK 01 32 34	Cone screw M12 x 38 mm w/nut
3	KK 07 33 10	Bracket, R		KK 03 27 35	Hex screw M16 x 35 mm w/nut (for use with one stay only)	24	KK 01 32 28	Cone screw M12 x 34 mm w/nut
	KK 07 33 11	Bracket, L				25	KK 05 30 90	Reversible point, R
4	KK 03 31 00	Oval screw M12 x 30 mm w/nut					KK 06 30 90	Reversible point, L
5	KK 01 58 34	Nut M20 mm	18	KK 01 29 27	Washer 17 x 30 x 3 mm (for use with two stays)	26	KK 07 30 54	Share 14", R
6	KK 07 38 00	Bracket, R					KK 07 30 55	Share 14", L
	KK 07 38 01	Bracket, L	19	KK 07 38 05	Stay R + L for body no. 12 and 15 E - saddle, L = 540 (And no. 19 before 12.01.95)		KK 07 30 56	Share 16", R
7	KK 05 33 87	Mouldboard extention, R		KK 07 38 31	Stay R + L for body no. 19 E - saddle, L = 730 (From 12.01.95)		KK 07 30 57	Share 16", L
	KK 06 33 88	Mouldboard extention, L		KK 07 38 04	Stay R + L for body no. 12 and 15 A - saddle, L = 550 (And no. 19 before 12.01.95)		KK 07 30 80	Share 18", R
8	KK 07 32 36	Mouldboard no. 12, R		KK 07 38 26	Stay R + L for body no. 19 A - saddle, L = 770 (From 12.01.95)	27	KK 07 30 81	Share 18", L
	KK 07 32 37	Mouldboard no. 12, L		KK 07 38 26	Extra stay R + L, no. 15 E - saddle L = 770 (From 01.12.96)		KK 07 30 91	Share knife, R
	KK 07 32 24	Mouldboard no. 15, R		KK 07 38 26	Extra stay R + L, no. 15 E - saddle L = 770 (From 01.12.96)	28	KK 07 30 92	Share knife, L
	KK 07 32 25	Mouldboard no. 15, L		KK 07 03 88	Extra stay R for body no. 15 E - saddle cpl. w. bracket (pos. 6) (From 01.12.96)	29	KK 07 30 88	Landside knife, R w/nuts
	KK 07 32 90	Mouldboard no. 19, R		KK 07 03 89	Extra stay L for body no. 15 E - saddle cpl. w. bracket (pos. 6) (From 01.12.96)		KK 07 30 89	Landside knife, L w/nuts
	KK 07 32 91	Mouldboard no. 19, L		KK 07 38 29	Extra stay R + L, no. 15 A - saddle L = 785 (From 01.12.96)	30	KK 07 36 15	Furrow widener, R
9	KK 01 33 32	Cone screw M14 x 34 mm w/nut		KK 07 03 98	Extra stay R for body no. 15 A - saddle cpl. w. bracket (pos. 6) (From 01.12.96)	31	KK 07 36 16	Furrow widener, L
10	KK 03 31 07	Oval screw M12 x 35 mm w/nut		KK 07 03 99	Extra stay L for body no. 15 A - saddle cpl. w. bracket (pos. 6) (From 01.12.96)		KK 03 31 75	Screw M14 x 50 mm w/nut
11	KK 07 30 62	Share 14", R		KK 07 38 42	Extra stay R + L, no. 19 E - saddle L = 570 (From 01.12.95)	32	KK 03 32 51	Screw M16 x 50 mm w/nut (for E-saddle) (Before 01.02.00)
	KK 07 30 63	Share 14", L		KK 07 03 96	Extra stay R for body no. 19 E - saddle cpl. w. bracket (pos. 6) (From 01.12.95)		KK 03 32 56	Screw M16 x 56 mm w/nut (for E-saddle) (From 01.02.00)
	KK 07 30 64	Share 16", R		KK 07 03 97	Extra stay L for body no. 19 E - saddle cpl. w. bracket (pos. 6) (From 01.12.95)		KK 03 32 86	Screw M16 x 85 mm w/nut (for A-saddle) (Before 01.02.00)
	KK 07 30 65	Share 16", L		KK 07 38 04	Extra stay R + L, no. 19 A - saddle L = 550 (From 01.12.95)	33	KK 03 32 95	Screw M16 x 95 mm w/nut (for A-saddle) (From 01.02.00)
12	KK 06 20 25	Nut M16 mm		KK 07 03 92	Extra stay R for body no. 19 A - saddle cpl. w. bracket (pos. 6) (From 01.12.95)	34	KK 01 29 22	Washer 17 x 40 x 4.58 mm
13	KK 07 34 35	Saddle, R (for E-saddle)				35	KK 01 33 33	Cone screw M14 x 34 mm w/nut
	KK 07 34 36	Saddle, L (for E-saddle)					KK 06 36 07	Plate for On-Land ploughs
	KK 07 34 40	Saddle, R (for A-saddle)					KK 07 36 07	Plate for On-Land ploughs cpl.
	KK 07 34 41	Saddle, L (for A-saddle)				36	KK 01 33 46	Screw M14 x 45 mm w/nut
14	KK 07 34 17	Connecting plate no. 12 and 15, R				37	KK 03 31 07	Oval screw M12 x 35 mm
	KK 07 34 18	Connecting plate no. 12 and 15, L				38	KK 07 36 14	Wearing plate
15	KK 07 32 41	Shinpiece no. 12, R				39	KK 01 33 32	Cone screw M14 x 34 mm
	KK 07 32 42	Shinpiece no. 12, L						
	KK 07 32 27	Shinpiece no. 15, R						
	KK 07 32 28	Shinpiece no. 15, L						
	KK 07 32 30	Shinpiece no. 19, R						

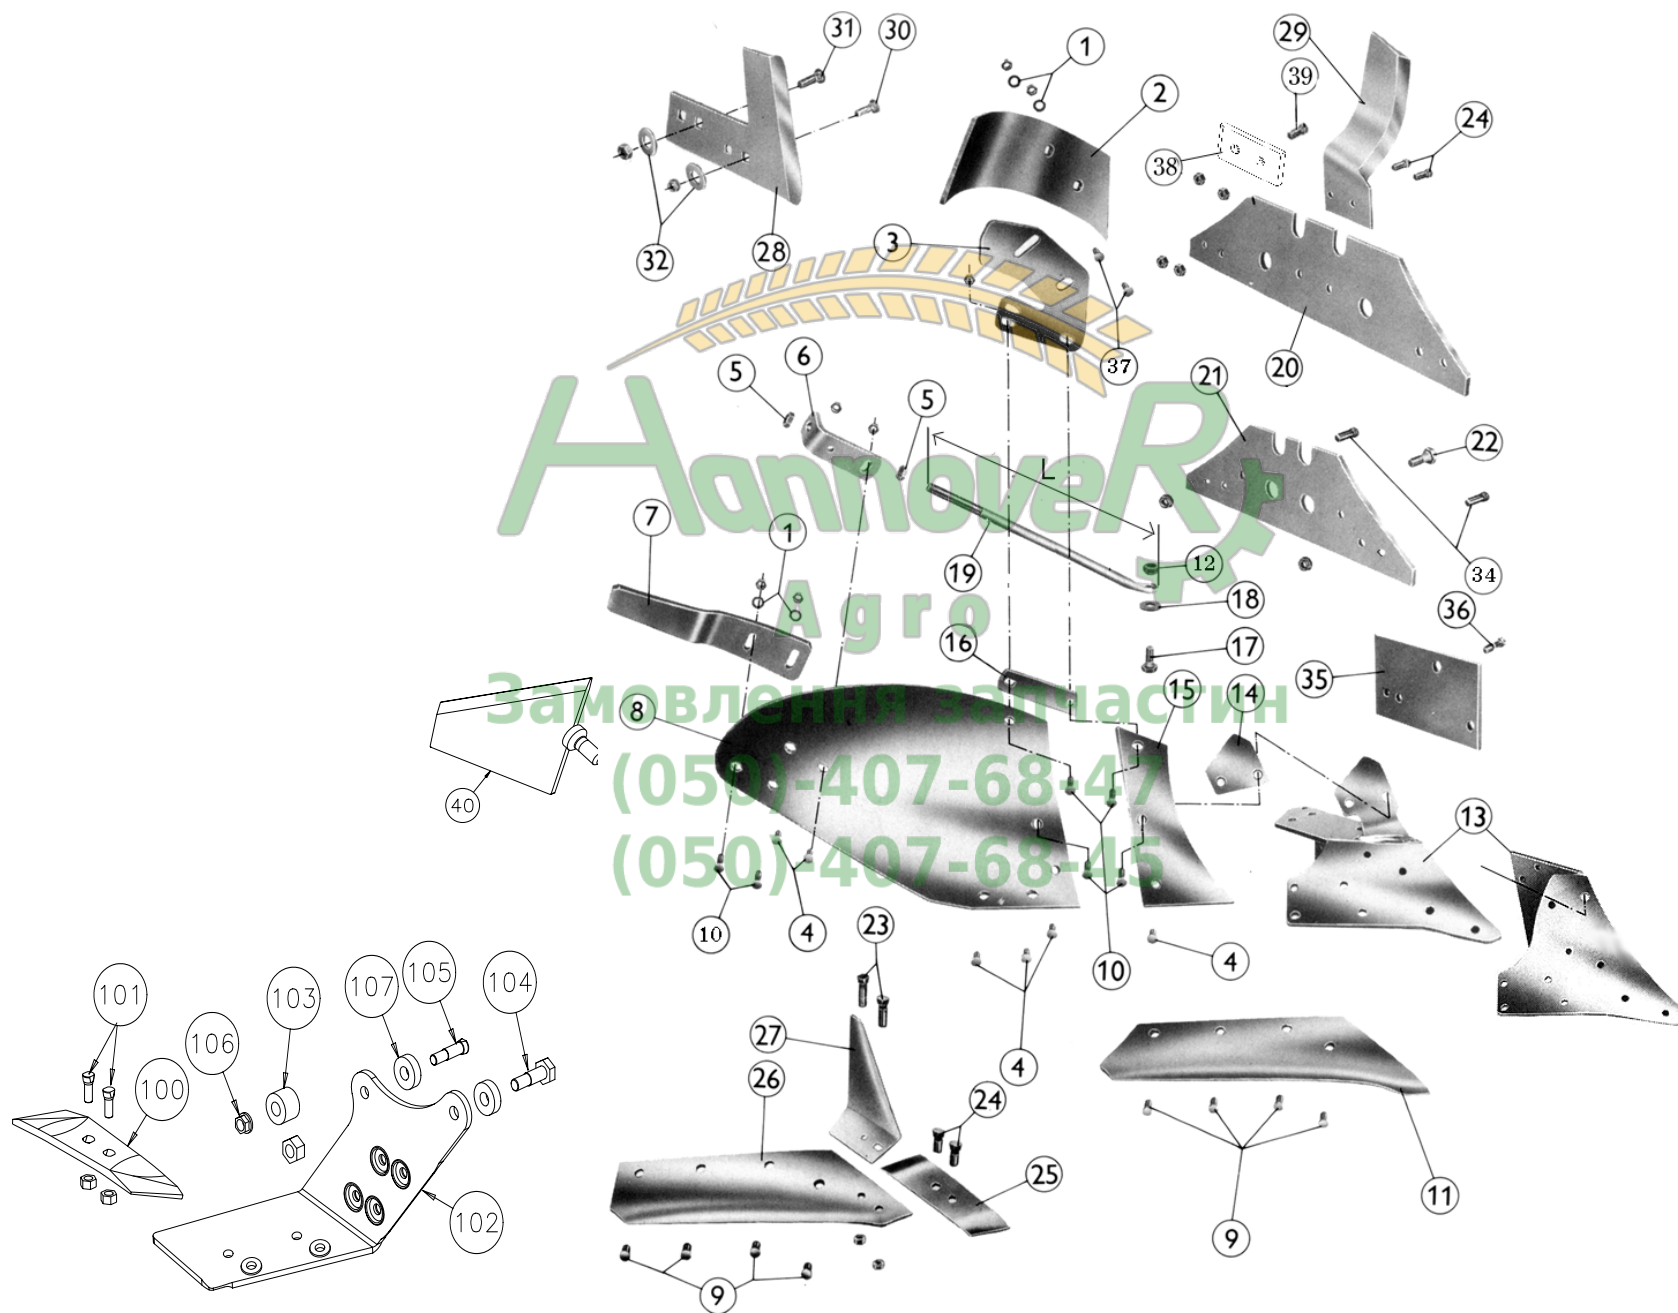

40	KK 08 32 35	Mouldboard knife R and L (From 01.12.01)
Pos. 100 - 107 Eco-share from 01.04.00		
100	KK 05 30 90	Reversible point, R
	KK 06 30 90	Reversible point, L
101	KK 01 32 28	Cone screw M12 x 34 mm w/nut
102	KK 07 36 34	Eco-share, R
	KK 07 36 35	Eco-share, L
103	KK 01 01 55	Bushing (for ploughs w/share bolt beam)
	KK 01 01 56	Bushing (for ploughs w/A-beam)
104	KK 03 27 40	Hex screw M16 x 40 mm w/nut (for ploughs w/E-saddle) (Before 01.03.00)
	KK 03 27 50	Hex screw M16 x 50 mm w/nut (for ploughs w/E-saddle) (From 01.03.00)
	KK 03 27 65	Hex screw M16 x 65 mm w/nut (for ploughs w/share bolt beam)
	KK 03 27 75	Hex screw M16 x 75 mm w/nut (for ploughs w/A-beam)
105	KK 01 33 46	Cone screw M14 x 45 mm w/flange nut (for ploughs w/E-saddle) (Before 01.03.00)
	KK 01 33 61	Cone screw M14 x 60 mm w/flange nut (for ploughs w/E-saddle) (From 01.03.00)
	KK 01 33 85	Cone screw M14 x 85 mm w/flange nut (for ploughs w/share bolt beam and A-beam)
106	KK 01 60 15	Flange nut M14
107	KK 01 29 29	Washer (for ploughs w/E-saddle) (From 01.03.00)







26	KK 03 30 04	Oval screw M10 x 20 mm w/nut
27	KK 07 33 50	Trashboard plastic, R
	KK 07 33 51	Trashboard plastic, L
28	KK 07 33 52	Support, R
	KK 07 33 53	Support, L
29	KK 05 33 87	Mouldboard extension, R
	KK 06 33 88	Mouldboard extension, L
31	KK 03 27 30	Hex screw M16 x 13 mm w/nut
32	KK 06 20 25	Nut M16 mm
33	KK 07 30 88	Landside knife w/nuts, R
	KK 07 30 89	Landside knife w/nuts, L
34	KK 03 32 51	Screw M16 x 50 mm w/nut (for E-sad- dle) (Before 01.02.00)
	KK 03 32 56	Screw M16 x 55 mm w/nut (for E-sad- dle) (From 01.02.00)
	KK 03 32 86	Screw M16 x 85 mm w/nut (for A-sad- dle) (Before 01.02.00)
	KK 03 32 95	Screw M16 x 95 mm w/nut (for A-sad- dle) (From 01.02.00)
35	KK 03 31 74	Screw M14 x 45 mm w/nut



1	KK 01 33 32	Cone screw M14 x 34 mm w/nut	21	KK 07 33 03	Bracket, R		KK 07 30 89	Landside knife w/nut, L
2	KK 07 30 54	Share 14", R		KK 07 33 04	Bracket, L	44	KK 01 29 22	Washer 17 x 40 x 4.58 mm
	KK 07 30 55	Share 14", L	22	KK 01 29 19	Washer 12.5 x 23 x 3.2 mm	45	KK 03 31 75	Screw M14 x 50 mm w/nut
	KK 07 30 56	Share 16", R	23	KK 03 27 40	Hex screw M16 x 40 mm w/nut	46	KK 03 32 51	Screw M16 x 50 mm w/nut (for E-saddle)
	KK 07 30 57	Share 16", L	24	KK 07 36 08	Landside, short, R + L		KK 03 32 86	Screw M16 x 85 mm w/nut (for A-saddle)
	KK 07 30 80	Share 18", R	25	KK 07 36 09	Landside, long, R + L	47	KK 06 36 07	Plate (For On-land ploughs only)
	KK 07 30 81	Share 18", L	26	KK 07 38 22	Stay front (for E-saddle)		KK 07 36 07	Plate cpl. (For On-land ploughs only)
3	KK 05 30 90	Reversible point, R		KK 07 38 16	Stay front (for A-saddle)	48	KK 01 33 46	Screw M14 x 45 mm w/nut
	KK 06 30 90	Reversible point, L	27	KK 01 58 30	Nut M20 mm (Before 01.06.93)	50	KK 07 36 14	Wearing plate
4	KK 07 32 45	Mouldboard, R	28	KK 07 38 17	Stay (Before 01.06.93)	51	KK 01 33 32	Cone screw M14 x 34 mm
	KK 07 32 46	Mouldboard, L	29	KK 07 38 15	Stay, rear (for A-saddle) (Before 01.06.93)			
5	KK 03 31 73	Oval screw M14 x 38 mm w/nut		KK 07 38 20	Stay, R cpl. (for E-saddle) (Before 01.06.93)			
7	KK 01 32 28	Cone screw M12 x 34 mm w/nut		KK 07 38 21	Stay, L cpl. (for E-saddle) (Before 01.06.93)			
8	KK 01 32 34	Cone screw M12 x 38 mm w/nut		KK 07 38 10	Stay, R cpl. (for A-saddle) (Before 01.06.93)			
9	KK 07 30 91	Share knife, R		KK 07 38 11	Stay, L cpl (for A-saddle) (Before 01.06.93)			
	KK 07 30 92	Share knife, L						
	KK 06 30 91	Share knife, R (for Sweden)						
	KK 06 30 92	Share knife, L (for Sweden)						
10	KK 07 34 70	Saddle, R (for E-saddle)	31	KK 07 15 00	Spacer			
	KK 07 34 71	Saddle, L (for E-saddle)	32	KK 03 31 81	Oval screw M14 x 85 mm w/nut			
	KK 07 34 64	Saddle, R (for A-saddle)	33	KK 07 36 15	Furrow widener, R			
	KK 07 34 65	Saddle, L (for A-saddle)		KK 07 30 16	Furrow widener, L			
11	KK 03 31 00	Oval screw M12 x 30 mm w/nut	34	KK 07 30 62	Share 14", R			
12	KK 07 32 72	Shinpiece, R		KK 07 30 63	Share 14", L			
	KK 07 32 73	Shinpiece, L		KK 07 30 64	Share 16", R			
13	KK 03 31 08	Oval screw M12 x 40 mm w/nut		KK 07 30 65	Share 16", L			
14	KK 03 27 30	Hex screw M16 x 30 mm w/nut	35	KK 07 38 05	Stay (for E-saddle) (From 01.06.93)			
16	KK 03 31 75	Oval screw M14 x 50 mm w/nut		KK 07 38 03	Stay (for A-saddle) (From 01.06.93)			
17	KK 07 32 75	Connecting piece, R	36	KK 07 38 34	Bracket for stay, R+L			
	KK 07 32 76	Connecting piece, L	37	KK 07 38 35	Spacing tube 27 x 20.5 x 80 mm			
18	KK 03 31 07	Oval screw M12 x 35 mm w/nut	38	KK 07 38 36	Spacing tube 27 x 20.5 x 69 mm			
19	KK 07 33 00	Trashboard, R	39	KK 07 38 12	Bracket for stay, R			
	KK 07 33 01	Trashboard, L		KK 07 38 13	Bracket for stay, L			
	KK 07 02 92	Trashboard, R cpl.	40	KK 01 30 01	Washer 14 x 30 x 7.5 mm			
	KK 07 02 93	Trashboard, L cpl.	41	KK 01 58 34	Nut M20 mm			
	KK 07 02 94	Trashboard, R + L cpl.	42	KK 03 31 85	Oval screw M14 x 130 mm w/flangenut			
20	KK 07 33 32	Mouldboard extension, R (extra)	43	KK 07 30 88	Landside knife w/nut, R			
	KK 07 33 33	Mouldboard extension,, L (extra)						

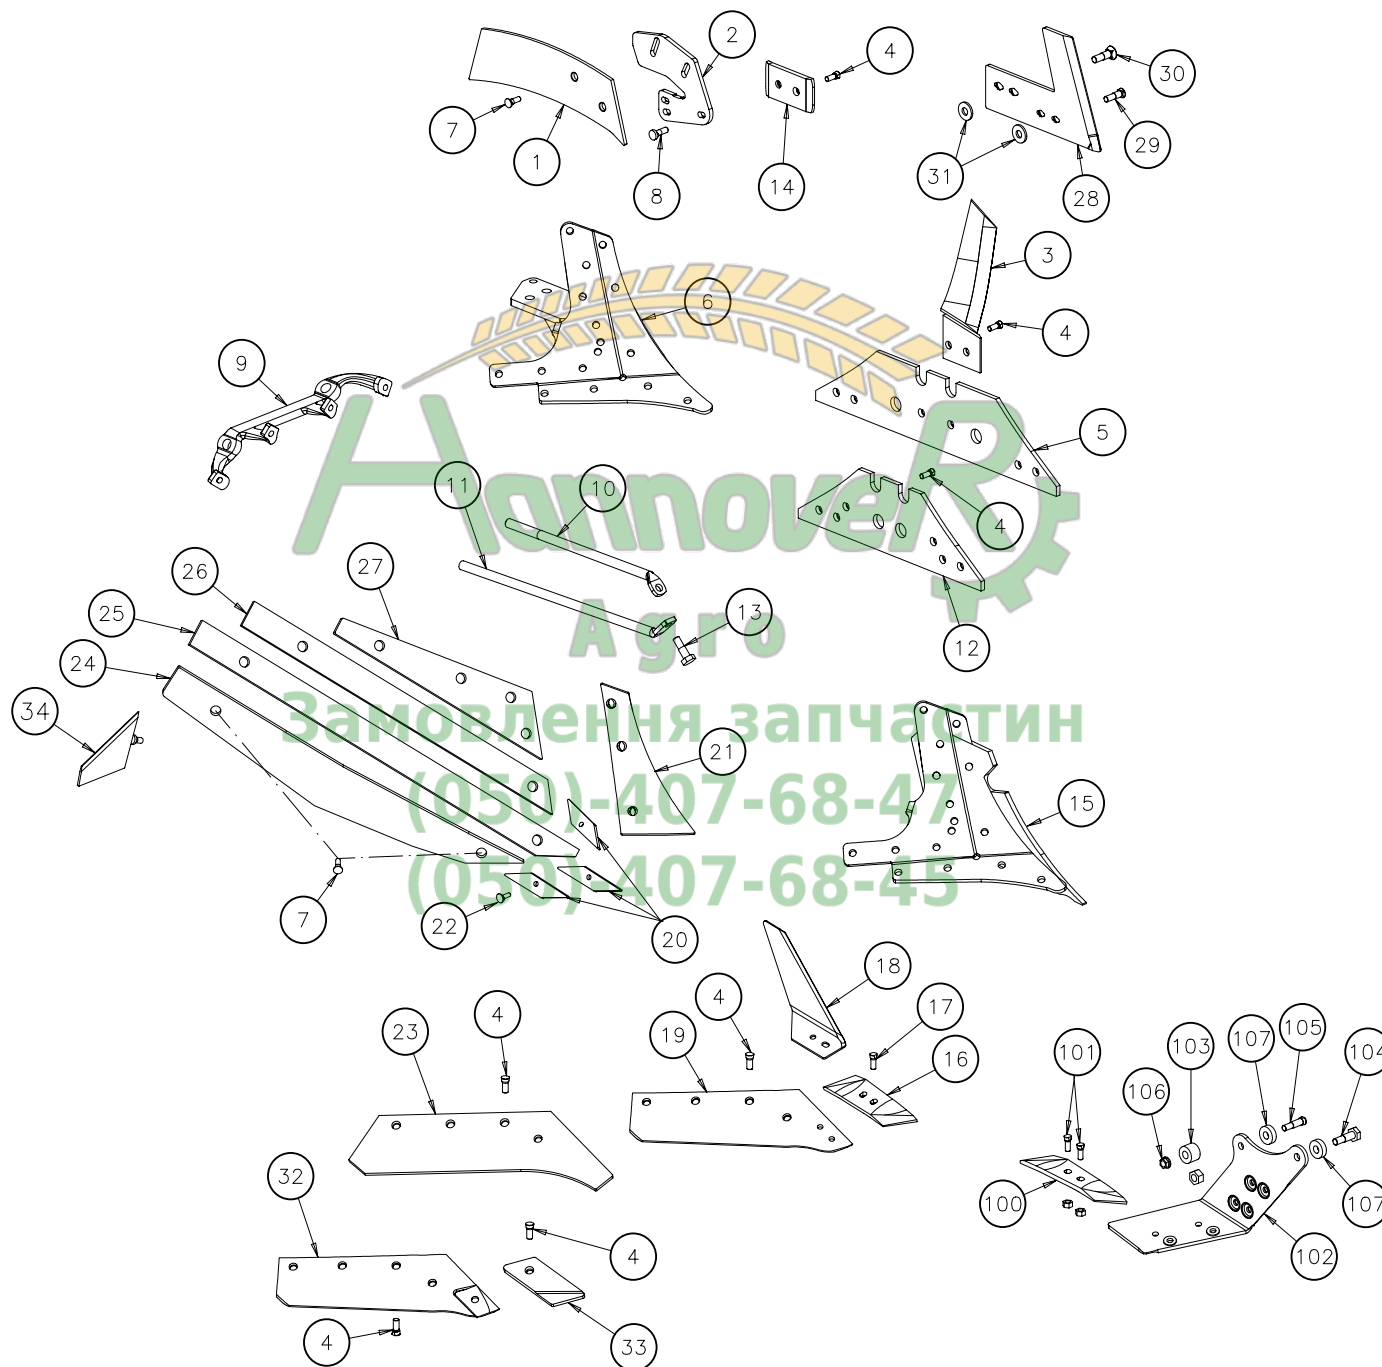


1	KK 07 33 00	Trashboard, R	15	KK 08 34 15	Saddle R, A-saddle (for body no. 29)	KK 03 30 16	Oval screw M10 x 30 mm (for body no. 30)		
	KK 07 33 01	Trashboard, L		KK 08 34 16	Saddle L, A-saddle (for body no. 29)				
2	KK 08 33 00	Bracket, R		KK 08 34 06	Saddle R, A-saddle (for body no. 30)	KK 01 58 13	Nut M10		
	KK 08 33 01	Bracket, L		KK 08 34 07	Saddle L, A-saddle (for body no. 30)	23	KK 07 30 62 Share 14", R (for body no. 30)		
3	KK 07 36 15	Furrow widener, R	16	KK 05 30 90	Reversible point, R		KK 07 30 63 Share 14", L (for body no. 30)		
	KK 07 36 16	Furrow widener, L		KK 06 30 90	Reversible point, L		KK 07 30 64 Share 16", R (for body no. 30)		
4	KK 01 33 32	Cone screw M14 x 34 mm	17	KK 01 32 28	Cone screw M12 x 34 mm		KK 07 30 65 Share 16", L (for body no. 30)		
	KK 01 60 13	Flange nut M14		KK 01 58 17	Nut M12	24	KK 08 32 11 Slat no 1, R		
5	KK 07 36 09	Landside, long R + L	18	KK 07 30 91	Share knife, R		KK 08 32 21 Slat no 1, L		
6	KK 08 34 17	Saddle R, E-saddle (for body no. 29)		KK 07 30 92	Share knife, L	25	KK 08 32 12 Slat no 2, R		
	KK 08 34 18	Saddle L, E-saddle (for body no. 29)		KK 06 30 91	Share knife, R (for Sweeden)		KK 08 32 22 Slat no 2, L		
	KK 08 34 08	Saddle R, E-saddle (for body no. 30)		KK 06 30 92	Share knife, L (for Sweeden)	26	KK 08 32 13 Slat no 3, R		
	KK 08 34 09	Saddle L, E-saddle (for body no. 30)	19	KK 07 30 02	Share 14", R (for body no. 29)		KK 08 32 23 Slat no 3, L		
7	KK 03 31 16	Oval screw M12 x 35 mm (for body no. 29 and 30)		KK 07 30 03	Share 14", L (for body no. 29)	27	KK 08 32 14 Slat no 4, R		
	KK 01 58 17	Nut M12		KK 07 30 54	Share 14", R (for body no. 30)		KK 08 32 24 Slat no 4, L		
	KK 03 31 07	Oval screw M12 x 35 mm (for body no. 30) (Before 01.01.01)		KK 07 30 55	Share 14", L (for body no. 30)	28	KK 07 30 88 Landside knife, R		
	KK 01 58 17	Nut M12		KK 07 30 04	Share 16", R (for body no. 29)		KK 07 30 89 Landside knife, L		
8	KK 03 31 17	Oval screw M12 x 45 mm (for body no. 29 and 30)		KK 07 30 05	Share 16", L (for body no. 29)	29	KK 03 31 75 Screw M14 x 50 mm		
	KK 01 58 17	Nut M12		KK 07 30 56	Share 16", R (for body no. 30)		KK 01 60 15 Flange nut M14		
	KK 03 31 11	Oval screw M12 x 45 mm (for body no. 30) (Before 01.01.01)		KK 07 30 57	Share 16", L (for body no. 30)	30	KK 03 32 51 Screw M16 x 50 mm (for E-saddle) (Before 01.02.00)		
	KK 01 58 17	Nut M12		KK 07 30 06	Share 18", R (for body no. 29)		KK 03 32 56 Screw M16 x 56 mm (for E-saddle) (From 01.02.00)		
	KK 03 31 11	Oval screw M12 x 45 mm (for body no. 30) (Before 01.01.01)		KK 07 30 07	Share 18", L (for body no. 29)		KK 01 58 25 Nut M16		
	KK 01 58 17	Nut M12		KK 07 30 80	Share 18", R (for body no. 30)		KK 03 32 86 Screw M16 x 85 mm (for A-saddle) (Before 01.02.00)		
9	KK 08 32 10	Slat support, R		KK 07 30 81	Share 18", L (for body no. 30)		KK 03 32 95 Screw M16 x 95 mm (for A-saddle) (From 01.02.00)		
	KK 08 32 20	Slat support, L	20	KK 08 32 15	Connecting piece, plastic (for slat 1-2)		KK 01 58 25 Nut M16		
10	KK 08 38 03	Stay		KK 08 32 18	Connecting piece, plastic (for slat 2) (for body no. 29)		31	KK 01 29 22 Washer 17 x 40 x 4.58 mm	
11	KK 08 38 05	Stay 1, saddle A (for body no. 29)		KK 08 32 16	Connecting piece, plastic (for slat 2-3) (for body no. 30)		32	KK 07 30 42 Flush fit share 14", R (for body no. 29)	
	KK 08 38 06	Stay 2, saddle A (for body no. 29)						KK 07 30 43 Flush fit share 14", L (for body no. 29)	
	KK 08 38 02	Stay, saddle A (for body no. 30)		KK 08 32 17	Connecting piece, plastic (for slat 3-4)			KK 07 30 44 Flush fit share 16", R (for body no. 29)	
	KK 08 38 07	Stay 1, saddle E (for body no. 29)	21	KK 07 32 56	Shinpiece, R (for body no. 29)			KK 07 30 45 Flush fit share 16", L (for body no. 29)	
	KK 08 38 08	Stay 2, saddle E (for body no. 29)		KK 07 32 57	Shinpiece, L (for body no. 29)			33	KK 07 30 30 Flush fit point, R
	KK 08 38 04	Stay, saddle E (for body no. 30)		KK 07 32 30	Shinpiece, R (for body no. 30)			KK 07 30 31 Flush fit point, L	
12	KK 07 36 08	Landside, short R + L		KK 07 32 31	Shinpiece, L (for body no. 30)			34	KK 08 32 35 Mouldboard knife R and L (From 01.12.01)
13	KK 03 27 50	Hex screw M16 x 50 mm	22	KK 03 30 06	Oval screw M10 x 30 mm (for body no. 29)				
	KK 01 58 25	Nut M16		KK 01 58 13	Nut M10				
14	KK 07 36 14	Wearing plate							

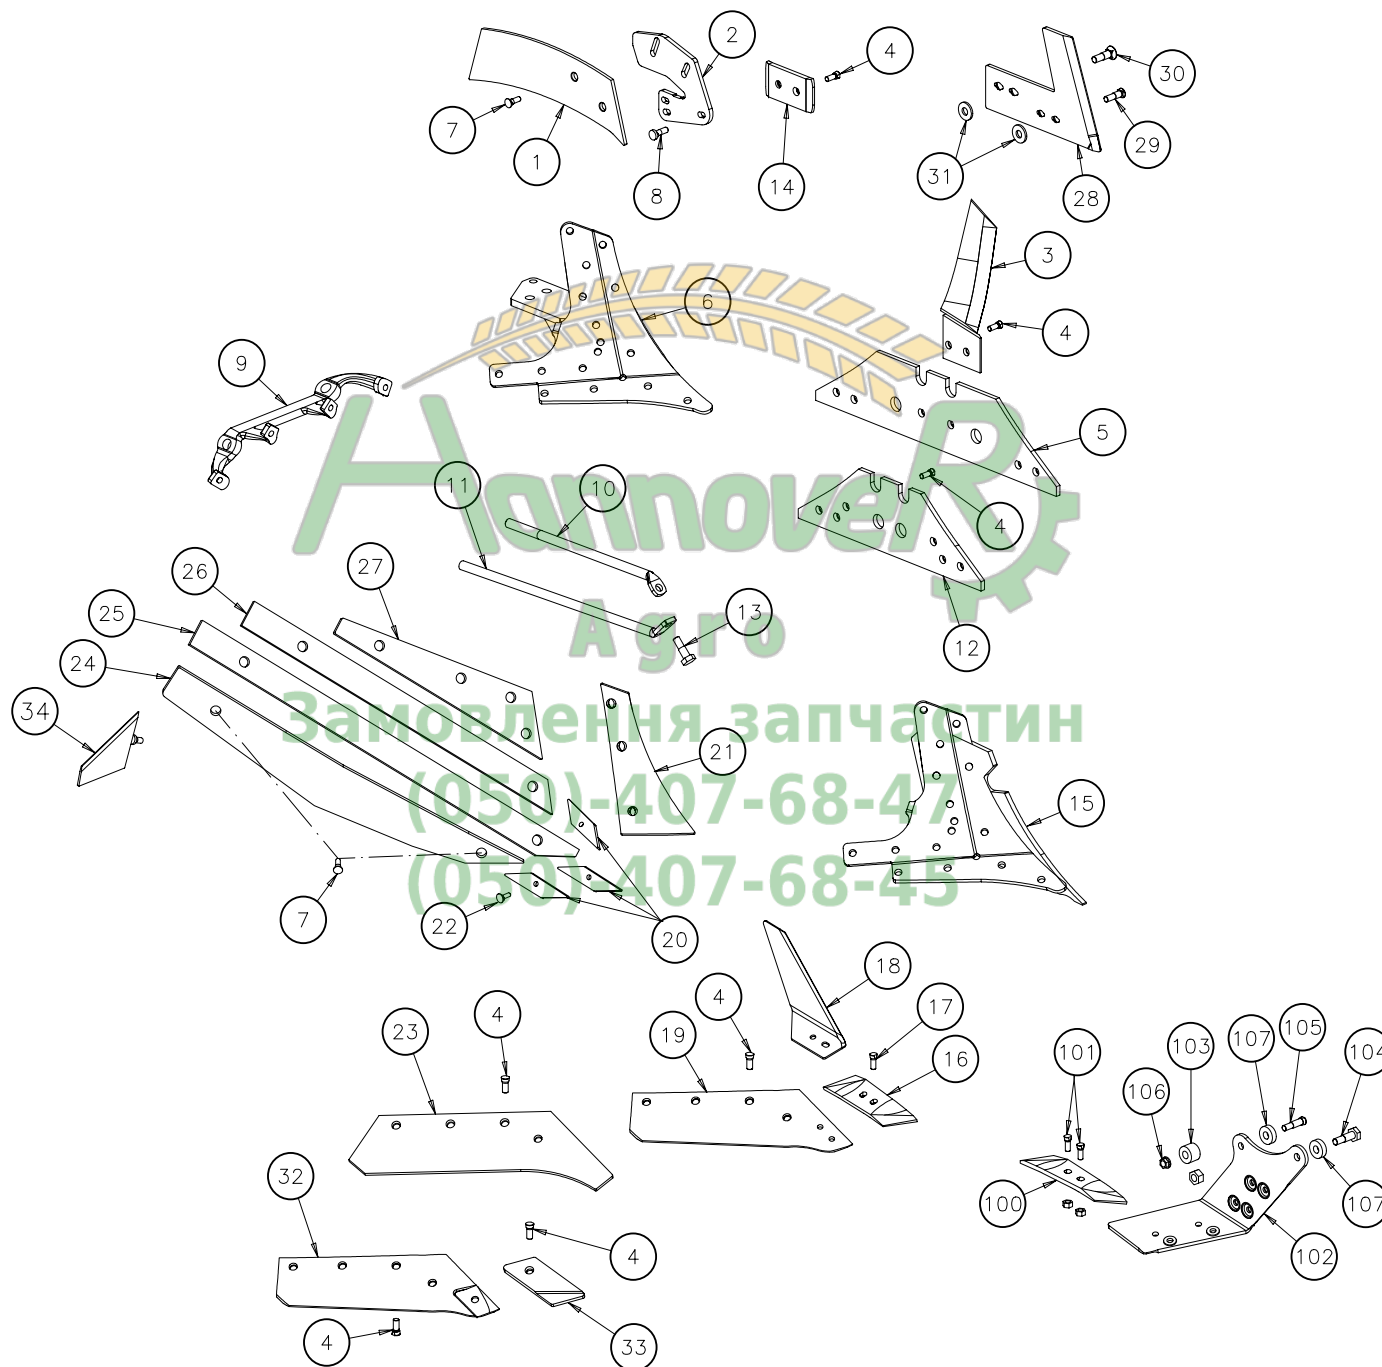


Pos. 100 - 107 Eco-share from 01.04.00		
100	KK 05 30 90	Reversible point, R
	KK 06 30 90	Reversible point, L
101	KK 01 32 28	Cone screw M12 x 34 mm
	KK 01 58 17	Nut M12
102	KK 07 36 34	Eco-share, R
	KK 07 36 35	Eco-share, L
103	KK 01 01 55	Bushing (for ploughs w/share bolt beam)
	KK 01 01 56	Bushing (for ploughs w/A-beam)
104	KK 03 27 40	Hex screw M16 x 40 (for ploughs w/E-saddle) (Before 01.03.00)
	KK 03 27 50	Hex screw M16 x 50 mm (for ploughs w/E-saddle) (From 01.03.00)
	KK 01 58 25	Nut M16
	KK 03 27 65	Hex screw M16 x 65 mm w/nut (for ploughs w/share bolt beam)
	KK 01 58 25	Nut M16
	KK 03 27 75	Hex screw M16 x 75 mm w/nut (for ploughs w/A-beam)
	KK 01 58 25	Nut ;16
105	KK 01 33 46	Cone screw M14 x 45 mm (for ploughs w/E-saddle) (Before 01.03.00)
	KK 01 33 61	Cone screw M14 x 60 mm (for ploughs w/E-saddle) (From 01.03.00)
	KK 01 33 85	Cone screw M14 x 85 mm (for ploughs w/share bolt beam and A-beam)
106	KK 01 60 15	Flange nut M14
107	KK 01 29 29	Washer (for ploughs w/E-saddle) (From 01.03.00)



Замовлення запчастин
(050)-407-68-47
(050)-407-68-45

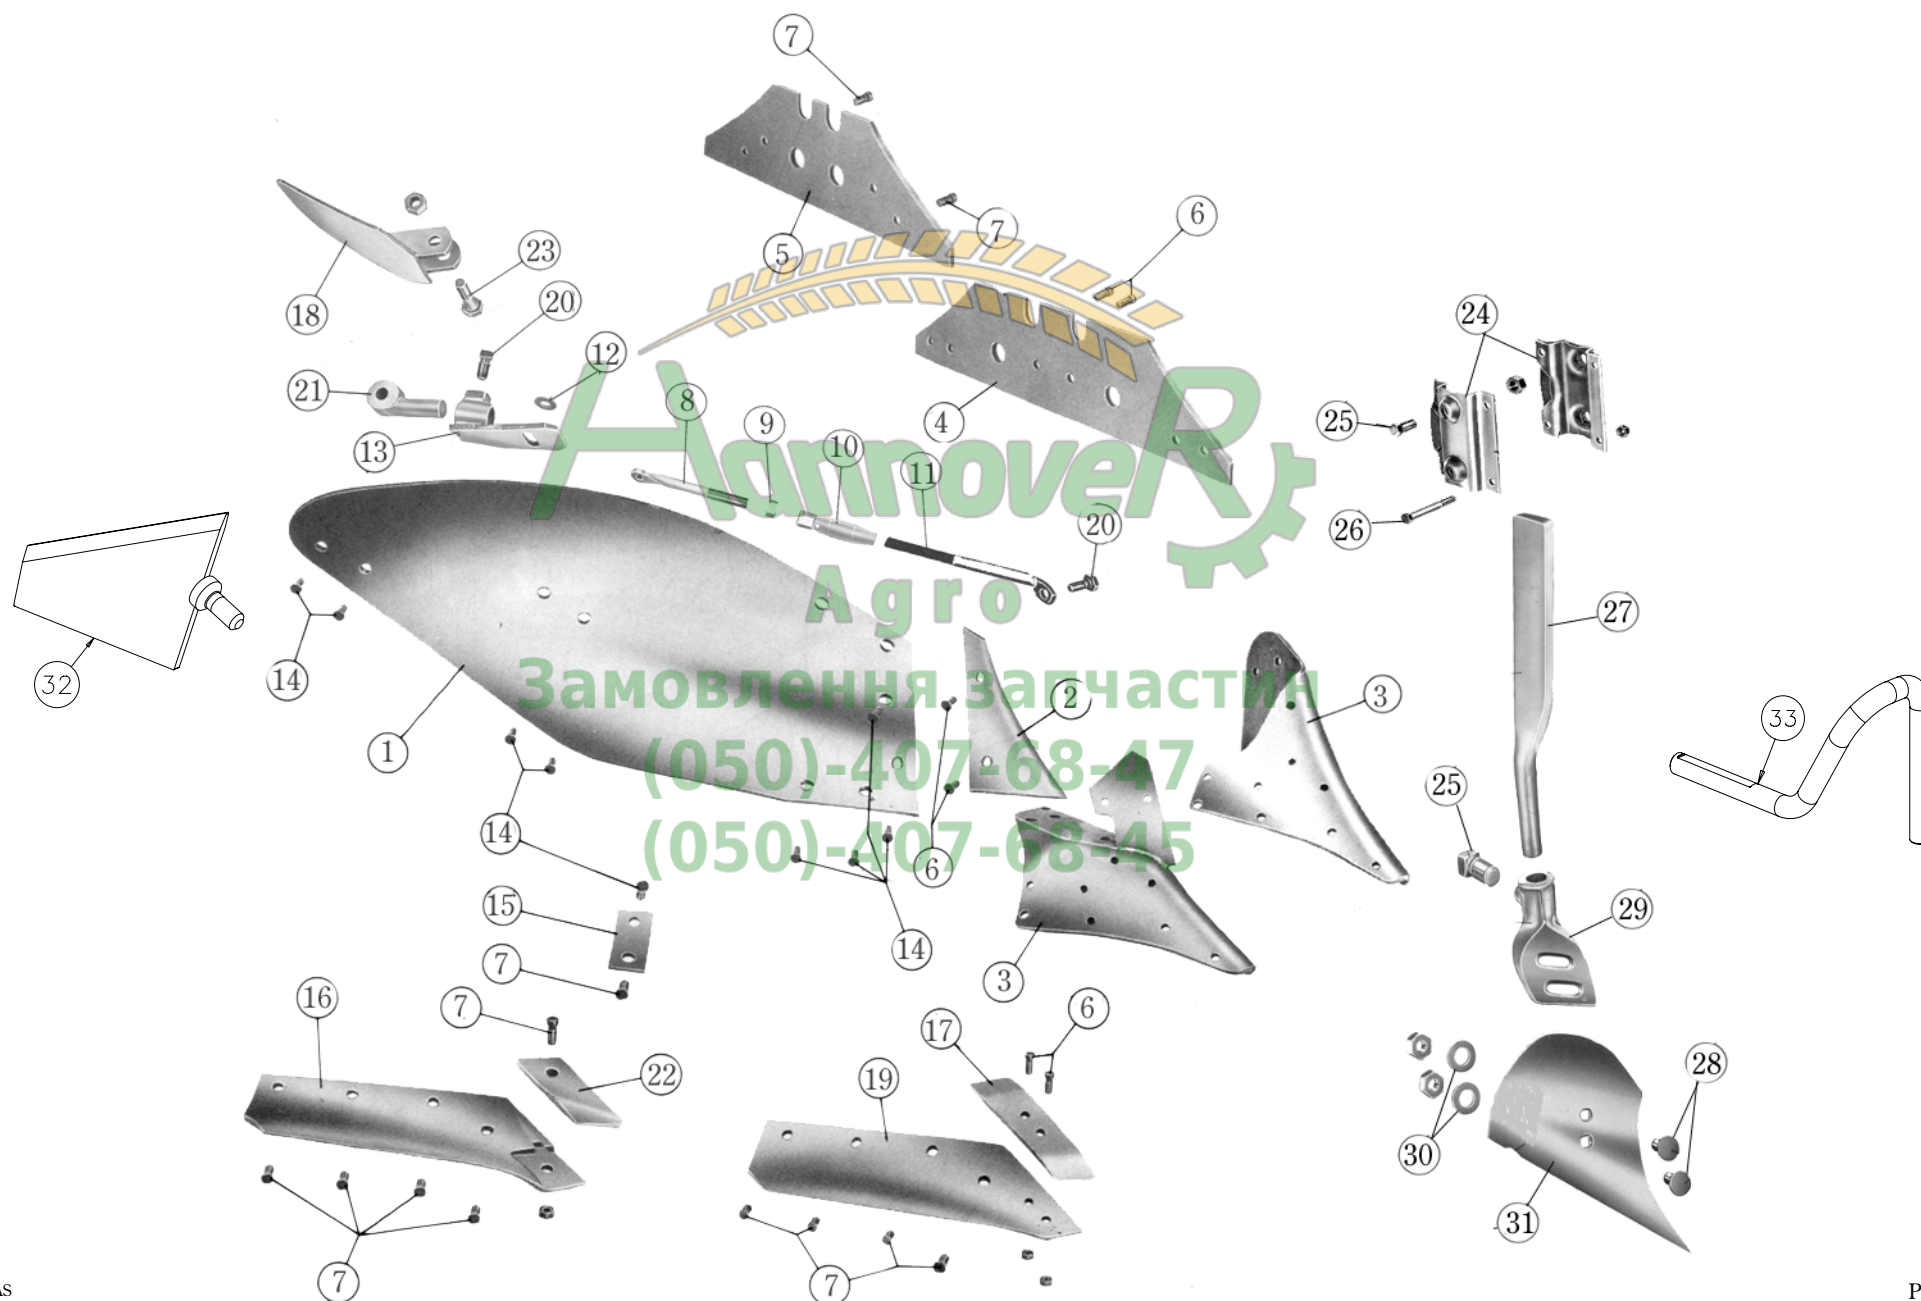

1	KK 07 31 02	Mouldboard no. 25, R		KK 07 30 06	Share 18" R	
	KK 07 31 03	Mouldboard no. 25, L		KK 07 30 07	Share 18" L	
2	KK 07 32 50	Shinpiece, R	20	KK 03 42 28	Screw M16 x 32 mm	
	KK 07 32 51	Shinpiece, L	21	KK 05 33 91	Link	
3	KK 07 34 11	Saddle, R (for A-saddle)	22	KK 07 30 30	Flush point, R	
	KK 07 34 12	Saddle, L (for A-saddle)		KK 07 30 31	Flush point, L	
4	KK 07 36 09	Landside, long	23	KK 03 27 55	Hex screw M16 x 55 mm w/nut	
5	KK 07 36 08	Landside, short	24	KK 06 68 61	Bracket	
6	KK 01 32 28	Cone screw M12 x 34 mm w/nut	25	KK 03 42 28	Setscrew M16 x 32 mm w/nut	
7	KK 01 33 32	Cone screw M14 x 34 mm w/nut	26	KK 03 27 95	Hex screw M16 x 95 mm w/nut	
8	KK 07 38 15	Stay, rear (for A-saddle)	27	KK 06 68 32	Arm (for ES)	
	KK 07 38 45	Stay, rear (for E-saddle)	28	KK 03 30 06	Oval screw M10 x 30 mm w/nut	
9	KK 01 58 30	Nut M20	29	KK 05 68 56	Fixing bracket, R (for ES)	
10	KK 07 38 17	Turnbuckle		KK 05 60 83	Fixing bracket, R (for ME)	
11	KK 07 38 18	Stay, front (for A-saddle)		KK 06 68 30	Fixing bracket, L (for ES)	
	KK 07 38 44	Stay, front (for E-saddle)	30	KK 01 29 06	Washer	
12	KK 01 29 19	Washer	31	KK 06 68 10	Mouldboard, R	
13	KK 05 33 40	Bracket extension, L		KK 06 68 31	Mouldboard, L	
	KK 05 33 92	Bracket extension, R	32	KK 08 32 35	Mouldboard knife R and L (From 01.12.01)	
14	KK 03 31 07	Oval screw M12 x 35 mm w/nut	33	KK 05 60 62	Arm (for ME)	
15	KK 07 32 54	Connecting plate, R		Not ill.	KK 07 38 19	Stay cpl. (for A-saddle)
	KK 07 32 55	Connecting plate, L			KK 07 38 43	Stay cpl. (for E-saddle)
16	KK 07 30 40	Flush fit share 12", R			KK 05 03 73	Mouldboard extension, R cpl.
	KK 07 30 41	Flush fit share 12", L			KK 05 03 74	Mouldboard extension, L cpl.
	KK 07 30 42	Flush fit share 14", R				
	KK 07 30 43	Flush fit share 14", L				
	KK 07 30 44	Flush fit share 16", R				
	KK 07 30 45	Flush fit share 16", L				
17	KK 05 30 90	Reversible point, R				
	KK 06 30 90	Reversible point, L				
18	KK 05 33 30	Mouldboard extension, L				
	KK 05 33 90	Mouldboard extension, R				
19	KK 07 30 00	Share 12" R (30 cm)				
	KK 07 30 01	Share 12" L (30 cm)				
	KK 07 30 02	Share 14" R (35 cm)				
	KK 07 30 03	Share 14" L (35 cm)				
	KK 07 30 04	Share 16" R (40 cm)				
	KK 07 30 05	Share 16" L (40 cm)				

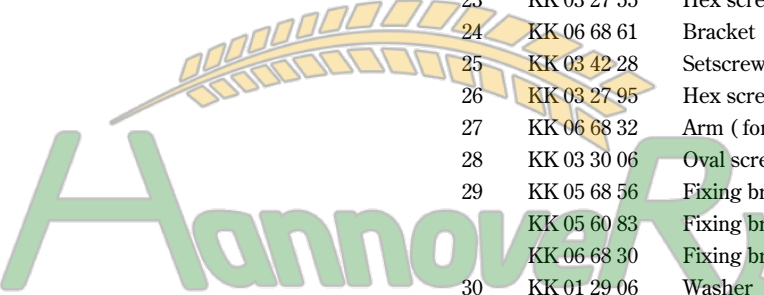
А н н о в е р
А г р о
Замовлення запчастин
(050)-407-68-47
(050)-407-68-45



1	KK 03 13 40	Hex screw M8 x 40 mm
2	KK 05 61 56	Cap
3	KK 01 07 75	O-ring D54.5 x 3 mm
4	KK 05 61 12	Disc 18"
	KK 05 61 15	Disc 18" Notched
5	KK 05 61 14	Disc 20"
	KK 05 61 16	Disc 20" Notched
6	KK 06 61 02	Hub w/needles
7	KK 01 07 72	Seal ring
8	KK 01 07 60	Circlip
9	KK 06 61 08	Axle D30
10	KK 02 99 20	Grease nipple
11	KK 06 06 10	Disc coulters arm 18"
	KK 06 06 17	Disc coulters arm 20"
12	KK 05 61 90	Stop collar
13	KK 05 60 03	Stem (for disc coulters Europe)
	KK 05 60 02	Stem (for disc coulters Canada and USA)
14	KK 07 61 21	Bracket
15	KK 03 27 02	Hex screw M16 x 110 mm w/nut
16	KK 07 61 20	Holder
17	KK 03 27 65	Hex screw M16 x 65 mm w/nut
18	KK 01 12 72	Circlip
19	KK 01 04 85	Axle
20	KK 03 26 70	Hex screw M12 x 70 mm w/nut
21	KK 01 12 66	Circlip
22	KK 01 12 92	Washer D30 x 45 x 2.5 mm
Not ill.	KK 06 06 24	Hub cpl.
	KK 07 06 26	Holder cpl.





1	KK 07 64 06	Disc coulters 18"
	KK 07 64 07	Disc coulters 20"
2	KK 07 64 09	Disc coulters, notched 18"
	KK 07 64 10	Disc coulters, notched 20"
3	KK 07 64 99	Plate
4	KK 03 51 14	Screw M10 x 40 mm w/lock nut
5	KK 01 17 50	O-ring 124,5 x 3 mm
6	KK 01 18 66	O-ring 67 x 3 mm
7	KK 01 12 59	Circlip I 62 x 2 mm
8	KK 01 12 66	Circlip A 30 x 1,5 mm
9	KK 01 05 72	Bearing
10	KK 01 05 32	Gasket ring
11	KK 08 60 90	Bearing housing cpl. (ill. no. 4, 5, 6, 8 and 12)
12	KK 08 61 01	Axle
	KK 08 60 86	Disc coulters arm w/bearing, A- and 3D-saddle
	KK 08 60 87	Disc coulters bearing cpl. (ill. no. 7, 9, 10 and 11)
13	KK 07 65 75	Arm
14	KK 07 64 00	Support
15	KK 03 27 02	Hex screw M16 x 110 mm w/nut
16	KK 02 99 20	Grease nipple
17	KK 08 61 02	Stem
18	KK 07 61 21	Bracket
19	KK 07 61 20	Holder
20	KK 01 04 85	Pin
21	KK 01 12 72	Circlip
22	KK 03 27 65	Hex screw M16 x 65 mm w/nut
Not ill.	KK 08 60 89	Hub without axle cpl.






1	KK 03 13 40	Hex screw M8 x 40 mm	KK 07 06 26	Holder for disc coulters cpl.
2	KK 05 61 56	Cap	KK 06 06 26	Spring loaded disc coulters 18" cpl.
3	KK 01 07 75	O-ring	KK 06 06 27	Spring loaded disc coulters 20" cpl.
4	KK 05 61 12	Disc 18"	KK 07 00 41	Spring loaded disc coulters 18", notched cpl.
5	KK 05 61 14	Disc 20"	KK 07 00 43	Spring loaded disc coulters 20", notched cpl.
6	KK 06 61 02	Bearing housing w/bearing		
7	KK 01 07 72	Gasket ring		
8	KK 01 07 60	Circlip		
9	KK 06 61 08	Axle w/circlip and washer		
10	KK 02 99 20	Grease nipple		
11	KK 01 58 35	Nut M20		
12	KK 09 63 05	Arm		
13	KK 09 63 10	Tube		
14	KK 09 63 18	Bolt		
15	KK 09 63 20	Spring		
16	KK 09 63 15	Rod for spring		
17	KK 05 61 90	Stop		
18	KK 03 26 70	Hex screw M12 x 70 mm w/nut		
19	KK 05 60 03	Axle for disc coulters		
20	KK 07 61 20	Holder for axle		
21	KK 07 61 21	Piece for holder		
22	KK 03 27 02	Hex screw M16 x 110 mm w/nut		
23	KK 03 27 65	Hex screw M16 x 65 mm w/nut		
24	KK 01 04 85	Axle		
25	KK 01 12 72	Circlip		
26	KK 09 63 22	Bushing		
27	KK 01 12 66	Circlip		
28	KK 01 12 92	Washer		
29	KK 06 61 67	U-bolt M16 x 120 x 90 mm		
30	KK 07 61 68	Angular disc coulters bracket		
31	KK 07 61 69	Angular clamp bracket		

Not ill.	KK 05 61 15	Disc 18", notched
	KK 05 61 16	Disc 20", notched
	KK 06 06 24	Bearing cpl.
	KK 09 06 06	Arm w/spring cpl.



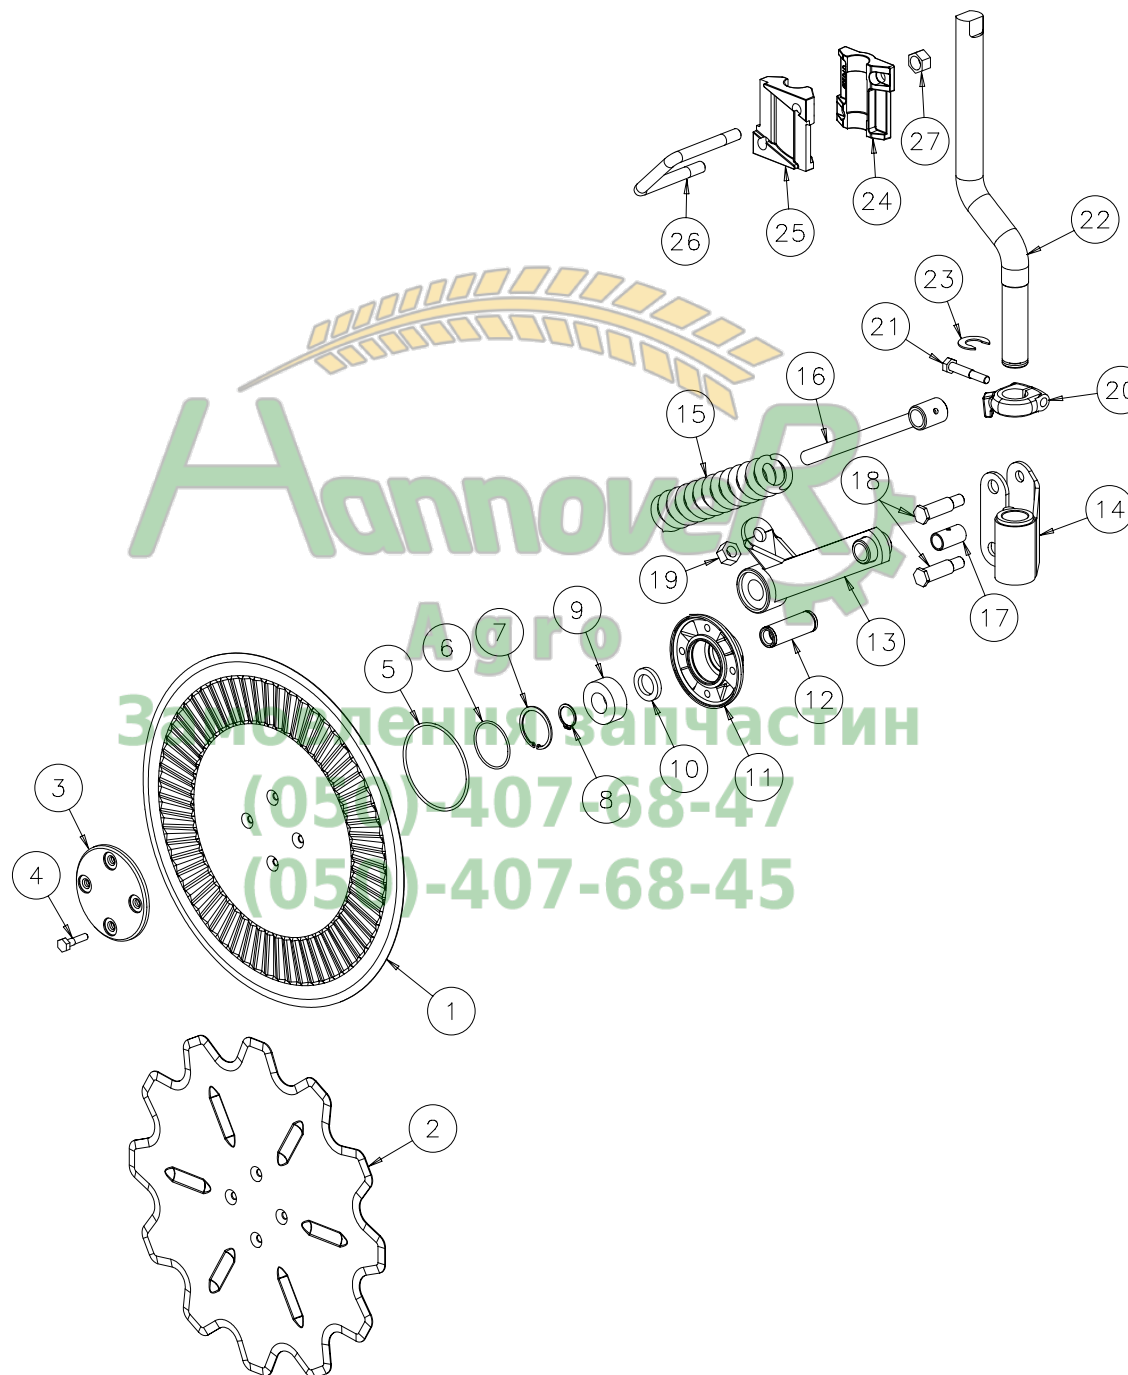

1	KK 07 64 06	Disc coulter 18"
	KK 07 64 07	Disc coulter 20"
2	KK 07 64 09	Disc coulter, notched 18"
	KK 07 64 10	Disc coulter, notched 20"
3	KK 07 64 99	Plate
4	KK 03 25 40	Screw M10 x 40 mm w/nut
5	KK 01 17 50	O-ring 124,5 x 3 mm
6	KK 01 18 66	O-ring 67 x 3 mm
7	KK 01 12 59	Circlip I 62 x 2 mm
8	KK 01 12 66	Circlip A 30 x 1,5 mm
9	KK 01 05 72	Bearing
10	KK 01 05 32	Gasket ring
11	KK 08 61 00	Bearing housing
12	KK 08 61 01	Axle
	KK 08 60 88	Disc coulter arm w/bearing, A-saddle
	KK 08 60 87	Disc coulter bearing cpl.
13	KK 09 63 05	Arm
14	KK 09 63 10	Tube
15	KK 09 63 20	Spring
16	KK 09 63 15	Rod for spring
17	KK 09 63 22	Bushing
18	KK 09 63 18	Bolt
19	KK 01 58 30	Nut M16
20	KK 05 61 90	Stop
21	KK 03 26 70	Hex screw M12 x 70 mm w/nut
22	KK 05 60 02	Stem (Before 15.11.99)
	KK 05 60 03	Stem (From 15.11.99)
23	KK 01 07 60	Circlip
24	KK 07 61 69	Angular clamp bracket
25	KK 07 61 68	Angular disc coulter bracket
26	KK 06 61 67	U-bolt M16 x 120 x 90 mm
27	KK 01 58 25	Nut M16



Замовлення запчастин
(050)-407-68-47
(050)-407-68-45



1	KK 03 27 04	Hex screw M16 x 120 mm w/nut
2	KK 05 68 85	Arm (Before 01.06.01)
	KK 05 68 93	Arm w/bracket (From 01.06.01)
3	KK 03 27 50	Hex screw M16 x 50 mm w/nut
4	KK 07 68 03	Fixing bracket, R
	KK 07 68 04	Fixing bracket, L
5	KK 07 68 12	Mouldboard maize, R
	KK 07 68 13	Mouldboard maize, L
6	KK 01 58 16	Nut M10
7	KK 01 29 06	Washer
8	KK 06 68 68	Share, long R
	KK 06 68 69	Share, long L
9	KK 06 68 80	Mouldboard, R
	KK 06 68 81	Mouldboard, L
10	KK 03 30 06	Oval screw M10 x 30 mm w/nut




Замовлення запчастин
(050)-407-68-47
(050)-407-68-45




1	KK 05 70 16	Stretch arm, R
2	KK 05 70 17	Stretch arm, L
3	KK 05 70 03	Pressure arm, R
4	KK 05 70 04	Pressure arm, L
5	KK 03 27 02	Hex screw M16 x 110 mm w/nut
6	KK 05 70 30	Supporting piece w/flange
7	KK 02 20 67	Hex screw 7/16" x 67 mm w/nut
8	KK 01 00 35	Spacing tube, L = 35 mm
9	KK 05 70 42	Gudgeon pin
10	KK 02 99 19	Grease nipple
11	KK 03 27 75	Hex screw M16 x 75 mm w/nut
12	KK 01 07 05	Roll pin D13 x 60 mm
13	KK 05 71 01	Steering bolt
14	KK 01 10 16	Roll pin D8 x 45 mm
15	KK 05 70 62	Spring
16	KK 05 70 92	Cross piece
17	KK 05 70 55	Drag bar, R
18	KK 05 70 56	Drag bar, L
Not ill.	KK 05 07 00	Auto-reset mechanism cpl.



Замовлення запчастин
(050)-407-68-47
(050)-407-68-45

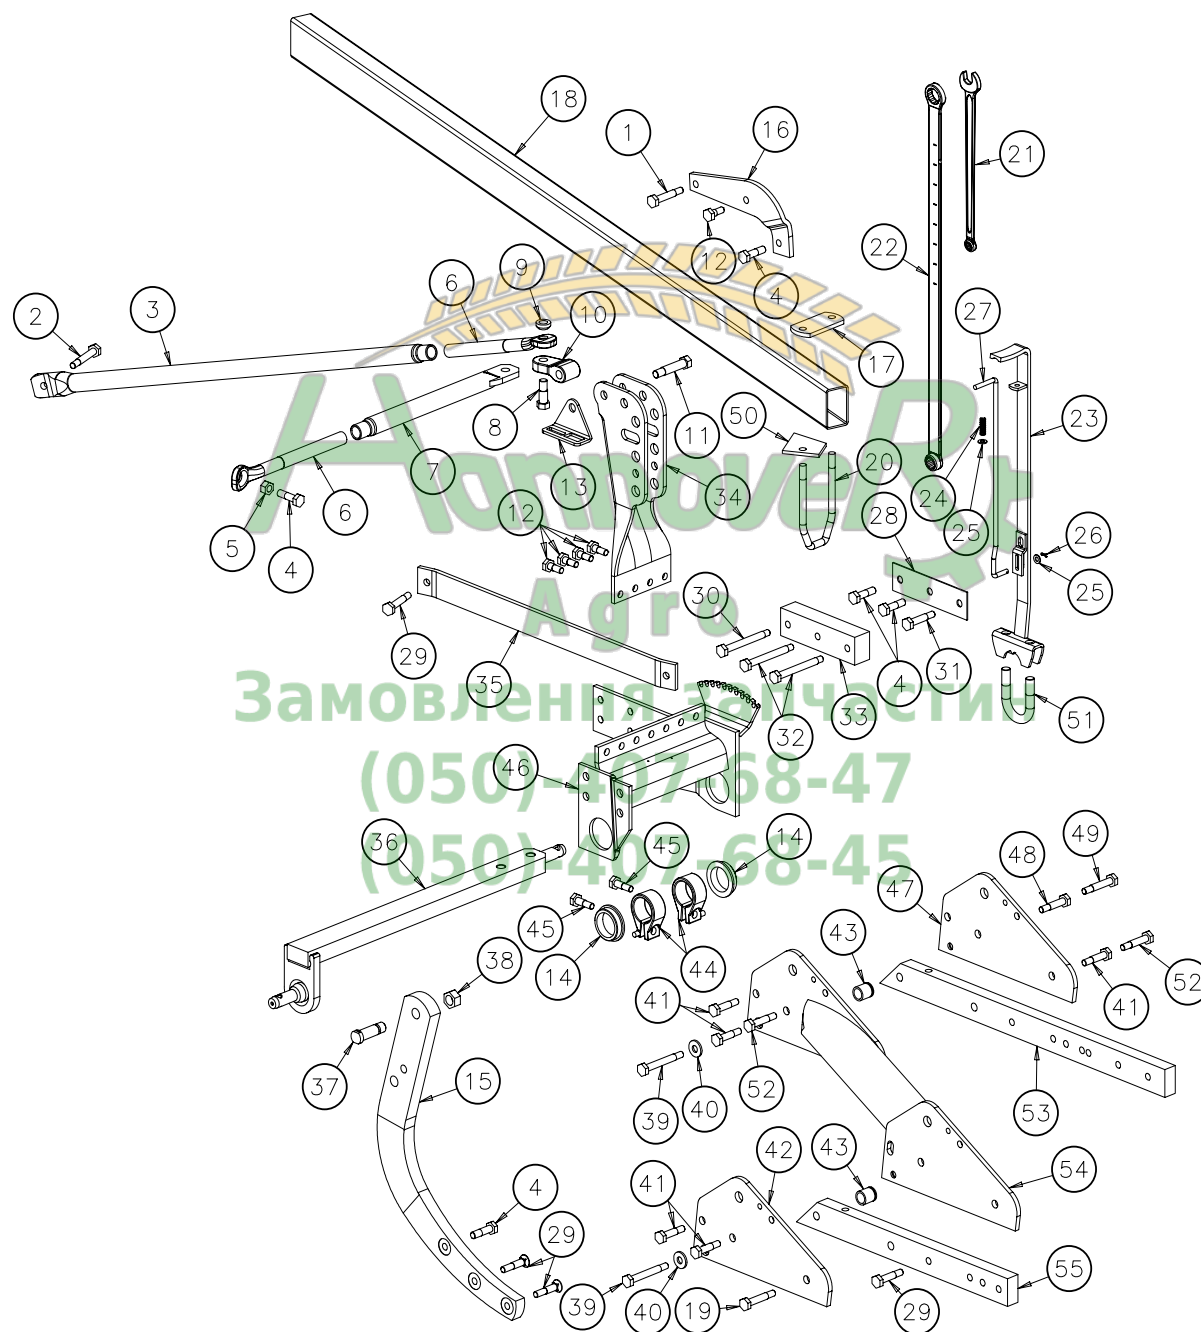


1	KK 03 27 90	Hex screw M16 x 90 mm w/nut (for 5 furrow)	30	KK 03 27 08	Hex screw M16 x 115 mm w/nut (for 1-2 furrow, 12")	50	KK 05 14 65	Plate
2	KK 03 27 00	Hex screw M16 x 100 mm w/nut (for 3 furrow)		KK 03 27 05	Hex screw M16 x 125 mm w/nut (for 3-5 furrow, 12")	51	KK 06 41 86	U-bolt D60 w/nuts
3	KK 05 22 81	Stay, L = 1420 mm (for MZ plough)	31	KK 03 27 80	Hex screw M16 x 80 mm w/nut (for 3-5 furrow, 14" and 16")	52	KK 02 24 82	Hex screw 3/4" x 82 mm w/nut
4	KK 03 27 60	Hex screw M16 x 60 mm w/nut	32	KK 03 27 08	Hex screw M16 x 115 mm w/nut (12")	53	KK 05 12 64	Beam, no. 2
5	KK 06 20 25	Adjustable nut M16	33	KK 05 15 38	Spacer	54	KK 05 16 30	Slide rail 12"
6	KK 06 20 19	Screw (for MZ plough)	34	KK 06 20 02	Headstock		KK 05 16 22	Slide rail 13" (ME plough)
7	KK 06 20 30	Stay, L = 535 mm (for MZ plough)	35	KK 05 12 65	Stay, L = 793 mm (12")		KK 05 16 26	Slide rail 14" (MZ plough)
	KK 06 20 31	Stay, L = 535 mm (for ME plough)		KK 05 12 66	Stay, L = 1242 mm (14")	55	KK 05 16 34	Slide rail 16" (MZ plough)
8	KK 03 28 55	Hex screw M20 x 55 mm w/nut (for 3 furrow)		KK 05 12 67	Stay, L = 1258 mm (16")		KK 05 12 28	Beam, no. 1
	KK 03 28 75	Hex screw M20 x 75 mm w/nut (for 4-5 furrow)	36	KK 06 43 27	Cross shaft D60, L = 720 mm Kat. I (for MZ and ME plough)	Not ill.	KK 05 02 17	Stay cpl. (for MZ plough)
9	KK 06 20 20	Washer		KK 06 43 28	Cross shaft D60, L = 825 mm Kat. I (for MZ plough)		KK 06 01 55	Stay cpl. (for MZ plough)
10	KK 06 20 40	Fixing stay		KK 06 43 24	Cross shaft D60, L = 825 mm Kat. II, bend (for MZ and ME plough)		KK 06 01 56	Stay cpl. (for ME plough)
11	KK 03 28 95	Hex screw M20 x 95 mm w/nut		KK 06 41 60	Cross shaft D60, L = 825 mm Kat. II (for MZ and ME plough)		KK 06 04 81	Adjustable handle cpl. (for D60 cross shaft MZ plough)
12	KK 03 27 40	Hex screw M16 x 40 mm w/nut		KK 06 43 25	Cross shaft D60, L = 935 mm Kat. II (for MZ plough)		KK 05 44 17	Adjustable handle cpl. (for D60 cross shaft ME plough)
13	KK 06 25 00	Spanner holder		KK 06 43 26	Cross shaft D60, L = 965 mm Kat. III (for MZ plough)		KK 05 14 44	Cover
14	KK 06 43 17	Bushing D60		37	KK 06 70 82	Hex screw M24		
15	KK 05 12 03	Beam, H = 714.5 mm (for ME plough)			KK 06 70 85	Hex screw M24 w/trigger		
	KK 05 12 05	Beam, H = 714.5 mm w/2 extra wholes (for ME plough)		38	KK 01 58 41	Nut M24		
	KK 05 12 04	Beam, H = 764.5 mm (for MZ plough)		39	KK 03 27 05	Hex screw M15 x 125 mm w/nut		
16	KK 05 22 93	Fixing stay (for 5 furrow)		40	KK 01 29 26	Washer		
17	KK 05 14 61	Orvel (for MZ plough)		41	KK 02 24 71	Hex screw 3/4" x 70 mm w/nut and point		
18	KK 05 82 20	Tube (for 5 furrow)		42	KK 05 16 44	Slide rail plate, R		
19	KK 02 24 89	Hex screw 3/4" x 89 mm w/nut		43	KK 01 00 37	Spacing tube, L = 36,5 mm		
20	KK 05 14 60	U-bolt w/nuts (for MZ plough)		44	KK 06 43 05	Stopper D60		
21	KK 01 06 06	Spanner 19-27			KK 06 41 80	Stopper D75		
22	KK 01 06 50	Spanner 27-38		45	KK 03 27 50	Hex screw M16 x 50 mm w/nut		
23	KK 06 43 36	Adjustable handle (for D60 cross shaft)		46	KK 05 15 40	Front piece		
24	KK 05 44 70	Spring		47	KK 05 16 42	Slide rail plate, L		
25	KK 01 29 15	Washer		48	KK 03 27 75	Hex screw M16 x 75 mm w/nut		
26	KK 02 97 10	Splint		49	KK 03 27 90	Hex screw M16 x 90 mm w/nut		
27	KK 06 41 67	Congestion						
28	KK 05 15 39	Plate (16")						
29	KK 03 32 75	Screw M16 x 75 mm w/nut						

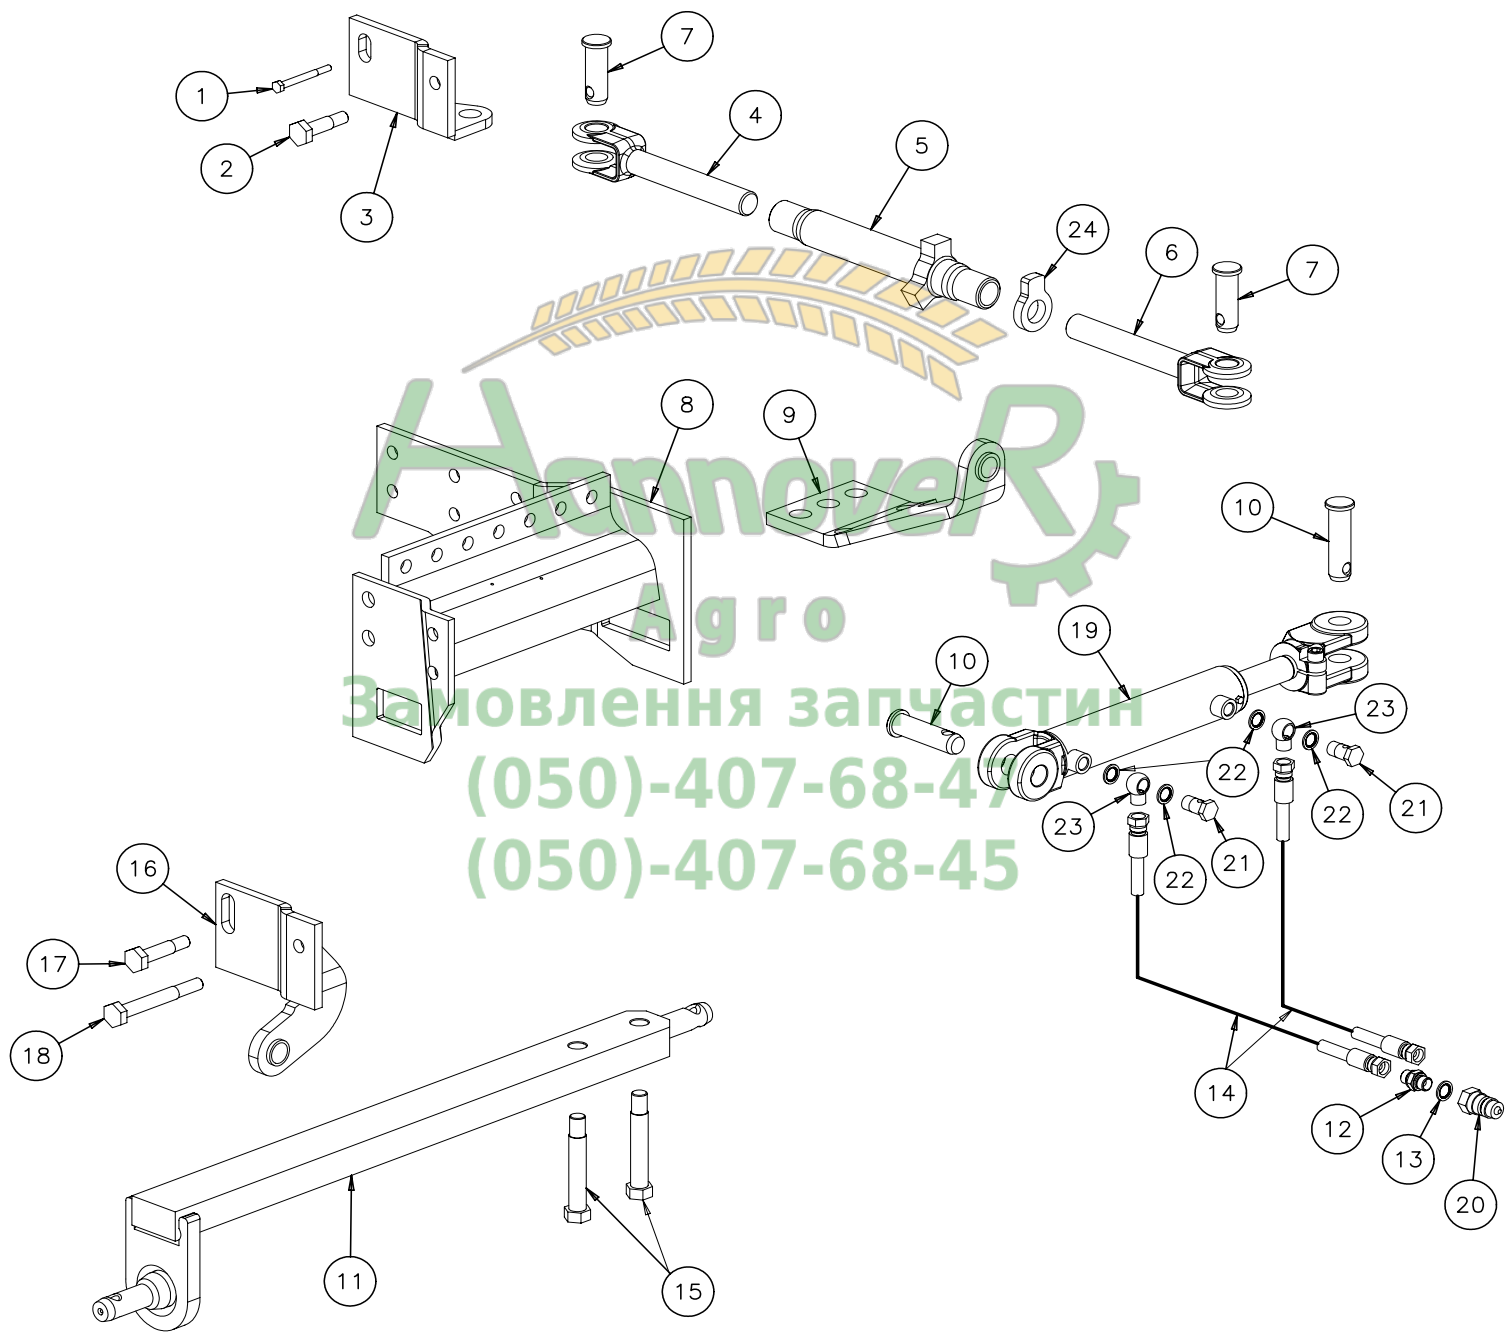

1	KK 03 24 82	Hex screw 3/4" x 82 mm w/nut	24	KK 35 61 31	Contra nut (for ME plough)
2	KK 03 27 65	Hex screw M16 x 65 mm w/nut			
3	KK 05 15 63	Bracket, rear	Not ill.	KK 36 11 16	Turnbuckle cpl. (for MZ plough)
4	KK 35 11 40	Screw, L (for MZ plough)		KK 36 11 30	Turnbuckle cpl. (for ME plough)
	KK 35 11 04	Screw, L (for ME plough)		KK 35 19 03	Hydraulic furrow width adjustment cpl.
5	KK 35 11 44	Tube (for MZ plough)			
	KK 35 11 00	Tube (for ME plough)			
6	KK 35 11 39	Screw, R (for MZ plough)			
	KK 35 11 02	Screw, R (for ME plough)			
7	KK 01 03 15	Bolt w/head D25.3 x 60 mm			
8	KK 05 15 45	Front piece			
9	KK 06 41 65	Bracket			
10	KK 01 03 28	Bolt w/head D25.3 x 78 mm			
11	KK 06 43 28	Cross shaft, L = 825 mm Kat. I			
	KK 06 41 60	Cross shaft, L = 825 mm Kat. II			
	KK 06 41 89	Cross shaft, L = 935 mm Kat. II			
	KK 06 41 79	Cross shaft, L = 965 mm Kat. III			
12	KK 01 20 60	Threaded coupling 3/8" - 1/2" (Before 01.07.97)			
	KK 01 22 61	Threaded coupling 3/8" - 3/8" (From 01.07.97)			
13	KK 01 15 65	Gasket ring 1/2" (Before 01.07.97)			
	KK 01 15 85	Gasket ring 3/8" (From 01.07.97)			
14	KK 01 27 73	Hose, L = 1300 mm			
15	KK 03 28 04	Hex screw M20 x 120 mm w/nut			
16	KK 05 15 68	Bracket			
17	KK 03 27 75	Hex screw M16 x 75 mm w/nut			
18	KK 03 27 06	Hex screw M16 x 130 mm w/nut			
19	KK 35 23 00	Cylinder for furrow width adjustment D50 x 200 mm cpl. (see plate no. 225) (Before 01.08.96)			
	KK 35 37 01	Cylinder for furrow width adjustment D50 x 200 mm cpl. (see plate no. 525) (From 01.08.96) (Before 01.04.01)			
	KK 35 39 01	Cylinder for furrow width adjustment D50 x 200 mm cpl. (see plate no. 1192) (From 01.04.01)			
20	KK 01 21 14	Quick coupling			
21	KK 01 21 46	Banjo bolt 1/2" w/1.0 mm choke (Before 01.07.97)			
	KK 01 20 81	Banjo bolt 3/8" w/1.0 mm choke (From 01.07.97)			
22	KK 01 15 85	Gasket ring 3/8"			
23	KK 01 20 62	Banjo coupling 3/8" - 3/8"			



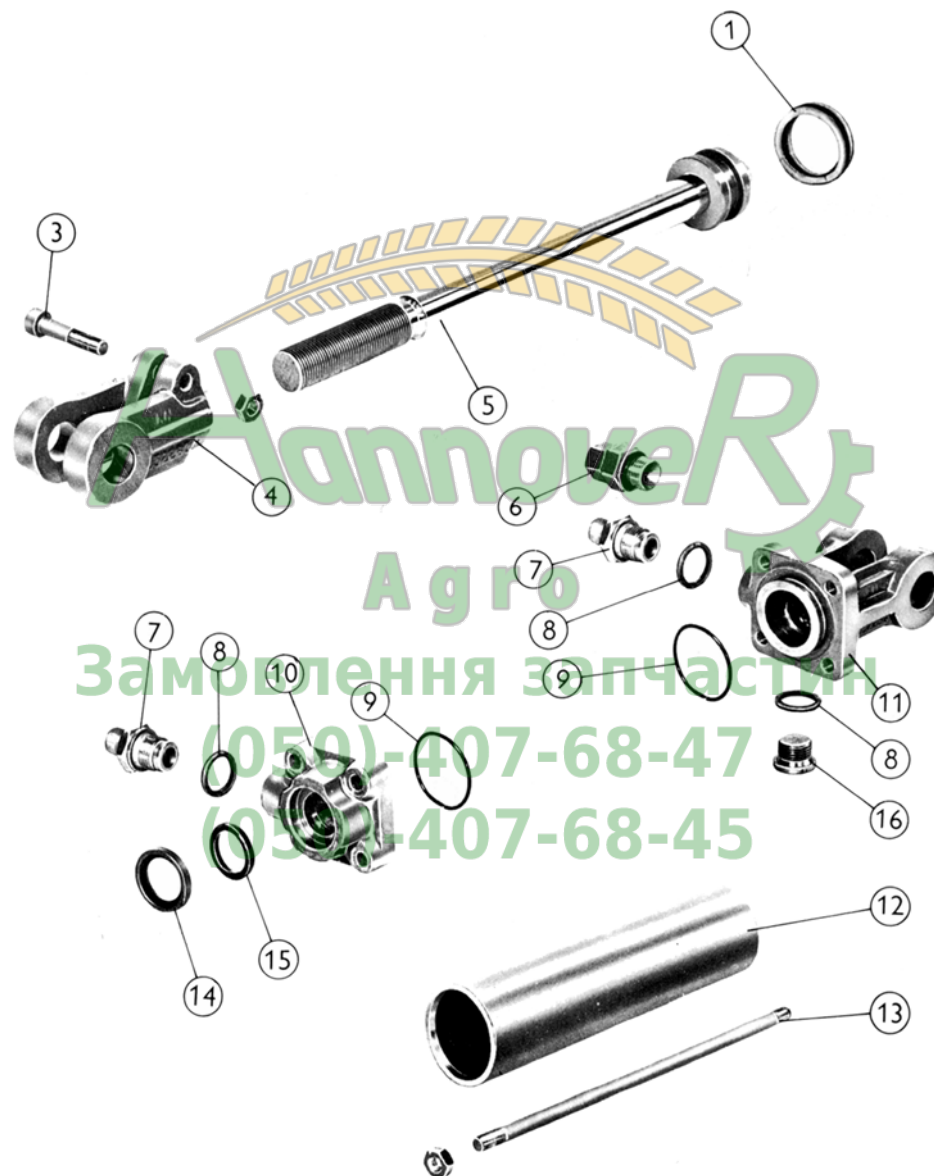

1	KK 01 19 15	Packing
2	KK 35 22 97	Spacers
3	KK 03 25 50	Hex screw M10 x 50 mm w/nut
4	KK 35 22 60	Rod clevis
5	KK 35 22 66	Piston rod w/piston
6	KK 01 15 67	Threaded coupling
7	KK 01 21 02	Restrictor 3/8" - 1.0
8	KK 01 15 65	Gasket ring 1/2"
9	KK 01 18 10	O-ring
10	KK 35 22 58	Rod cap
11	KK 35 22 52	Clevis cap
12	KK 35 22 80	Cylinder tube
13	KK 35 22 90	Tie rod
14	KK 01 19 09	Scraper seal
15	KK 01 19 52	Packing
16	KK 01 15 94	Plug
Not ill.	KK 01 19 45	Seal kit cpl.
	KK 35 23 00	Cylinder for furrow width adjustment D50 x 200 mm cpl.



Замовлення запчастин
(050)-407-68-47
(050)-407-68-45



1	KK 35 37 30	Cylinder tube (for cylinder KK 35 37 01 and KK 35 37 02)
	KK 35 37 31	Cylinder tube (for cylinder KK 35 37 03)
2	KK 03 20 02	Screw M6 x 10 mm
3	KK 35 37 21	Piston
4	KK 01 17 30	Piston packing
5	KK 01 17 29	O-ring
6	KK 35 37 40	Piston rod (for cylinder KK 35 37 01 and KK 35 37 03)
	KK 35 37 41	Piston rod (for cylinder KK 35 37 02)
7	KK 01 17 98	O-ring
8	KK 01 17 99	Support ring
9	KK 01 17 33	Ring (Before 15.03.99)
	KK 35 37 92	Lock spring (From 15.03.99)
10	KK 35 37 20	Packing seal
11	KK 01 17 31	Piston rod packing
12	KK 01 17 32	Scraper
13	KK 03 20 16	Screw M10 x 45 mm
14	KK 35 37 22	Clevis

Not ill.	KK 35 37 42	Stop (for cylinder KK 35 37 02)
	KK 35 37 25	Packings cpl.
	KK 35 37 01	Hydraulic cylinder for furrow with adjustment D50 x 200 mm cpl.
	KK 35 37 02	Hydraulic cylinder D50 x 200 mm w/stop cpl.
	KK 35 37 03	Hydraulic cylinder D50 x 200 mm w/90° twisted end cap cpl.



Замовлення запчастин
(050)-407-68-47
(050)-407-68-45



1	KK 35 39 34	Cylinder tube (for cylinder KK 35 39 01 and KK 35 39 02)
	KK 35 39 35	Cylinder tube (for cylinder KK 35 39 03)
2	KK 01 03 90	Piston packing
3	KK 35 39 36	Piston rod (for cylinder KK 35 39 01 and KK 35 39 03)
	KK 35 39 37	Piston rod (for cylinder KK 35 39 02)
4	KK 01 65 17	O-ring D42 x 4 mm
5	KK 03 33 06	Hex screw M6 x 8 mm
6	KK 35 39 26	Packing seal
7	KK 01 30 91	Piston rod packing
8	KK 01 30 89	Scraper
9	KK 03 21 10	Set screw M8 x 8 mm
10	KK 35 39 46	Pin for stop (for cylinder KK 35 39 02)
11	KK 35 39 44	Stop (for cylinder KK 35 39 02)
12	UH 82 56 40	Cylinder screw M12 x 40 mm (for cylinder KK 35 39 02)
13	KK 35 39 22	Clevis
Not ill.	KK 01 30 86	Packings cpl.
	KK 35 39 01	Hydraulic cylinder D50 x 200 mm cpl.
	KK 35 39 02	Hydraulic cylinder D50 x 200 mm w/stop cpl.
	KK 35 39 03	Hydraulic cylinder D50 x 200 mm w/90° twisted end cap cpl.




Замовлення запчастин
(050)-407-68-47
(050)-407-68-45



1	KK 02 99 20	Grease nipple
2	KK 06 41 18	Spindle w/bearing
3	KK 06 41 17	Threaded piece
4	KK 06 40 21	Holder for spindle
5	KK 03 26 45	Hex screw M12 x 45 mm
6	KK 03 27 40	Hex screw M16 x 40 mm
7	KK 06 40 26	Fixing bracket
8	KK 01 10 05	Roll pin D10 x 70 mm
9	KK 06 41 30	Arm for depth wheel w/axle
10	KK 03 36 30	Hex screw M12 x 30 mm
11	KK 07 40 53	Axle
12	KK 07 40 52	Wheel, steel
13	KK 09 42 06	Tyre 6.00 x 9
	KK 01 13 78	Rim
	KK 09 42 07	Inner tube
14	KK 01 08 06	Packing
15	KK 01 12 00	Bearing
16	KK 01 00 96	Spacing tube
17	KK 01 12 31	Bearing
18	KK 01 29 22	Washer
19	KK 01 29 40	Washer
20	KK 01 60 22	Nut M30
21	KK 07 17 40	Holder for scraper
22	KK 07 17 29	Scraper for 6.00 x 9, rubber wheel
	KK 07 40 54	Scraper for 500 x 165, steel wheel
23	KK 01 29 19	Washer
24	KK 01 60 10	Lock nut M16
25	KK 01 11 67	End cap
26	KK 01 14 00	Cover kit 6.00 x 9 cpl.
27	KK 01 58 17	Nut M12
28	KK 01 58 25	Nut M16
Not ill.	KK 07 04 59	Wheel w/axle 500 x 165 cpl.
	KK 07 04 94	Wheel w/axle and tyre 6.00 x 9 cpl.
	KK 06 04 49	Depth wheel, steel 500 x 165 cpl.
	KK 06 04 68	Depth wheel, rubber 6.00 x 9 cpl.



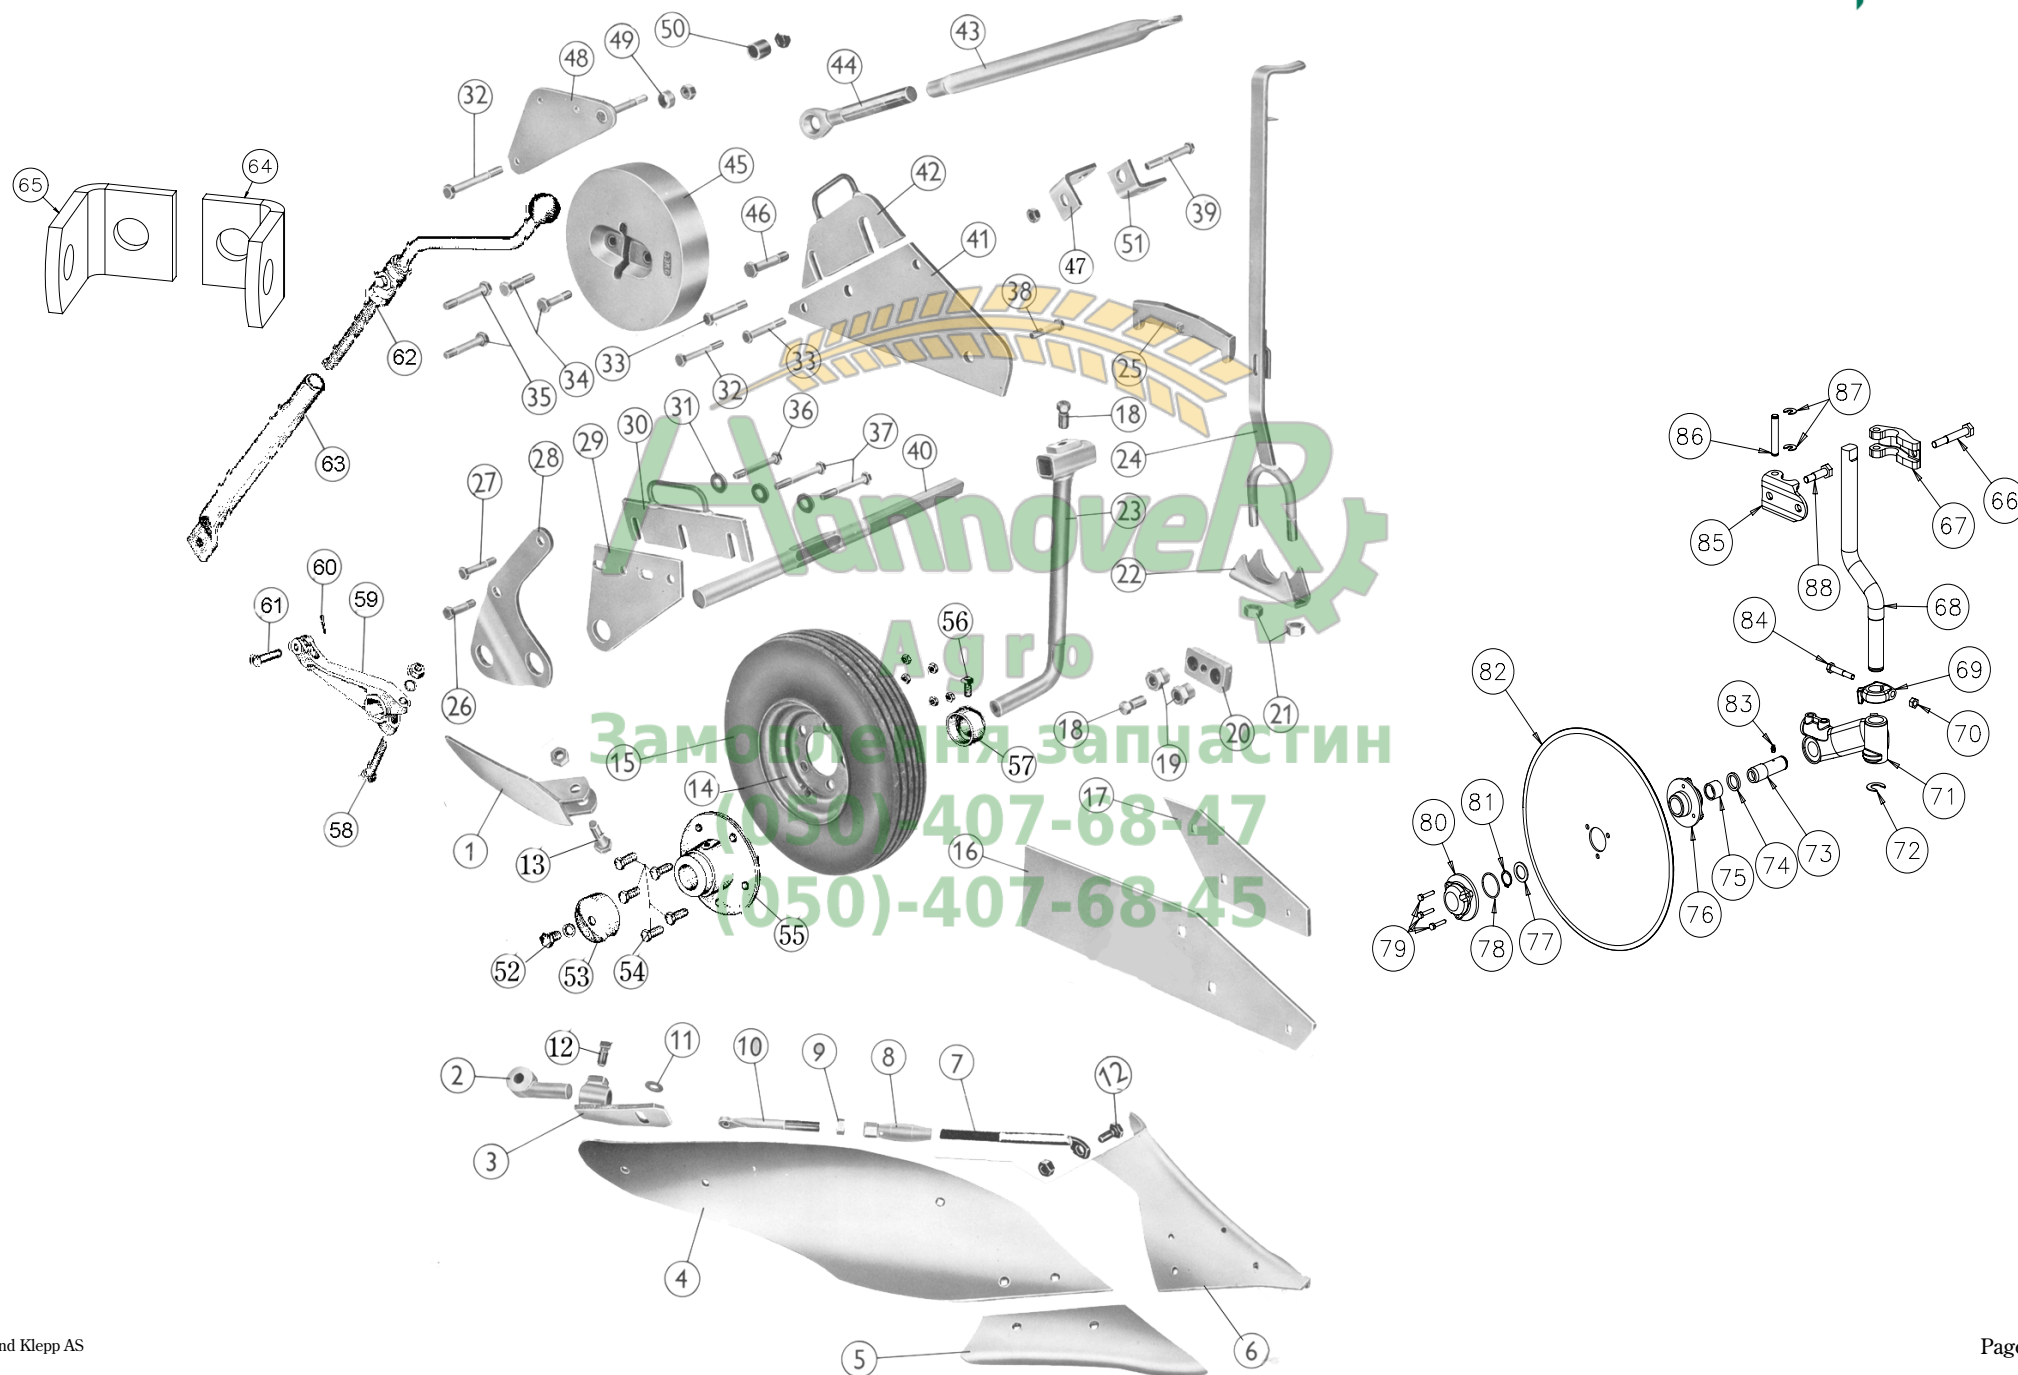

Pos. 1-13,16 & 17 Body (Before 15.06.98)								
1	KK 05 33 90	Mouldboard extension	37	KK 03 27 05	Hex screw M16 x 125 mm w/nut	74	KK 01 07 72	Seal ring
2	KK 05 33 91	Link	38	KK 02 24 95	Hex screw 3/4" x 95 mm w/nut	75	KK 01 12 03	Needle bearing
3	KK 05 33 92	Bracket extension	39	KK 03 08 02	Hex screw M20 x 110 mm w/nut	76	KK 06 61 01	Bearing housing
4	KK 05 32 70	Mouldboard	40	KK 05 41 32	Cross shaft	77	KK 01 12 92	Washer D30 x 45 x 2.5 mm
5	KK 05 30 79	Share	41	KK 05 43 33	Extension piece	78	KK 01 07 75	O-ring D54.5 x 3 mm
6	KK 05 34 46	Saddle	42	KK 05 43 31	Extension piece w/handle	79	KK 03 13 40	Hex screw M8 x 40 mm
7	KK 07 38 18	Stay, front	43	KK 06 20 31	Stay	80	KK 05 61 56	Cap
8	KK 07 38 17	Stay	44	KK 06 20 19	Screw	81	KK 01 12 66	Circlip
9	KK 01 58 35	Nut M20	45	KK 35 00 01	Weight	82	KK 05 61 12	Disc 18"
10	KK 07 38 15	Stay, rear	46	KK 01 51 93	Hex screw 1" x 108 mm	83	KK 02 99 20	Grease nipple
11	KK 01 29 19	Washer	47	KK 05 43 41	Bracket, short	84	KK 03 26 70	Hex screw M12 x 70 mm w/ nut
12	KK 03 42 28	Screw M16 x 32 mm	48	KK 35 00 13	Bracket for weight	85	KK 07 61 20	Holder
13	KK 03 27 65	Hex screw M16 x 65 mm w/nut	49	KK 01 00 16	Spacing tube, L = for triggering plough	86	KK 01 04 85	Axle
14	KK 05 42 03	Rim	50	KK 01 00 32	Spacing tube, L = 32 mm for plough with trigger	87	KK 01 12 72	Circlip
15	KK 01 13 36	Tyre	51	KK 05 43 40	Bracket, long	Not ill.	KK 05 03 73	Mouldboard extension, R cpl. (body no. 25)
	KK 05 42 20	Hub	52	KK 02 34 19	Hex screw 12" x 19 mm UNF		KK 05 03 72	Body no. 13
16	KK 05 36 50	Landside, long	53	KK 05 42 30	Wheel hub, outer		KK 07 38 19	Stay cpl. (pos. no. 7, 8 and 10)
17	KK 05 36 51	Landside, short	54	KK 03 36 30	Hex screw M12 x 30 mm w/nut		KK 05 04 56	Rubber wheel w/hub cpl.
18	KK 03 44 46	Screw M24 x 53 mm	55	KK 05 42 20	Hub		KK 05 44 17	Adjustable handle cpl.
19	KK 05 60 42	Special nut	56	KK 03 41 22	Screw M12 x 22 mm		KK 06 01 56	Stay cpl. (pos. no. 43 - 44)
20	KK 05 60 41	Bracket	57	KK 05 42 31	Wheel hub, inner		KK 36 02 01	Weight cpl.
21	KK 01 58 35	Nut M20	58	KK 03 27 00	Hex screw M16 x 100 w/ nut		KK 05 43 36	Bushing for crank, short
22	KK 06 41 67	Bracket for handle	59	KK 05 43 53	Adjustable arm		KK 05 43 35	Crank
23	KK 05 41 38	Axle	60	KK 02 97 27	Pin 5 x 30		KK 05 12 03	Beam, H = 785 mm
24	KK 05 44 17	Adjustable handle	61	KK 02 95 40	Bolt w/ hole 13 x 50		KK 05 12 05	Beam w/2 extra wholes
25	KK 05 44 28	Congestion piece	62	KK 05 43 35	Spindle w/ bearing		KK 05 04 75	Crank, short cpl.
26	KK 02 24 82	Hex screw 3/4" x 82 mm w/nut	63	KK 05 43 36	Tube w/ thread M24		KK 05 04 76	Crank, long cpl.
27	KK 03 27 85	Hex screw M16 x 85 mm w/nut	64	KK 05 43 41	Bracket for handle, short			
28	KK 05 43 43	Plate for depth wheel, R side	65	KK 05 43 40	Bracket for handle, long			
29	KK 05 43 42	Plate for depth wheel, L side	66	KK 03 27 02	Hex screw M16 x 110 mm w/ nut			
30	KK 05 43 47	Shim, front	67	KK 07 61 21	Bracket			
31	KK 01 29 23	Washer	68	KK 05 60 03	Stem			
32	KK 03 27 10	Hex screw M16 x 155 mm w/nut	69	KK 05 61 90	Stop collar			
33	KK 02 24 00	Hex screw 3/4" x 100 mm w/nut	70	KK 01 58 17	Nut M12			
34	KK 03 27 60	Hex screw M16 x 60 mm w/nut	71	KK 05 61 01	Disc coulter arm 18"			
35	KK 03 27 90	Hex screw M16 x 90 mm w/nut	72	KK 01 07 60	Circlip			
36	KK 03 06 03	Hex screw M16 x 115 mm w/nut	73	KK 06 61 10	Axle D34/D30			



1	KK 70 95 92	Kverneland MZ-85
2	KK 70 98 41	Safty sign, danger, tractor/implement
3	KK 70 97 37	Arrow
4	KK 70 94 79	Stop
5	KK 70 98 43	Safty sign, parking support
6	KK 70 98 44	Safty sign, read instruction manual
Not ill.	KK 70 98 47	Patent label
	KK 70 91 21	Trip Mechanism



Замовлення запчастин
(050)-407-68-47
(050)-407-68-45

Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page
KK 01 00 16	47	KK 01 08 06	45	KK 01 17 98	41	KK 01 29 29	11	KK 01 33 46	7	KK 01 58 34	9	KK 03 20 16	41	KK 03 27 40	45
KK 01 00 32	47	KK 01 10 05	45	KK 01 17 99	41	KK 01 29 29	13	KK 01 33 46	7	KK 01 58 35	27	KK 03 21 10	43	KK 03 27 40	7
KK 01 00 35	33	KK 01 10 16	33	KK 01 18 10	39	KK 01 29 29	19	KK 01 33 46	9	KK 01 58 35	47	KK 03 24 82	37	KK 03 27 50	11
KK 01 00 37	35	KK 01 11 67	45	KK 01 18 66	25	KK 01 29 29	7	KK 01 33 61	11	KK 01 58 35	47	KK 03 25 40	29	KK 03 27 50	13
KK 01 00 96	45	KK 01 12 00	45	KK 01 18 66	29	KK 01 29 40	45	KK 01 33 61	13	KK 01 58 41	35	KK 03 25 50	39	KK 03 27 50	17
KK 01 01 55	11	KK 01 12 03	47	KK 01 19 09	39	KK 01 30 01	15	KK 01 33 61	19	KK 01 60 10	45	KK 03 26 45	45	KK 03 27 50	19
KK 01 01 55	13	KK 01 12 31	45	KK 01 19 15	39	KK 01 30 86	43	KK 01 33 61	7	KK 01 60 13	17	KK 03 26 70	23	KK 03 27 50	31
KK 01 01 55	19	KK 01 12 59	25	KK 01 19 45	39	KK 01 30 89	43	KK 01 33 85	11	KK 01 60 15	11	KK 03 26 70	27	KK 03 27 50	35
KK 01 01 55	7	KK 01 12 59	29	KK 01 19 52	39	KK 01 30 91	43	KK 01 33 85	13	KK 01 60 15	13	KK 03 26 70	29	KK 03 27 50	7
KK 01 01 56	11	KK 01 12 66	23	KK 01 20 60	37	KK 01 32 28	11	KK 01 33 85	19	KK 01 60 15	17	KK 03 26 70	47	KK 03 27 50	9
KK 01 01 56	13	KK 01 12 66	25	KK 01 20 62	37	KK 01 32 28	13	KK 01 33 85	7	KK 01 60 15	19	KK 03 27 00	35	KK 03 27 55	21
KK 01 01 56	19	KK 01 12 66	27	KK 01 20 81	37	KK 01 32 28	13	KK 01 51 93	47	KK 01 60 15	7	KK 03 27 00	47	KK 03 27 60	35
KK 01 01 56	7	KK 01 12 66	29	KK 01 21 02	39	KK 01 32 28	15	KK 01 58 13	17	KK 01 60 22	45	KK 03 27 02	23	KK 03 27 60	47
KK 01 03 15	37	KK 01 12 66	47	KK 01 21 14	37	KK 01 32 28	17	KK 01 58 13	17	KK 01 65 17	43	KK 03 27 02	25	KK 03 27 65	11
KK 01 03 28	37	KK 01 12 72	23	KK 01 21 46	37	KK 01 32 28	19	KK 01 58 16	31	KK 02 20 67	33	KK 03 27 02	27	KK 03 27 65	13
KK 01 03 90	43	KK 01 12 72	25	KK 01 22 61	37	KK 01 32 28	21	KK 01 58 17	17	KK 02 24 00	47	KK 03 27 02	33	KK 03 27 65	19
KK 01 04 85	23	KK 01 12 72	27	KK 01 27 73	37	KK 01 32 28	7	KK 01 58 17	17	KK 02 24 71	35	KK 03 27 02	47	KK 03 27 65	23
KK 01 04 85	25	KK 01 12 72	47	KK 01 29 06	21	KK 01 32 28	9	KK 01 58 17	17	KK 02 24 82	35	KK 03 27 04	31	KK 03 27 65	25
KK 01 04 85	27	KK 01 12 92	23	KK 01 29 06	31	KK 01 32 34	13	KK 01 58 17	17	KK 02 24 82	47	KK 03 27 05	35	KK 03 27 65	27
KK 01 04 85	47	KK 01 12 92	27	KK 01 29 15	35	KK 01 32 34	15	KK 01 58 17	17	KK 02 24 89	35	KK 03 27 05	35	KK 03 27 65	37
KK 01 05 32	25	KK 01 12 92	47	KK 01 29 19	13	KK 01 32 34	5	KK 01 58 17	19	KK 02 24 95	47	KK 03 27 05	47	KK 03 27 65	47
KK 01 05 32	29	KK 01 13 36	47	KK 01 29 19	15	KK 01 32 34	9	KK 01 58 17	45	KK 02 34 19	47	KK 03 27 06	37	KK 03 27 65	7
KK 01 05 72	25	KK 01 13 78	45	KK 01 29 19	21	KK 01 33 32	13	KK 01 58 17	47	KK 02 95 40	47	KK 03 27 08	35	KK 03 27 75	11
KK 01 05 72	29	KK 01 14 00	45	KK 01 29 19	45	KK 01 33 32	15	KK 01 58 25	17	KK 02 97 10	35	KK 03 27 08	35	KK 03 27 75	13
KK 01 06 06	35	KK 01 15 65	37	KK 01 29 19	47	KK 01 33 32	15	KK 01 58 25	17	KK 02 97 27	47	KK 03 27 10	47	KK 03 27 75	19
KK 01 06 50	35	KK 01 15 65	39	KK 01 29 19	5	KK 01 33 32	17	KK 01 58 25	17	KK 02 99 19	33	KK 03 27 25	5	KK 03 27 75	33
KK 01 07 05	33	KK 01 15 67	39	KK 01 29 19	9	KK 01 33 32	21	KK 01 58 25	19	KK 02 99 20	23	KK 03 27 25	9	KK 03 27 75	35
KK 01 07 60	23	KK 01 15 85	37	KK 01 29 22	13	KK 01 33 32	5	KK 01 58 25	19	KK 02 99 20	25	KK 03 27 30	13	KK 03 27 75	37
KK 01 07 60	27	KK 01 15 85	37	KK 01 29 22	15	KK 01 33 32	9	KK 01 58 25	19	KK 02 99 20	27	KK 03 27 30	15	KK 03 27 75	7
KK 01 07 60	29	KK 01 15 94	39	KK 01 29 22	17	KK 01 33 32	9	KK 01 58 25	29	KK 02 99 20	45	KK 03 27 35	13	KK 03 27 80	35
KK 01 07 60	47	KK 01 17 29	41	KK 01 29 22	45	KK 01 33 33	13	KK 01 58 25	45	KK 02 99 20	47	KK 03 27 35	5	KK 03 27 85	47
KK 01 07 72	23	KK 01 17 30	41	KK 01 29 22	5	KK 01 33 33	7	KK 01 58 30	15	KK 03 06 03	47	KK 03 27 35	9	KK 03 27 90	35
KK 01 07 72	27	KK 01 17 31	41	KK 01 29 22	9	KK 01 33 33	9	KK 01 58 30	21	KK 03 08 02	47	KK 03 27 40	11	KK 03 27 90	35
KK 01 07 72	47	KK 01 17 32	41	KK 01 29 23	47	KK 01 33 46	11	KK 01 58 30	29	KK 03 13 40	23	KK 03 27 40	13	KK 03 27 90	47
KK 01 07 75	23	KK 01 17 33	41	KK 01 29 26	35	KK 01 33 46	13	KK 01 58 32	5	KK 03 13 40	27	KK 03 27 40	15	KK 03 27 95	21
KK 01 07 75	27	KK 01 17 50	25	KK 01 29 27	5	KK 01 33 46	15	KK 01 58 34	13	KK 03 13 40	47	KK 03 27 40	19	KK 03 28 04	37
KK 01 07 75	47	KK 01 17 50	29	KK 01 29 27	9	KK 01 33 46	19	KK 01 58 34	15	KK 03 20 02	41	KK 03 27 40	35	KK 03 28 55	35

Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page
KK 03 28 75	35	KK 03 32 56	13	KK 05 12 05	47	KK 05 33 40	21	KK 05 44 28	47	KK 05 70 42	33	KK 06 30 90	21	KK 06 43 26	35
KK 03 28 95	35	KK 03 32 56	17	KK 05 12 28	35	KK 05 33 87	13	KK 05 44 70	35	KK 05 70 55	33	KK 06 30 90	5	KK 06 43 27	35
KK 03 30 04	13	KK 03 32 56	5	KK 05 12 64	35	KK 05 33 87	5	KK 05 60 02	23	KK 05 70 56	33	KK 06 30 90	7	KK 06 43 28	35
KK 03 30 06	17	KK 03 32 56	9	KK 05 12 65	35	KK 05 33 87	9	KK 05 60 02	29	KK 05 70 62	33	KK 06 30 90	9	KK 06 43 28	37
KK 03 30 06	21	KK 03 32 75	35	KK 05 12 66	35	KK 05 33 90	21	KK 05 60 03	23	KK 05 70 92	33	KK 06 30 91	15	KK 06 43 36	35
KK 03 30 06	31	KK 03 32 86	13	KK 05 12 67	35	KK 05 33 90	47	KK 05 60 03	27	KK 05 71 01	33	KK 06 30 91	17	KK 06 61 01	47
KK 03 30 16	17	KK 03 32 86	15	KK 05 14 44	35	KK 05 33 91	21	KK 05 60 03	29	KK 05 82 20	35	KK 06 30 91	5	KK 06 61 02	23
KK 03 31 00	13	KK 03 32 86	17	KK 05 14 60	35	KK 05 33 91	47	KK 05 60 03	47	KK 06 01 55	35	KK 06 30 92	15	KK 06 61 02	27
KK 03 31 00	15	KK 03 32 86	5	KK 05 14 61	35	KK 05 33 92	21	KK 05 60 41	47	KK 06 01 56	35	KK 06 30 92	17	KK 06 61 08	23
KK 03 31 00	5	KK 03 32 86	9	KK 05 14 65	35	KK 05 33 92	47	KK 05 60 42	47	KK 06 01 56	47	KK 06 30 92	5	KK 06 61 08	27
KK 03 31 00	9	KK 03 32 95	13	KK 05 15 38	35	KK 05 34 46	47	KK 05 60 62	21	KK 06 04 49	45	KK 06 33 88	13	KK 06 61 10	47
KK 03 31 07	15	KK 03 32 95	17	KK 05 15 39	35	KK 05 36 50	47	KK 05 60 83	21	KK 06 04 68	45	KK 06 33 88	5	KK 06 61 67	27
KK 03 31 07	17	KK 03 32 95	5	KK 05 15 40	35	KK 05 36 51	47	KK 05 61 01	47	KK 06 04 81	35	KK 06 33 88	9	KK 06 61 67	29
KK 03 31 07	21	KK 03 32 95	9	KK 05 15 45	37	KK 05 41 32	47	KK 05 61 12	23	KK 06 06 10	23	KK 06 36 07	15	KK 06 68 10	21
KK 03 31 07	5	KK 03 33 06	43	KK 05 15 63	37	KK 05 41 38	47	KK 05 61 12	27	KK 06 06 17	23	KK 06 36 07	7	KK 06 68 30	21
KK 03 31 07	9	KK 03 33 32	5	KK 05 15 68	37	KK 05 42 03	47	KK 05 61 12	47	KK 06 06 24	23	KK 06 36 07	9	KK 06 68 31	21
KK 03 31 07	9	KK 03 36 30	45	KK 05 16 22	35	KK 05 42 20	47	KK 05 61 14	23	KK 06 06 24	27	KK 06 38 01	5	KK 06 68 32	21
KK 03 31 08	15	KK 03 36 30	47	KK 05 16 26	35	KK 05 42 20	47	KK 05 61 14	27	KK 06 06 26	27	KK 06 38 01	5	KK 06 68 61	21
KK 03 31 11	17	KK 03 41 22	47	KK 05 16 30	35	KK 05 42 30	47	KK 05 61 15	23	KK 06 06 27	27	KK 06 40 21	45	KK 06 68 68	31
KK 03 31 16	17	KK 03 42 28	21	KK 05 16 34	35	KK 05 42 31	47	KK 05 61 15	27	KK 06 20 02	35	KK 06 40 26	45	KK 06 68 69	31
KK 03 31 17	17	KK 03 42 28	21	KK 05 16 42	35	KK 05 43 31	47	KK 05 61 16	23	KK 06 20 19	35	KK 06 41 17	45	KK 06 68 80	31
KK 03 31 18	13	KK 03 42 28	47	KK 05 16 44	35	KK 05 43 33	47	KK 05 61 16	27	KK 06 20 19	47	KK 06 41 18	45	KK 06 68 81	31
KK 03 31 19	13	KK 03 44 46	47	KK 05 22 81	35	KK 05 43 35	47	KK 05 61 56	23	KK 06 20 20	35	KK 06 41 30	45	KK 06 70 82	35
KK 03 31 73	15	KK 03 51 14	25	KK 05 22 93	35	KK 05 43 35	47	KK 05 61 56	27	KK 06 20 25	13	KK 06 41 60	35	KK 06 70 85	35
KK 03 31 74	13	KK 05 02 17	35	KK 05 30 79	47	KK 05 43 36	47	KK 05 61 56	47	KK 06 20 25	35	KK 06 41 60	37	KK 07 00 41	27
KK 03 31 75	15	KK 05 03 72	47	KK 05 30 90	11	KK 05 43 36	47	KK 05 61 90	23	KK 06 20 25	9	KK 06 41 65	37	KK 07 00 43	27
KK 03 31 75	15	KK 05 03 73	21	KK 05 30 90	13	KK 05 43 40	47	KK 05 61 90	27	KK 06 20 30	35	KK 06 41 67	35	KK 07 02 92	15
KK 03 31 75	17	KK 05 03 73	47	KK 05 30 90	13	KK 05 43 40	47	KK 05 61 90	29	KK 06 20 31	35	KK 06 41 67	47	KK 07 02 93	15
KK 03 31 75	5	KK 05 03 74	21	KK 05 30 90	15	KK 05 43 41	47	KK 05 61 90	47	KK 06 20 31	47	KK 06 41 74	35	KK 07 02 94	15
KK 03 31 75	9	KK 05 04 56	47	KK 05 30 90	17	KK 05 43 41	47	KK 05 68 56	21	KK 06 20 40	35	KK 06 41 79	37	KK 07 03 88	9
KK 03 31 81	15	KK 05 04 75	47	KK 05 30 90	19	KK 05 43 42	47	KK 05 68 85	31	KK 06 25 00	35	KK 06 41 80	35	KK 07 03 89	9
KK 03 31 85	15	KK 05 04 76	47	KK 05 30 90	21	KK 05 43 43	47	KK 05 68 93	31	KK 06 30 90	11	KK 06 41 86	35	KK 07 03 90	5
KK 03 32 51	13	KK 05 07 00	33	KK 05 30 90	5	KK 05 43 47	47	KK 05 70 03	33	KK 06 30 90	13	KK 06 41 89	37	KK 07 03 91	5
KK 03 32 51	15	KK 05 12 03	35	KK 05 30 90	7	KK 05 43 53	47	KK 05 70 04	33	KK 06 30 90	13	KK 06 43 05	35	KK 07 03 92	9
KK 03 32 51	17	KK 05 12 03	47	KK 05 30 90	9	KK 05 44 17	35	KK 05 70 16	33	KK 06 30 90	15	KK 06 43 17	35	KK 07 03 93	9
KK 03 32 51	5	KK 05 12 04	35	KK 05 32 70	47	KK 05 44 17	47	KK 05 70 17	33	KK 06 30 90	17	KK 06 43 24	35	KK 07 03 94	5
KK 03 32 51	9	KK 05 12 05	35	KK 05 33 30	21	KK 05 44 17	47	KK 05 70 30	33	KK 06 30 90	19	KK 06 43 25	35	KK 07 03 95	5

Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page
KK 07 03 96	9	KK 07 30 07	21	KK 07 30 56	17	KK 07 30 89	17	KK 07 32 56	17	KK 07 33 01	9	KK 07 34 70	15	KK 07 36 35	13
KK 07 03 97	9	KK 07 30 07	5	KK 07 30 56	9	KK 07 30 89	5	KK 07 32 56	5	KK 07 33 03	15	KK 07 34 71	13	KK 07 36 35	19
KK 07 03 98	9	KK 07 30 08	5	KK 07 30 57	13	KK 07 30 89	9	KK 07 32 57	17	KK 07 33 04	15	KK 07 34 71	15	KK 07 36 35	7
KK 07 03 99	9	KK 07 30 09	5	KK 07 30 57	15	KK 07 30 91	13	KK 07 32 57	5	KK 07 33 10	5	KK 07 36 07	15	KK 07 38 00	13
KK 07 04 59	45	KK 07 30 16	15	KK 07 30 57	17	KK 07 30 91	15	KK 07 32 60	5	KK 07 33 10	9	KK 07 36 07	7	KK 07 38 00	5
KK 07 04 94	45	KK 07 30 30	17	KK 07 30 57	9	KK 07 30 91	17	KK 07 32 61	5	KK 07 33 11	5	KK 07 36 07	9	KK 07 38 00	9
KK 07 06 26	23	KK 07 30 30	21	KK 07 30 62	13	KK 07 30 91	5	KK 07 32 63	5	KK 07 33 11	9	KK 07 36 08	13	KK 07 38 01	13
KK 07 06 26	27	KK 07 30 30	5	KK 07 30 62	15	KK 07 30 91	9	KK 07 32 64	5	KK 07 33 28	13	KK 07 36 08	15	KK 07 38 01	5
KK 07 06 40	5	KK 07 30 31	17	KK 07 30 62	17	KK 07 30 92	13	KK 07 32 66	5	KK 07 33 29	13	KK 07 36 08	17	KK 07 38 01	9
KK 07 06 40	9	KK 07 30 31	21	KK 07 30 62	9	KK 07 30 92	15	KK 07 32 66	9	KK 07 33 32	15	KK 07 36 08	21	KK 07 38 03	15
KK 07 06 41	5	KK 07 30 31	5	KK 07 30 63	13	KK 07 30 92	17	KK 07 32 67	5	KK 07 33 33	15	KK 07 36 08	5	KK 07 38 03	5
KK 07 06 41	9	KK 07 30 40	21	KK 07 30 63	15	KK 07 30 92	5	KK 07 32 67	9	KK 07 33 38	13	KK 07 36 08	9	KK 07 38 03	5
KK 07 06 42	5	KK 07 30 40	5	KK 07 30 63	17	KK 07 30 92	9	KK 07 32 72	13	KK 07 33 39	13	KK 07 36 09	13	KK 07 38 04	9
KK 07 06 42	9	KK 07 30 41	21	KK 07 30 63	9	KK 07 31 02	21	KK 07 32 72	15	KK 07 33 50	13	KK 07 36 09	15	KK 07 38 04	9
KK 07 15 00	15	KK 07 30 41	5	KK 07 30 64	13	KK 07 31 03	21	KK 07 32 73	13	KK 07 33 51	13	KK 07 36 09	17	KK 07 38 05	15
KK 07 17 29	45	KK 07 30 42	17	KK 07 30 64	15	KK 07 32 24	9	KK 07 32 73	15	KK 07 33 52	13	KK 07 36 09	21	KK 07 38 05	9
KK 07 17 40	45	KK 07 30 42	21	KK 07 30 64	17	KK 07 32 25	9	KK 07 32 75	13	KK 07 33 53	13	KK 07 36 09	5	KK 07 38 07	5
KK 07 30 00	21	KK 07 30 42	5	KK 07 30 64	9	KK 07 32 27	9	KK 07 32 75	15	KK 07 33 54	13	KK 07 36 09	9	KK 07 38 08	5
KK 07 30 00	5	KK 07 30 43	17	KK 07 30 65	13	KK 07 32 28	9	KK 07 32 76	13	KK 07 34 06	5	KK 07 36 14	13	KK 07 38 10	15
KK 07 30 01	21	KK 07 30 43	21	KK 07 30 65	15	KK 07 32 30	17	KK 07 32 76	15	KK 07 34 07	5	KK 07 36 14	15	KK 07 38 11	15
KK 07 30 01	5	KK 07 30 43	5	KK 07 30 65	17	KK 07 32 30	9	KK 07 32 78	13	KK 07 34 11	21	KK 07 36 14	17	KK 07 38 12	15
KK 07 30 02	17	KK 07 30 44	17	KK 07 30 65	9	KK 07 32 31	17	KK 07 32 79	13	KK 07 34 11	5	KK 07 36 14	7	KK 07 38 13	15
KK 07 30 02	21	KK 07 30 44	21	KK 07 30 80	13	KK 07 32 31	9	KK 07 32 80	5	KK 07 34 12	21	KK 07 36 14	9	KK 07 38 15	15
KK 07 30 02	5	KK 07 30 44	5	KK 07 30 80	15	KK 07 32 36	9	KK 07 32 81	5	KK 07 34 12	5	KK 07 36 15	13	KK 07 38 15	21
KK 07 30 03	17	KK 07 30 45	17	KK 07 30 80	17	KK 07 32 37	9	KK 07 32 86	5	KK 07 34 14	5	KK 07 36 15	15	KK 07 38 15	47
KK 07 30 03	21	KK 07 30 45	21	KK 07 30 80	9	KK 07 32 39	9	KK 07 32 87	5	KK 07 34 15	5	KK 07 36 15	17	KK 07 38 16	15
KK 07 30 03	5	KK 07 30 45	5	KK 07 30 81	13	KK 07 32 40	9	KK 07 32 90	5	KK 07 34 17	9	KK 07 36 15	5	KK 07 38 17	15
KK 07 30 04	17	KK 07 30 54	13	KK 07 30 81	15	KK 07 32 41	9	KK 07 32 90	9	KK 07 34 18	9	KK 07 36 15	9	KK 07 38 17	21
KK 07 30 04	21	KK 07 30 54	15	KK 07 30 81	17	KK 07 32 42	9	KK 07 32 91	5	KK 07 34 35	9	KK 07 36 16	13	KK 07 38 17	47
KK 07 30 04	5	KK 07 30 54	17	KK 07 30 81	9	KK 07 32 45	15	KK 07 32 91	9	KK 07 34 36	9	KK 07 36 16	17	KK 07 38 18	21
KK 07 30 05	17	KK 07 30 54	9	KK 07 30 88	13	KK 07 32 46	15	KK 07 33 00	15	KK 07 34 40	9	KK 07 36 16	5	KK 07 38 18	47
KK 07 30 05	21	KK 07 30 55	13	KK 07 30 88	15	KK 07 32 50	21	KK 07 33 00	17	KK 07 34 41	9	KK 07 36 16	9	KK 07 38 19	21
KK 07 30 05	5	KK 07 30 55	15	KK 07 30 88	17	KK 07 32 50	5	KK 07 33 00	5	KK 07 34 64	13	KK 07 36 34	11	KK 07 38 19	47
KK 07 30 06	17	KK 07 30 55	17	KK 07 30 88	5	KK 07 32 51	21	KK 07 33 00	9	KK 07 34 64	15	KK 07 36 34	13	KK 07 38 20	15
KK 07 30 06	21	KK 07 30 55	9	KK 07 30 88	9	KK 07 32 51	5	KK 07 33 01	15	KK 07 34 65	13	KK 07 36 34	19	KK 07 38 21	15
KK 07 30 06	5	KK 07 30 56	13	KK 07 30 89	13	KK 07 32 54	21	KK 07 33 01	17	KK 07 34 65	15	KK 07 36 34	7	KK 07 38 22	15
KK 07 30 07	17	KK 07 30 56	15	KK 07 30 89	15	KK 07 32 55	21	KK 07 33 01	5	KK 07 34 70	13	KK 07 36 35	11	KK 07 38 26	13

Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page
KK 07 38 26	9	KK 07 61 21	23	KK 07 68 04	31	KK 08 32 35	7	KK 08 60 87	25	KK 09 63 20	29	KK 35 37 01	41	KK 35 39 36	43
KK 07 38 26	9	KK 07 61 21	25	KK 07 68 12	31	KK 08 33 00	17	KK 08 60 87	29	KK 09 63 22	27	KK 35 37 02	41	KK 35 39 37	43
KK 07 38 29	13	KK 07 61 21	27	KK 07 68 13	31	KK 08 33 01	17	KK 08 60 88	29	KK 09 63 22	29	KK 35 37 03	41	KK 35 39 44	43
KK 07 38 29	9	KK 07 61 21	47	KK 08 32 10	17	KK 08 34 06	17	KK 08 60 89	25	KK 35 00 01	47	KK 35 37 20	41	KK 35 39 46	43
KK 07 38 30	5	KK 07 61 68	27	KK 08 32 11	17	KK 08 34 07	17	KK 08 60 90	25	KK 35 00 13	47	KK 35 37 21	41	KK 35 61 31	37
KK 07 38 31	5	KK 07 61 68	29	KK 08 32 12	17	KK 08 34 08	17	KK 08 61 00	29	KK 35 11 00	37	KK 35 37 22	41	KK 36 02 01	47
KK 07 38 31	9	KK 07 61 69	27	KK 08 32 13	17	KK 08 34 09	17	KK 08 61 01	25	KK 35 11 02	37	KK 35 37 25	41	KK 70 91 21	49
KK 07 38 34	15	KK 07 61 69	29	KK 08 32 14	17	KK 08 34 15	17	KK 08 61 01	29	KK 35 11 04	37	KK 35 37 30	41	KK 70 94 79	49
KK 07 38 35	15	KK 07 64 00	25	KK 08 32 15	17	KK 08 34 16	17	KK 08 61 02	25	KK 35 11 39	37	KK 35 37 31	41	KK 70 95 92	49
KK 07 38 36	15	KK 07 64 06	25	KK 08 32 16	17	KK 08 34 17	17	KK 09 06 06	27	KK 35 11 40	37	KK 35 37 40	41	KK 70 97 37	49
KK 07 38 42	9	KK 07 64 06	29	KK 08 32 17	17	KK 08 34 18	17	KK 09 42 06	45	KK 35 11 44	37	KK 35 37 41	41	KK 70 98 41	49
KK 07 38 43	21	KK 07 64 07	25	KK 08 32 18	17	KK 08 38 02	17	KK 09 42 07	45	KK 35 22 52	39	KK 35 37 42	41	KK 70 98 43	49
KK 07 38 44	21	KK 07 64 07	29	KK 08 32 20	17	KK 08 38 03	17	KK 09 63 05	27	KK 35 22 58	39	KK 35 37 92	41	KK 70 98 44	49
KK 07 38 45	21	KK 07 64 09	25	KK 08 32 21	17	KK 08 38 04	17	KK 09 63 05	29	KK 35 22 60	39	KK 35 39 01	37	KK 70 98 47	49
KK 07 40 52	45	KK 07 64 09	29	KK 08 32 22	17	KK 08 38 05	17	KK 09 63 10	27	KK 35 22 66	39	KK 35 39 01	43	UH 82 56 40	43
KK 07 40 53	45	KK 07 64 10	25	KK 08 32 23	17	KK 08 38 06	17	KK 09 63 10	29	KK 35 22 80	39	KK 35 39 02	43		
KK 07 40 54	45	KK 07 64 10	29	KK 08 32 24	17	KK 08 38 07	17	KK 09 63 15	27	KK 35 22 90	39	KK 35 39 03	43		
KK 07 61 20	23	KK 07 64 99	25	KK 08 32 28	5	KK 08 38 08	17	KK 09 63 15	29	KK 35 22 97	39	KK 35 39 22	43		
KK 07 61 20	25	KK 07 64 99	29	KK 08 32 29	5	KK 08 38 09	5	KK 09 63 18	27	KK 35 23 00	37	KK 35 39 26	43		
KK 07 61 20	27	KK 07 65 75	25	KK 08 32 35	17	KK 08 38 10	5	KK 09 63 18	29	KK 35 23 00	39	KK 35 39 34	43		
KK 07 61 20	47	KK 07 68 03	31	KK 08 32 35	21	KK 08 60 86	25	KK 09 63 20	27	KK 35 37 01	37	KK 35 39 35	43		

(050)-407-68-47

(050)-407-68-45