

Spare Parts List

Model PB/RB

Semi mounted plough

No 733002

Hannover
Agro

Замовлення запчастин


(050)-407-68-41

(050)-407-68-45



Notes

GB Model	GB Interbody clearance	GB Headstock
D Modell	D Körperlängsabstand	D Drehwerk
F Modèle	F Dégagement sous age	F Type de tête
E Modelo	E Separación entre cuerpos	E Tipo de cabezal

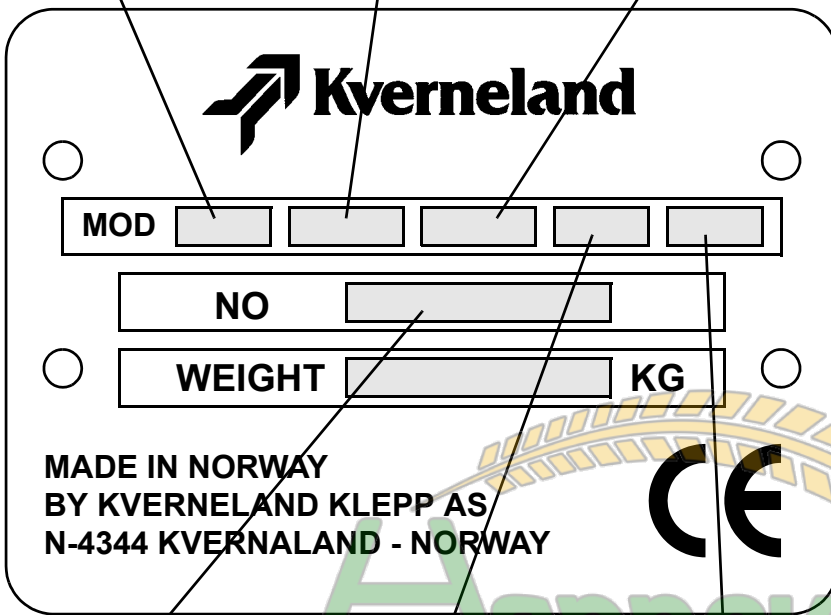

GB Serial number	Type of beam:	GB Type of body
D Seriennummer	Heavy Duty	D Körperform
F Numéro de série	Vibromat	F Type de corps
E Numero de serie	On-land	E Tipo de cuerpo

Замовлення запчастин

(GB) Complete model code and serial number must be stated to avoid mistakes when ordering spare parts and misunderstandings regarding service consultations. The identification plate is located on the headstock.

(F) Le code complet et le numéro de série doivent être indiqués pour éviter des erreurs lors de la commande de pièces de rechange et des malentendus concernant des demandes de Service-Après-Vente. La plaque d'identité est située sur la tête.

(D) Um bei Ersatzteilbestellungen und Serviceleistungen Fehler und Mißverständnisse zu vermeiden ist es erforderlich, daß die genaue Bezeichnung und die Seriennummer angegeben werden. Die Plakette befindet sich am Drehwerk.

(E) Debe figura el código completo del modelo y el número de serie para evitar errores al pedir las piezas de recambio y al hacer consultas técnicas. La placa de identificación esta situada en el cabezal.

Plate	Page
244 Bodies no 6, 7, 8, 9 and 28.....	4
367 Bodies no 12, 15 and 19.....	8
494 Body no 14 (Plastic mouldboard)	12
414 Body no 20 (Finger Body) (Before 01.03.99).....	14
1089 Bodies no. 29 and no. 30.....	16
458 Auto Reset Beam.....	20
1009 Beam (Shear bolt).....	22
491 Vibromat type SL	24
187 Disc coultter for Auto Reset beam (Before 01.01.99).....	26
492 Disc coultter for shear bolt	28
1073 Disc coultter 18" and 20", E-saddle (From 01.01.99).....	30
1044 Disc coultter LD, LO, SL, RB, RS, RT (rear frame) and RX	32
(RS, RX from 15.09.99, RB from 01.05.01).....	32
1000 Springloaded disc coultter.....	34
341 Manure skimmer / Maize skimmer	36
266 Headstock and dragbar PD and PB (Before serial no. PB1515)	38
559 Headstock and dragbar PB/RB (From serial no. PB1515)	40
436 Turn over section 4 - 6 furrow PB (Before serial no. PB1392)	42
561 Turn over section 4 - 8 furrow PB/RB (From serial no. PB1392)	44
467 Special parts to 7 and 8 furrow w/200 x 200 tube (From serial no. PB1155 to serial no. PB2035)	46
435 Front section PB (Before serial no. PB1515)	48
560 Front section PB/RB (From serial no. PB1515)	50
894 Front section PB/RB w/first furrow width adjustment (From serial no. PB2035)	52
437 Rear section	54
269 Hydraulic layout PB (Before serial no. PB1515)	56
563 Hydraulic layout PB/RB (From serial no. PB1515)	58
1266 Relief valve kit	62
562 Dual-control for PB-100/RC.....	64
1026 Hydraulic cylinder D100 x 215 mm w/stop (Before 01.06.00).....	66
1129 Hydraulic cylinder D100 x 200 mm w/stop and bellow (From 01.06.00, w/garmax from 01.08.00)	68
480 Cylinder for wheel D50 x 200 mm w/stop (PB/RB before 15.11.95).....	70
and cylinder for wheel D100 x 200 mm (PS/RS before 08.03.93)	70
215 Hydraulic cylinder D100 x 400 mm (Before 01.01.97).....	72
hydraulic cylinder D90 x 400 mm and D100 x 400 mm (Before 01.11.93)	72
1101 Hydraulic cylinder D75 x 200 mm (Before 01.08.96).....	74
525 Hydraulic cylinder D50 x 200 mm (353701 - 353703) (From 01.08.96) (Before 01.04.01)	76
1192 Hydraulic cylinder D50 x 200 mm (353901 - 353903) (From 01.04.01)	78
890 Hydraulic cylinder D75 x 200 mm (353704 - 353707)	(From 01.08.96) (Before 01.04.01) 80
1195 Hydraulic cylinder D75 x 200 mm (353904 - 353906) (From 01.04.01)	82
564 Turn-over cylinder D100 x 400 mm (before 01.03.99) and.....	84
D125 x 400 mm (From 01.01.97)	84
1148 Hydraulic cylinder D125 x 400 mm (From 01.01.01)	86
1074 Hydraulic cylinder D100 x 400 mm (From 01.03.99)	88
369 Turn-over cylinder D75 x 400 mm for mod. 240 (Before 01.07.97)	90
1005 Turn-over cylinder D75 x 420 mm for mod. 240 (From 01.07.97)	92
253 Wheel 400 x 15.5" (Before 01.03.97).....	94
527 Wheel 400 x 15.5", 400 x 22.5", 500 x 22.5", 500 x 26.6", 14.9 x 24" and 12.5 x 18"	96
(From 01.03.97)	96
589 Transfers.....	98
Index.....	100




	KK 06 38 01	Extra stay R + L, no. 9 E - saddle L = 550 (From 01.12.95)
	KK 07 03 94	Extra stay R for body no. 9 E - saddle, cpl. w. bracket (pos. 12) (From 01.12.95)
	KK 07 03 95	Extra stay L for body no. 9 E - saddle, cpl. w. bracket (pos. 12) (From 01.12.95)
	KK 07 38 03	Extra stay R + L, no. 9 A - saddle L = 560 (From 01.12.95)
	KK 07 03 90	Extra stay R for body no. 9 A - saddle, cpl. w. bracket (pos. 12) (From 01.12.95)
	KK 07 03 91	Extra stay L for body no. 9 A - saddle, cpl. w. bracket (pos. 12) (From 01.12.95)
	KK 08 38 09	Stay R + L for body no. 28 A - saddle (From 01.03.03)
	KK 08 38 10	Stay R + L for body no. 28 E - saddle (From 01.03.03)
10	KK 07 36 08	Landside, R and L, short
11	KK 01 58 32	Nut M20 mm
12	KK 07 38 00	Bracket for stay, R for body no. 6, 7, 8 (And no. 9 before 01.12.95)
	KK 07 38 01	Bracket for stay, L for body no. 6, 7, 8 (And no. 9 before 01.12.95)
	KK 07 38 07	Bracket for stay, R for body no. 9 (From 01.12.95)




35	KK 06 36 07	Plate
	KK 07 36 07	Plate cpl.
36	KK 01 33 46	Screw M14 x 45 mm w/nut
37	KK 07 36 14	Wearing plate
38	KK 01 33 33	Cone screw M14 x 34 mm
39	KK 08 32 35	Mouldboard knife R and L (From 01.12.01)
Pos. 100 - 107 Eco-share from 01.04.00		
100	KK 05 30 90	Reversible point, R
	KK 06 30 90	Reversible point, L
101	KK 01 32 28	Cone screw M12 x 34 mm w/nut
102	KK 07 36 34	Eco-share, R
	KK 07 36 35	Eco-share, L
103	KK 01 01 55	Bushing (for ploughs w/share bolt beam)
	KK 01 01 56	Bushing (for ploughs w/A-beam)
104	KK 03 27 40	Hex screw M16 x 40 mm w/nut (for ploughs w/E-saddle) (Before 01.03.00)
	KK 03 27 50	Hex screw M16 x 50 mm w/nut (for ploughs w/E-saddle) (From 01.03.00)
	KK 03 27 65	Hex screw M16 x 65 mm w/nut (for ploughs w/share bolt beam)
	KK 03 27 75	Hex screw M16 x 75 mm w/nut (for ploughs w/A-beam)
105	KK 01 33 46	Cone screw M14 x 45 mm w/flange nut (for ploughs w/E-saddle) (Before 01.03.00)
	KK 01 33 61	Cone screw M14 x 60 mm w/flange nut (for ploughs w/E-saddle) (From 01.03.00)
	KK 01 33 85	Cone screw M14 x 85 mm w/flange nut (for ploughs w/share bolt beam and A-beam)
106	KK 01 60 15	Flange nut M14
107	KK 01 29 29	Washer (for ploughs w/E-saddle) (From 01.03.00)



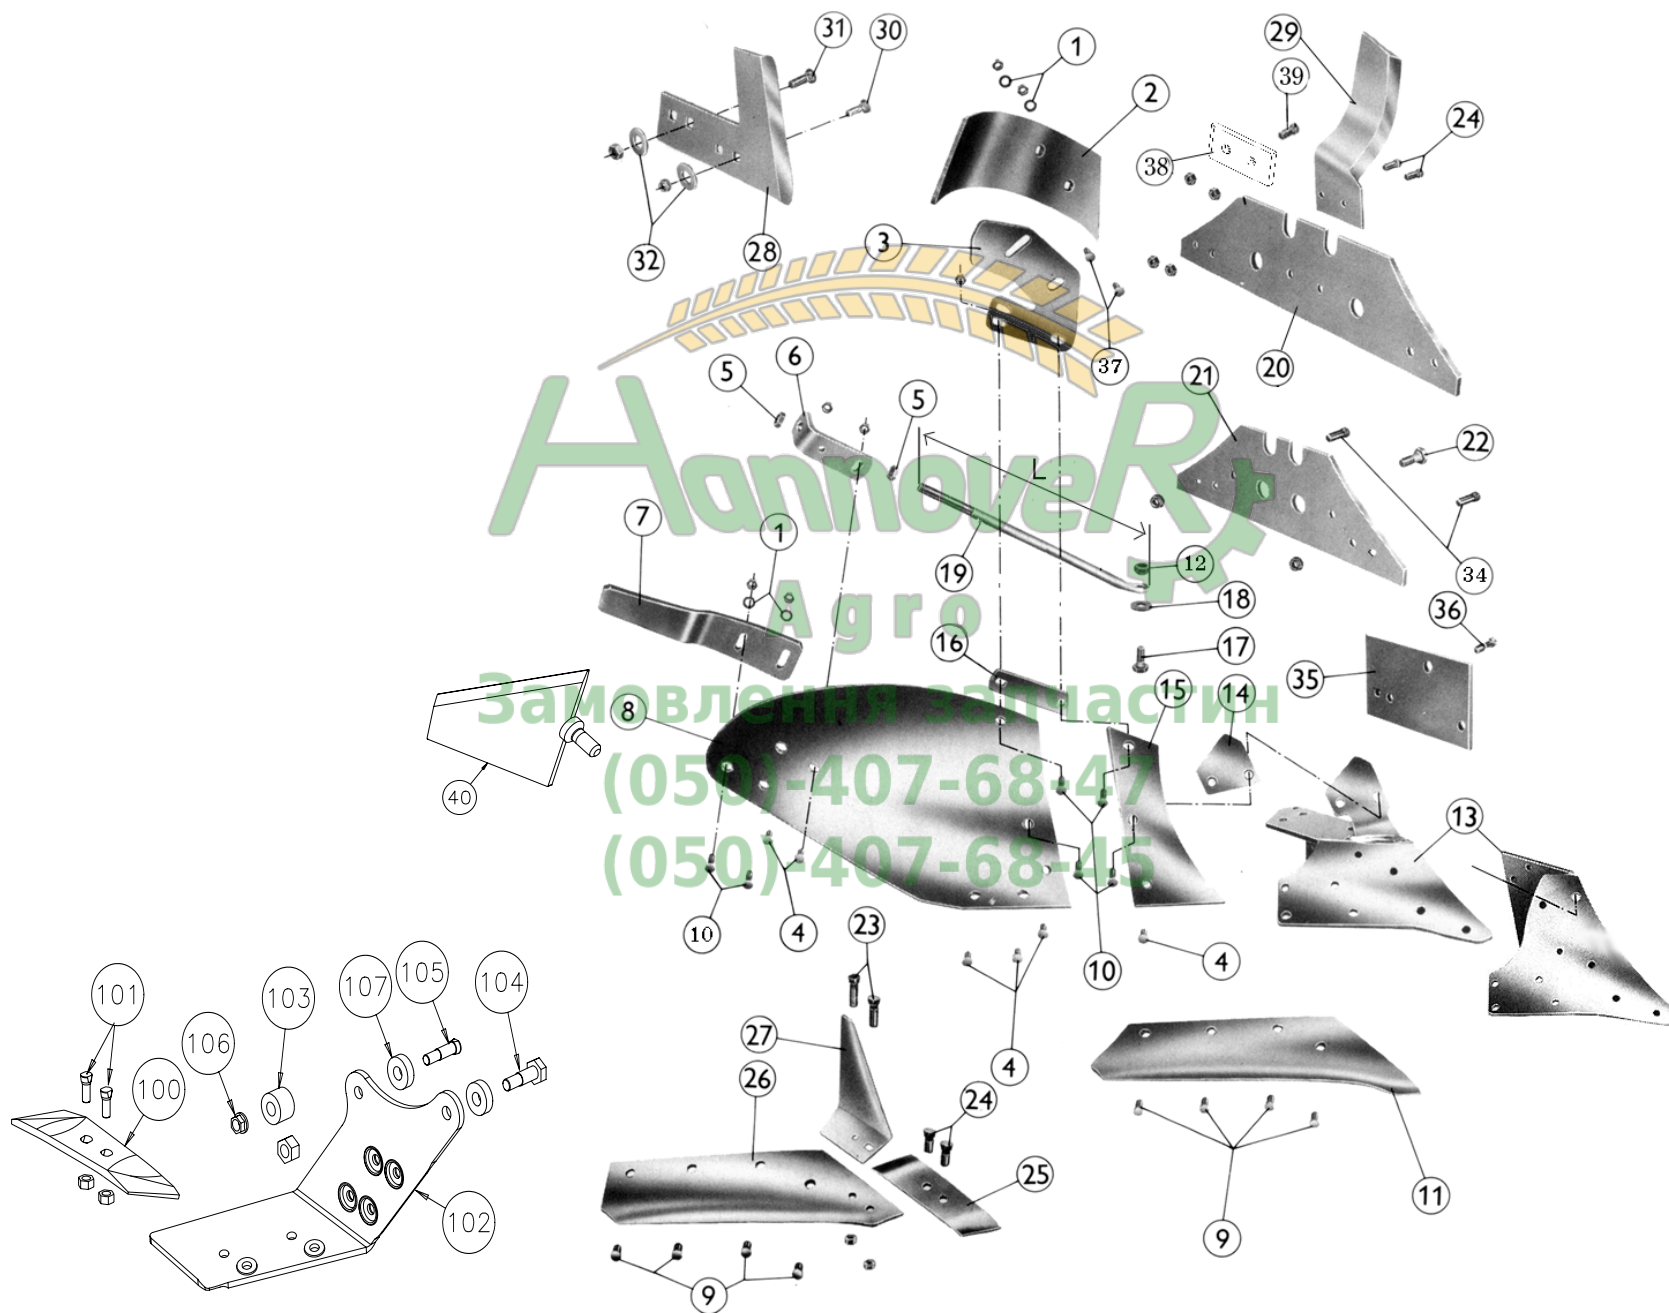

1	KK 01 29 19	Washer	KK 07 32 31	Shinpiece no. 19, L	KK 07 03 93	Extra stay L for body no. 19 A - saddle cpl.	
2	KK 07 33 00	Trashboard, R	16	KK 07 32 39		w. bracket (pos. 6) (From 01.12.95)	
	KK 07 33 01	Trashboard, L		KK 07 32 40	20	KK 07 36 09	Landside, long, R + L
	KK 07 06 40	Trashboard, R cpl.		KK 07 32 66	21	KK 07 36 08	Landside, short, R + L
	KK 07 06 41	Trashboard, L cpl.		KK 07 32 67	22	KK 03 27 25	Hex screw M16 x 27 mm
	KK 07 06 42	Trashboard, R + L cpl.	17	KK 03 27 50	23	KK 01 32 34	Cone screw M12 x 38 mm w/nut
3	KK 07 33 10	Bracket, R			24	KK 01 32 28	Cone screw M12 x 34 mm w/nut
	KK 07 33 11	Bracket, L		KK 03 27 35	25	KK 05 30 90	Reversible point, R
4	KK 03 31 00	Oval screw M12 x 30 mm w/nut				KK 06 30 90	Reversible point, L
5	KK 01 58 34	Nut M20 mm	18	KK 01 29 27	26	KK 07 30 54	Share 14", R
6	KK 07 38 00	Bracket, R				KK 07 30 55	Share 14", L
	KK 07 38 01	Bracket, L	19	KK 07 38 05		KK 07 30 56	Share 16", R
7	KK 05 33 87	Mouldboard extention, R				KK 07 30 57	Share 16", L
	KK 06 33 88	Mouldboard extention, L		KK 07 38 31		KK 07 30 80	Share 18", R
8	KK 07 32 36	Mouldboard no. 12, R		KK 07 38 04		KK 07 30 81	Share 18", L
	KK 07 32 37	Mouldboard no. 12, L			27	KK 07 30 91	Share knife, R
	KK 07 32 24	Mouldboard no. 15, R		KK 07 38 26		KK 07 30 92	Share knife, L
	KK 07 32 25	Mouldboard no. 15, L			28	KK 07 30 88	Landside knife, R w/nuts
	KK 07 32 90	Mouldboard no. 19, R		KK 07 38 26		KK 07 30 89	Landside knife, L w/nuts
	KK 07 32 91	Mouldboard no. 19, L			29	KK 07 36 15	Furrow widener, R
9	KK 01 33 32	Cone screw M14 x 34 mm w/nut		KK 07 03 88		KK 07 36 16	Furrow widener, L
10	KK 03 31 07	Oval screw M12 x 35 mm w/nut			30	KK 03 31 75	Screw M14 x 50 mm w/nut
11	KK 07 30 62	Share 14", R		KK 07 03 89	31	KK 03 32 51	Screw M16 x 50 mm w/nut (for E-saddle)
	KK 07 30 63	Share 14", L					(Before 01.02.00)
	KK 07 30 64	Share 16", R		KK 07 38 29		KK 03 32 56	Screw M16 x 56 mm w/nut (for E-saddle)
	KK 07 30 65	Share 16", L					(From 01.02.00)
12	KK 06 20 25	Nut M16 mm		KK 07 03 98		KK 03 32 86	Screw M16 x 85 mm w/nut (for A-saddle)
13	KK 07 34 35	Saddle, R (for E-saddle)					(Before 01.02.00)
	KK 07 34 36	Saddle, L (for E-saddle)		KK 07 03 99		KK 03 32 95	Screw M16 x 95 mm w/nut (for A-saddle)
	KK 07 34 40	Saddle, R (for A-saddle)					(From 01.02.00)
	KK 07 34 41	Saddle, L (for A-saddle)		KK 07 38 42	32	KK 01 29 22	Washer 17 x 40 x 4.58 mm
14	KK 07 34 17	Connecting plate no. 12 and 15, R			34	KK 01 33 33	Cone screw M14 x 34 mm w/nut
	KK 07 34 18	Connecting plate no. 12 and 15, L		KK 07 03 96	35	KK 06 36 07	Plate for On-Land ploughs
15	KK 07 32 41	Shinpiece no. 12, R				KK 07 36 07	Plate for On-Land ploughs cpl.
	KK 07 32 42	Shinpiece no. 12, L		KK 07 03 97	36	KK 01 33 46	Screw M14 x 45 mm w/nut
	KK 07 32 27	Shinpiece no. 15, R			37	KK 03 31 07	Oval screw M12 x 35 mm
	KK 07 32 28	Shinpiece no. 15, L		KK 07 38 04	38	KK 07 36 14	Wearing plate
	KK 07 32 30	Shinpiece no. 19, R			39	KK 01 33 32	Cone screw M14 x 34 mm
				KK 07 03 92			

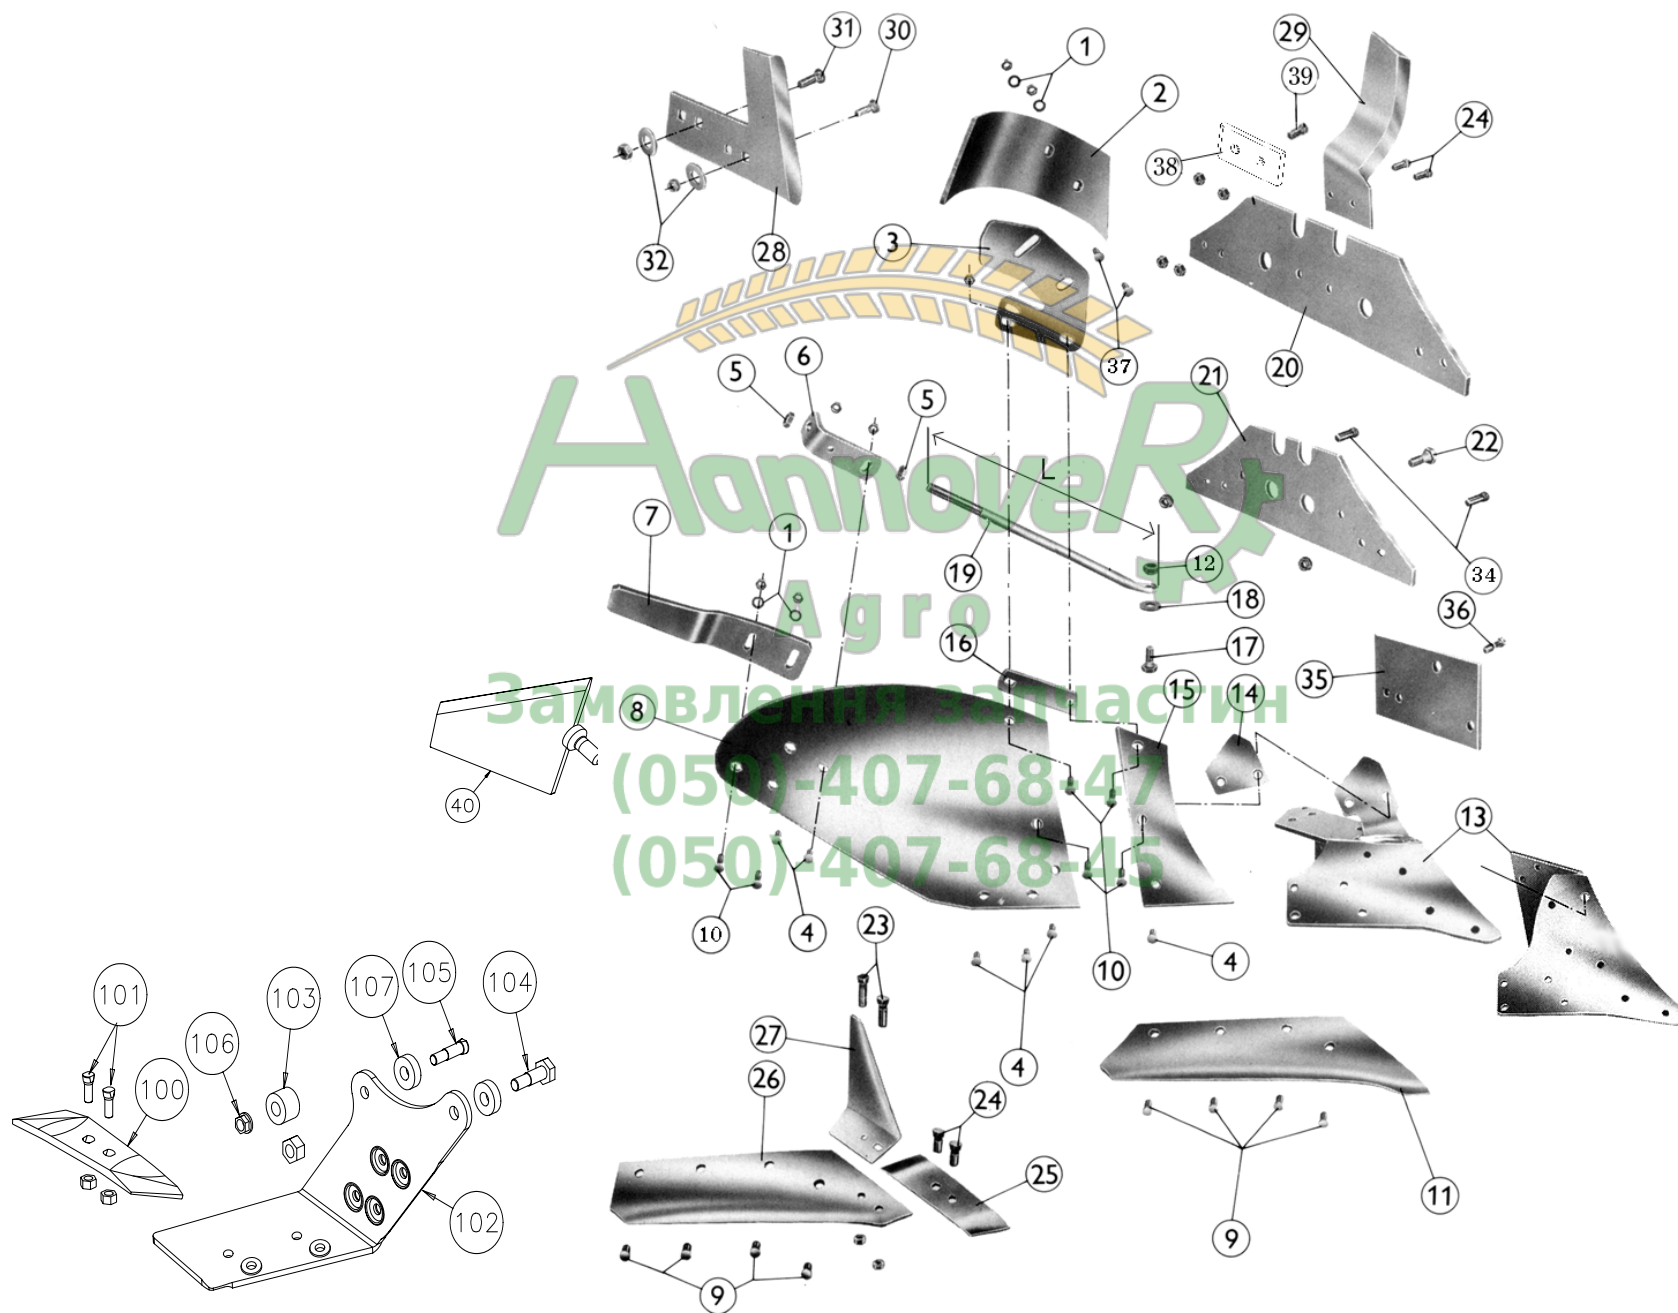

40	KK 08 32 35	Mouldboard knife R and L (From 01.12.01)
Pos. 100 - 107 Eco-share from 01.04.00		
100	KK 05 30 90	Reversible point, R
	KK 06 30 90	Reversible point, L
101	KK 01 32 28	Cone screw M12 x 34 mm w/nut
102	KK 07 36 34	Eco-share, R
	KK 07 36 35	Eco-share, L
103	KK 01 01 55	Bushing (for ploughs w/share bolt beam)
	KK 01 01 56	Bushing (for ploughs w/A-beam)
104	KK 03 27 40	Hex screw M16 x 40 mm w/nut (for ploughs w/E-saddle) (Before 01.03.00)
	KK 03 27 50	Hex screw M16 x 50 mm w/nut (for ploughs w/E-saddle) (From 01.03.00)
	KK 03 27 65	Hex screw M16 x 65 mm w/nut (for ploughs w/share bolt beam)
	KK 03 27 75	Hex screw M16 x 75 mm w/nut (for ploughs w/A-beam)
105	KK 01 33 46	Cone screw M14 x 45 mm w/flange nut (for ploughs w/E-saddle) (Before 01.03.00)
	KK 01 33 61	Cone screw M14 x 60 mm w/flange nut (for ploughs w/E-saddle) (From 01.03.00)
	KK 01 33 85	Cone screw M14 x 85 mm w/flange nut (for ploughs w/share bolt beam and A-beam)
106	KK 01 60 15	Flange nut M14
107	KK 01 29 29	Washer (for ploughs w/E-saddle) (From 01.03.00)







26	KK 03 30 04	Oval screw M10 x 20 mm w/nut
27	KK 07 33 50	Trashboard plastic, R
	KK 07 33 51	Trashboard plastic, L
28	KK 07 33 52	Support, R
	KK 07 33 53	Support, L
29	KK 05 33 87	Mouldboard extension, R
	KK 06 33 88	Mouldboard extension, L
31	KK 03 27 30	Hex screw M16 x 13 mm w/nut
32	KK 06 20 25	Nut M16 mm
33	KK 07 30 88	Landside knife w/nuts, R
	KK 07 30 89	Landside knife w/nuts, L
34	KK 03 32 51	Screw M16 x 50 mm w/nut (for E-sad- dle) (Before 01.02.00)
	KK 03 32 56	Screw M16 x 55 mm w/nut (for E-sad- dle) (From 01.02.00)
	KK 03 32 86	Screw M16 x 85 mm w/nut (for A-sad- dle) (Before 01.02.00)
	KK 03 32 95	Screw M16 x 95 mm w/nut (for A-sad- dle) (From 01.02.00)
35	KK 03 31 74	Screw M14 x 45 mm w/nut



1	KK 01 33 32	Cone screw M14 x 34 mm w/nut	21	KK 07 33 03	Bracket, R		KK 07 30 89	Landside knife w/nut, L
2	KK 07 30 54	Share 14", R		KK 07 33 04	Bracket, L	44	KK 01 29 22	Washer 17 x 40 x 4.58 mm
	KK 07 30 55	Share 14", L	22	KK 01 29 19	Washer 12.5 x 23 x 3.2 mm	45	KK 03 31 75	Screw M14 x 50 mm w/nut
	KK 07 30 56	Share 16", R	23	KK 03 27 40	Hex screw M16 x 40 mm w/nut	46	KK 03 32 51	Screw M16 x 50 mm w/nut (for E-saddle)
	KK 07 30 57	Share 16", L	24	KK 07 36 08	Landside, short, R + L		KK 03 32 86	Screw M16 x 85 mm w/nut (for A-saddle)
	KK 07 30 80	Share 18", R	25	KK 07 36 09	Landside, long, R + L	47	KK 06 36 07	Plate (For On-land ploughs only)
	KK 07 30 81	Share 18", L	26	KK 07 38 22	Stay front (for E-saddle)		KK 07 36 07	Plate cpl. (For On-land ploughs only)
3	KK 05 30 90	Reversible point, R		KK 07 38 16	Stay front (for A-saddle)	48	KK 01 33 46	Screw M14 x 45 mm w/nut
	KK 06 30 90	Reversible point, L	27	KK 01 58 30	Nut M20 mm (Before 01.06.93)	50	KK 07 36 14	Wearing plate
4	KK 07 32 45	Mouldboard, R	28	KK 07 38 17	Stay (Before 01.06.93)	51	KK 01 33 32	Cone screw M14 x 34 mm
	KK 07 32 46	Mouldboard, L	29	KK 07 38 15	Stay, rear (for A-saddle) (Before 01.06.93)			
5	KK 03 31 73	Oval screw M14 x 38 mm w/nut		KK 07 38 20	Stay, R cpl. (for E-saddle) (Before 01.06.93)			
7	KK 01 32 28	Cone screw M12 x 34 mm w/nut		KK 07 38 21	Stay, L cpl. (for E-saddle) (Before 01.06.93)			
8	KK 01 32 34	Cone screw M12 x 38 mm w/nut		KK 07 38 10	Stay, R cpl. (for A-saddle) (Before 01.06.93)			
9	KK 07 30 91	Share knife, R		KK 07 38 11	Stay, L cpl (for A-saddle) (Before 01.06.93)			
	KK 07 30 92	Share knife, L						
	KK 06 30 91	Share knife, R (for Sweden)						
	KK 06 30 92	Share knife, L (for Sweden)						
10	KK 07 34 70	Saddle, R (for E-saddle)	31	KK 07 15 00	Spacer			
	KK 07 34 71	Saddle, L (for E-saddle)	32	KK 03 31 81	Oval screw M14 x 85 mm w/nut			
	KK 07 34 64	Saddle, R (for A-saddle)	33	KK 07 36 15	Furrow widener, R			
	KK 07 34 65	Saddle, L (for A-saddle)		KK 07 30 16	Furrow widener, L			
11	KK 03 31 00	Oval screw M12 x 30 mm w/nut	34	KK 07 30 62	Share 14", R			
12	KK 07 32 72	Shinpiece, R		KK 07 30 63	Share 14", L			
	KK 07 32 73	Shinpiece, L		KK 07 30 64	Share 16", R			
13	KK 03 31 08	Oval screw M12 x 40 mm w/nut		KK 07 30 65	Share 16", L			
14	KK 03 27 30	Hex screw M16 x 30 mm w/nut	35	KK 07 38 05	Stay (for E-saddle) (From 01.06.93)			
16	KK 03 31 75	Oval screw M14 x 50 mm w/nut		KK 07 38 03	Stay (for A-saddle) (From 01.06.93)			
17	KK 07 32 75	Connecting piece, R	36	KK 07 38 34	Bracket for stay, R+L			
	KK 07 32 76	Connecting piece, L	37	KK 07 38 35	Spacing tube 27 x 20.5 x 80 mm			
18	KK 03 31 07	Oval screw M12 x 35 mm w/nut	38	KK 07 38 36	Spacing tube 27 x 20.5 x 69 mm			
19	KK 07 33 00	Trashboard, R	39	KK 07 38 12	Bracket for stay, R			
	KK 07 33 01	Trashboard, L		KK 07 38 13	Bracket for stay, L			
	KK 07 02 92	Trashboard, R cpl.	40	KK 01 30 01	Washer 14 x 30 x 7.5 mm			
	KK 07 02 93	Trashboard, L cpl.	41	KK 01 58 34	Nut M20 mm			
	KK 07 02 94	Trashboard, R + L cpl.	42	KK 03 31 85	Oval screw M14 x 130 mm w/flangenut			
20	KK 07 33 32	Mouldboard extension, R (extra)	43	KK 07 30 88	Landside knife w/nut, R			
	KK 07 33 33	Mouldboard extension,, L (extra)						

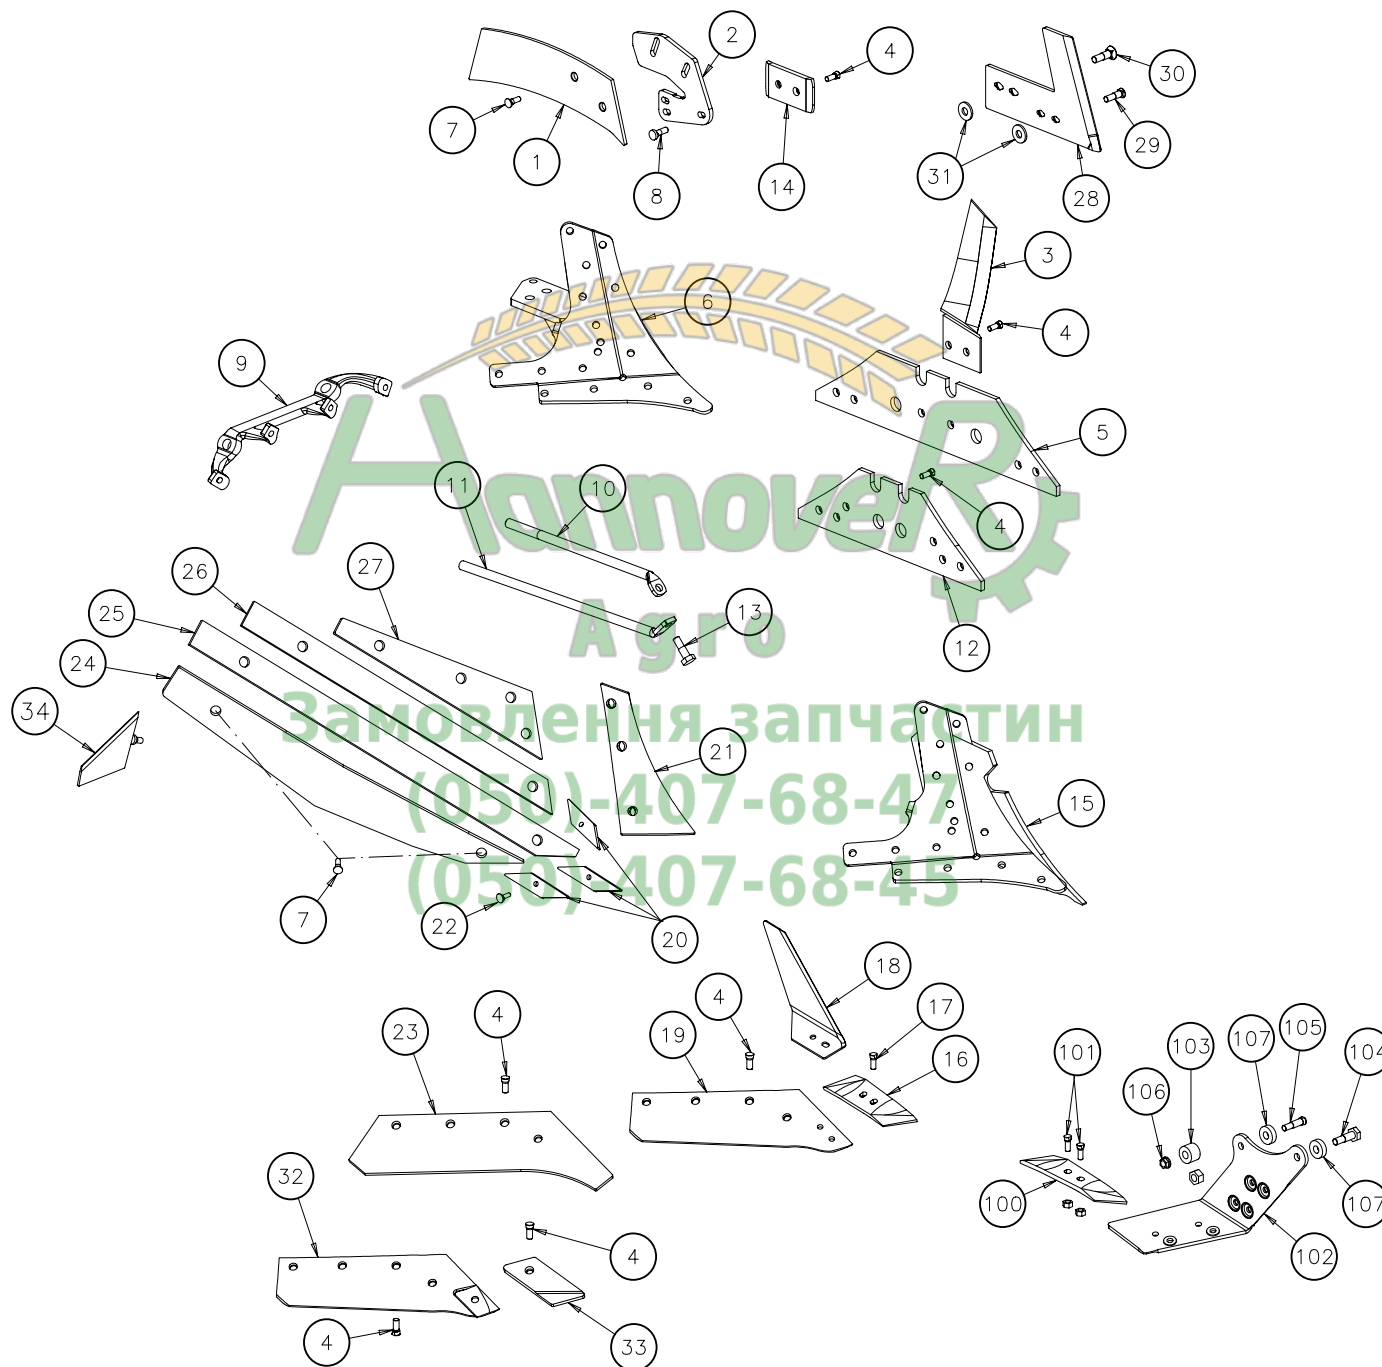


1	KK 07 33 00	Trashboard, R	15	KK 08 34 15	Saddle R, A-saddle (for body no. 29)	KK 03 30 16	Oval screw M10 x 30 mm (for body no. 30)
	KK 07 33 01	Trashboard, L		KK 08 34 16	Saddle L, A-saddle (for body no. 29)		
2	KK 08 33 00	Bracket, R		KK 08 34 06	Saddle R, A-saddle (for body no. 30)	KK 01 58 13	Nut M10
	KK 08 33 01	Bracket, L		KK 08 34 07	Saddle L, A-saddle (for body no. 30)	23	KK 07 30 62 Share 14", R (for body no. 30)
3	KK 07 36 15	Furrow widener, R	16	KK 05 30 90	Reversible point, R		KK 07 30 63 Share 14", L (for body no. 30)
	KK 07 36 16	Furrow widener, L		KK 06 30 90	Reversible point, L		KK 07 30 64 Share 16", R (for body no. 30)
4	KK 01 33 32	Cone screw M14 x 34 mm	17	KK 01 32 28	Cone screw M12 x 34 mm		KK 07 30 65 Share 16", L (for body no. 30)
	KK 01 60 13	Flange nut M14		KK 01 58 17	Nut M12	24	KK 08 32 11 Slat no 1, R
5	KK 07 36 09	Landside, long R + L	18	KK 07 30 91	Share knife, R		KK 08 32 21 Slat no 1, L
6	KK 08 34 17	Saddle R, E-saddle (for body no. 29)		KK 07 30 92	Share knife, L	25	KK 08 32 12 Slat no 2, R
	KK 08 34 18	Saddle L, E-saddle (for body no. 29)		KK 06 30 91	Share knife, R (for Sweeden)		KK 08 32 22 Slat no 2, L
	KK 08 34 08	Saddle R, E-saddle (for body no. 30)		KK 06 30 92	Share knife, L (for Sweeden)	26	KK 08 32 13 Slat no 3, R
	KK 08 34 09	Saddle L, E-saddle (for body no. 30)	19	KK 07 30 02	Share 14", R (for body no. 29)		KK 08 32 23 Slat no 3, L
7	KK 03 31 16	Oval screw M12 x 35 mm (for body no. 29 and 30)		KK 07 30 03	Share 14", L (for body no. 29)	27	KK 08 32 14 Slat no 4, R
	KK 01 58 17	Nut M12		KK 07 30 54	Share 14", R (for body no. 30)		KK 08 32 24 Slat no 4, L
	KK 03 31 07	Oval screw M12 x 35 mm (for body no. 30) (Before 01.01.01)		KK 07 30 55	Share 14", L (for body no. 30)	28	KK 07 30 88 Landside knife, R
	KK 01 58 17	Nut M12		KK 07 30 04	Share 16", R (for body no. 29)		KK 07 30 89 Landside knife, L
8	KK 03 31 17	Oval screw M12 x 45 mm (for body no. 29 and 30)		KK 07 30 05	Share 16", L (for body no. 29)	29	KK 03 31 75 Screw M14 x 50 mm
	KK 01 58 17	Nut M12		KK 07 30 56	Share 16", R (for body no. 30)		KK 01 60 15 Flange nut M14
	KK 03 31 11	Oval screw M12 x 45 mm (for body no. 30) (Before 01.01.01)		KK 07 30 57	Share 16", L (for body no. 30)	30	KK 03 32 51 Screw M16 x 50 mm (for E-saddle) (Before 01.02.00)
	KK 01 58 17	Nut M12		KK 07 30 06	Share 18", R (for body no. 29)		KK 03 32 56 Screw M16 x 56 mm (for E-saddle) (From 01.02.00)
	KK 03 31 11	Oval screw M12 x 45 mm (for body no. 30) (Before 01.01.01)		KK 07 30 07	Share 18", L (for body no. 29)		KK 01 58 25 Nut M16
	KK 01 58 17	Nut M12		KK 07 30 80	Share 18", R (for body no. 30)		KK 03 32 86 Screw M16 x 85 mm (for A-saddle) (Before 01.02.00)
9	KK 08 32 10	Slat support, R	20	KK 08 32 15	Connecting piece, plastic (for slat 1-2)		KK 03 32 95 Screw M16 x 95 mm (for A-saddle) (From 01.02.00)
	KK 08 32 20	Slat support, L		KK 08 32 18	Connecting piece, plastic (for slat 2) (for body no. 29)		KK 01 58 25 Nut M16
10	KK 08 38 03	Stay		KK 08 32 16	Connecting piece, plastic (for slat 2-3) (for body no. 30)	31	KK 01 29 22 Washer 17 x 40 x 4.58 mm
11	KK 08 38 05	Stay 1, saddle A (for body no. 29)		KK 08 32 17	Connecting piece, plastic (for slat 3-4)	32	KK 07 30 42 Flush fit share 14", R (for body no. 29)
	KK 08 38 06	Stay 2, saddle A (for body no. 29)	21	KK 07 32 56	Shinpiece, R (for body no. 29)		KK 07 30 43 Flush fit share 14", L (for body no. 29)
	KK 08 38 02	Stay, saddle A (for body no. 30)		KK 07 32 57	Shinpiece, L (for body no. 29)		KK 07 30 44 Flush fit share 16", R (for body no. 29)
	KK 08 38 07	Stay 1, saddle E (for body no. 29)		KK 07 32 30	Shinpiece, R (for body no. 30)		KK 07 30 45 Flush fit share 16", L (for body no. 29)
	KK 08 38 08	Stay 2, saddle E (for body no. 29)		KK 07 32 31	Shinpiece, L (for body no. 30)	33	KK 07 30 30 Flush fit point, R
	KK 08 38 04	Stay, saddle E (for body no. 30)	22	KK 03 30 06	Oval screw M10 x 30 mm (for body no. 29)		KK 07 30 31 Flush fit point, L
12	KK 07 36 08	Landside, short R + L		KK 01 58 13	Nut M10	34	KK 08 32 35 Mouldboard knife R and L (From 01.12.01)
13	KK 03 27 50	Hex screw M16 x 50 mm					
	KK 01 58 25	Nut M16					
14	KK 07 36 14	Wearing plate					

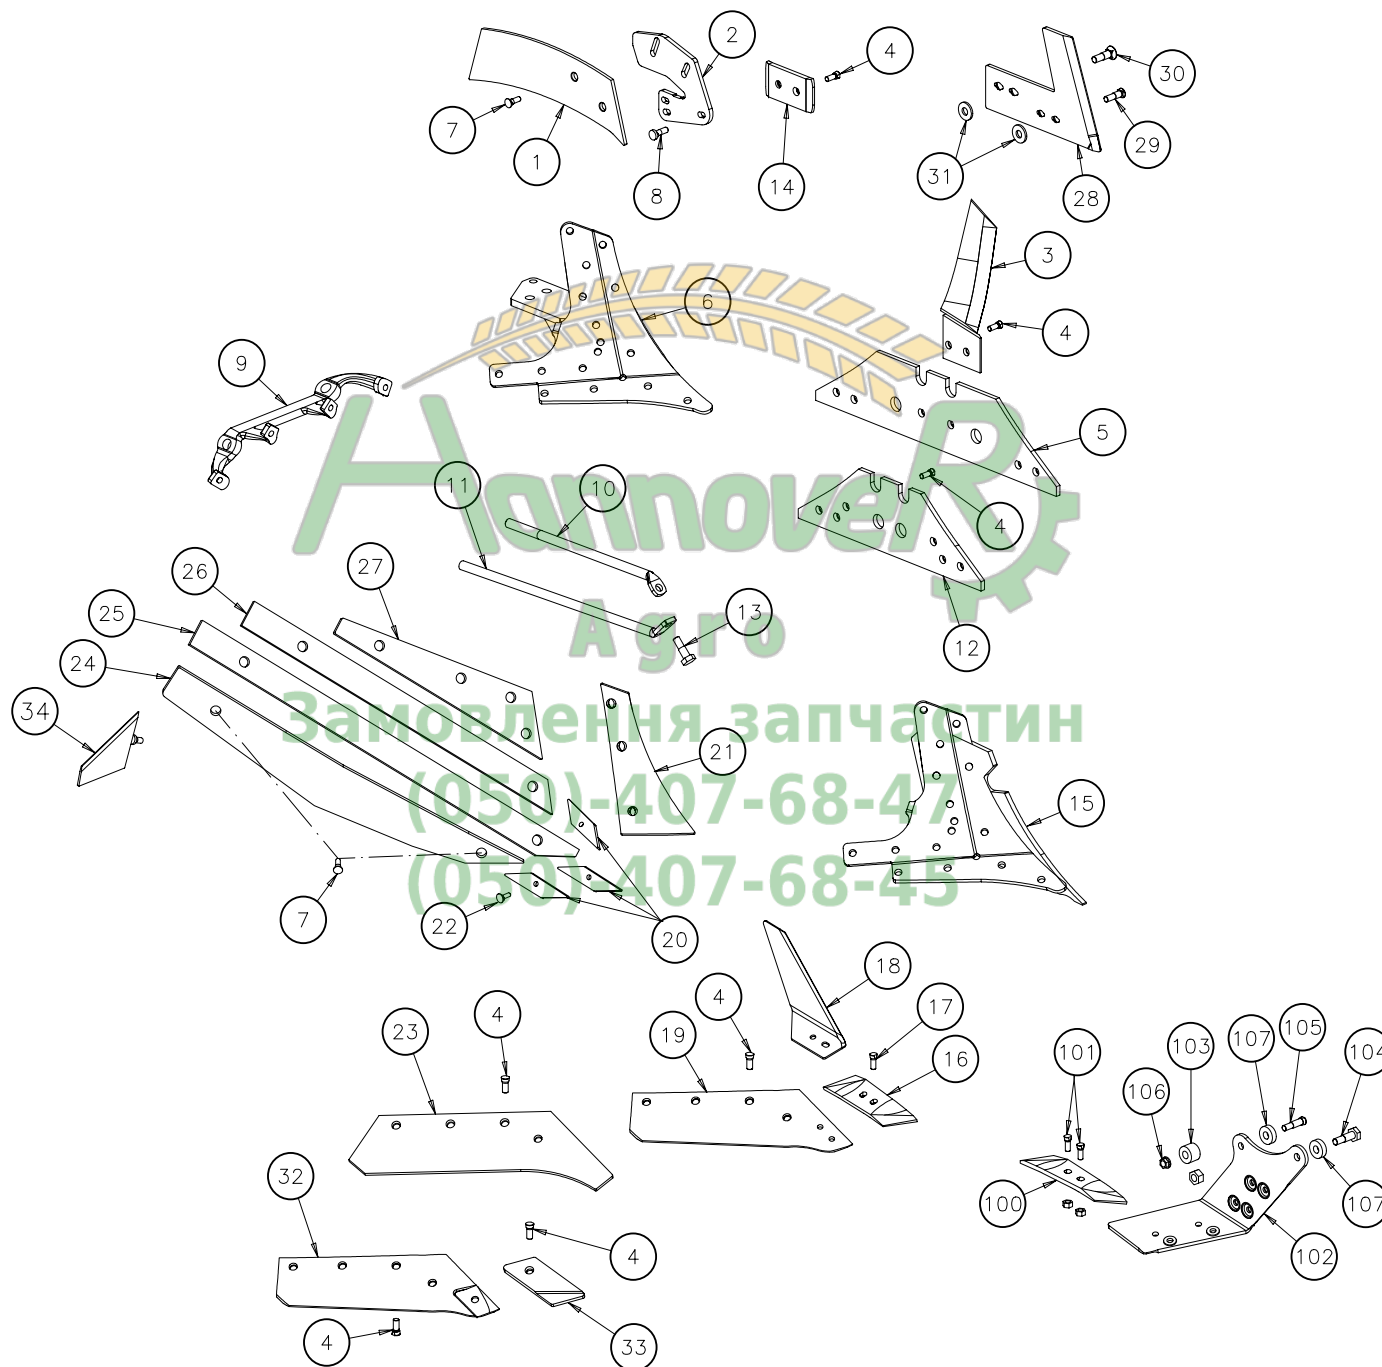

Pos. 100 - 107 Eco-share from 01.04.00		
100	KK 05 30 90	Reversible point, R
	KK 06 30 90	Reversible point, L
101	KK 01 32 28	Cone screw M12 x 34 mm
	KK 01 58 17	Nut M12
102	KK 07 36 34	Eco-share, R
	KK 07 36 35	Eco-share, L
103	KK 01 01 55	Bushing (for ploughs w/share bolt beam)
	KK 01 01 56	Bushing (for ploughs w/A-beam)
104	KK 03 27 40	Hex screw M16 x 40 (for ploughs w/E-saddle) (Before 01.03.00)
	KK 03 27 50	Hex screw M16 x 50 mm (for ploughs w/E-saddle) (From 01.03.00)
	KK 01 58 25	Nut M16
	KK 03 27 65	Hex screw M16 x 65 mm w/nut (for ploughs w/share bolt beam)
	KK 01 58 25	Nut M16
	KK 03 27 75	Hex screw M16 x 75 mm w/nut (for ploughs w/A-beam)
	KK 01 58 25	Nut ;16
105	KK 01 33 46	Cone screw M14 x 45 mm (for ploughs w/E-saddle) (Before 01.03.00)
	KK 01 33 61	Cone screw M14 x 60 mm (for ploughs w/E-saddle) (From 01.03.00)
	KK 01 33 85	Cone screw M14 x 85 mm (for ploughs w/share bolt beam and A-beam)
106	KK 01 60 15	Flange nut M14
107	KK 01 29 29	Washer (for ploughs w/E-saddle) (From 01.03.00)



Замовлення запчастин
(050)-407-68-47
(050)-407-68-45

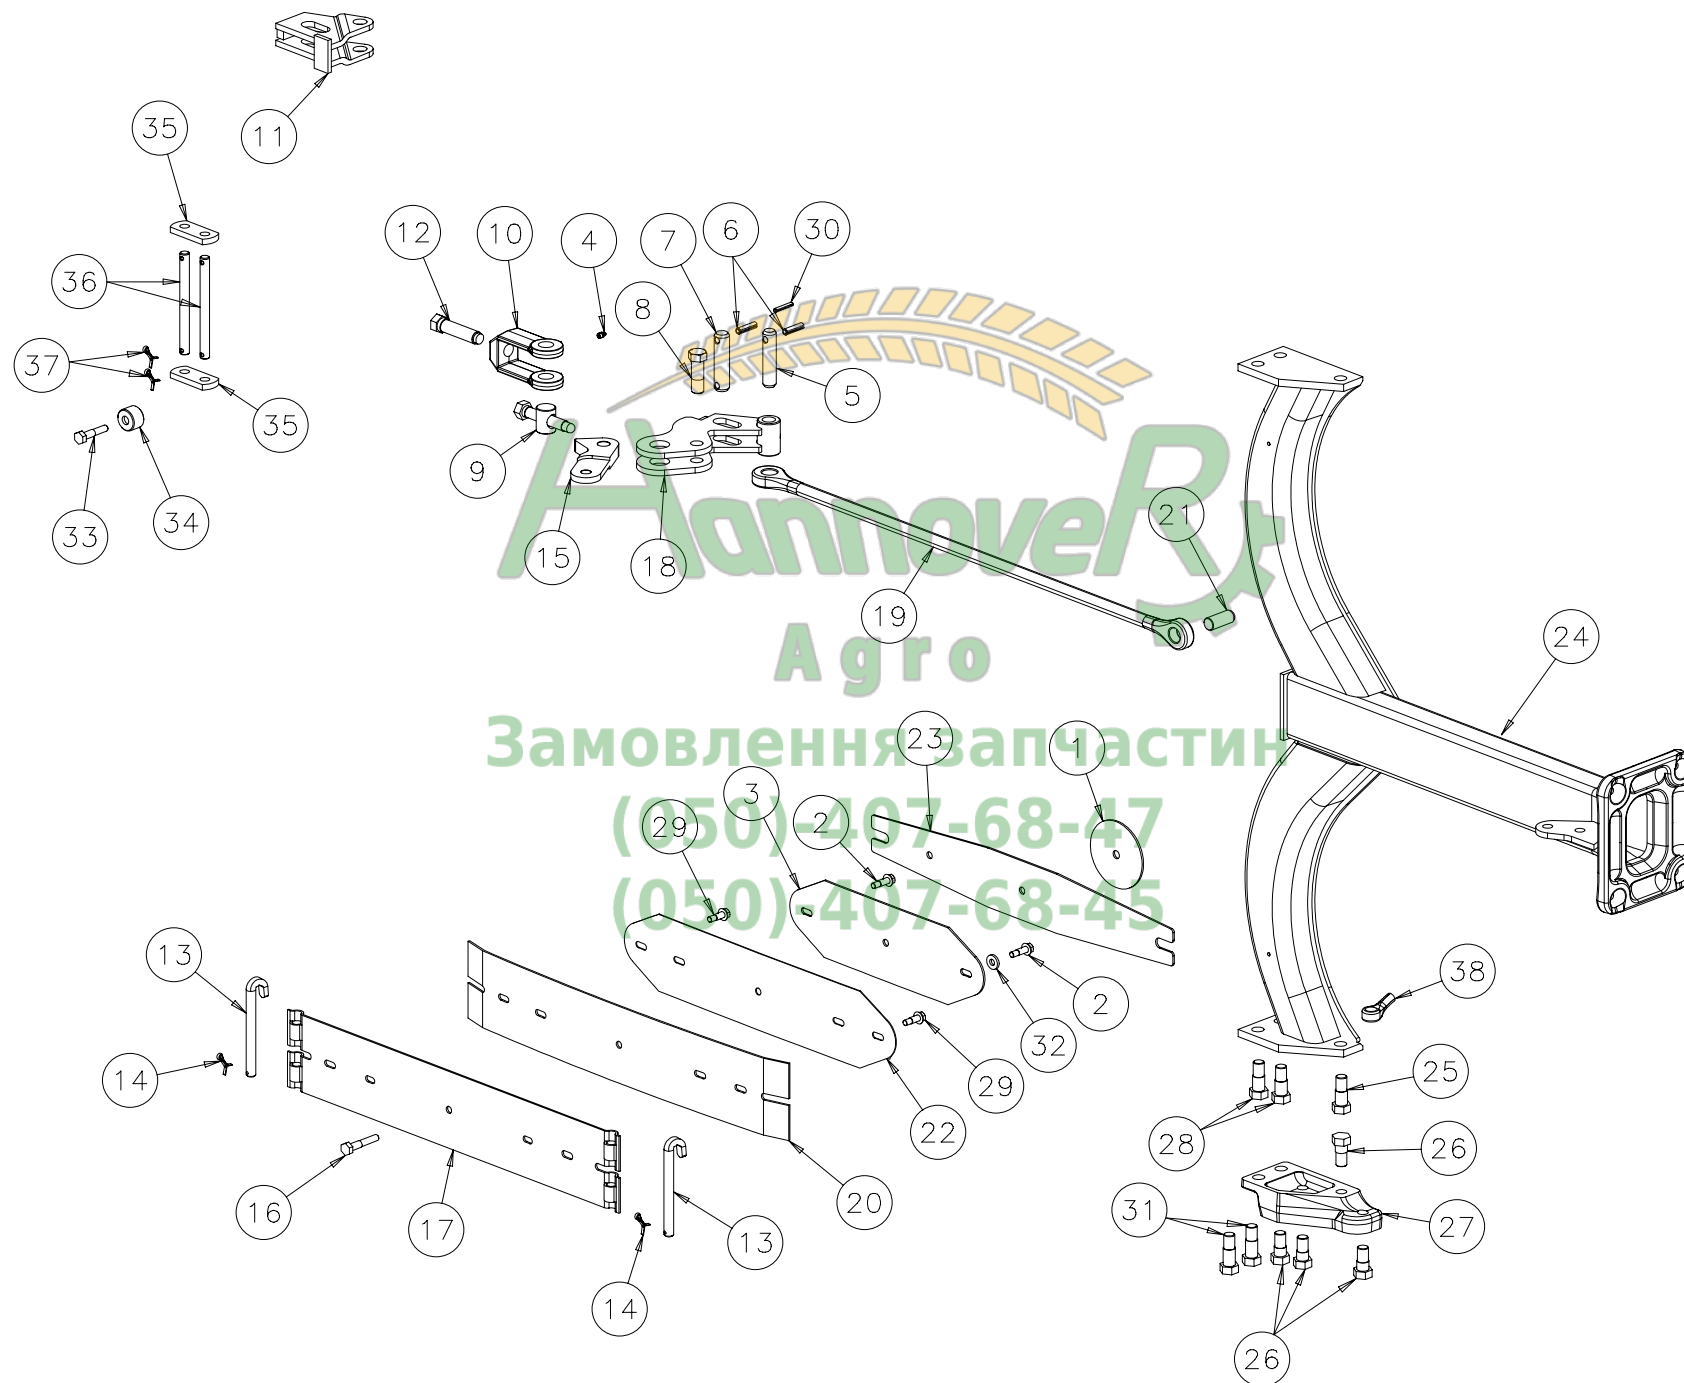

1	KK 05 70 67	Blade no 4	33	KK 03 26 55	Hex screw M12 x 55 mm w/nut (for extra additional leaf spring cpl.)
2	KK 03 50 20	Hex screw w/flange M10 x 34 mm w/nut	34	KK 06 70 77	Bushing (for extra additional leaf spring cpl.)
3	KK 05 70 66	Blade no 3	35	KK 06 70 75	Linkage (for extra additional leaf spring cpl.)
4	KK 02 99 20	Grease nipple M8 x 1	36	KK 06 70 76	Bolt D15.7 (for extra additional leaf spring cpl.)
5	KK 06 70 59	Bolt	37	KK 02 97 27	Split pin D5 x 32 mm (for extra additional leaf spring cpl.)
6	KK 01 10 37	Roll pin D10 x 40 mm	38	KK 06 12 91	Threaded piece
7	KK 06 70 57	Bolt (Before 01.08.02)			
	KK 06 70 16	Bolt (From 01.08.02)	Not ill.	KK 05 07 06	Leaf spring cpl. (1 x ill. no. 3, 13, 14, 16, 17 and 22 + 2 x ill. no. 1, 2, 20 and 29)
8	KK 03 28 60	Hex screw M20 x 60 mm w/nut		KK 06 07 03	Leaf spring HD cpl. (1 x ill. no 3, 16, 17 22 and 32 + 2 x ill. no. 1, 2, 20, 23 and 29)
9	KK 06 70 51	Adjustment screw w/threaded piece		KK 06 01 19	Spacer kit w/ hex screws R & L cpl.
10	KK 06 70 40	Holder (Before 01.08.02)			
	KK 06 70 25	Holder (From 01.08.02)			
11	KK 06 70 68	Bracket (Before 01.08.02)			
	KK 06 70 92	Bracket (From 01.08.02)			
12	KK 06 70 39	Adjustment screw M24 x 90 mm			
13	KK 05 70 89	Bolt			
14	KK 02 97 27	Split pin D5 x 32 mm			
15	KK 06 70 80	Spring arm			
16	KK 03 26 65	Hex screw M12 x 65 mm w/nut			
17	KK 05 70 63	Main blade			
18	KK 06 70 60	Regulator (Before 01.08.02)			
	KK 06 70 90	Regulator (From 01.08.02)			
19	KK 06 70 70	Tie rod (Before 01.08.02)			
	KK 06 70 26	Tie rod (From 01.08.02)			
20	KK 05 70 64	Blade no 1			
21	KK 06 70 31	Axle D22 x 53 mm			
22	KK 05 70 65	Blade no 2			
23	KK 05 70 68	Blade no 5			
24	KK 06 12 80	Beam			
25	KK 03 52 09	Hex screw M20 x 50 mm w/threaded piece			
26	KK 03 28 40	Hex screw M20 x 40 mm w/nut			
27	KK 06 01 08	Spacer cpl. w/hex screws R			
	KK 06 01 09	Spacer cpl. w/hex screws L			
28	KK 03 51 65	Hex screw M20 x 50 mm w/flange nut			
29	KK 03 50 21	Hex screw w/flange M10 x 30.5 mm w/nut			
30	KK 01 10 42	Roll pin D6 x 40 mm (to be mounted into roll pin 011037)			
31	KK 03 28 55	Hex screw M20 x 55 mm			
32	KK 01 29 13	Washer			




For LS, RL, LM, RM and RG ploughs


For LD, LO, RS, RX, LB, and RB ploughs



1	KK 07 12 08	Beam, R (Before 15.08.01)		KK 03 28 60	Hex screw M20 x 60 mm (for LB, LO and RB only) (From 01.04.02)
	KK 07 12 72	Beam, R (From 15.08.01)	23	KK 01 60 49	Lock nut M20 (From 01.04.02)
2	KK 07 12 09	Beam, L (Before 15.08.01)			
	KK 07 12 73	Beam, L (From 15.08.01)	Not ill.	KK 07 12 11	Beam, H = 700 mm cpl. (ill. no. 1, 2, 3 and 5 - 8) (Before 15.08.01)
3	KK 07 12 28	Support, H = 700 mm (Before 15.08.01)		KK 07 12 80	Beam, H = 700 mm cpl. (ill. no. 1, 2, 3 and 5 - 8) (From 15.08.01)
	KK 07 12 71	Support, H = 700 mm (From 15.08.01)		KK 07 12 12	Beam, H = 800 mm cpl. (ill. no. 1, 2, 4 and 5 - 8) (Before 15.08.01)
4	KK 07 12 07	Support, H = 800 mm (Before 15.08.01)		KK 07 12 81	Beam, H = 800 mm cpl. (ill. no. 1, 2, 4 and 5 - 8) (From 15.08.01)
	KK 07 12 70	Support, H = 800 mm (From 15.08.01)			
5	KK 07 70 24	Main bolt M30 x 72 mm, L (Before 15.08.01)			
	KK 07 12 75	Main bolt M30 x 84 mm, L (From 15.08.01)			
6	KK 07 70 23	Main bolt M30 x 72 mm, R (Before 15.08.01)			
	KK 07 12 74	Main bolt M30 x 84 mm, R (From 15.08.01)			
7	KK 01 60 22	Nut M30, R			
8	KK 01 60 45	Nut M30, L			
9	KK 07 49 10	Plate for support, H = 700 mm (for LS, RL, LM, RM and RG ploughs only)			
10	KK 07 49 11	Plate for support, H = 800 mm (for LS, RL, LM, RM and RG ploughs only)			
11	KK 06 15 15	Bushing D28 x D20.5 x 35.2 mm			
12	KK 03 28 40	Hex screw M20 x 40 mm w/nut (Before 01.04.02)			
	KK 03 28 45	Hex screw M20 x 45 mm (From 01.04.02)			
	KK 03 28 50	Hex screw M20 x 50 mm w/nut (for disc coultter, for front piece and rear beam)			
	KK 03 28 60	Hex screw M20 x 60 mm w/nut (for front piece w/disc coultter)			
13	KK 03 28 65	Hex screw M20 x 65 mm w/nut			
14	KK 03 52 15	Hex screw M20 x 80 mm w/flange nut qual. 12.9			
	KK 03 52 16	Hex screw M20 x 90 mm w/flange nut qual. 12.9 (for RL/ LB/ LO/ RB ploughs front section, rear leg only)			
15	KK 03 28 07	Hex screw M20 x 100 mm			
	KK 03 28 03	Hex screw M20 x 110 mm (for LB, LO and RB only) (From 01.04.02)			
	KK 03 28 24	Hex screw M20 x 105 mm (when using fixing device KK 07 72 95 for RL plough) (From 01.04.02)			
16	KK 06 20 20	Washer			
17	KK 03 50 60	Shear bolt M20 x 62 mm w/nut (for support H = 800 mm) (Before 15.08.01)			
	KK 03 50 48	Shear bolt M20 x 72 mm w/nut (for support H = 800 mm) (From 15.08.01)			
18	KK 03 50 72	Shear bolt M20 x 81 mm w/nut (for support H = 700 mm)			
19	KK 07 15 08	Plate for support H = 700 mm (for LD, LO, RS, RX, LB and RB ploughs only)			
20	KK 07 15 29	Plate for support H = 800 mm (for LD, LO, RS, RX, LB and RB ploughs only)			
21	KK 03 27 62	Hex screw M16 x 60 w/nut qual. 12.9			
22	KK 03 28 40	Hex screw M20 x 40 mm w/nut (Before 01.04.02)			
	KK 03 28 45	Hex screw M20 x 45mm (From 01.04.02)			

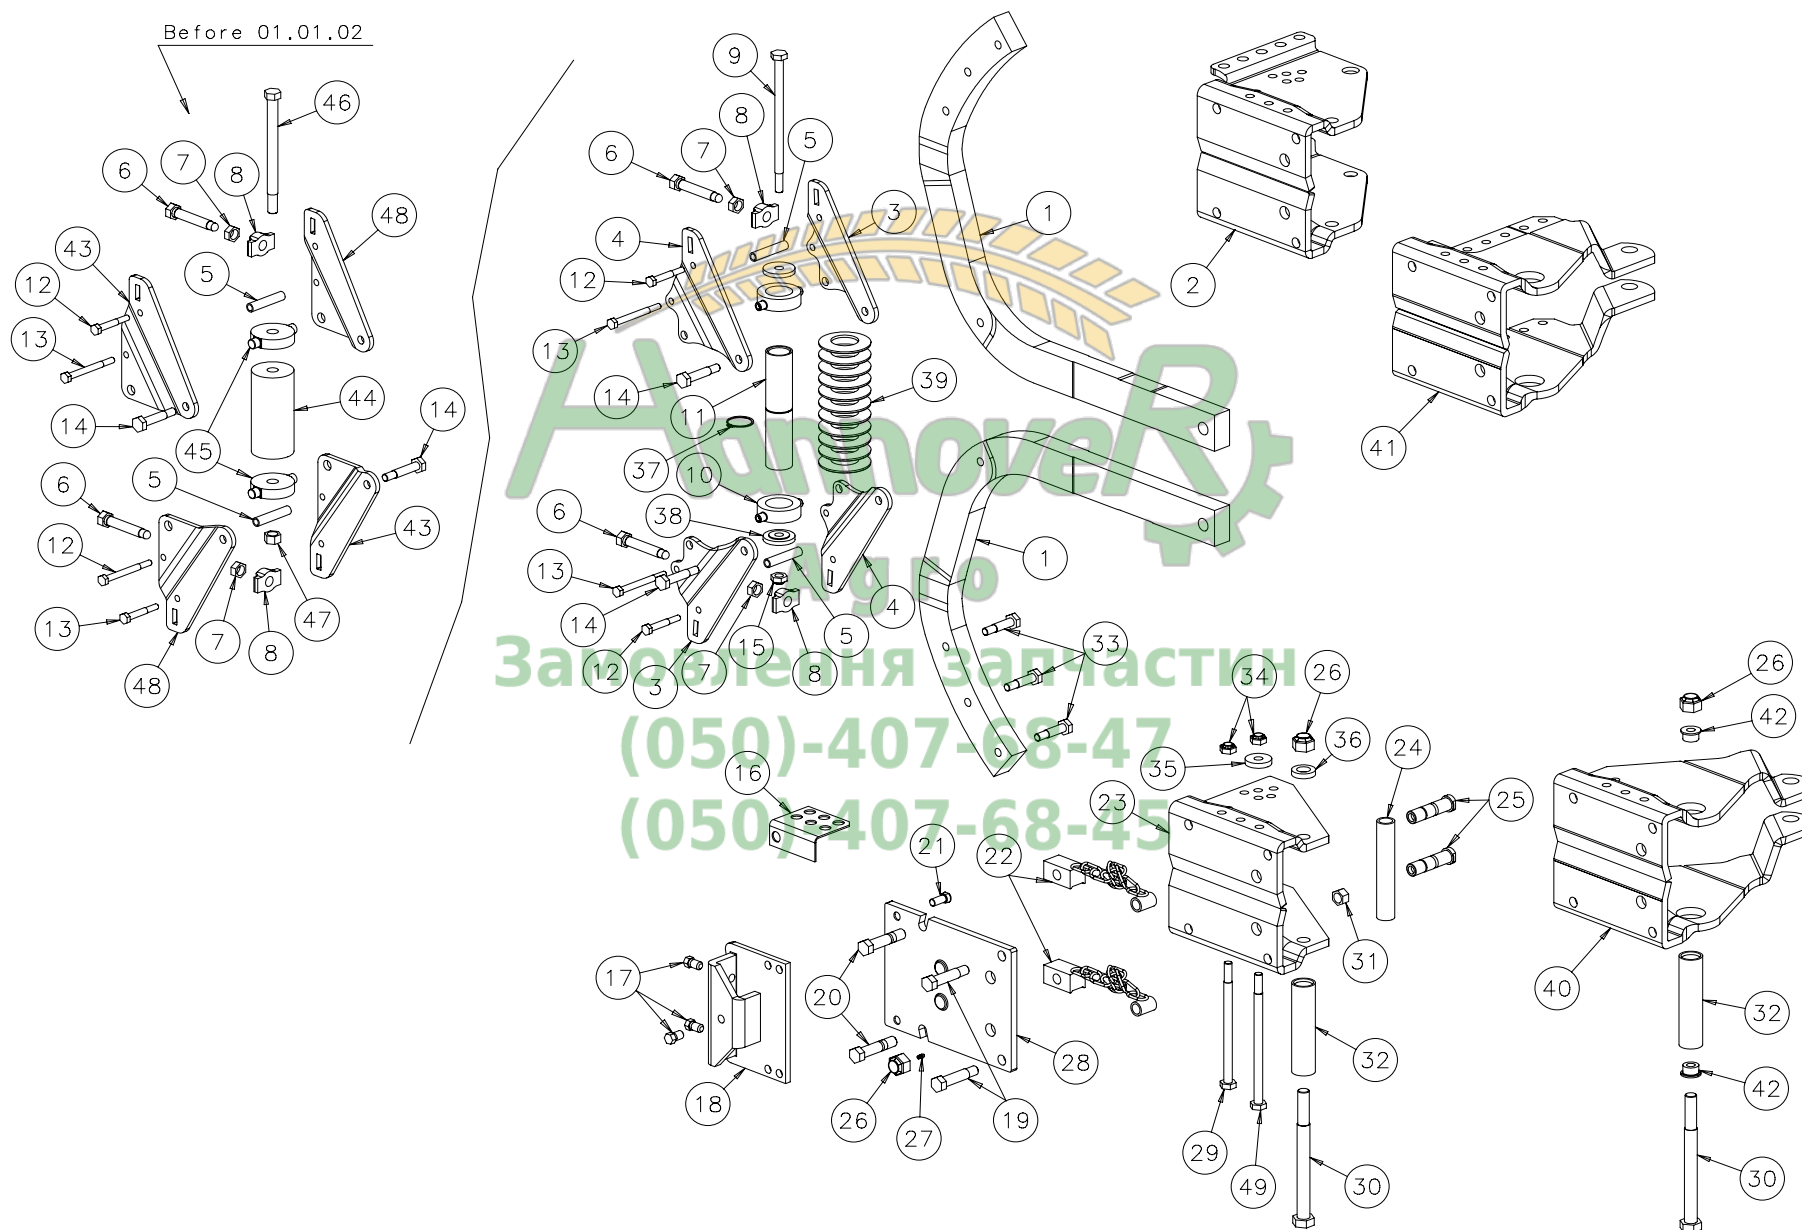

1	KK 07 27 57	Beam SL H = 700	33	KK 03 27 74	Hex screw M16 x 70 mm
	KK 07 27 77	Beam SL H = 800 mm	34	KK 01 60 25	Lock nut M16
2	KK 07 27 55	Beam/depth wheel support (Before 01.06.99)	35	KK 01 29 98	Washer D50 x D16.5 x 10 mm
	KK 07 47 60	Beam/depth wheel support (From 01.06.99) (Before 15.11.02)	36	KK 01 30 00	Washer D45 x D26 x 10 mm
	KK 08 26 40	Beam/depth wheel support (From 15.11.02)	37	KK 01 12 69	Circlip (From 01.01.02)
3	KK 07 28 20	Link, R (From 01.01.02)	38	KK 07 28 24	Cover for spring (From 01.01.02)
4	KK 07 28 21	Link, L (From 01.01.02)	39	KK 01 28 74	Cup spring for spring cover (From 01.01.02)
5	KK 07 27 73	Spacing tube		KK 07 28 25	24 pieces of KK 01 28 74, cup spring for spring cover cpl. (From 01.01.02)
6	KK 06 70 49	Adjusting screw	40	KK 07 27 88	Beam holder (for LB/RB ploughs only)
7	KK 01 58 34	Nut M20, H = 12	41	KK 07 27 89	Beam holder, rear (for LB ploughs only)
8	KK 07 27 71	Threaded piece M20	42	KK 07 27 92	Bushing (for LB/RB ploughs only)
9	KK 03 27 29	Hex screw M16 x 280 mm w/nut (From 01.01.02)	43	KK 07 27 66	Link, L (Before 01.01.02)
10	KK 07 28 19	Holder (From 01.01.02)	44	KK 07 27 70	Rubber damper (Before 01.01.02)
11	KK 07 28 22	Bushing (From 01.01.02)	45	KK 07 27 67	Holder (Before 01.01.02)
12	KK 03 51 34	Hex screw M12 x 80 mm w/lock nut	46	KK 03 28 36	Hex screw M20 x 240 mm w/nut (Before 01.01.02)
13	KK 03 51 38	Hex screw M12 x 120 mm w/lock nut	47	KK 01 58 30	Nut M20 (Before 01.01.02)
14	KK 03 51 56	Hex screw M16 x 85 mm w/lock nut	48	KK 07 27 65	Link, R (Before 01.01.02)
15	KK 01 60 25	Lock nut (From 01.01.02)	49	KK 03 27 14	Hex screw M16 x 270 mm w/ nut
16	KK 07 27 69	Holder for shear bolt			
17	KK 03 42 25	Set screw M16 x 25 mm			
18	KK 07 69 36	Bracket for manure skimmer w/set screw			
19	KK 03 28 90	Hex screw M20 x 90 mm w/nut			
20	KK 03 50 87	Shear bolt M20 x 90 mm (Before 15.03.97)			
	KK 03 50 87	Shear bolt M20 x 90 mm, strong (From 15.03.97)			
21	KK 03 19 41	Cone bolt M16 x 40 mm			
22	KK 07 27 61	Spacer			
23	KK 07 27 51	Beam bracket			
24	KK 07 27 60	Spacer			
25	KK 07 70 21	Bolt L = 95 mm			
26	KK 01 60 01	Lock nut M24			
27	KK 02 99 18	Grease nipple			
28	KK 07 27 59	Plate, beam holder			
29	KK 03 27 12	Hex screw M16 x 240 mm w/nut (Before 01.01.97)			
	KK 03 27 24	Hex screw M16 x 250 mm w/nut (From 01.01.97)			
30	KK 03 29 25	Hex screw M24 x 250 mm w/nut (Before 01.01.97)			
	KK 03 29 26	Hex screw M24 x 265 mm w/nut (From 01.01.97)			
31	KK 01 58 30	Nut M20			
32	KK 07 14 17	Supporting sleeve			

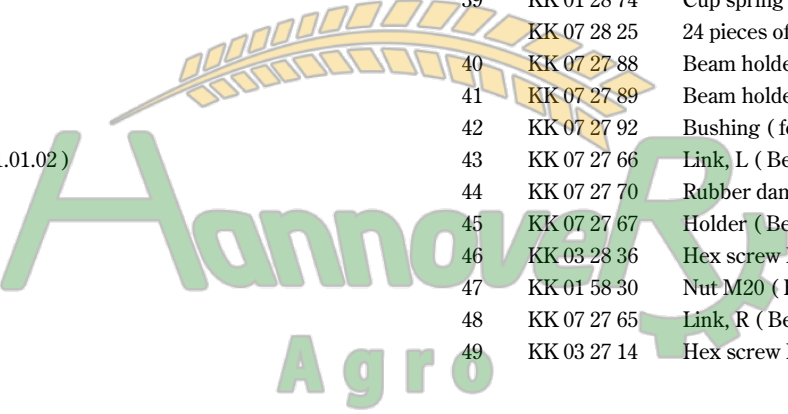

Замовлення запчастин
(050)-407-68-47
(050)-407-68-45



1	KK 03 13 40	Hex screw M8 x 40 mm
2	KK 05 61 56	Cap
3	KK 01 07 75	O-ring D54.5 x 3 mm
4	KK 01 12 66	Circlip
5	KK 01 12 92	Washer D30 x 45 x 2.5 mm
6	KK 05 61 12	Disc 18"
	KK 05 61 14	Disc 20"
	KK 05 61 15	Disc 18" Notched
	KK 05 61 16	Disc 20" Notched
7	KK 06 61 02	Hub w/needles
	KK 06 61 24	Hub cpl (ill 1, 3 - 5 and 7 - 9)
8	KK 01 07 72	Seal ring
9	KK 06 61 08	Axle D30
10	KK 02 99 20	Grease nipple M8 x 1 mm
11	KK 06 61 40	Disc coulters arm 18" R
	KK 06 61 43	Disc coulters arm 20" R
12	KK 06 61 90	Clip
13	KK 03 50 31	Hex screw M12 x 45 mm w/nut
14	KK 06 61 85	Bracket
15	KK 06 61 42	Disc coulters arm 18" L
	KK 06 61 45	Disc coulters arm 20" L
16	KK 01 60 31	Cone nut M16
17	KK 06 61 89	Bracket 18"
	KK 06 61 82	Bracket 20"
18	KK 06 61 78	Eccentric
19	KK 06 61 75	U - bolt
20	KK 03 17 30	Hex screw M20 x 30 mm
	KK 03 17 40	Hex screw M20 x 40 mm (for eccentric nut)



Замовлення запчастин
(050)-407-68-47
(050)-407-68-45

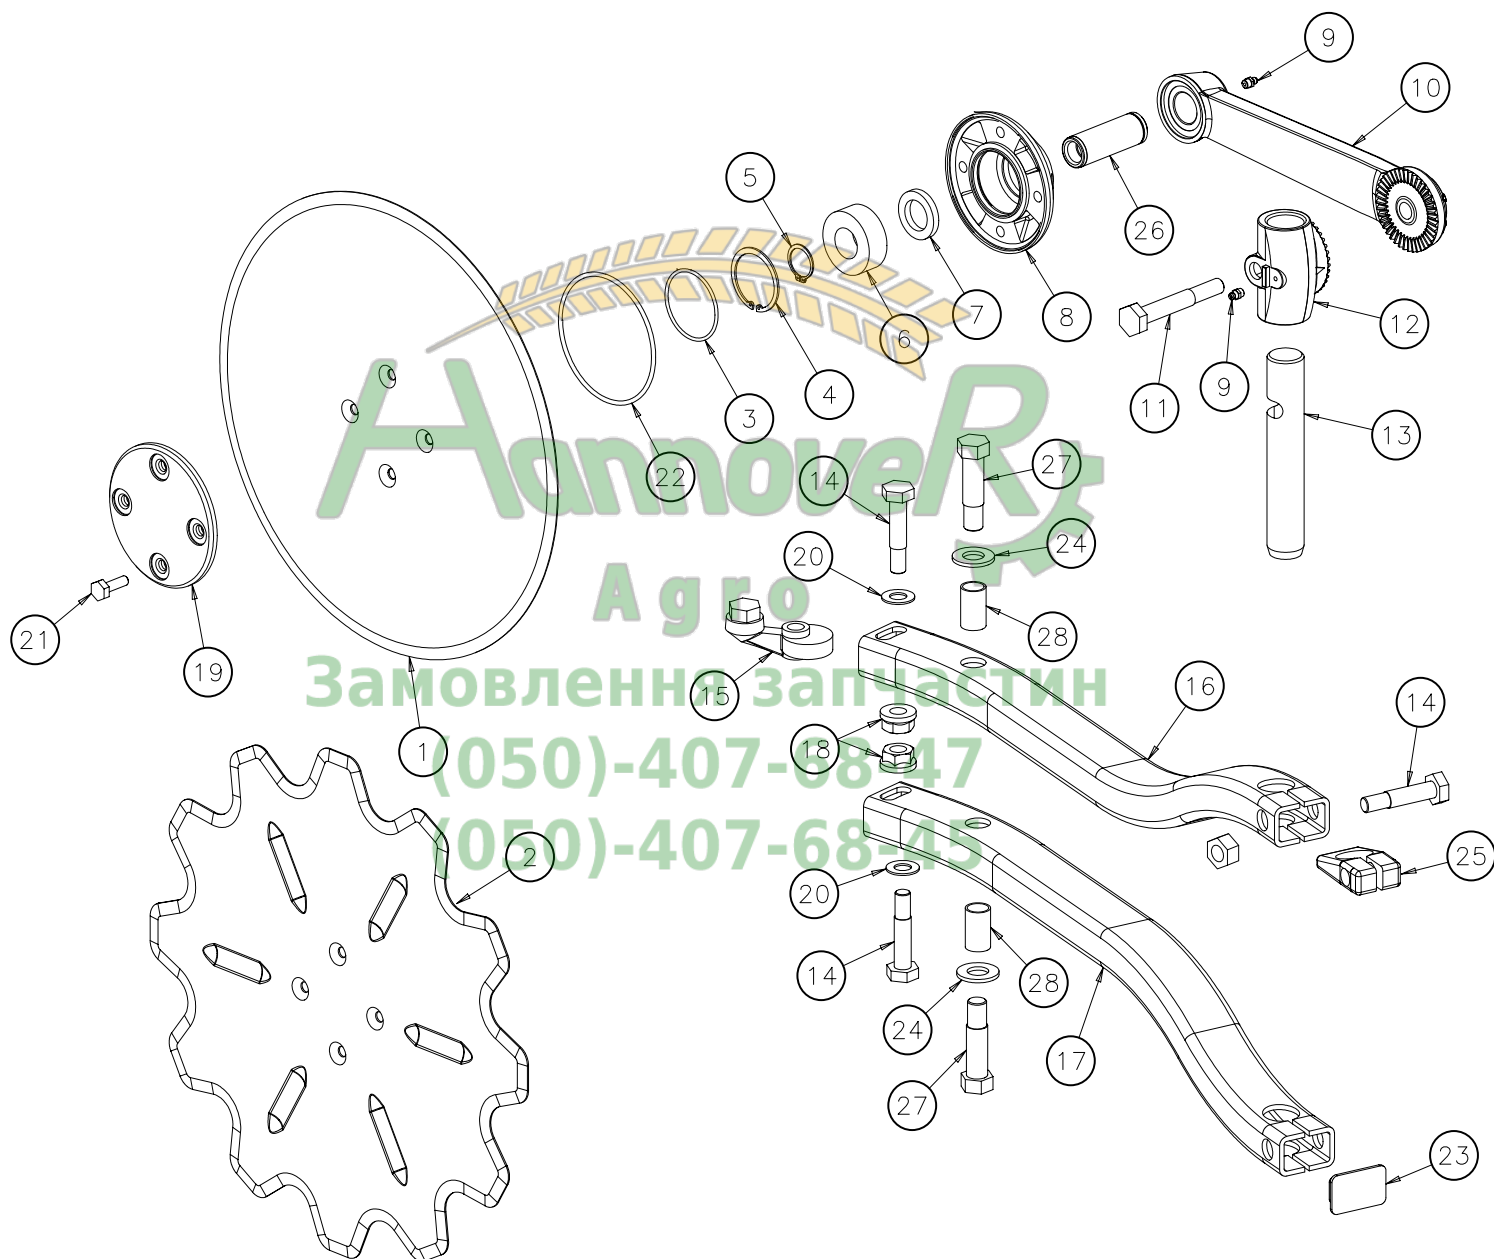

1	KK 07 64 06	Disc coultter 18"
	KK 07 64 07	Disc coultter 20"
2	KK 07 64 09	Disc coultter 18" notched
	KK 07 64 10	Disc coultter 20" notched
3	KK 01 18 66	O-ring
4	KK 01 12 59	Circlip
5	KK 01 12 66	Circlip
6	KK 01 05 72	Bearing
7	KK 01 08 18	Rubber ring (Before 01.01.99)
	KK 01 05 32	Gasket ring (From 01.01.99)
8	KK 08 60 90	Bearing houseing cpl. (ill. no. 2-3-4-5-6-7-8-9-15) (Before 01.01.99)
	KK 08 60 87	Disc coultter bearing cpl. (ill. no. 4-6-7-8) (From 01.01.99)
9	KK 02 99 20	Grease nipple
10	KK 08 60 86	Disc coultter arm w/bearing
11	KK 03 27 02	Hex screw M16 x 110 mm w/nut
12	KK 07 64 00	Support
13	KK 07 65 27	Axle
14	KK 03 27 75	Hex screw M16 x 75 mm w/nut
15	KK 07 64 27	Excenter
16	KK 07 65 32	Tube R
	KK 07 61 22	Tube R (LB240 only)
17	KK 07 65 33	Tube L
	KK 07 61 23	Tube L (LB240 only)
18	KK 01 60 50	Excentric nut M16 (Before 01.10.98)
	KK 01 60 58	Flange nut M16 (From 01.10.98)
19	KK 07 64 99	Plate
20	KK 01 29 23	Washer
21	KK 03 25 40	Hex screw M10 x 40 mm w/nut
22	KK 01 17 50	O-ring
23	KK 01 09 09	Cover
24	KK 01 29 60	Washer
25	KK 07 65 15	Supporting piece for tube
26	KK 07 60 76	Bolt (Before 01.01.99)
	KK 08 61 01	Axle (From 01.01.99)
27	KK 03 28 75	Hex screw M20 x 75 mm w/nut
	KK 03 29 34	Hex screw M24 x 325 mm w/nut (for forward extended disc coultter)
28	KK 07 65 37	Bushing D20 x D24 x 40 mm






1	KK 07 64 06	Disc coulters 18"	22	KK 03 28 30	Hex screw M20 x 30 mm
	KK 07 64 07	Disc coulters 20"		KK 01 58 30	Nut M20
2	KK 07 64 09	Disc coulters, notched 18"	23	KK 03 28 40	Hex screw M20 x 40 mm
	KK 07 64 10	Disc coulters, notched 20"		KK 01 58 30	Nut M20
3	KK 07 64 99	Plate	24	KK 01 60 31	Cone nut M16
4	KK 03 35 40	Screw M10 x 40 mm			
	KK 01 60 04	Lock nut M10			
5	KK 01 17 50	O-ring 124,5 x 4 mm			
6	KK 01 18 66	O-ring 67 x 3 mm			
7	KK 01 12 59	Circlip I 62 x 2 mm			
8	KK 01 12 66	Circlip A 30 x 1,5 mm			
9	KK 01 05 72	Bearing			
10	KK 01 05 32	Gasket ring			
11	KK 08 60 89	Bearing housing cpl. (ill. 3 - 11)			
	KK 08 60 90	Bearing housing cpl. w/axle			
12	KK 08 61 01	Axle			
	KK 08 60 80	Disc coulters arm w/bearing 18", R			
	KK 08 60 81	Disc coulters arm w/bearing 18", L			
	KK 08 60 82	Disc coulters arm w/bearing 20", R			
	KK 08 60 83	Disc coulters arm w/bearing 20", L			
	KK 08 60 84	Disc coulters arm w/bearing 20", lowered R			
	KK 08 60 85	Disc coulters arm w/bearing 20", lowered L			
13	KK 08 61 10	Arm 18", R			
	KK 08 61 12	Arm 20", R			
	KK 08 61 14	Arm 20", lowered R			
14	KK 08 61 11	Arm 18", L			
	KK 08 61 13	Arm 20", L			
	KK 08 61 15	Arm 20", lowered L			
15	KK 06 61 70	Bracket			
16	KK 02 99 20	Grease nipple			
17	KK 06 61 90	Clip			
18	KK 03 50 31	Hex screw M12 x 45 mm			
	KK 01 58 17	Nut M12			
19	KK 06 61 89	Bracket 18"			
	KK 06 61 82	Bracket 20"			
20	KK 06 61 78	Eccentric			
21	KK 06 61 75	U-bolt			



Замовлення запчастин
(050)-407-68-47
(050)-407-68-45


1044 Disc couler LD, LO, SL, RB, RS, RT (rear frame) and RX
(RS, RX from 15.09.99, RB from 01.05.01)

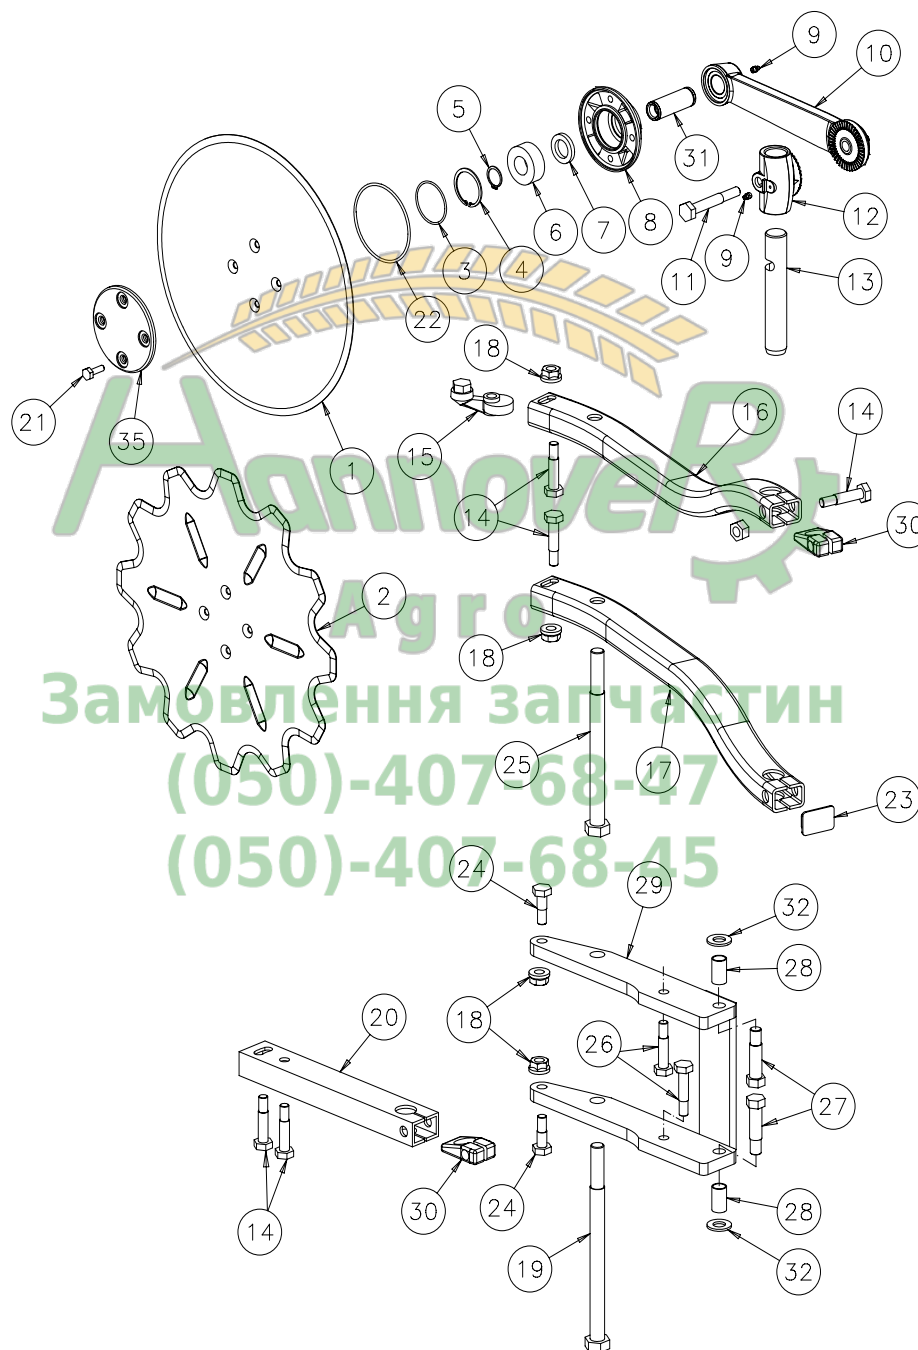


**1044 Disc coulters LD, LO, SL, RB, RS, RT (rear frame) and RX
(RS, RX from 15.09.99, RB from 01.05.01)**


1	KK 07 64 06	Disc coulters 18"		KK 08 61 01	Axle (From 01.01.99)
	KK 07 64 07	Disc coulters 20"		KK 08 60 86	Disc coulters arm w/bearing (From 01.01.99)
2	KK 07 64 09	Disc coulters 18" notched		KK 08 60 87	Disc coulters bearing cpl. (ill. no. 4-6-7-8) (From 01.01.99)
	KK 07 64 10	Disc coulters 20" notched	32	KK 01 29 60	Washer
3	KK 01 18 66	O-ring	33	KK 07 64 99	Plate
4	KK 01 12 59	Circlip			
5	KK 01 12 66	Circlip			
6	KK 01 05 72	Ball bearing			
7	KK 01 08 18	Rubber ring (Before 01.01.99)			
	KK 01 05 32	Gasket ring (From 01.01.99)			
8	KK 80 60 90	Bearing housing cpl. (ill. no. 2-3-4-5-6-7-8-9-15) (Before 01.01.99)			
	KK 08 61 00	Bearing housing cpl. (ill. no. 2-3-4-5-6-7-8-15) (From 01.01.99)			
9	KK 02 99 20	Grease nipple			
10	KK 07 65 75	Arm (From serial no. LD7112)			
11	KK 03 27 02	Hex screw M16 x 110 mm w/nut			
12	KK 07 64 00	Support			
13	KK 07 65 27	Axle			
14	KK 03 27 70	Hex screw M16 x 70 mm w/nut			
15	KK 07 64 27	Excenter			
16	KK 07 65 32	Tube R			
17	KK 07 65 33	Tube L			
18	KK 01 60 50	Excentric nut M16 (Before 01.09.98)			
	KK 01 60 58	Flange nut M16 (From 01.09.98)			
19	KK 03 29 34	Hex screw M24 x 325 mm w/nut for forward extended disc coulters)			
	KK 03 28 85	Hex screw M20 x 85 mm w/nut			
20	KK 07 65 17	Tube disc coulters (for SL)			
	KK 07 65 18	Tube for forward extended disc coulters (for SL)			
21	KK 03 10 30	Screw M10 x 30 mm			
22	KK 01 17 50	O-ring			
23	KK 01 09 09	Cover			
24	KK 03 27 50	Hex screw M16 x 50 mm			
25	KK 03 29 29	Hex screw M24 x 290 mm w/nut			
26	KK 03 27 75	Hex screw M16 x 75 mm w/nut			
27	KK 03 28 80	Hex screw M20 x 80 mm w/nut			
28	KK 07 65 37	Bushing D20 x D24 x 40 mm			
29	KK 07 65 77	Bracket for forward extended disc coulters			
30	KK 07 65 15	Supporting piece for tube			
31	KK 07 60 76	Bolt (Before 01.01.99)			



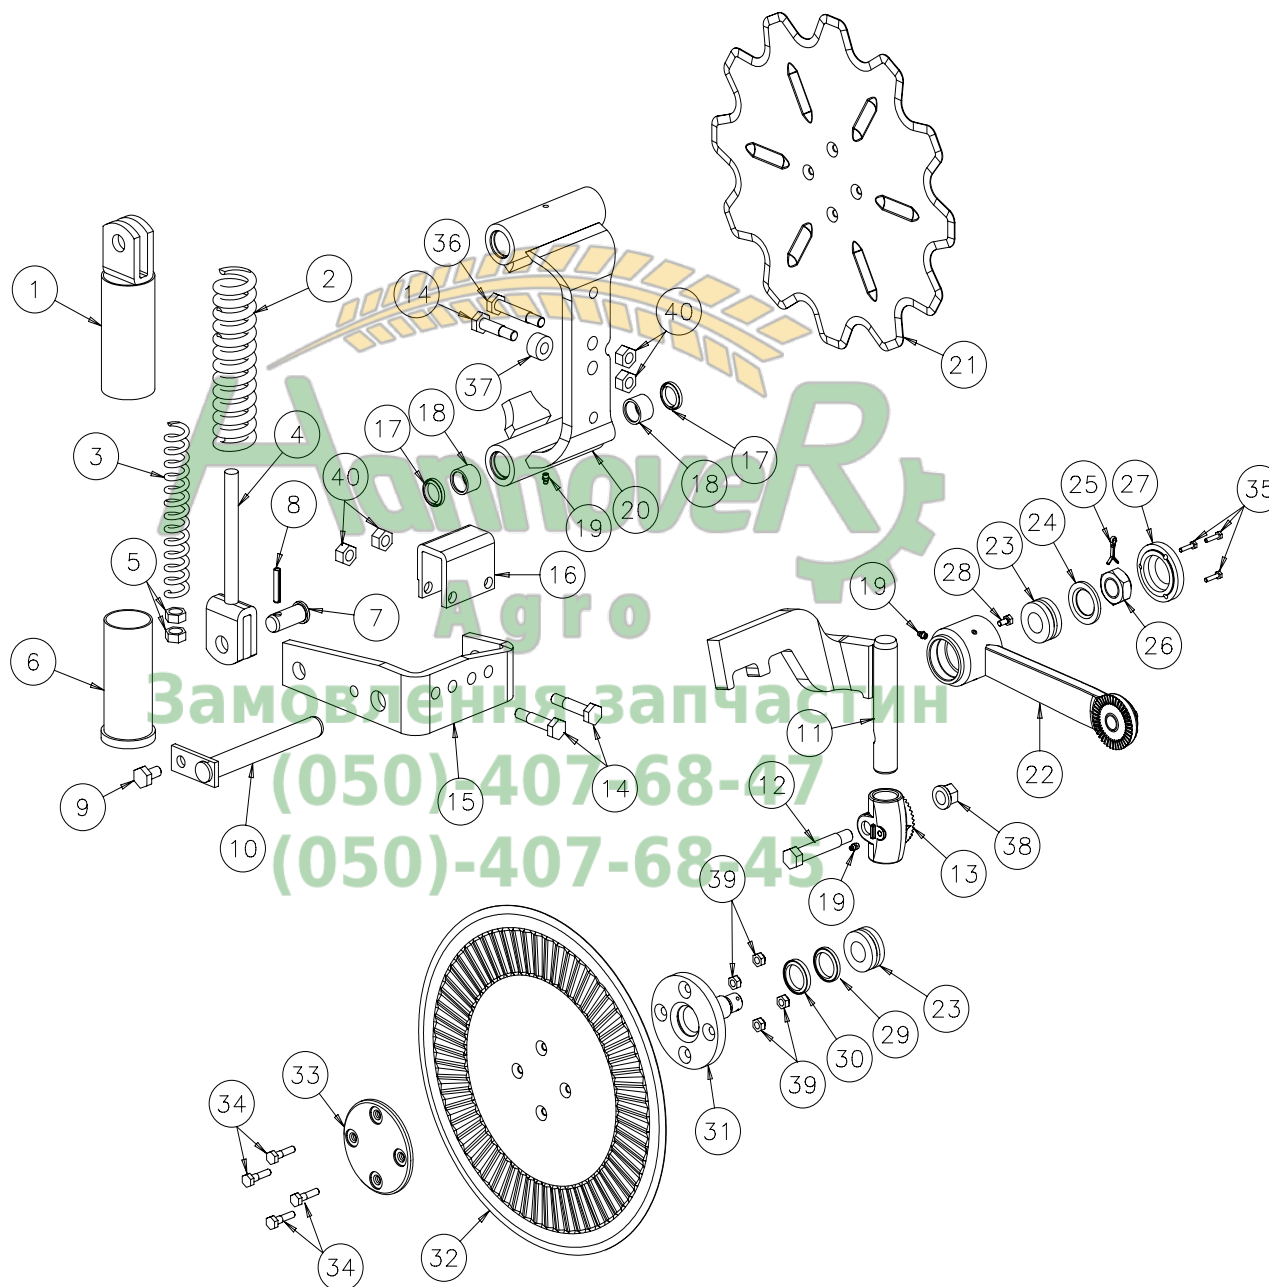


1	KK 07 65 45	Outer tube	30	KK 01 05 83	Gasket ring
2	KK 07 60 23	Spring	31	KK 07 62 85	Axle
3	KK 07 60 22	Spring	32	KK 07 64 09	Disc 18"
4	KK 07 65 48	Clevis w/M20 axle		KK 07 64 07	Disc 20"
5	KK 01 58 34	Nut M20, H = 12		KK 07 62 94	Disc 22" (From 01.07.97)
6	KK 07 65 44	Inner tube	33	KK 07 64 99	Plate
7	KK 07 60 58	Bolt	34	KK 03 51 14	Hex screw M10 x 40 mm w/ lock nut
8	KK 01 10 32	Sleeve D10 x 50 mm	35	KK 03 33 25	Hex screw M6 x 25 mm
9	KK 03 27 25	Hex screw M16 x 27 mm	36	KK 03 27 92	Hex screw M16 x 90 mm
10	KK 07 60 08	Pivot pin	37	KK 07 60 72	Bushing
11	KK 07 60 66	Plate w/axle, L (Before 01.10.02)	38	KK 01 60 12	Flange nut M20
	KK 07 64 35	Plate w/axle D20, L (From 01.10.02)	39	KK 01 60 04	Lock nut M10
	KK 07 60 68	Plate w/axle, R (Before 01.10.02)	40	KK 01 58 25	Nut M16
	KK 07 64 34	Plate w/axle D20, R (From 01.06.02)			
12	KK 03 27 02	Hex screw M16 x 110 mm w/nut (Before 01.10.02)			
	KK 03 51 78	Hex screw M20 x 110 mm w/ flange nut (From 01.10.02)			
13	KK 07 64 00	Support (Before 01.10.02)			
	KK 07 64 37	Support (From 01.10.02)			
14	KK 03 27 75	Hex screw M16 x 75 mm			
15	KK 07 60 65	Hoop, L + R			
16	KK 07 60 53	U-bracket			
17	KK 01 07 72	Gasket ring			
18	KK 01 12 03	Bearing			
19	KK 02 99 20	Grease nipple			
20	KK 07 60 70	Bearing housing			
21	KK 07 64 09	Disc 18" notched			
	KK 07 64 10	Disc 20" notched			
	KK 07 61 48	Disc 22" notched (From 01.07.97)			
22	KK 07 62 96	Arm (Before 01.10.02)			
	KK 07 64 30	Arm (From 01.10.02)			
23	KK 01 62 08	Bearing			
24	KK 01 29 95	Washer			
	KK 07 62 98	Washer (From 01.07.97)			
25	KK 02 97 22	Pin D5 x 50 mm			
26	KK 01 60 52	Nut 1" x 9/16"			
27	KK 07 62 97	Cap			
28	KK 03 34 01	Hex screw M8 x 16 mm			
29	KK 01 05 84	Gasket ring			

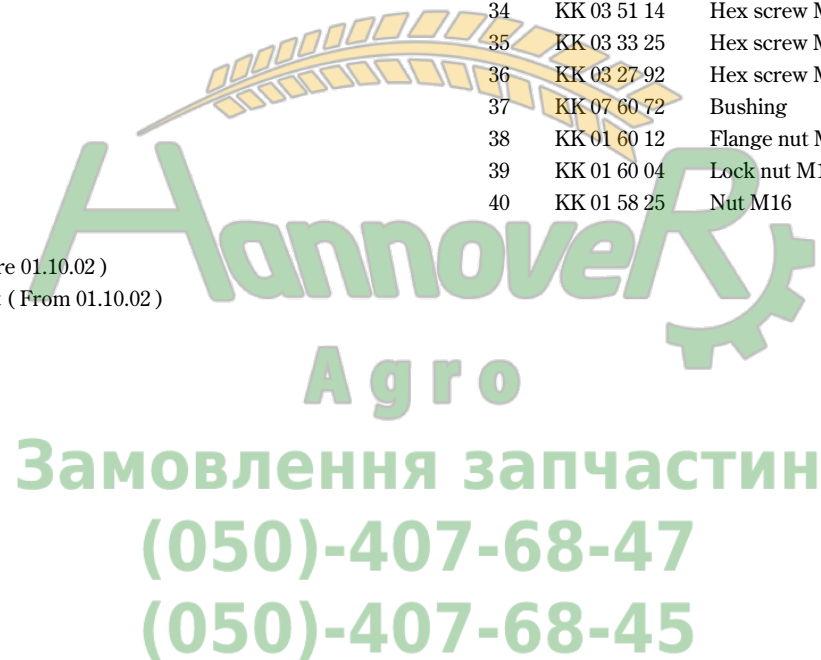

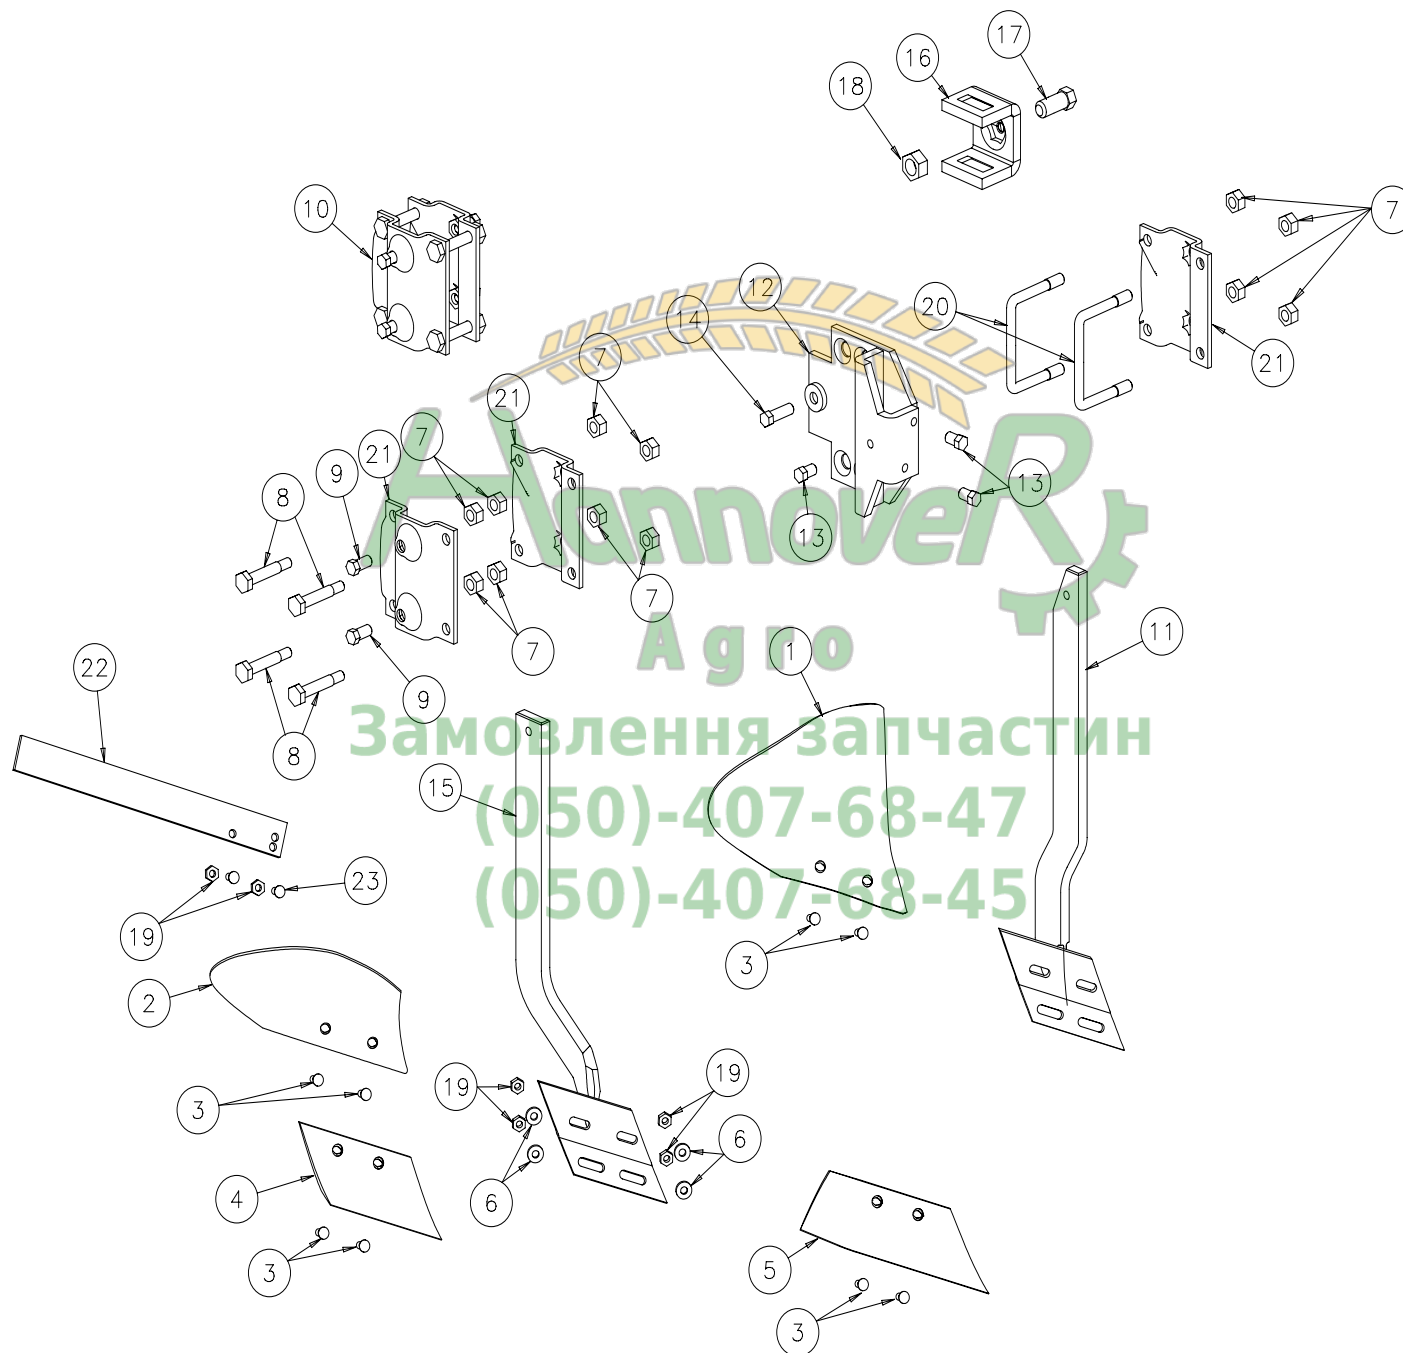


1	KK 07 68 12	Mouldboard maize R	11	KK 06 68 11	Arm R, H = 700 mm for HD beam and std. beam H700
	KK 07 68 13	Mouldboard maize L		KK 07 68 58	Arm R, H = 750 mm for std. beam H800 (From 01.12.00)
2	KK 06 68 80	Mouldboard R	16	KK 07 06 53	Fixing bracket with screw and nut (for beam 071240 and 071241)
	KK 07 69 43	Mouldboard R, plastic	17	KK 03 44 46	Setscrew M24 x 53 mm
	KK 06 68 81	Mouldboard L	18	KK 01 58 41	Nut M24
	KK 07 69 44	Mouldboard L, plastic	19	KK 01 58 16	Nut M10
3	KK 03 30 06	Oval screw M10 x 30 mm	20	KK 08 50 76	Clevis
4	KK 05 68 73	Share, short R	21	KK 06 68 61	Bracket HD beam
	KK 06 68 73	Share, short L			
5	KK 06 68 68	Share, long R			
	KK 06 68 69	Share, long L			
6	KK 01 29 06	Washer 10.5 x 25 x 3.4			
7	KK 01 58 25	Nut M16			
22	KK 08 68 01	Skimmer extension			
23	KK 03 30 07	Oval screw M10 x 35 mm			
for all turnable ploughs with Auto Reset beams:					
8	KK 03 27 95	Hex screw M16 x 95 mm			
9	KK 03 42 28	Setscrew M16 x 32 mm			
10	KK 06 06 57	Bracket cpl.			
11	KK 06 68 11	Arm R, H = 700 mm			
	KK 07 68 58	Arm R, H = 750 mm (From 01.12.00)			
	KK 06 68 12	Arm L, H = 700 mm			
	KK 07 68 59	Arm L, H = 750 mm (From 01.12.00)			
for all turnable ploughs with Shear Bolt beams:					
12	KK 07 06 39	Bracket with screws (for LB, LD, RB, RS, RX)			
	KK 07 68 72	Bracket (for LM, LS, RG, RL, RM, VD)			
13	KK 03 42 25	Setscrew M16 x 25 mm			
14	KK 03 42 50	Setscrew M16 x 50 mm			
15	KK 07 68 17	Arm R, H = 700 mm			
	KK 07 68 18	Arm L, H = 700 mm			
	KK 07 68 25	Arm R, H = 800 mm			
	KK 07 68 26	Arm L, H = 800 mm			
	KK 07 68 33	Arm R, H = 700 mm (for VD plough only) (Before 15.03.98)			
	KK 07 68 34	Arm L, H = 700 mm (for VD plough only) (Before 15.03.98)			
for beams on conventional ploughs:					




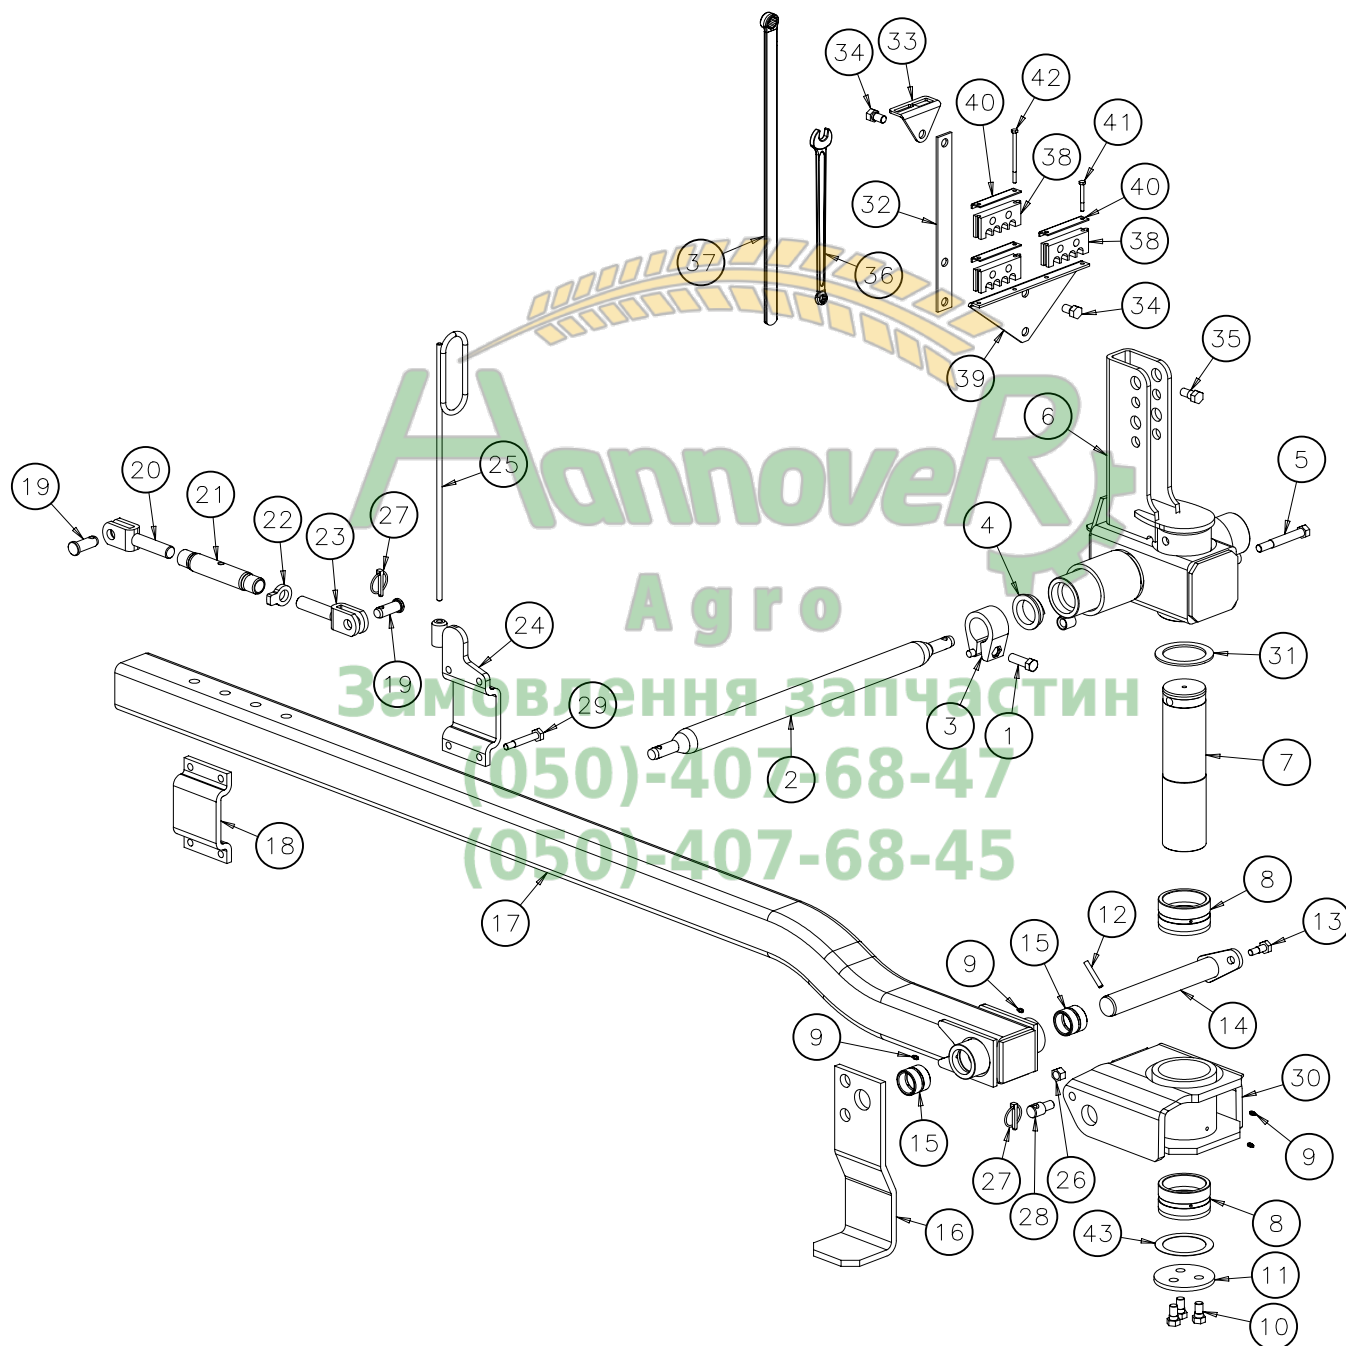


1	KK 03 28 60	Hex screw M20 x 60 mm w/nut	29	KK 03 27 00	Hex screw M16 x 100 mm w/nut
2	KK 06 43 19	Cross-shaft, cat. II, L = 825 mm	30	KK 06 24 50	Turning device, front, w/bushings
	KK 06 43 20	Cross-shaft, cat. II, L = 935 mm	31	KK 01 29 59	Washer D100 x 135 x 6
	KK 06 43 21	Cross-shaft, cat. III, L = 965 mm	32	KK 06 24 58	Arm for holder
	KK 06 43 23	Cross-shaft, cat. III, L = 860 mm	33	KK 06 25 00	Holder for spanner
3	KK 06 43 60	Lock sleeve	34	KK 03 28 30	Hex screw M20 x 30 mm w/nut
4	KK 06 43 17	Bushing	35	KK 03 28 40	Hex screw M20 x 40 mm w/nut
5	KK 03 28 15	Hex screw M20 x 140 mm w/nut	36	KK 01 06 06	Spanner (19 - 27)
6	KK 06 24 51	Headstock	37	KK 01 06 27	Spanner (27 - 36)
7	KK 06 24 53	Axle w/plate mounted D100 x 404 mm	38	KK 01 21 85	Holder for hose
8	KK 01 16 85	Bushing D120 x 100 x 70 mm	39	KK 06 25 05	Plate
9	KK 02 99 20	Grease nipple M8 x 1 mm	40	KK 06 25 06	Clamp
10	KK 03 28 35	Hex screw M20 x 35 mm (for PD and PB from 15.10.94)	41	KK 03 24 70	Hex screw M8 x 70 mm w/nut
	KK 03 27 25	Hex screw M16 x 27 mm (for PB, before 15.10.94)	42	KK 03 24 03	Hex screw M8 x 130 mm w/nut
11	KK 06 24 55	Plate	43	KK 01 29 87	Ring D100 x 135 x 1 mm (From ser. no. PB1309)
12	KK 01 10 05	Roll pin D10 x 70 mm			
13	KK 03 27 45	Hex screw M16 x 45 mm w/nut			
14	KK 06 24 57	Axle D50 x 340 mm			
15	KK 01 16 82	Bushing 50 x 62 x 50 mm			
16	KK 06 24 14	Machine stand for beam 700 mm			
	KK 07 85 31	Machine stand for beam 800 mm			
17	KK 06 24 52	Dragbar for 4, 5 + 6 furrow (for PB-100) and 4 + 5 furrow (for PB-115) (Replaces 062513) and 5 + 6 furrows (for PD-100)			
	KK 07 87 79	Straight beam 2,9 m for Germany (From ser. no. PB1444)			
	KK 07 86 75	Straight beam 6,9 m for Germany (From ser. no. PB1444)			
	KK 07 87 77	Dragbar for 7 + 8 furrow (for PB-100) and 6 + 7 furrow (for PB-115)			
18	KK 06 24 24	Fix for hose			
19	KK 12 30 05	Bolt 25,3 x 50 mm			
20	KK 35 11 13	Screw w/hoop L. thread M30 x 2			
21	KK 35 11 10	Tube M30 x 2			
22	KK 35 61 31	Lock nut M30 x 2			
23	KK 35 11 11	Screw w/hoop R. thread M30 w/clevis			
	KK 36 11 33	Turnbuckle cpl.			
24	KK 06 24 33	Fix for hose			
25	KK 06 86 70	Fix for hose			
26	KK 01 58 30	Nut M20			
27	KK 01 07 00	Pin 12 mm			
28	KK 06 24 09	Pin			

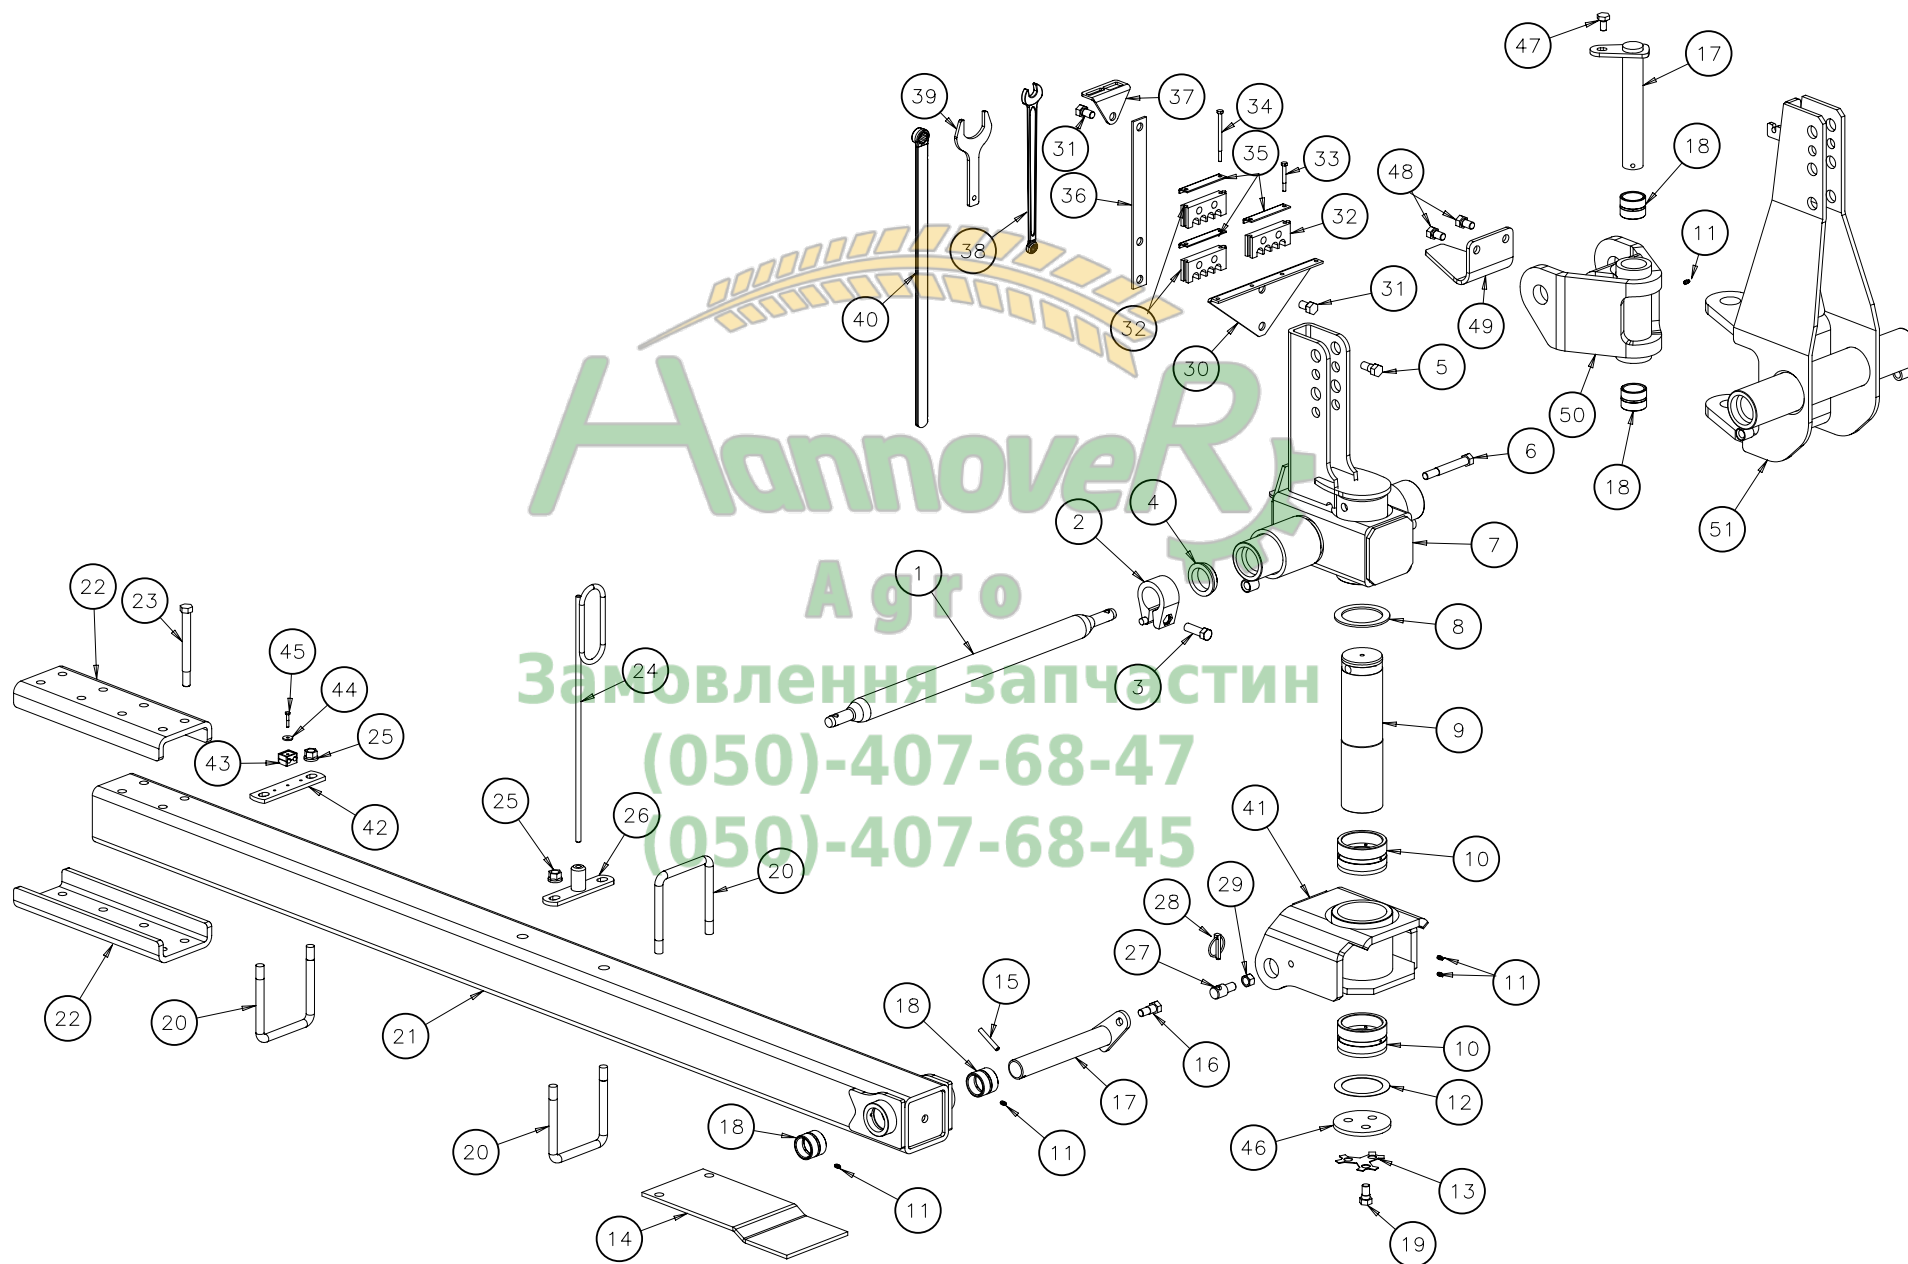



1	KK 06 43 19	Cross shaft, cat. II, L = 825 mm	33	KK 03 24 70	Hex screw M8 x 70 mm w/nut
	KK 06 43 20	Cross shaft, cat. II, L = 935 mm	34	KK 03 24 03	Hex screw M8 x 130 mm w/nut
	KK 06 43 21	Cross shaft, cat. III, L = 965 mm	35	KK 06 25 06	Clamp
	KK 06 43 23	Cross shaft, cat. III, L = 860 mm	36	KK 06 24 58	Arm for holder
2	KK 06 43 60	Lock sleeve	37	KK 06 25 00	Holder for spanner
3	KK 03 28 60	Hex screw M20 x 60 mm w/nut	38	KK 01 06 06	Spanner (19 - 27)
4	KK 06 43 17	Bushing	39	KK 01 06 55	Spanner for turn over cylinder
5	KK 03 28 40	Hex screw M20 x 40 mm w/nut	40	KK 01 06 27	Spanner (27 - 36)
6	KK 03 28 15	Hex screw M20 x 140 mm w/nut	41	KK 06 24 50	Turning device, front w/bushings (Before 06.01.96)
7	KK 06 24 51	Headstock		KK 07 71 26	Turning device, front w/bushings (From 06.01.96)
8	KK 01 29 59	Washer 100 x 135 x 6 mm		KK 07 71 57	Turning device, front w/bushings (From 01.09.97)
9	KK 06 24 54	Axle with plate mounted D100 x 404 mm	42	KK 06 23 95	Plate
10	KK 01 16 85	Steel bushing D120 x 100 x 70 mm	43	KK 01 21 71	Plastic clips
11	KK 02 99 20	Grease nipple M8 x 1 mm	44	KK 01 29 84	Washer 6.4 x 21 x 2.4 mm
12	KK 01 29 87	Ring D100 x 135 x 1 mm	45	KK 03 23 35	Hex screw M6 x 35 mm
13	KK 07 28 17	Lock plate (From 01.08.00)	46	KK 06 24 55	Plate
14	KK 07 71 27	Supporting plate (From 01.09.97)	47	KK 03 27 30	Hex screw M16 x 30 mm w/nut (From 15.11.00)
15	KK 01 10 05	Roll pin D10 x 70 mm	48	KK 03 28 30	Hex scrwe M20 x 30 mm w/nut (From 15.11.00)
16	KK 03 28 45	Hex screw M20 x 45 mm	49	KK 07 86 96	Support (From 15.11.00)
17	KK 06 24 57	Axle D50 x 340 mm	50	KK 07 86 93	Universal joint (From 15.11.00)
	KK 07 88 98	Axle D50 x 305 mm (From 01.09.97)	51	KK 08 11 50	Headstock (From 15.11.00)
18	KK 01 16 82	Steel bushing D50 x 62 x 50 mm			
19	KK 03 28 35	Hex screw M20 x 35 mm (From 15.10.94)			
	KK 03 27 25	Hex screw M16 x 27 mm (Before 15.10.94)			
20	KK 06 22 70	U-bolt M20			
21	KK 07 85 60	Straight beam (Before 06.01.96)			
	KK 07 71 20	Straight beam (From 06.01.96)			
22	KK 07 85 64	Supporting plate			
23	KK 03 28 20	Hex screw M20 x 200 mm w/nut			
24	KK 06 86 70	Fix for hose			
25	KK 01 60 12	Nut M20			
26	KK 07 85 58	Bracket			
27	KK 06 24 09	Pin			
28	KK 01 07 00	Pin 12 mm			
29	KK 01 58 35	Nut M20			
30	KK 06 25 05	Plate			
31	KK 03 28 30	Hex screw M20 x 30 mm w/nut			
32	KK 01 21 85	Fix for hose			

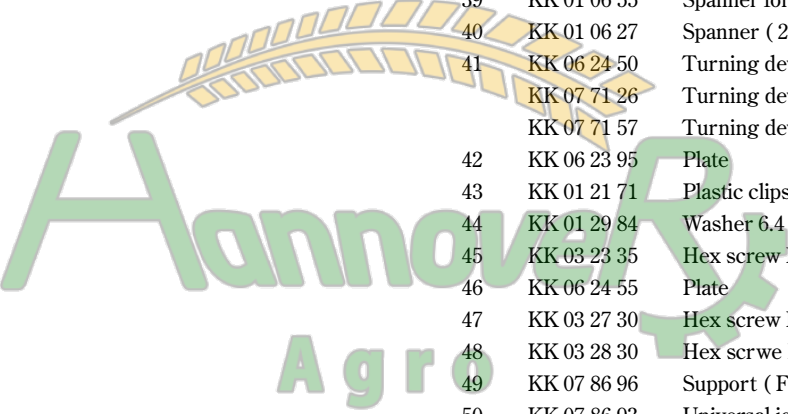
 Заповнення запчастин
 (050)-407-68-47
 (050)-407-68-45

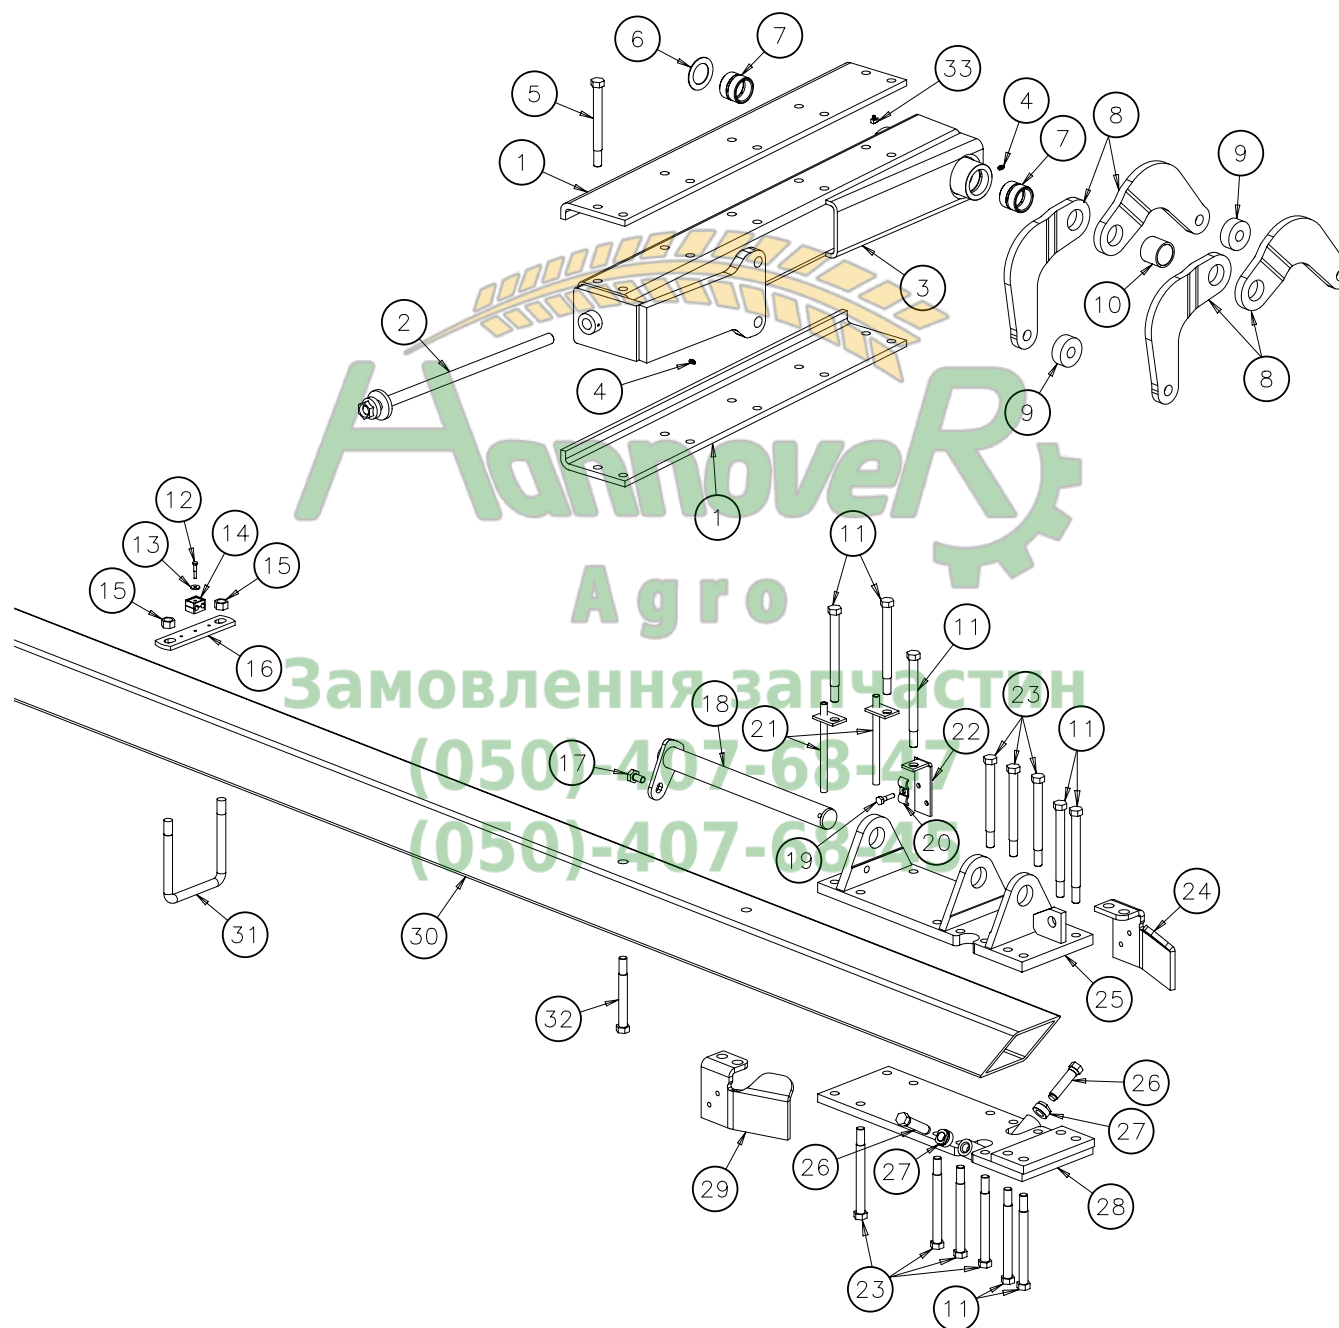


1	KK 07 87 40	Slide	KK 07 87 14	Main tube 150 x 150 x 12,5 mm, PB-100, 7 furrow (078659 from ser. no. PB1444 to Germany)	
2	KK 07 87 57	Adjusting screw	KK 07 87 15	Main tube 150 x 150 x 12,5 mm, PB-100, 8 furrow (078670 from ser. no. PB1444 to Germany)	
3	KK 07 87 25	Lift arm w/50 mm axle hole w/bushings and w/25 mm hole for clevis	KK 07 86 53	Main tube 150 x 150 x 12,5 mm, PB-115, 4 furrow (From ser. no. PB1391, 078671 from ser. no. PB1444 to Germany)	
4	KK 02 99 20	Grease nipple M8 x 1 mm	KK 06 23 90	Main tube 150 x 150 x 12,5 mm, PB-115, 4 furrow (Before ser. no. PB1391)	
5	KK 03 28 20	Hex screw M20 x 200 mm w/nut	KK 07 86 54	Main tube 150 x 150 x 12,5 mm, PB-115, 5 furrow (From ser. no. PB1391, 078672 from ser. no. PB1444 to Germany)	
6	KK 01 29 57	Washer D50 x 82 x 2 mm	KK 06 24 62	Main tube 150 x 150 x 12,5 mm, PB-115, 5 furrow (Before ser. no. PB1391)	
7	KK 01 16 82	Bushing D50 x 62 x 50 mm	KK 07 86 55	Main tube 150 x 150 x 12,5 mm, PB-115, 6 furrow (From ser. no. PB1391, 078673 from ser. no. PB1444 to Germany)	
8	KK 06 24 37	Arm, bend to 50 mm axle, w/25 mm hole to clevis	KK 07 87 26	Main tube 150 x 150 x 12,5 mm, PB-115, 6 furrow (Before ser. no. PB1391)	
9	KK 06 24 39	Roll for arm, w/25 mm hole	KK 07 87 27	Main tube 150 x 150 x 12,5 mm, PB-115, 7 furrow (078674 from ser. no. PB1444 to Germany)	
10	KK 06 24 43	Spacer for arm w/50 mm hole	31	KK 06 22 70	U-bolt M20
11	KK 03 28 28	Hex screw M20 x 220 mm w/nut	32	KK 03 28 13	Hex screw M20 x 170 mm w/nut
12	KK 03 23 35	Hex screw M6 x 35 mm	33	KK 02 99 22	Grease nipple M8 x 1 mm, 90°
13	KK 01 29 84	Washer 6.4 x 21 x 2.4 mm			
14	KK 01 21 71	Plastic clips			
15	KK 01 58 30	Nut M20			
16	KK 06 23 95	Clamp			
17	KK 03 27 25	Hex screw M16 x 27 mm			
18	KK 06 24 21	Axle D50 mm			
19	KK 03 25 40	Hex screw M10 x 40 mm w/nut	Not ill.	KK 07 86 78	Clamp plate to main tube for Germany (From ser. no. PB1444)
20	KK 06 19 42	Fix for hose		KK 07 86 80	Clamp plate to main tube w/fix for hose for Germany (From ser. no. PB1444)
21	KK 06 24 93	Tube D12		KK 07 86 79	Spacer plate for Germany (From ser. no. PB1444)
22	KK 06 23 97	Fix for hose			
23	KK 03 28 21	Hex screw M20 x 210 mm w/nut			
24	KK 06 24 49	Cover L.			
25	KK 06 24 35	Plate (For Germany 078676, to fit straight tube)			
26	KK 06 70 39	Adjusting screw M24 x 90 mm			
27	KK 06 18 95	Nut M24			
28	KK 06 24 40	Plate (For Germany 078677, to fit straight tube)			
29	KK 06 24 91	Cover R.			
30	KK 07 86 50	Main tube 150 x 150 x 12,5 mm, PB-100, 4 furrow (From ser. no. PB1391, 078656 from ser. no. PB1444 to Germany)			
	KK 06 23 88	Main tube 150 x 150 x 12,5 mm, PB-100, 4 furrow (Before ser. no. PB1391)			
	KK 07 86 51	Main tube 150 x 150 x 12,5 mm, PB-100, 5 furrow (From ser. no. PB1391, 078657 from ser. no. PB1444 to Germany)			
	KK 07 87 12	Main tube 150 x 150 x 12,5 mm, PB-100, 5 furrow (Before ser. no. PB1391)			
	KK 07 86 52	Main tube 150 x 150 x 12,5 mm, PB-100, 6 furrow (From ser. no. PB1391, 078658 from ser. no. PB1444 to Germany)			
	KK 07 87 13	Main tube 150 x 150 x 12,5 mm, PB-100, 6 furrow (Before ser. no. PB1391)			

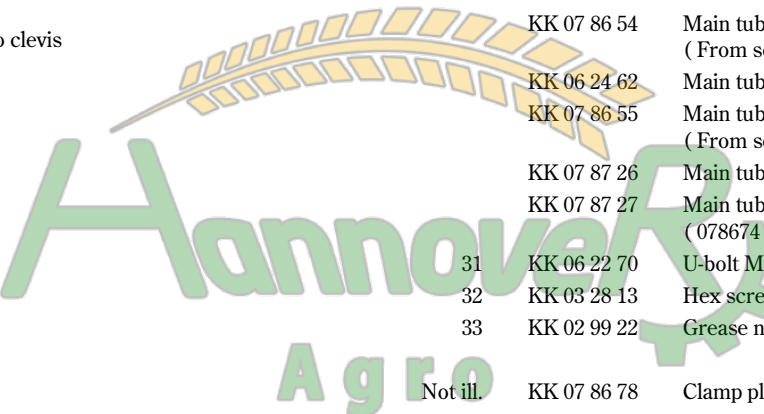
 Hannover
 Agro
 Заповнення за частин
 (050)-407-68-47
 (050)-407-68-45

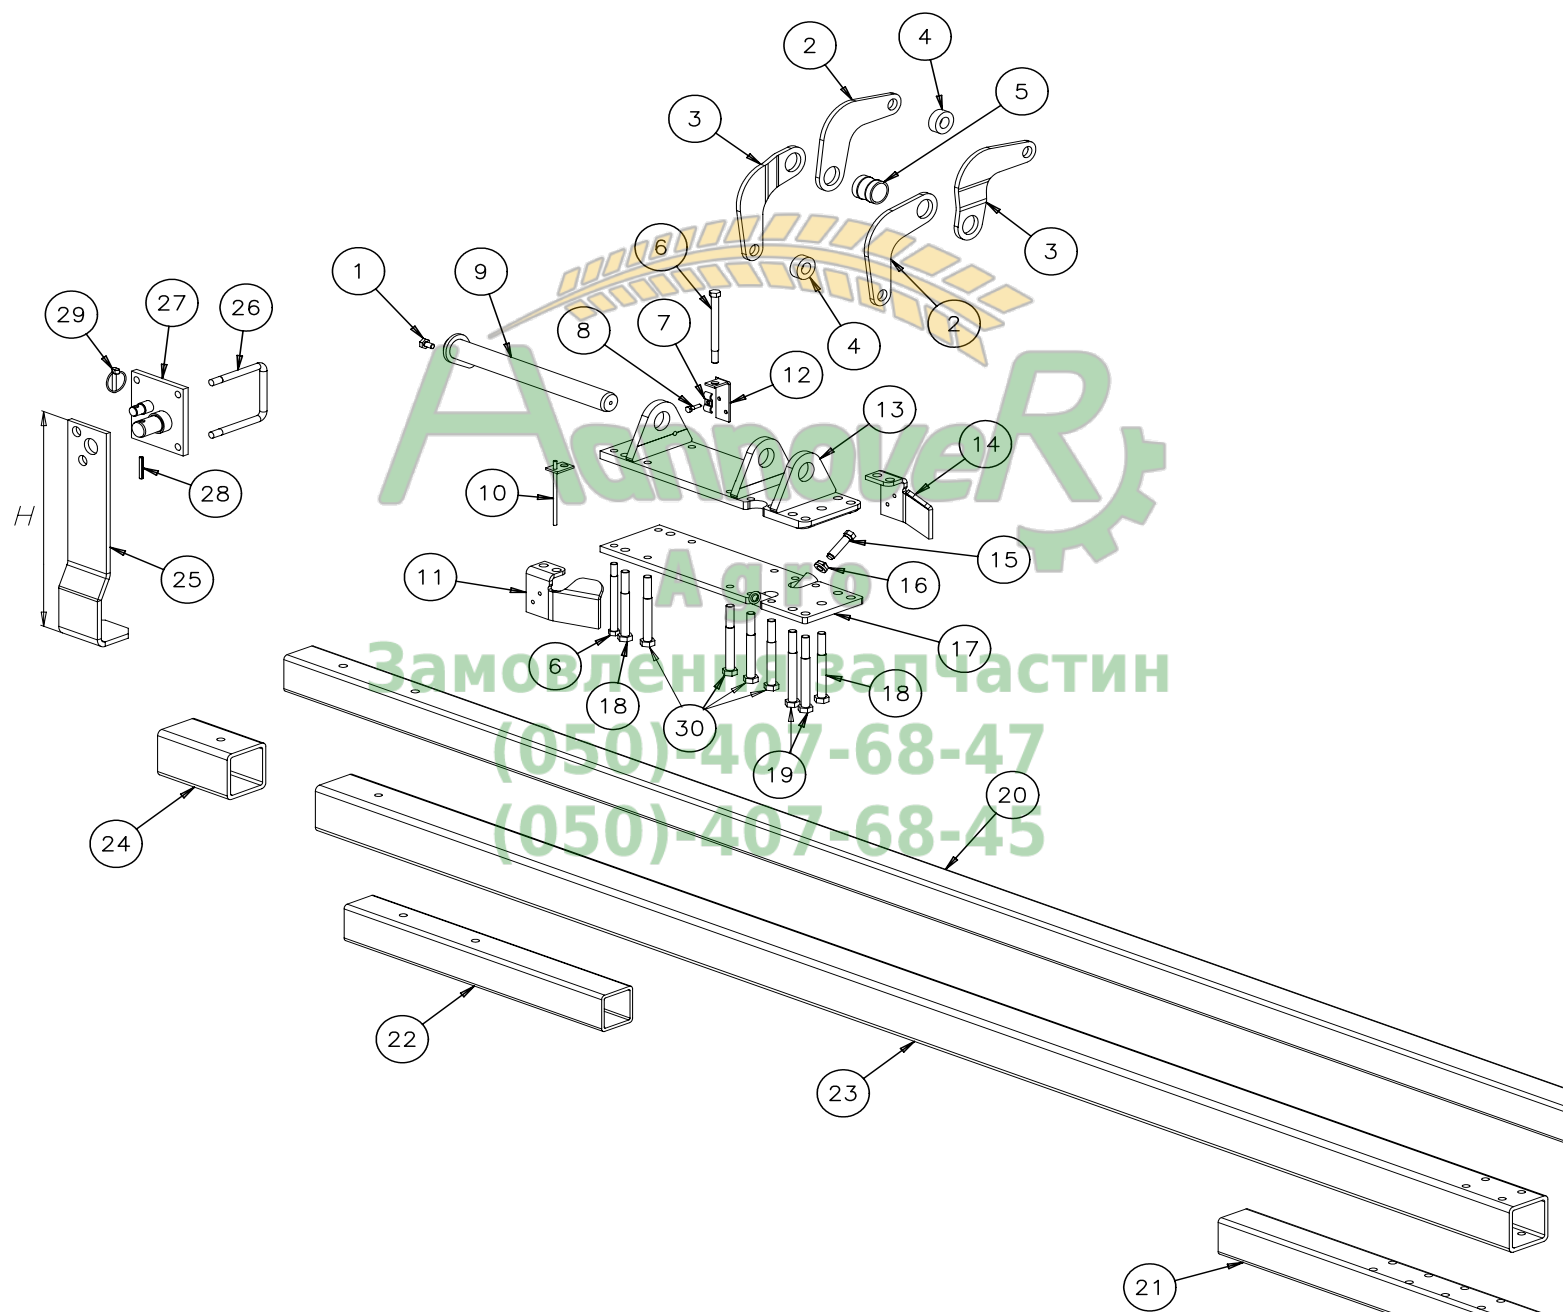

1	KK 03 27 25	Hex screw M16 x 27 mm w/nut	24	KK 07 85 79	Splicing piece, outer
2	KK 07 85 26	Arm, bend to 60 mm axle, w/25 mm hole to clevis (Before PB1515)	25	KK 07 85 31	Machine stand (H = 550) for beam 700 PB/ RB
	KK 07 85 55	Arm, straight to 60 mm axle, w/35 mm hole to clevis (From PB1515)		KK 07 85 30	Machine stand (H = 630) for beam 800 PB
3	KK 07 85 49	Arm, bend to 60 mm axle, w/35 mm hole to clevis (From PB1515)		KK 07 98 24	Machine stand (H = 700) for beam 800 RB
4	KK 07 85 82	Roll for arm, w/35 mm hole (From PB1515)	26	KK 06 22 70	U-bolt M20 x 150 x 195 mm
5	KK 07 85 27	Spacer for arm w/60 mm hole, L = 50 mm (Before PB1515)	27	KK 07 71 14	Holder for machine stand
	KK 07 85 50	Spacer for arm w/60 mm hole, L = 70 mm (From PB1515)	28	KK 01 10 05	Roll pin
6	KK 03 28 28	Hex screw M20 x 220 mm w/nut	29	KK 01 07 00	Pin D12
7	KK 06 19 42	Fix for hose	30	KK 03 28 21	Hex screw M20 x 210 mm w/nut
8	KK 03 25 40	Hex screw M10 x 40 mm w/nut			
9	KK 07 85 46	Axle D60 x 595 mm (Before 01.06.99)	Not ill.	KK 07 85 19	Lift arm w/60 mm axle hole w/bushing, w/25 mm hole to clevis (Before PB1515)
	KK 07 85 98	Axle D60 x 595 mm w/bushings (From 01.06.99)		KK 07 85 80	Lift arm w/60 mm axle hole w/bushing, w/35 mm hole to clevis (From PB1515)
10	KK 07 85 85	Tube D10			
11	KK 07 85 37	Cover, R			
12	KK 06 23 97	Fix for hose			
13	KK 07 86 76	Main bearing			
14	KK 07 85 38	Cover, L			
15	KK 06 70 39	Adjustment screw M24 x 90 mm			
16	KK 06 18 99	Nut M24			
17	KK 07 86 77	Plate			
18	KK 03 29 21	Hex screw M24 x 210 mm w/nut			
19	KK 03 29 31	Hex screw M24 x 230 mm w/nut			
20	KK 07 98 37	Supporting tube inner RB-100, 7 furrow			
	KK 07 98 38	Supporting tube inner RB-100, 8 furrow			
	KK 07 85 65	Supporting tube inner PB-100, 7 furrow			
	KK 07 85 66	Supporting tube inner PB-100, 8 furrow			
	KK 07 85 67	Supporting tube inner PB-115, 7 furrow			
21	KK 07 85 68	Supporting tube inner, front, all 4, 5 and 6 furrow			
22	KK 07 85 69	Supporting tube inner, rear, all 4, 5 and 6 furrow			
23	KK 07 85 70	Main tube, rear section, PB/RB-100, 4 furrow			
	KK 07 85 71	Main tube, rear section, PB/RB-100, 5 furrow			
	KK 07 85 72	Main tube, rear section, PB/RB-100, 6 furrow			
	KK 07 85 73	Main tube, rear section, PB/RB-100, 7 furrow			
	KK 07 85 74	Main tube, rear section, PB/RB-100, 8 furrow			
	KK 07 85 75	Main tube, rear section, PB-115, 4 furrow			
	KK 07 85 76	Main tube, rear section, PB-115, 5 furrow			
	KK 07 85 77	Main tube, rear section, PB-115, 6 furrow			
	KK 07 85 78	Main tube, rear section, PB-115, 7 furrow			




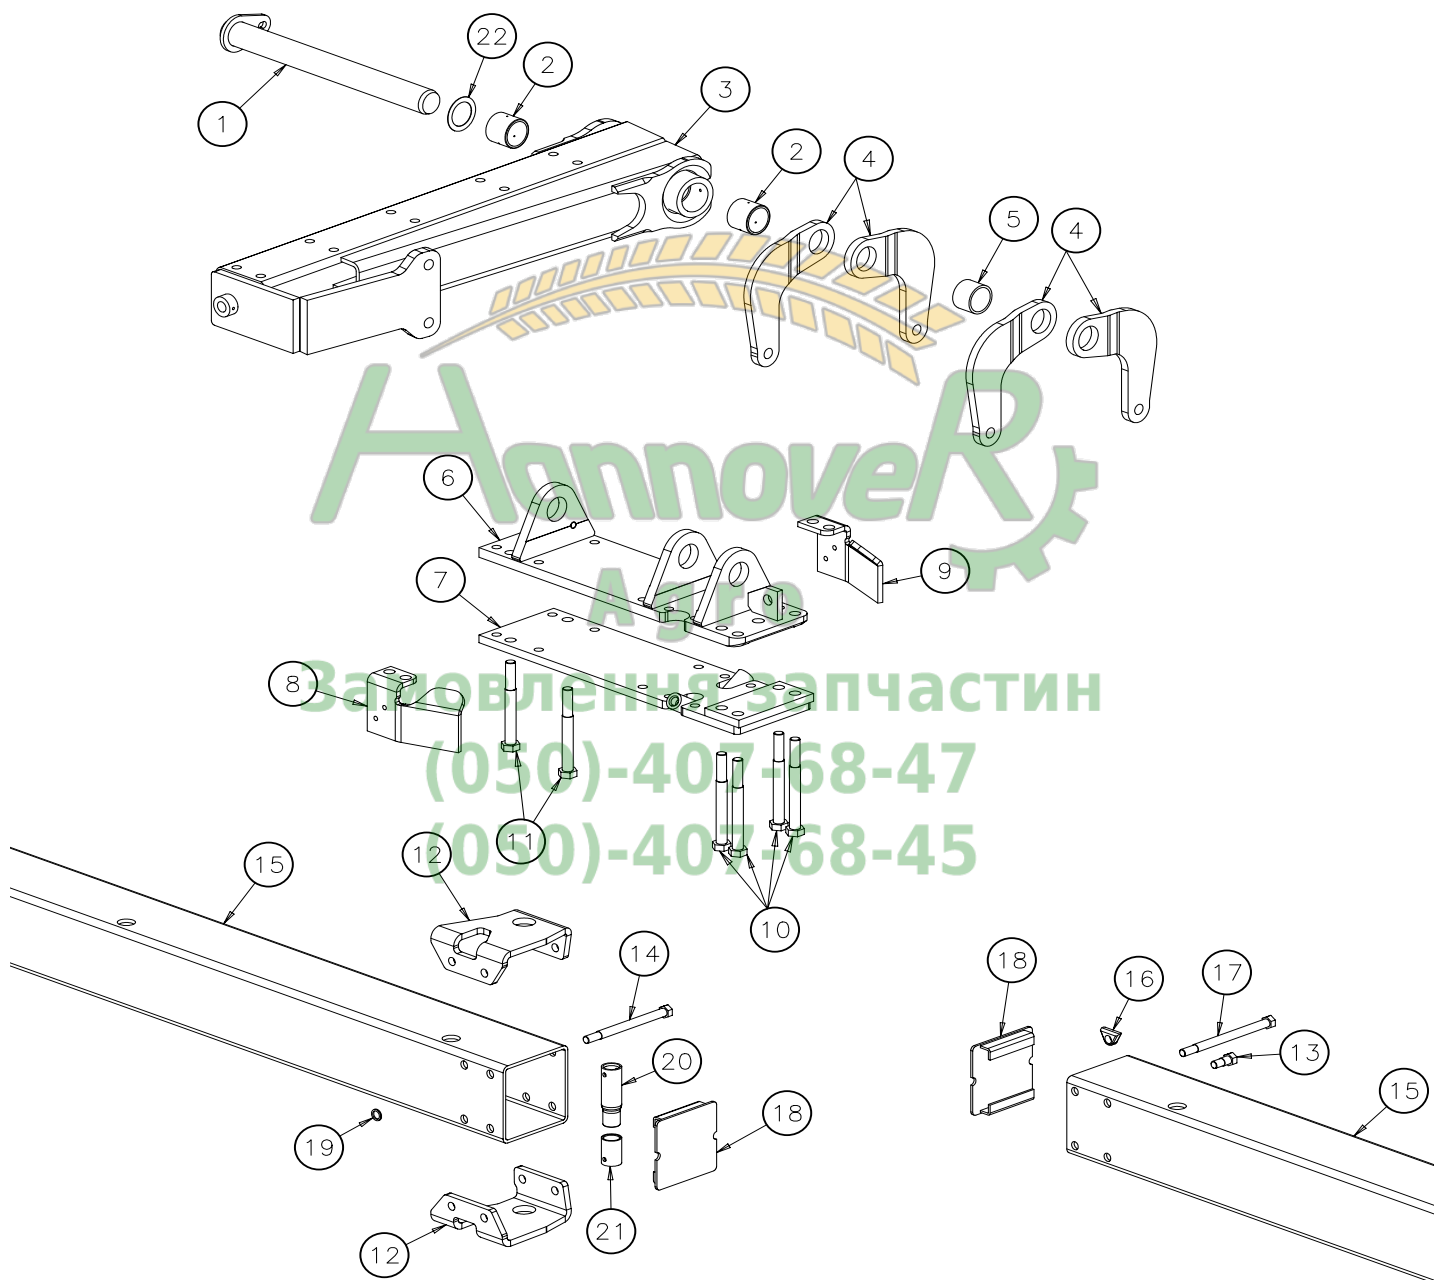


1	KK 07 85 46	Axle D60 x 595 mm
2	KK 01 16 91	Bushing D60 x D72 x 60 mm
3	KK 07 85 19	Lift arm w/60 mm axle hole w/bushings and w/25 mm hole for clevis
4	KK 07 85 26	Arm, bend to 60 mm axle, w/25 mm hole to clevis
5	KK 07 85 27	Spacer for arm w/60 mm hole, L = 50 mm
6	KK 07 85 45	Main bearing
7	KK 07 85 40	Plate
8	KK 07 85 37	Cover R.
9	KK 07 85 38	Cover L.
10	KK 03 29 31	Hex screw M24 x 230mm w/nut
11	KK 03 29 21	Hex screw M24 x 210mm w/nut
12	KK 07 86 90	Fix for supporting device, upper
	KK 07 86 91	Fix for supporting device, lower
13	KK 03 28 45	Hex screw M20 x 45mm
14	KK 03 28 36	Hex screw M20 x 240mm
15	KK 07 87 07	Frame tube 200 x 200 mm, PB-100, 7 furrow
	KK 07 87 05	Frame tube 200 x 200 mm, PB-100, 8 furrow
	KK 07 87 06	Frame tube 200 x 200 mm, PB-115, 6 furrow
	KK 07 87 19	Frame tube 200 x 200 mm, PB-115, 7 furrow
16	KK 06 12 79	Threaded piece M20
17	KK 03 28 26	Hex screw M20 x 260 mm w/nut
18	KK 07 87 85	Cover for 200 x 200 tube
19	KK 01 29 31	Washer D20.5 x 28 x 3 mm
20	KK 07 14 11	Inner bushing
21	KK 07 14 10	Other bushing
	KK 07 14 12	Bushing cpl.
22	KK 01 29 56	Washer D85 x D60 x 1




Замовлення запчастин
(050)-407-68-47
(050)-407-68-45

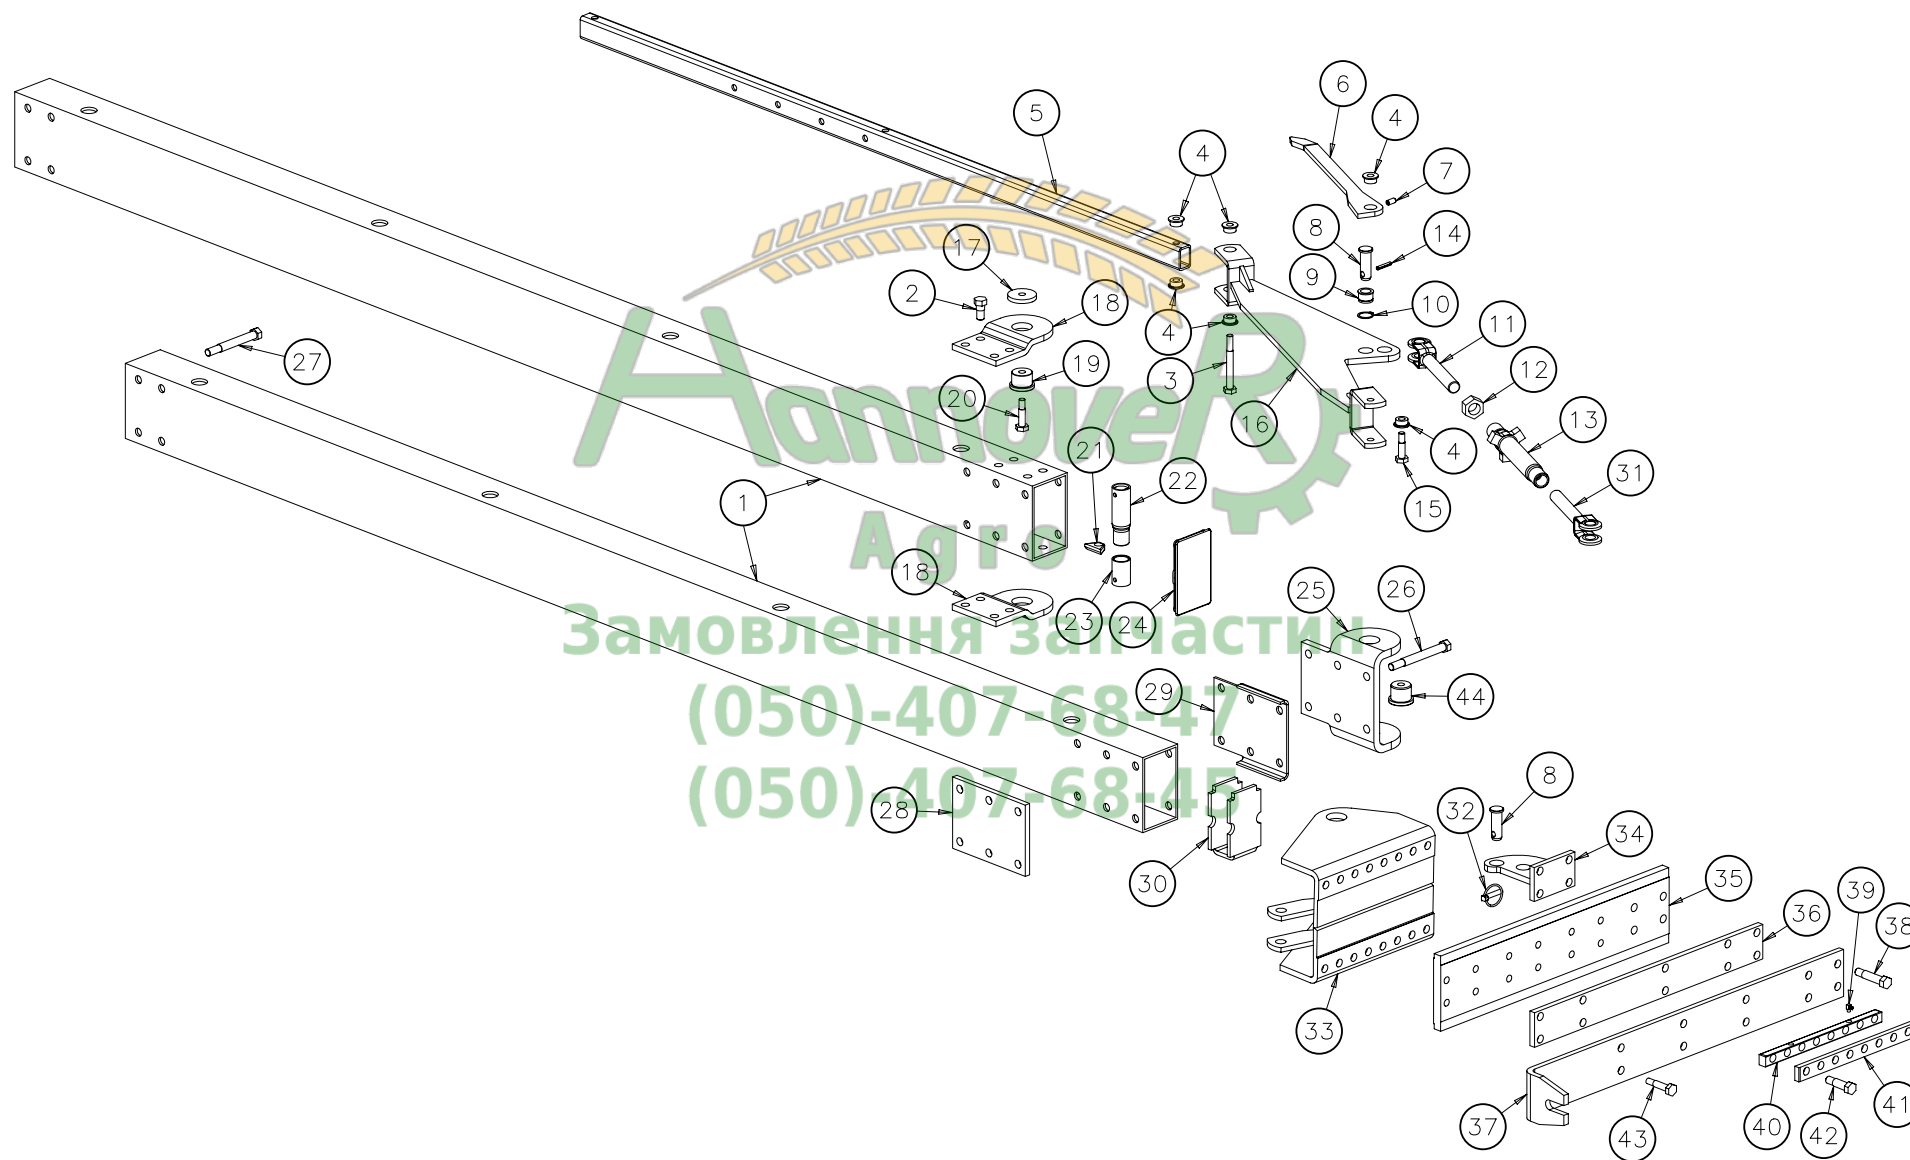

1	KK 07 87 01	Frame tube 120 x 200 mm, PB-100, 4 furrow	KK 07 87 61	Bracket PB-115	
	KK 07 87 02	Frame tube 120 x 200 mm, PB-100, 5 furrow	17	KK 01 29 24	Washer 16.5 x 70 x 10 mm
	KK 07 87 03	Frame tube 120 x 200 mm, PB-100, 6 furrow	18	KK 07 87 45	Fix for supporting device (Before ser. no. PB1365)
	KK 07 87 04	Frame tube 120 x 200 mm, PB-100, 7 furrow (Before ser. no. PB1155)	19	KK 07 87 44	Axle (Before ser. no. PB1365)
	KK 07 87 05	Frame tube 200 x 200 mm, PB-100, 8 furrow	20	KK 03 27 70	Hex screw M16 x 70 mm w/nut
	KK 07 87 16	Frame tube 120 x 200 mm, PB-115, 4 furrow	21	KK 06 12 79	Threaded piece M20
	KK 07 87 17	Frame tube 120 x 200 mm, PB-115, 5 furrow	22	KK 07 14 11	Inner bushing
	KK 07 87 18	Frame tube 120 x 200 mm, PB-115, 6 furrow (Before ser. no. PB1155)	23	KK 07 14 10	Outer bushing
	KK 07 87 19	Frame tube 200 x 200 mm, PB-115, 7 furrow		KK 07 14 12	Bushing cpl.
2	KK 03 28 40	Hex screw M20 x 40 mm	24	KK 01 09 07	Plastic cover 120 x 200 mm (From ser. no. PB1309)
3	KK 03 27 16	Hex screw M16 x 140 mm w/nut	25	KK 07 87 08	Fix for supporting piece (From ser. no. PB1365)
4	KK 07 16 64	Bushing	26	KK 03 28 18	Hex screw M20 x 180 mm w/nut (From ser. no. PB1365)
5	KK 07 20 10	Parallel rod 60 x 40 x 5 mm, PB-100, 4 furrow, L = 2060 mm	27	KK 03 28 08	Hex screw M20 x 160 mm w/nut (From ser. no. PB1365)
	KK 07 11 97	Parallel rod 60 x 40 x 5 mm, PB-100, 5 furrow, L = 3060 mm	28	KK 07 87 55	Plate (From ser. no. PB1365)
	KK 07 11 98	Parallel rod 60 x 40 x 5 mm, PB-100, 6 furrow, L = 4060 mm	29	KK 07 87 09	Plate (From ser. no. PB1365)
	KK 07 11 99	Parallel rod 60 x 40 x 5 mm, PB-100, 7 furrow, L = 5060 mm	30	KK 07 87 59	Inner supporting ribs (From ser. no. PB1365)
	KK 07 87 10	Parallel rod 60 x 40 x 5 mm, PB-100, 8 furrow, L = 6060 mm	31	KK 35 11 40	Screw w/hoop L-thread
	KK 07 87 20	Parallel rod 60 x 40 x 5 mm, PB-115, 4 furrow, L = 2360 mm	32	KK 01 07 00	Pin 12 mm
	KK 07 87 21	Parallel rod 60 x 40 x 5 mm, PB-115, 5 furrow, L = 3510 mm	33	KK 07 87 50	Front supporting piece
	KK 07 87 22	Parallel rod 60 x 40 x 5 mm, PB-115, 6 furrow, L = 4660 mm	34	KK 07 87 36	Fix for turnbuckle
	KK 07 87 23	Parallel rod 60 x 40 x 5 mm, PB-115, 7 furrow, L = 5810 mm	35	KK 07 87 42	Slide
6	KK 07 86 42	Measure needle, R. (From ser. no. PB1381)	36	KK 07 87 41	Slide for arm
	KK 07 86 43	Measure needle, L. (From ser. no. PB1381)	37	KK 07 87 43	Plate
	KK 07 87 71	Measure needle (Before ser. no. PB1381)	38	KK 03 28 90	Hex screw M20 x 90 mm w/nut
	KK 07 87 86	Fix for needle to 200 x 200 tube (Before ser. no. PB1381)	39	KK 02 99 22	Grease nipple M8 x 1 mm
7	KK 03 41 22	Screw M12 x 22 mm (From ser. no. PB1381)	40	KK 07 26 07	Slide rail, inner
8	KK 01 03 15	Bolt 25.3 x 60 mm	41	KK 07 26 06	Slide rail, outer
9	KK 07 17 68	Bushing	42	KK 03 28 70	Hex screw M20 x 70 mm w/nut
10	KK 01 12 62	Ring 35 x 1.5	43	KK 03 27 75	Hex screw M16 x 75 mm w/nut
11	KK 35 11 91	Screw w/hoop L-thread (From ser. no. PB1388)	44	KK 07 89 53	Axle (From ser. no. PB1365)
	KK 35 11 39	Screw w/hoop R-thread (Before ser. no. PB1388)			
12	KK 01 58 51	Nut M30 (From ser. no. PB1309)	Not ill.		
	KK 35 61 31	Lock nut M30 (Before ser. no. PB1309)		KK 07 86 41	Cpl. rebuilding set to main support (ill. 25,26,27,28,29 and 30 / from ser. no. PB1365)
13	KK 35 11 86	Tube			
	KK 36 11 38	Turnbuckle cpl.			
14	KK 01 10 17	Roll pin D8 x 50 mm (From ser. no. PB1388)			
15	KK 03 27 65	Hex screw M16 x 65 mm w/nut			
16	KK 07 87 66	Bracket PB-100			

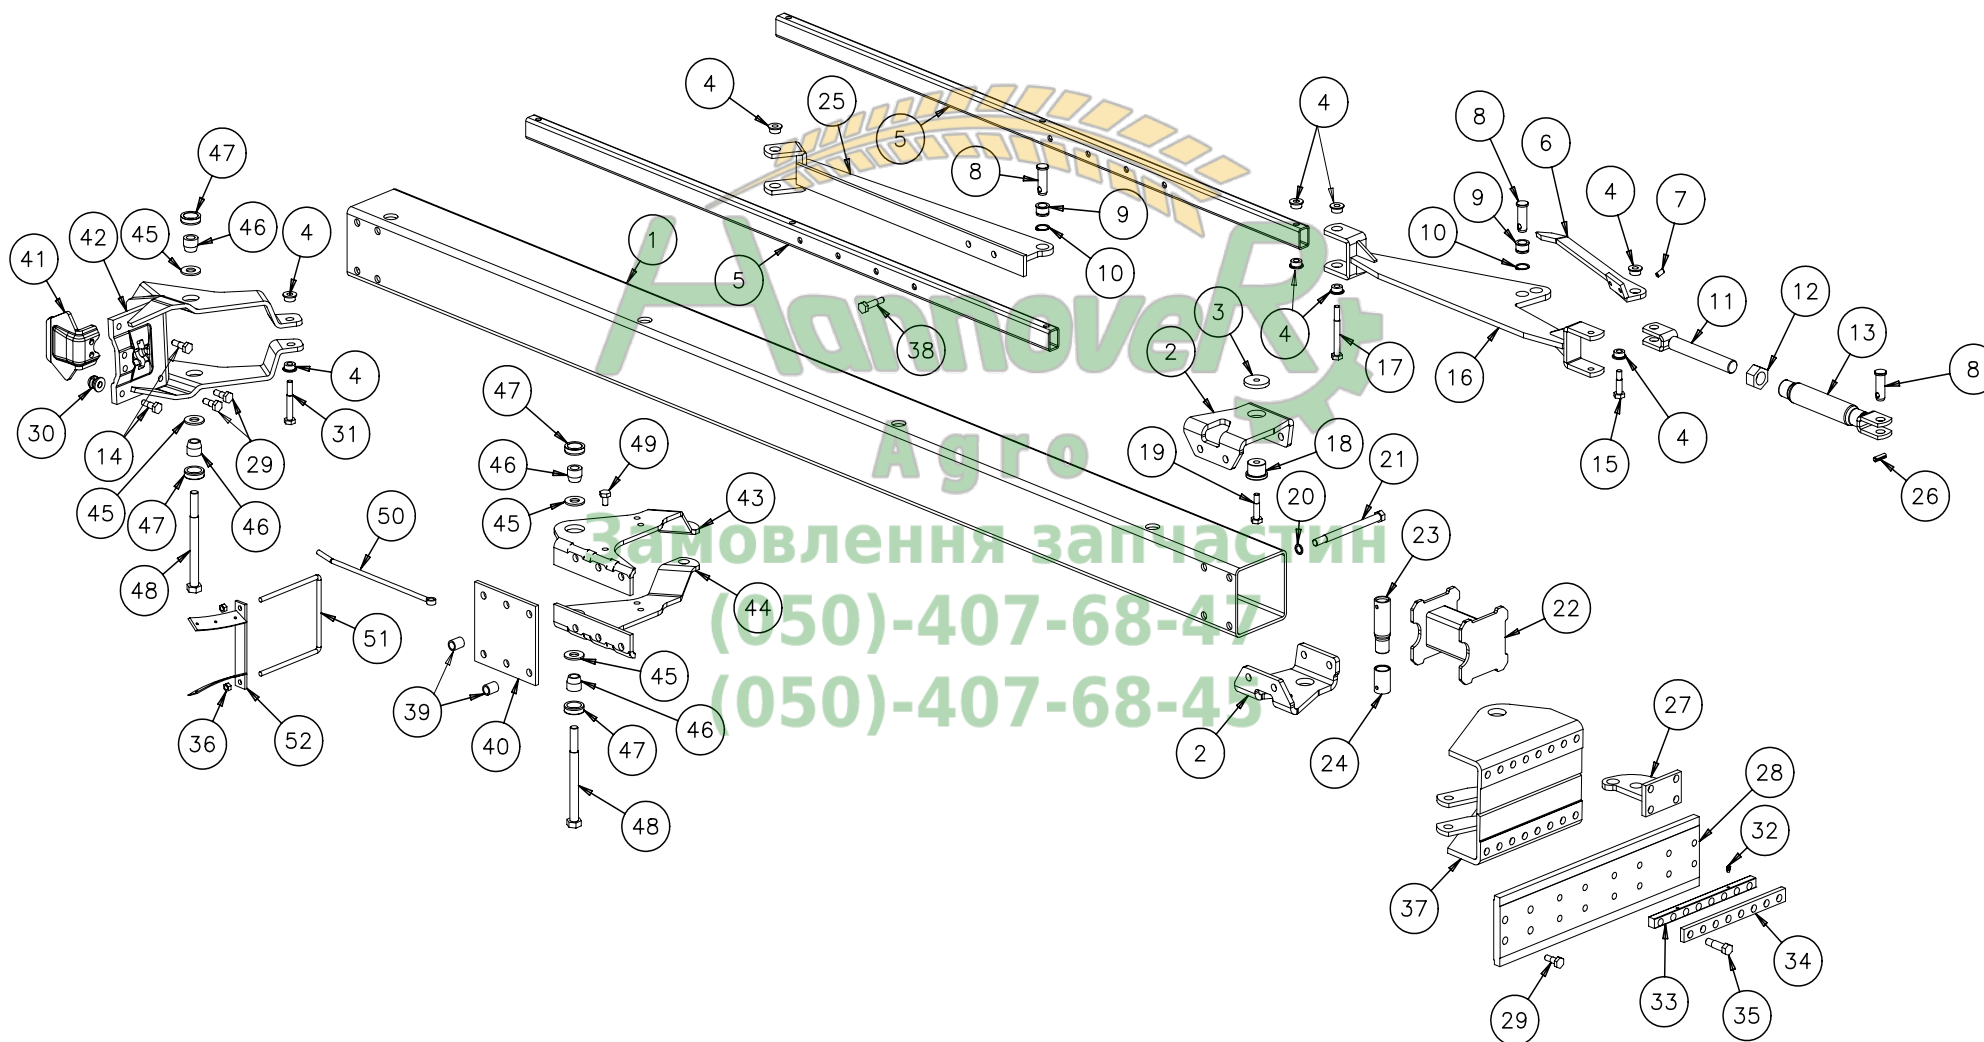


1	KK 07 85 90	Frame tube 200 x 200 mm, PB-100, 4 furrow	KK 07 87 20	Parallel rod 60 x 40 x 5 mm, PB-115, 4 furrow, L = 2360 mm	29	KK 03 27 45	Hex screw M16 x 45 mm	
	KK 07 85 91	Frame tube 200 x 200 mm, PB-100, 5 furrow	KK 07 87 21	Parallel rod 60 x 40 x 5 mm, PB-115, 5 furrow, L = 3510 mm	30	KK 07 12 56	2 balls w/bolt M16 x 50 mm and loctite	
	KK 07 98 25	Frame tube 200 x 200 mm, RB-100, 5 furrow	KK 07 87 22	Parallel rod 60 x 40 x 5 mm, PB-115, 6 furrow, L = 4660 mm	31	KK 03 27 02	Hex screw M16 x 110 mm w/nut	
	KK 07 85 92	Frame tube 200 x 200 mm, PB-100, 6 furrow	KK 07 87 23	Parallel rod 60 x 40 x 5 mm, PB-115, 7 furrow, L = 5810 mm	32	KK 02 99 22	Grease nipple (Before 01.04.99)	
	KK 07 98 26	Frame tube 200 x 200 mm, RB-100, 6 furrow				KK 02 99 27	Grease nipple (From 01.04.99)	
	KK 07 87 07	Frame tube 200 x 200 mm, PB-100, 7 furrow (From 09/01/91, ser. no. PB1155)			33	KK 07 26 07	Slide rail, inner	
	KK 07 98 27	Frame tube 200 x 200 mm, RB-100, 7 furrow	6	KK 07 86 42	Measure needle R.	34	KK 07 26 06	Slide rail, outer
	KK 07 87 05	Frame tube 200 x 200 mm, PB-100, 8 furrow (From 09/01/91, ser. no. PB1155)		KK 07 86 43	Measure needle L.	35	KK 03 28 70	Hex screw M20 x 70 mm w/nut
	KK 07 98 28	Frame tube 200 x 200 mm, RB-100, 8 furrow	7	KK 03 41 22	Screw M12 x 22 mm	36	KK 01 58 17	Nut M12
	KK 07 85 93	Frame tube 200 x 200 mm, PB-115, 4 furrow	8	KK 01 03 15	Bolt 25,3 x 60 mm	37	KK 07 87 50	Front support piece
	KK 07 85 94	Frame tube 200 x 200 mm, PB-115, 5 furrow	9	KK 07 17 68	Bushing	38	KK 03 27 70	Hex screw M16 x 70 mm w/nut (RB only)
	KK 07 87 06	Frame tube 200 x 200 mm, PB-115, 6 furrow (From 09/01/91, ser. no. PB1155)	10	KK 01 12 62	Circlip	39	KK 06 15 15	Tube
	KK 07 87 19	Frame tube 200 x 200 mm, PB-115, 7 furrow (From 09/01/91, ser. no. PB1155)	11	KK 35 11 95	Screw w/clevis M36 x 310 mm	40	KK 07 16 70	Plate, inner (for LB and RB ploughs)
2	KK 07 86 90	Fix for supporting device, upper	12	KK 01 58 60	Nut M36 (Replaces 015851 from 01/01/95)	41	KK 06 16 37	Plate
	KK 07 86 91	Fix for supporting device, lower	13	KK 35 11 93	Tube w/clevis M36	42	KK 07 87 46	Beam support w/bushing and balls
3	KK 01 29 24	Washer D16 x 70 x 10 mm	14	KK 03 27 52	Hex screw M16 x 50 mm	43	KK 07 22 00	Beam support w/bushing, upper
4	KK 07 16 64	Bushing	15	KK 03 27 65	Hex screw M16 x 65 mm w/nut	44	KK 07 22 01	Beam support w/bushing, lower
5	KK 07 20 10	Parallel rod 60 x 40 x 5 mm, PB-100, 4 furrow, L = 2060 mm	16	KK 07 87 66	Bracket PB-100	45	KK 01 16 94	Bushing D55 x D40.3 x 16 mm
	KK 07 11 97	Parallel rod 60 x 40 x 5 mm, PB-100, 5 furrow, L = 3060 mm		KK 07 87 61	Bracket PB-115	46	KK 07 14 03	Tube w/cone
	KK 07 11 34	Parallel rod 60 x 40 x 5 mm, RB-100, 5 furrow, L = 4060 mm		KK 07 86 86	Support for bracket PB-100/115 (From 01/15/94, ser. no. PB1527)	47	KK 01 29 40	Washer D25.4 x D55 x 4.58 mm
	KK 07 11 98	Parallel rod 60 x 40 x 5 mm, PB-100, 6 furrow, L = 4060 mm	17	KK 03 27 16	Hex screw M16 x 140 mm w/nut	48	KK 03 29 23	Hex screw M24 x 270 mm w/ntu
	KK 07 11 35	Parallel rod 60 x 40 x 5 mm, RB-100, 6 furrow, L = 5060 mm	18	KK 07 87 44	Axle	49	KK 03 27 25	Hex screw M16 x 27 mm w/nut
	KK 07 11 99	Parallel rod 60 x 40 x 5 mm, PB-100, 7 furrow, L = 5060 mm	19	KK 03 27 70	Hex screw M16 x 70 mm w/nut	50	KK 07 18 53	Indicator needle
	KK 07 13 06	Parallel rod 60 x 40 x 5 mm, RB-100, 7 furrow, L = 6060 mm	20	KK 01 29 31	Washer D20,5 x 28 x 3 mm	51	KK 07 14 93	U-bolt for indicator
	KK 07 87 10	Parallel rod 60 x 40 x 5 mm, PB-100, 8 furrow, L = 6060 mm	21	KK 03 52 34	Hex screw M20 x 250 mm w/flange nut	52	KK 07 14 95	Indicator bracket
	KK 07 13 02	Parallel rod 60 x 40 x 5 mm, RB-100, 8 furrow, L = 7060 mm	22	KK 07 85 51	Inner support			
				KK 07 87 85	Inner support (Before 11/01/93, ser. no. PB1515)			
			23	KK 07 14 11	Inner support bushing			
			24	KK 07 14 10	Outer support bushing			
				KK 07 14 12	Support bushing cpl.			
			25	KK 07 98 21	Bracket RB-100			
			26	KK 01 07 00	Pin D12 mm (Before 01.08.97)			
				KK 01 10 20	Roll pin D12 (From 01.08.97)			
			27	KK 07 87 36	Fix for turnbuckle			
			28	KK 07 87 42	Slide			

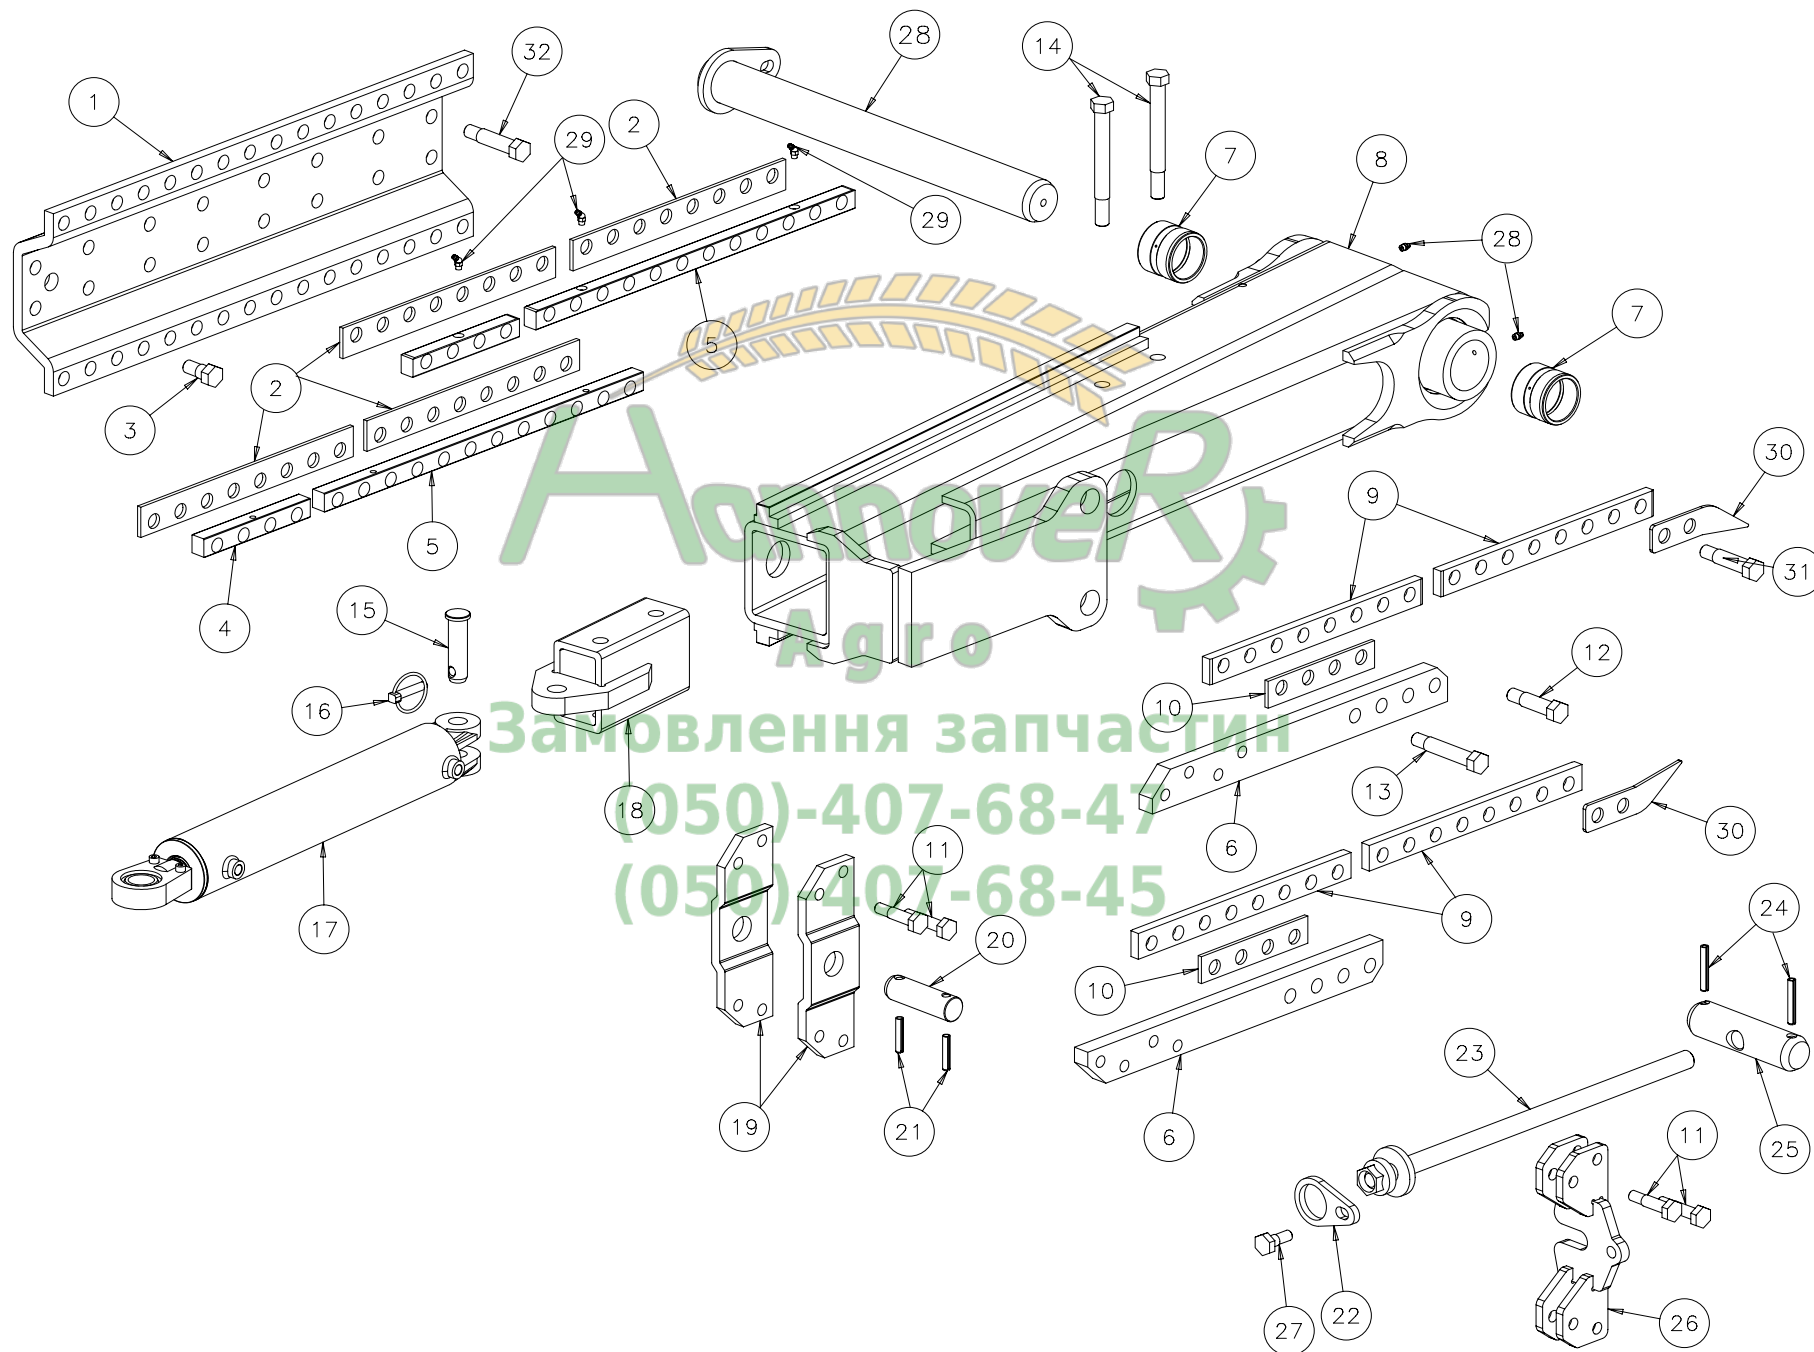



1	KK 07 79 55	Slide	24	KK 01 10 24	Roll pin D10 x 65 mm
2	KK 07 21 24	Spacer	25	KK 07 79 67	Threaded piece
3	KK 03 28 40	Hex screw M20 x 40 mm	26	KK 07 79 63	Fix for adjusting screw
4	KK 07 26 21	Slide rail, inner, short	27	KK 03 27 40	Hex screw M16 x 40 mm w/nut
5	KK 07 26 07	Slide rail, inner, long	28	KK 07 85 96	Axle D60
6	KK 07 79 60	Arm			
7	KK 01 16 91	Bushing D60 x 72 x 60 mm (Before 14.09.99, serial no. 2520)			
	KK 01 16 37	Bushing D60 x 72 x 60 mm bronze (From 14.09.99, serial no. 2520)			
8	KK 07 79 71	Lift arm w/bushings			
9	KK 07 26 06	Slide rail, outer			
10	KK 07 79 66	Plate w/holes			
11	KK 03 27 70	Hex screw M16 x 70 mm w/nut			
12	KK 03 28 80	Hex screw M20 x 80 mm w/nut			
13	KK 03 28 03	Hex screw M20 x 110 mm w/nut			
28	KK 02 99 20	Grease nipple M8 x 1 mm			
29	KK 02 99 22	Grease nipple (Before 01.04.99)			
	KK 02 99 27	Grease nipple (From 01.04.99)			
32	KK 03 28 90	Hex screw M20 x 90 mm w/nut			
Hydraulic version only:					
14	KK 03 28 13	Hex screw M20 x 170 mm w/flange nut			
15	KK 01 03 28	Bolt w/head D25.3 x 78 mm			
16	KK 01 07 00	Ring pin 12 mm			
17	KK 35 24 01	Hydraulic cylinder D75 x 400 mm cpl. (see plate no. 369) (Before 01.07.97)			
	KK 35 37 08	Hydraulic cylinder D75 x 400 mm cpl. (see plate no. 1005) (From 01.07.97)			
18	KK 07 79 56	Bracket for cylinder, inner			
19	KK 07 79 62	Fix for cylinder, outer			
20	KK 07 97 24	Bolt, L = 135 mm			
21	KK 01 10 32	Roll pin D10 x 50 mm			
30	KK 07 79 75	Bracket (From 01.11.97)			
31	KK 03 28 85	Hex screw M20 x 85 mm w/nut			
Mechanical version only:					
22	KK 07 79 69	Lock			
23	KK 07 87 57	Adjusting screw			



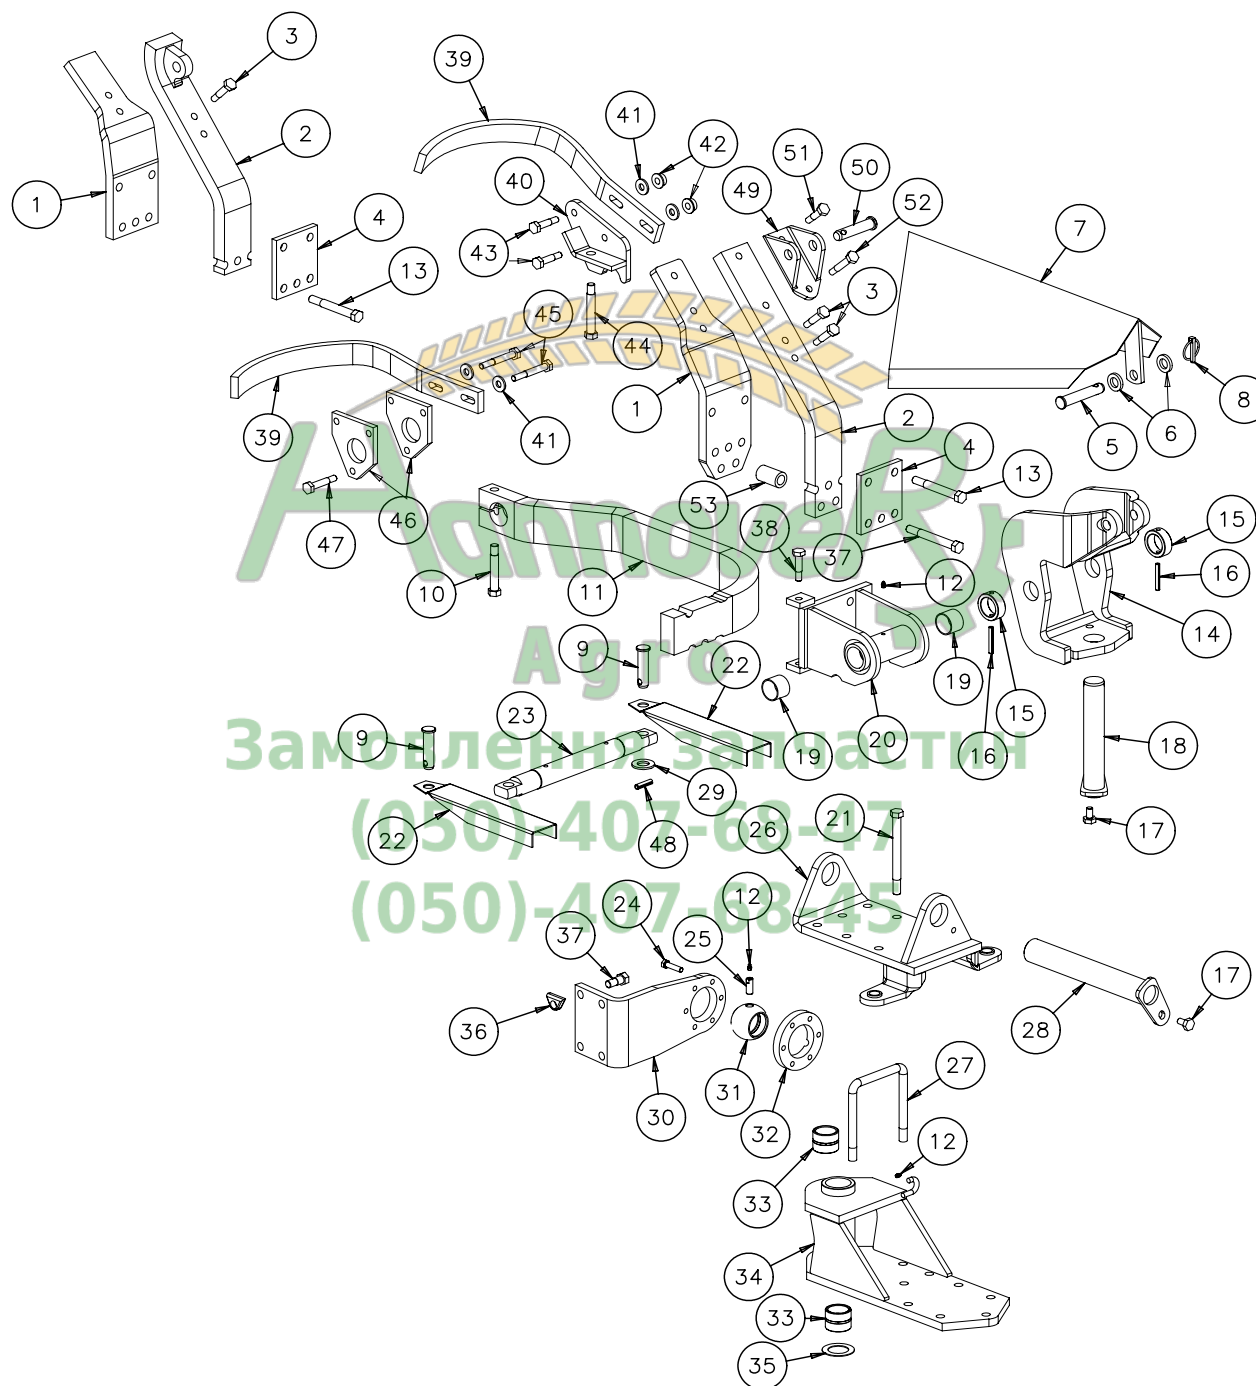


1	KK 06 23 74	Plate (Before 01.07.97)	36	KK 06 12 79	Threaded piece M20
	KK 07 79 92	Plate (From 01.07.97)	37	KK 03 28 08	Hex screw M20 x 160 mm w/nut (PB only: From 02/01/93, ser. no. PB1388)
2	KK 06 23 70	Arm for cylinder (Before 01.07.97)		KK 03 28 45	Hex screw M20 x 45 mm w/nut (PB only: Before 02/01/93, ser. no. PB1388)
	KK 07 79 91	Arm for cylinder (From 01.07.97)		KK 03 28 26	Hex screw M20 x 260 mm w/nut (For 200 x 200 mm tube)
3	KK 03 27 75	Hex screw M16 x 75 mm w/nut	38	KK 03 37 70	Adjusting screw M16 x 70 mm
4	KK 06 23 73	Plate	39	KK 06 23 94	Scraper (For wheel 400 x 15.5" and 400 x 22.5")
5	KK 01 03 19	Bolt 25.3 x 120 mm	40	KK 07 87 91	Fix for scraper (For wheel 400 x 22.5")
6	KK 01 29 36	Washer 26 x 45 x 7.5 mm	41	KK 01 29 22	Washer D17 x 40 x 4.58 mm
7	KK 06 23 80	Wheel cover	42	KK 07 16 64	Bushing
8	KK 01 07 00	Pin 12 mm	43	KK 03 27 70	Hex screw M16 x 70 mm w/nut
9	KK 01 03 32	Bolt 25.3 x 85 mm	44	KK 03 28 11	Hex screw M20 x 130 mm w/nut
10	KK 03 51 79	Hex screw M20 x 120 mm w/flange nut	45	KK 03 27 02	Hex screw M16 x 110 w/nut
11	KK 06 22 96	Wheel arm (Before 01.07.97)	46	KK 06 23 69	Fix for scraper (For wheel 400 x 15.5")
	KK 07 79 90	Wheel arm (From 01.07.97)	47	KK 03 27 85	Hex screw M16 x 85 mm w/nut
12	KK 02 99 20	Grease nipple M8 x 1 mm	48	KK 01 10 21	Roll pin 12 x 50 mm
13	KK 03 28 16	Hex screw M20 x 150 mm w/nut (check also below)	49	KK 07 79 93	Bracket
14	KK 06 23 75	Pivot bracket	50	KK 01 03 18	Bolt w/head
15	KK 06 23 61	Bushing D50 x 70 x 25 mm	51	KK 03 27 65	Hex screw M16 x 65 mm w/nut
16	KK 01 10 05	Roll pin 10 x 70 mm	52	KK 03 27 90	Hex screw M16 x 90 mm w/nut
17	KK 03 27 25	Hex screw M16 x 27 mm	53	KK 07 79 94	Spacing sleeve D40 - 25 x 65 mm
18	KK 06 23 62	Axle D50 x 287 mm			
19	KK 01 16 52	Bushing D50 x 55 x 40 mm			
20	KK 06 23 65	Holder			
21	KK 03 28 21	Hex screw M20 x 210 mm w/nut (check also below)			
22	KK 06 23 98	Cover			
23	KK 06 23 60	Axle D50 x 510 mm			
24	KK 03 26 50	Hex screw M12 x 50 mm w/nut			
25	KK 06 24 84	Tube for grease nipple D16 x 40 mm			
26	KK 06 24 85	Bearing bracket			
27	KK 06 22 70	U-bolt			
28	KK 06 24 88	Axle D60 x 395 mm			
29	KK 01 29 41	Washer D29 x 55 x 4.58 mm			
30	KK 07 87 33	Angle plate			
31	KK 06 24 79	Bearing D60			
32	KK 06 24 82	Ring D60			
33	KK 01 16 82	Bushing D50 x 62 x 50 mm			
34	KK 06 23 55	Suspension bracket			
35	KK 01 29 57	Washer D50 x 78 x 2 mm			

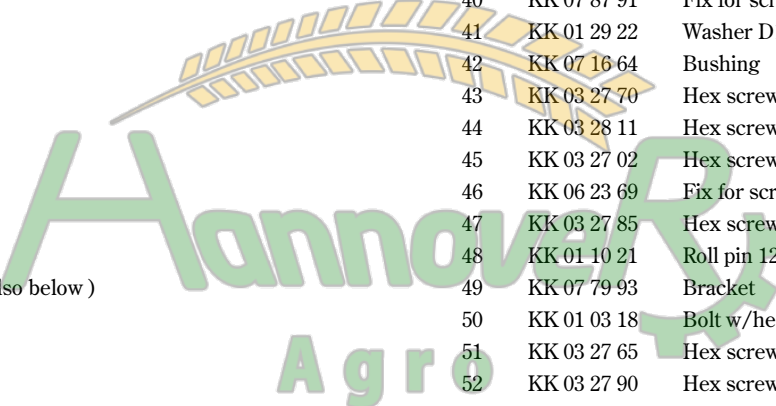
 Hannover Agro
 Замоклення запчастин
 (050)-407-68-47
 (050)-407-68-45

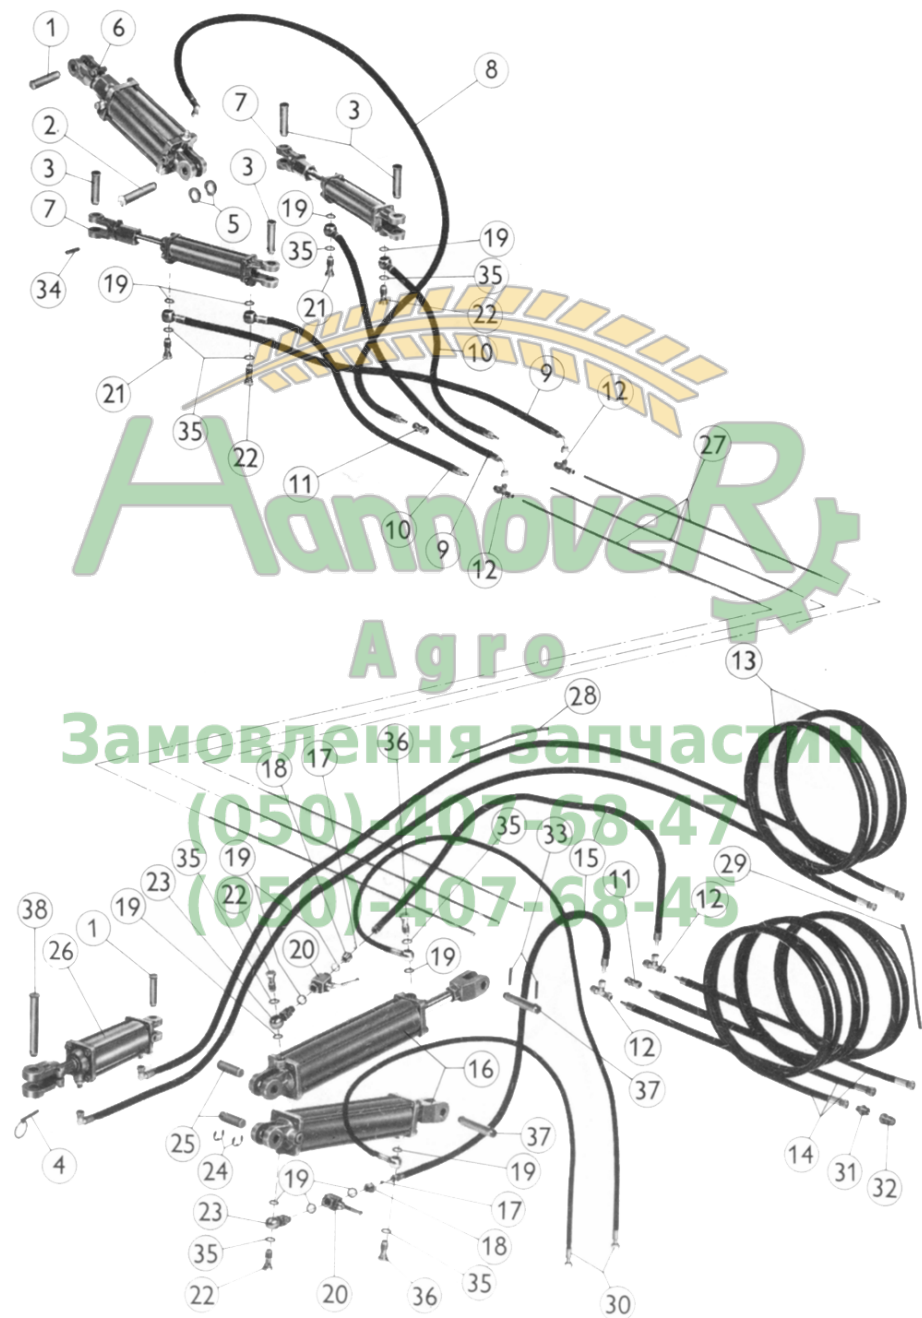

1	KK 01 03 28	Bolt D25.3 x 78 mm	28	KK 01 15 96	Hose tape D12.5 x 250 mm
2	KK 01 03 19	Bolt D25.3 x 120 mm	29	KK 01 21 16	Hose tape D12.5 x 300 mm
3	KK 01 03 28	Bolt D25.3 x 78 mm	30	KK 01 22 23	Hose 3/8", L = 850 mm
4	KK 01 07 00	Pin 12 mm	31	KK 01 20 60	Adapter 3/8" - 1/2"
5	KK 01 29 49	Washer D25 x 44 x 4 mm	32	KK 01 21 84	Plug for quick coupling
6	KK 35 33 70	Hydraulic cylinder for wheel D100 x 215 mm w/stop (From serial no. PB1217, see plate no. 1026)		KK 01 22 89	Quick coupling cpl. (ill. 30 - 31)
	KK 35 23 42	Hydraulic cylinder for wheel D100 x 200 mm (Before serial no. PB1217, see plate no. 480)	33	KK 01 10 19	Roll pin 10 x 50 mm
7	KK 35 23 51	Hydraulic cylinder for wheel D50 x 200 mm w/stop (see plate no. 480)	34	KK 01 10 21	Roll pin 12 x 50 mm
8	KK 01 15 08	Hose 3/8", L = 1500 mm	35	KK 01 21 77	Gasket ring D22
9	KK 01 22 21	Hose 3/8", L = 900 mm	36	KK 01 21 49	Banjobolt w/filter
10	KK 01 22 22	Hose 3/8", L = 600 mm	37	KK 06 25 16	Axle w/2 holes D25 x 140 mm
11	KK 01 15 75	Straight coupling 12 mm	38	KK 01 03 35	Bolt D25.3 x 155 mm
12	KK 01 15 53	T-coupling 12 mm			
13	KK 01 15 35	Hose 3/8", L = 5200 mm			
14	KK 01 22 25	Hose 3/8", L = 4500 mm			
15	KK 01 22 11	Hose 3/8", L = 1200 mm			
16	KK 35 23 86	Turn over cylinder D90 x 400 mm, 40 mm rod, 4,5 and 6 furrow (see plate no. 215)			
	KK 35 23 82	Turn over cylinder D100 x 400 mm, 40 mm rod, 7 and 8 furrow (see plate no. 215)			
17	KK 01 21 42	Nipple (3.0 mm) M8 x 1 2			
18	KK 01 15 67	Adapter 3/8" - 1/2"			
19	KK 01 15 65	Gasket ring 1/2"			
20	KK 01 21 64	Valve 1/2"			
21	KK 01 21 47	Banjo bolt 1/2"			
22	KK 01 21 44	Banjo bolt 1/2"			
23	KK 01 21 80	Threaded piece 1/2"			
24	KK 01 12 70	Circlip			
25	KK 01 04 72	Bolt D25.3 x 110 mm			
26	KK 35 23 70	Furrow adjustment cylinder D75 x 200 mm (see plate no. 1101))			
27	KK 07 87 94	Oil-tube, PB-100, 5 furrow, L = 3400 mm			
	KK 07 87 95	Oil-tube, PB-100, 6 furrow, L = 4400 mm			
	KK 06 86 94	Oil-tube, PB-100, 7 furrow, L = 5250 mm			
	KK 07 87 96	Oil-tube, PB-100, 8 furrow, L = 6300 mm			
	KK 06 86 91	Oil-tube, PB-115, 4 furrow, L = 2800 mm			
	KK 07 87 97	Oil-tube, PB-115, 5 furrow, L = 3900 mm			
	KK 07 87 98	Oil-tube, PB-115, 6 furrow, L = 5050 mm			
	KK 07 87 99	Oil-tube, PB-115, 7 furrow, L = 6200 mm			

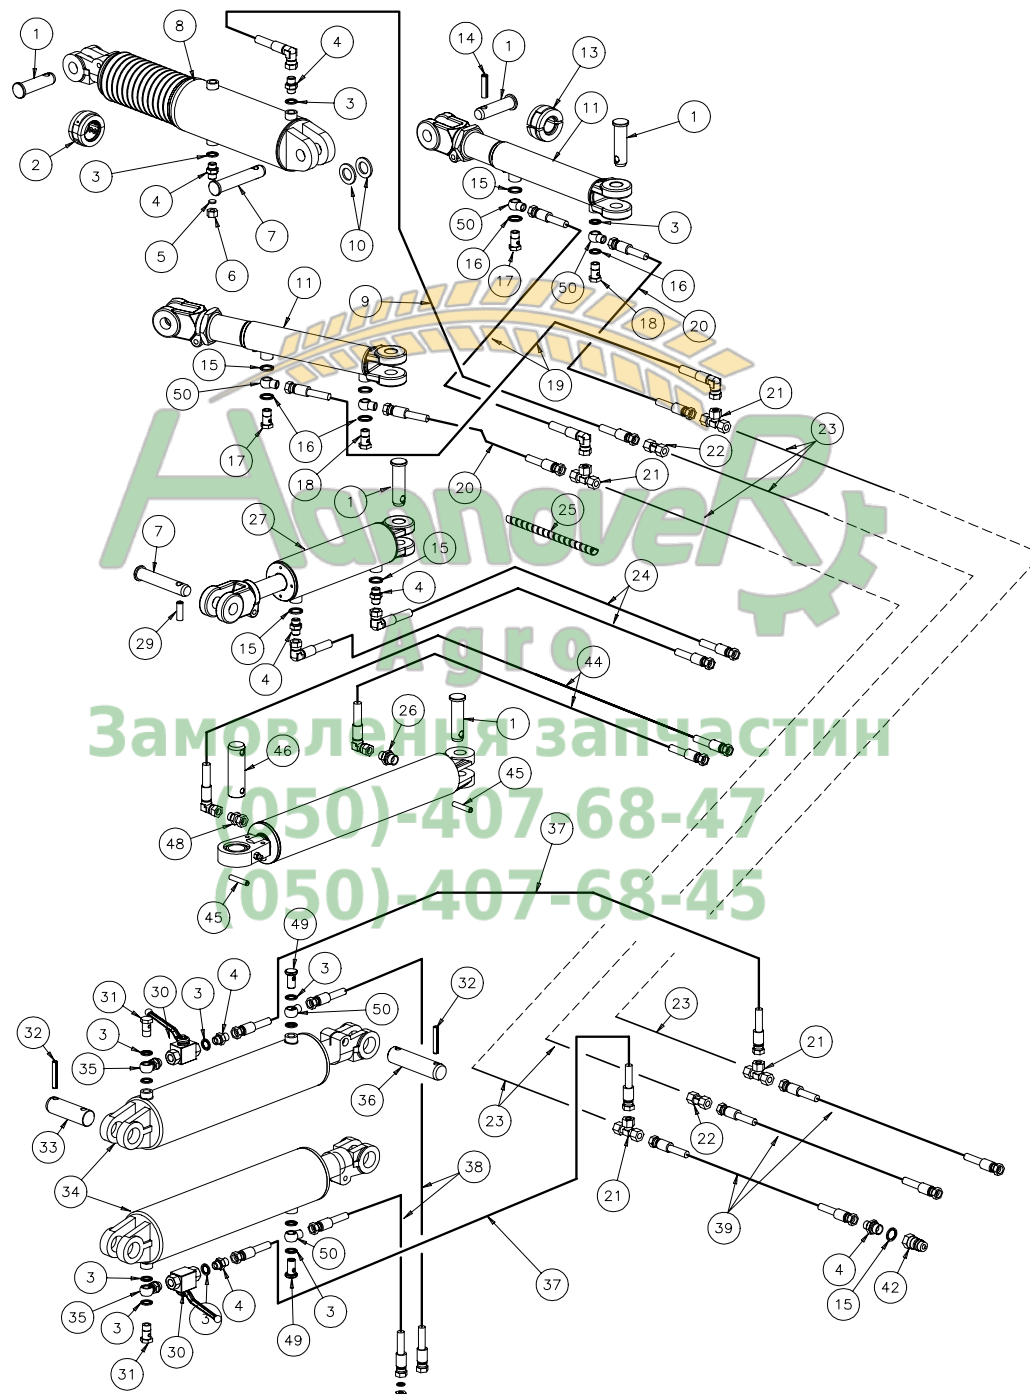

1	KK 01 03 28	Bolt D25.3 x 78 mm	23	KK 07 87 94	Oil-tube PB-100, 5 furrow, L = 3400 mm	KK 35 38 11	Hydraulic cylinder D100 x 400 mm (see plate no. 1074) (From 01.03.99)	
2	KK 35 22 47	Spacer for D40 x 35 mm for cylinder D100 x 215 mm		KK 07 87 95	Oil-tube PB-100, 6 furrow, L = 4400 mm	KK 35 34 09	Turn over cylinder D125 x 400 mm, 50 mm rod, 8 furrow (see plate no. 564) (Before 01.01.01)	
3	KK 01 15 85	Gasket ring 3/8"		KK 06 86 94	Oil-tube PB-100, 7 furrow, L = 5250 mm		Turn over cylinder D125 x 400 mm, 50 mm rod, 6 and 7 furrow (see plate no. 564) (Before 01.01.98)	
4	KK 01 22 61	Threaded coupling 3/8" - 3/8"		KK 07 87 96	Oil-tube PB-100, 8 furrow, L = 6300 mm	KK 35 38 36	Hydraulic cylinder D125 x 400 mm (see plate no. 1148) (From 01.01.01)	
5	KK 01 09 61	Filter 3/8"		KK 06 86 91	Oil-tube PB-115, 4 furrow, L = 2800 mm			
6	KK 01 09 60	Filter cap 3/8"		KK 07 87 97	Oil-tube PB-115, 5 furrow, L = 3900 mm			
7	KK 01 03 19	Bolt D25.3 x 120 mm		KK 07 87 98	Oil-tube PB-115, 6 furrow, L = 5050 mm			
8	KK 35 33 70	Hydraulic cylinder for wheel D100 x 215 mm w/stop (see plate no. 1026) (Before 01.06.00)		KK 07 87 99	Oil-tube PB-115, 7 furrow, L = 6200 mm			
	KK 35 38 37	Hydraulic cylinder w/stop and bellow (see plate no. 1129) (From 01.06.00)		KK 07 98 30	Oil-tube RB-100, 5 furrow, L = 3650 mm	35	KK 01 27 24	Coupling piece 3/8" for valve (Before 01.03.00)
9	KK 01 15 08	Hose 3/8", L = 1500 mm	24	KK 07 98 31	Oil-tube RB-100, 6 furrow, L = 4650 mm		KK 01 25 48	Banjo 3/8" w/adjustable end (From 01.03.00)
10	KK 01 29 49	Washer 25 x 44 x 4 mm	25	KK 07 98 32	Oil-tube RB-100, 7 furrow, L = 5650 mm	36	KK 07 85 83	Axle w/2 holes D35 x 140 mm
11	KK 35 37 02	Hydraulic cylinder for wheel D50 x 200 mm w/stop cpl. (see plate no. 525) (Before 01.04.01)	26	KK 07 98 33	Oil-tube RB-100, 8 furrow, L = 6650 mm	37	KK 01 22 11	Hose 3/8", L = 1200 mm
	KK 35 39 02	Hydraulic cylinder for wheel D50 x 200 mm w/stop cpl. (see plate no. 1192) (From 01.04.01)		KK 01 15 35	Hose 3/8", L = 5200 mm	38	KK 01 23 51	Hose 1/4", L = 850 mm
13	KK 35 22 37	Stop clips B35 for cylinder D50 x 200 mm		KK 01 20 60	Threaded coupling 3/8" - 1/2" (Before 01.07.97)	39	KK 01 22 25	Hose 3/8", L = 4500 mm
14	KK 01 10 21	Roll pin D12 x 50 mm	27	KK 01 26 16	Threaded coupling 3/8" - 3/8" (From 01.07.97)	40	KK 01 22 66	Washer for 10 mm tube
15	KK 01 15 65	Gasket ring 1/2"		KK 35 37 04	Furrow width adjustment cylinder D75 x 200 mm cpl. (see plate no. 890) (Before 01.04.01)	41	KK 01 22 63	Nut for 10 mm tube M16 x 1,5 mm
16	KK 01 21 77	Gasket ring D20 mm		KK 35 39 04	Furrow width adjustment cylinder D75 x 200 mm cpl. (see plate no. 1195) (From 01.04.01)	42	KK 01 21 14	Quick coupling
17	KK 01 21 47	Banjo bolt 1/2"	29	KK 01 07 00	Pin 12 mm (Before 01.08.98)	44	KK 01 26 59	Hose 3/8", L=4200 mm
	KK 01 20 82	Banjo bolt 3/8" w/choke 1.4	30	KK 01 10 20	Roll pin D12 (From 01.08.98)	45	KK 01 10 32	Roll pin D10 x 50
18	KK 01 21 44	Banjo bolt 1/2"	31	KK 01 27 23	Valve w/handle 3/8"	46	KK 07 97 24	Axle w/2 holes
	KK 01 20 59	Banjo bolt 3/8"		KK 01 27 33	Banjo bolt 3/8" x 43 mm (Before 01.03.00)	47	KK 35 24 01	Hydraulic cylinder D75 x 400 mm (Before 01.07.97) (see plate no. 369)
19	KK 01 22 21	Hose 3/8", L = 900 mm (Before 01.07.97)		KK 01 20 59	Banjo bolt 3/8" x 31 mm (From 01.03.00)		KK 35 37 08	Hydraulic cylinder D75 x 420 mm (From 01.07.97) (see plate no. 1005)
	KK 01 26 69	Hose 3/8", L = 900 mm (From 01.07.97)	32	KK 01 10 59	Bushing D10 x 60 mm	48	KK 01 23 19	Straight swivel 3/8" - 3/8" (From 01.07.97)
20	KK 01 22 22	Hose 3/8", L = 600 mm (Before 01.07.97)	33	KK 07 85 84	Axle w/2 holes D35 x 110 mm	49	KK 01 25 51	Banjo bolt 3/8" w/filter
	KK 01 26 68	Hose 3/8", L = 600 mm (From 01.07.97)	34	KK 35 34 00	Turn over cylinder D100 x 400 mm, 50 mm rod, 4 and 5 furrow (Before 01.03.99)	50	KK 01 20 62	Banjo 3/8"
21	KK 01 15 53	T-coupling 12 mm			Turn over cylinder D100 x 400 mm, 50 mm rod, 6 and 7 furrow (see plate no. 564)			
22	KK 01 15 75	Straight coupling 12 mm			(From 01.01.98) (Before 01.03.99)			



Замовлення запчастин

(050)-407-68-47

(050)-407-68-45



Замовлення запчастин

(050)-407-68-47

(050)-407-68-45



1	KK 01 26 55	Hose 3/8", L = 350 mm
2	KK 01 23 25	T - coupling 3/8"
3	KK 01 35 17	Relief valve 3/8", 250 bar
4	KK 01 15 85	Gasket ring 3/8"
5	KK 01 23 07	Banjo bolt 3/8" - 3/8"
6	KK 01 20 62	Banjo 3/8"
7	KK 01 35 19	Hose D6, L = 1000 mm NITRIK



Замовлення запчастин
(050)-407-68-47
(050)-407-68-45



1	KK 07 89 91	Initiator w/3 m cable
2	KK 01 25 44	Bushing D30 mm
3	KK 07 89 79	Protection hose for cable, D10 mm x 11 m
4	KK 07 89 87	Cable D3 mm x 8 m
5	KK 07 89 92	Connector 8819-1-06-3-04
6	KK 03 23 10	Hex screw M6 x 10 mm w/nut
7	KK 01 27 38	Clamb for hose 3/8"
8	KK 01 27 37	Clamb for hose 1/4"
9	KK 03 25 35	Hex screw M10 x 35 mm
10	KK 07 89 85	Plate
11	KK 07 89 82	Fix for initiator
12	KK 01 58 11	Nut M8
13	KK 07 89 86	Cam D70
14	KK 07 89 94	Fix for cam D70



Замовлення запчастин
(050)-407-68-47
(050)-407-68-45




1	KK 35 33 71	Cylinder tube
2	KK 01 19 08	Piston packing
3	KK 35 33 72	Piston rod w/piston
4	KK 01 18 06	O-ring
5	KK 01 18 88	Support ring
6	KK 35 33 73	End cap
7	KK 01 19 51	Piston rod packing
8	KK 01 19 12	Scraper
9	KK 35 22 99	Stop
10	KK 35 33 92	Clevis
11	KK 03 20 40	Screw M10 x 40 mm

Not ill.	KK 01 20 27	Packing set cpl.
	KK 35 33 70	Hydraulic cylinder w/stop D100 x 215 mm cpl.




Замовлення запчастин
(050)-407-68-47
(050)-407-68-45

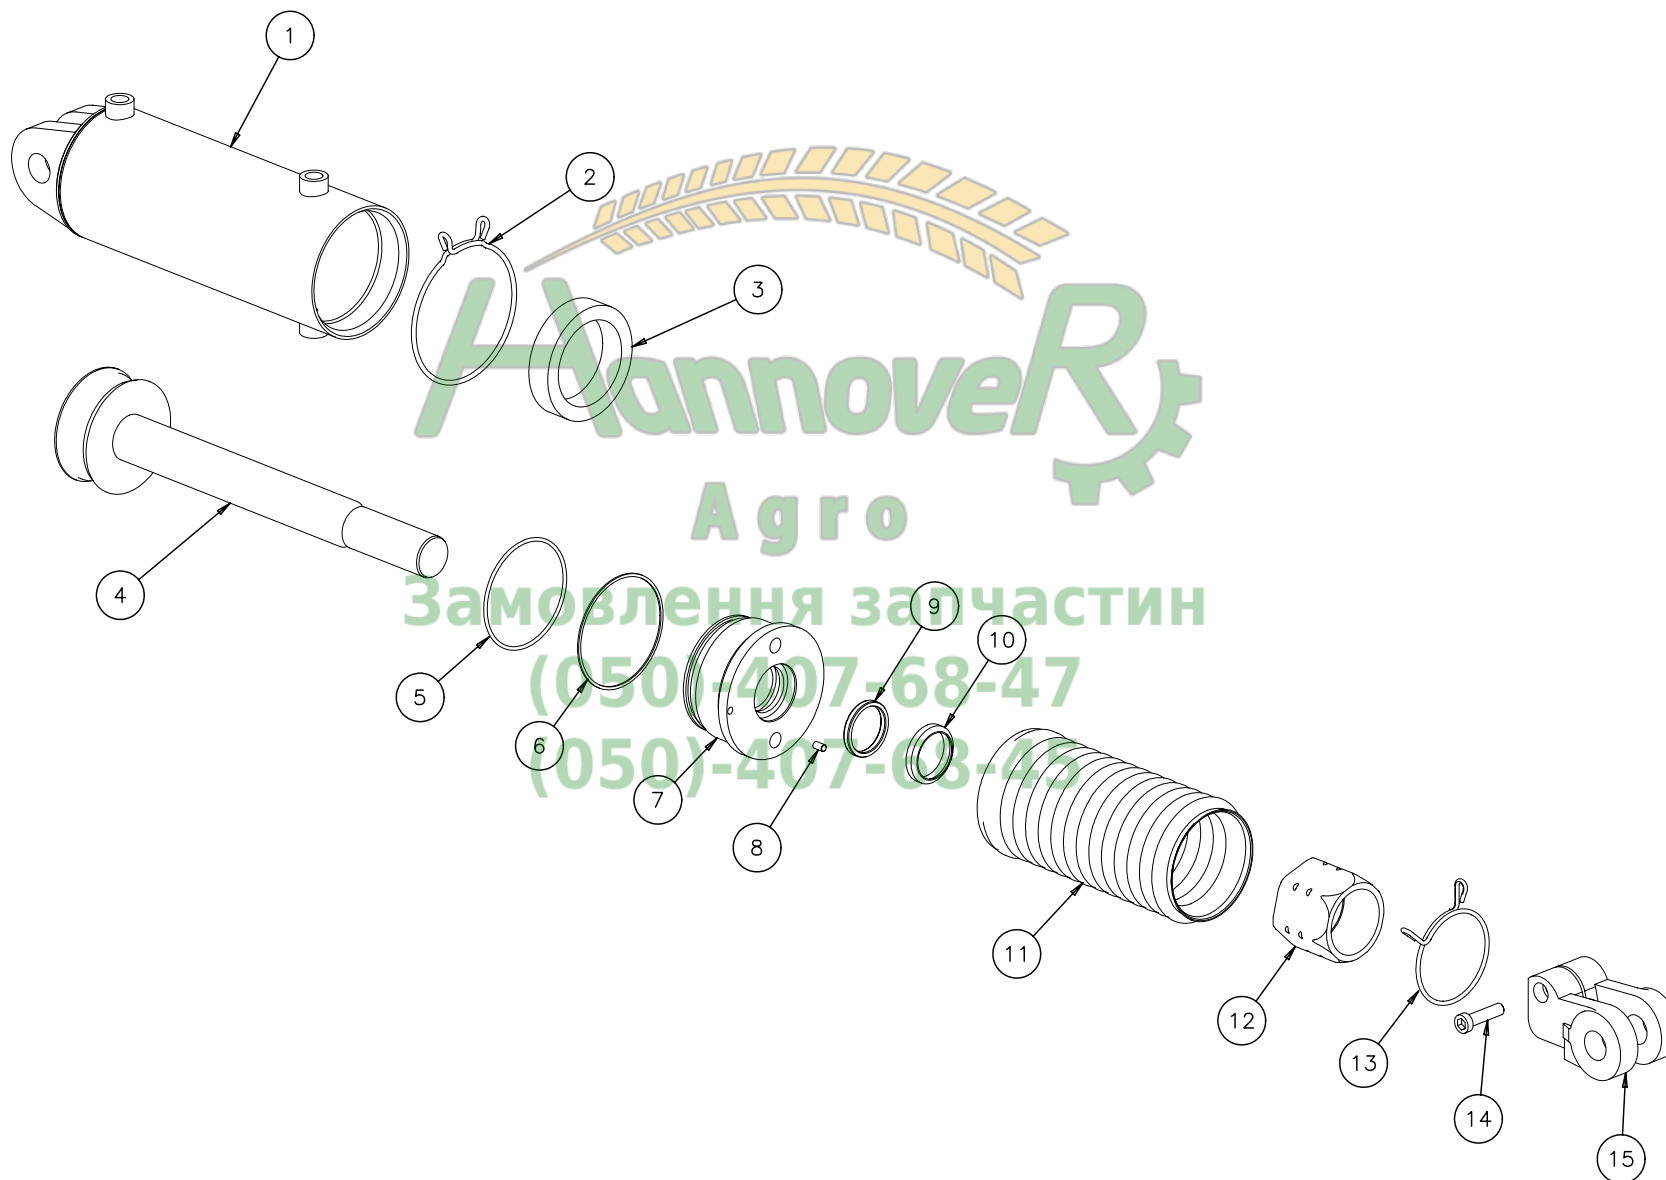

1	KK 35 38 51	Cylinder tube
2	KK 01 35 97	Thread clamp D110
3	KK 01 19 08	Piston packing set
4	KK 35 33 72	Piston rod
5	KK 01 18 06	O-ring
6	KK 01 18 88	Support ring
7	KK 35 38 50	End cap
8	KK 03 20 02	Screw M6 x 10 mm
9	KK 01 19 51	Piston rod packing
10	KK 01 19 12	Scraper
11	KK 01 35 95	Bellow
12	KK 35 36 27	Stop
13	KK 01 35 96	Thread clamp D80
14	KK 03 20 40	Screw M10 x 40 mm
15	KK 35 33 92	Clevis (for PB/RB plough)
	KK 35 27 74	Clevis w/garmax (for PX/RX plough)
Not ill.	KK 01 30 73	Packing set cpl.
	KK 35 38 37	Hydraulic cylinder D100 x 200 mm w/stop and bellow cpl.
	KK 35 38 38	Hydraulic cylinder D100 x 200 mm w/garmx, stop and bellow cpl.



Замовлення запчастин
(050)-407-68-47
(050)-407-68-45

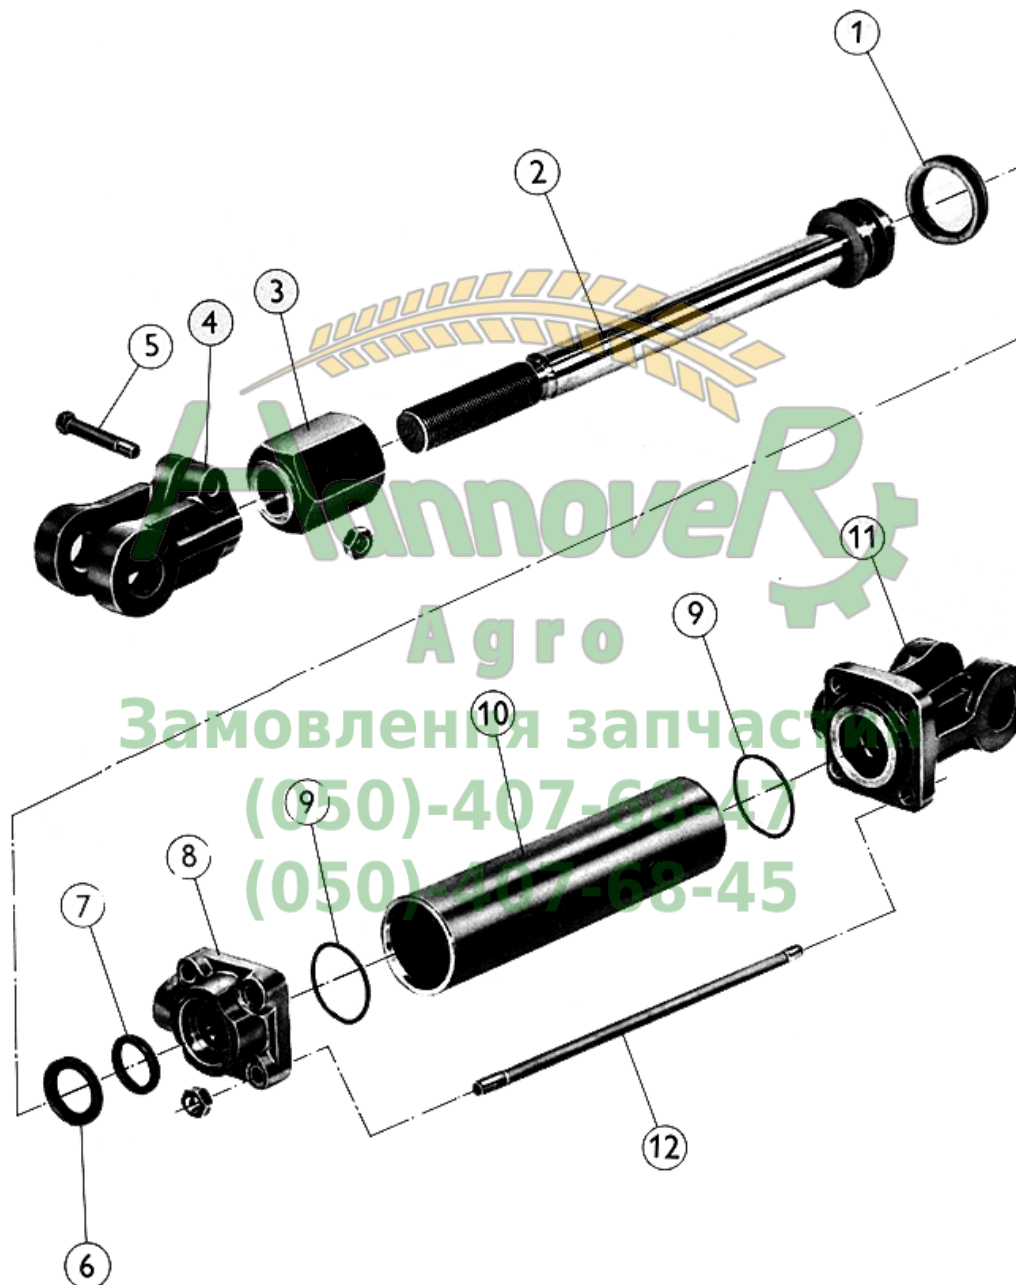

**480 Cylinder for wheel D50 x 200 mm w/stop (PB/RB before 15.11.95)
and cylinder for wheel D100 x 200 mm (PS/RS before 08.03.93)**

1	KK 01 19 15	Packing 3-parts (for D50 cylinder)
	KK 01 19 19	Packing (for D100 cylinder)
2	KK 35 22 66	Piston rod w/rod (for D50 cylinder)
	KK 35 22 68	Piston rod w/rod (for D100 cylinder)
3	KK 35 22 97	Spacer D50/28 mm (for D50 cylinder)
	KK 35 22 99	Spacer D100/40 mm (for D100 cylinder)
4	KK 35 22 60	Rod clevis M27 x 2 mm (for D50 cylinder)
	KK 35 21 76	Rod clevis M36 x 2 mm (for D100 cylinder)
5	KK 03 50 22	Hex screw M10 x 50 mm w/nut (for D50 cylinder)
	KK 03 26 50	Hex screw M12 x 50 mm w/nut (for D100 cylinder)
6	KK 01 19 09	Scraper (for D50 cylinder)
	KK 01 19 12	Scraper (for D100 cylinder)
7	KK 01 19 52	Packing
8	KK 35 22 58	Clevis cap (for D50 cylindes)
	KK 35 21 74	Clevis cap (for D100 cylinder)
9	KK 01 18 10	O-ring (for D50 cylinder)
	KK 01 18 12	O-ring (for D100 cylinder)
10	KK 35 22 80	Cylinder tube (for D50 cylinder)
	KK 35 22 88	Cylinder tube (for D100 cylinder)
11	KK 35 22 52	Clevis cap (for D50 cylinder)
	KK 35 21 63	Clevis cap (for D100 cylinder)
12	KK 35 22 90	Tie rod D50 x 200 mm
	KK 35 22 93	Tie rod D100 x 200 mm
Not ill.	KK 01 19 45	Packing set cpl. (for D50 cylinder)
	KK 01 19 49	Packing set cpl. (for D100 cylinder)
	KK 35 23 51	Cylinder D50 x 200 mm w/stop cpl. (for PB/RB plough only)
	KK 35 23 42	Cylinder D100 x 200 mm cpl. (for PB/RB plough and PS/RS plough)



215 Hydraulic cylinder D100 x 400 mm (Before 01.01.97),
hydraulic cylinder D90 x 400 mm and D100 x 400 mm (Before 01.11.93)



**215 Hydraulic cylinder D100 x 400 mm (Before 01.01.97),
hydraulic cylinder D90 x 400 mm and D100 x 400 mm (Before 01.11.93)**

1	KK 01 19 08	Gasket ring D75/100 x 22.4 mm
	KK 01 19 07	Gasket ring D70/90 x 22.5 mm (for cylinder KK 35 23 86)
2	KK 35 22 71	Piston rod w/piston (for cylinder KK 35 23 85)
	KK 35 21 88	Piston rod w/piston (for cylinder KK 35 23 86)
	KK 35 22 72	Piston rod w/piston (for cylinder KK 35 23 82)
3	KK 01 60 40	Nut
4	KK 35 21 75	Clevis (Before 01.09.98)
	KK 35 21 97	Clevis (From 01.09.98)
5	KK 01 15 65	Gasket ring 1/2"
6	KK 01 15 67	Threaded coupling 3/8" - 1/2"
7	KK 01 15 94	Plug 1/2"
8	KK 35 21 77	Cylinder tube
	KK 35 21 89	Cylinder tube (for cylinder KK 35 23 86)
9	KK 35 21 63	Clevis cap (for cylinder KK 35 23 85)
	KK 35 21 62	Clevis cap (for cylinder KK 35 23 86)
	KK 35 21 74	Clevis cap (for cylinder KK 35 23 82)
10	KK 01 18 12	O-ring
	KK 01 18 11	O-ring (for cylinder KK 35 23 86)
11	KK 35 21 82	Tie rod w/nut (for cylinder KK 35 23 85)
	KK 35 21 93	Tie rod (for cylinder KK 35 23 86)
	KK 35 21 80	Tie rod (for cylinder KK 35 23 82)
12	KK 01 19 51	Gasket ring D40/48 x 6 mm
13	KK 35 21 74	Rod cap (for cylinder KK 35 23 85)
	KK 35 21 92	Rod cap w/packings (for cylinder KK 35 23 86)
	KK 35 21 63	Rod cap w/packings (for cylinder KK 35 23 82)
14	KK 01 19 12	Scraper
Not ill.	KK 01 19 42	Packing set cpl.
	KK 01 19 43	Packing set cpl. (for cylinder KK 35 23 86)
	KK 35 22 96	Stopper cpl. (for cylinder KK 35 23 85)
	KK 35 23 82	Hydraulic cylinder D100 x 400 mm cpl. (for 6, 7 and 8 furrow) (Before 01.11.93)
	KK 35 23 85	Hydraulic cylinder D100 x 400 mm cpl. (Before 01.01.97)
	KK 35 23 86	Hydraulic cylinder D90 x 400 mm cpl. (for 4 and 5 furrow) (Before 01.11.93)





1	KK 01 19 17	Packing
2	KK 35 22 98	Stop
3	KK 03 04 50	Hex screw M12 x 50 mm w/nut
4	KK 35 22 62	Rod clevis
5	KK 35 22 67	Piston rod w/piston
6	KK 01 15 65	Gasket ring
7	KK 01 18 02	O-ring
8	KK 35 22 57	Cover
9	KK 35 21 61	Clevis cap
10	KK 35 22 84	Cylinder tube D75 x 200 mm
11	KK 35 22 92	Tie rod w/nut
12	KK 01 19 10	Scraper
13	KK 01 19 53	Packing
14	KK 01 15 94	Plug
Not ill.	KK 01 19 47	Packings cpl.
	KK 35 23 70	Hydraulic cylinder D75 x 200 mm cpl.
	KK 35 23 71	Hydraulic cylinder D75 x 200 mm w/stop cpl.



Замовлення запчастин
(050)-407-68-47
(050)-407-68-45



1	KK 35 37 30	Cylinder tube (for cylinder KK 35 37 01 and KK 35 37 02)
	KK 35 37 31	Cylinder tube (for cylinder KK 35 37 03)
2	KK 03 20 02	Screw M6 x 10 mm
3	KK 35 37 21	Piston
4	KK 01 17 30	Piston packing
5	KK 01 17 29	O-ring
6	KK 35 37 40	Piston rod (for cylinder KK 35 37 01 and KK 35 37 03)
	KK 35 37 41	Piston rod (for cylinder KK 35 37 02)
7	KK 01 17 98	O-ring
8	KK 01 17 99	Support ring
9	KK 01 17 33	Ring (Before 15.03.99)
	KK 35 37 92	Lock spring (From 15.03.99)
10	KK 35 37 20	Packing seal
11	KK 01 17 31	Piston rod packing
12	KK 01 17 32	Scraper
13	KK 03 20 16	Screw M10 x 45 mm
14	KK 35 37 22	Clevis

Not ill.	KK 35 37 42	Stop (for cylinder KK 35 37 02)
	KK 35 37 25	Packings cpl.
	KK 35 37 01	Hydraulic cylinder for furrow with adjustment D50 x 200 mm cpl.
	KK 35 37 02	Hydraulic cylinder D50 x 200 mm w/stop cpl.
	KK 35 37 03	Hydraulic cylinder D50 x 200 mm w/90° twisted end cap cpl.




Замовлення запчастин
(050)-407-68-47
(050)-407-68-45




1	KK 35 39 34	Cylinder tube (for cylinder KK 35 39 01 and KK 35 39 02)
	KK 35 39 35	Cylinder tube (for cylinder KK 35 39 03)
2	KK 01 03 90	Piston packing
3	KK 35 39 36	Piston rod (for cylinder KK 35 39 01 and KK 35 39 03)
	KK 35 39 37	Piston rod (for cylinder KK 35 39 02)
4	KK 01 65 17	O-ring D42 x 4 mm
5	KK 03 33 06	Hex screw M6 x 8 mm
6	KK 35 39 26	Packing seal
7	KK 01 30 91	Piston rod packing
8	KK 01 30 89	Scraper
9	KK 03 21 10	Set screw M8 x 8 mm
10	KK 35 39 46	Pin for stop (for cylinder KK 35 39 02)
11	KK 35 39 44	Stop (for cylinder KK 35 39 02)
12	UH 82 56 40	Cylinder screw M12 x 40 mm (for cylinder KK 35 39 02)
13	KK 35 39 22	Clevis
Not ill.	KK 01 30 86	Packings cpl.
	KK 35 39 01	Hydraulic cylinder D50 x 200 mm cpl.
	KK 35 39 02	Hydraulic cylinder D50 x 200 mm w/stop cpl.
	KK 35 39 03	Hydraulic cylinder D50 x 200 mm w/90° twisted end cap cpl.



Замовлення запчастин
(050)-407-68-47
(050)-407-68-45

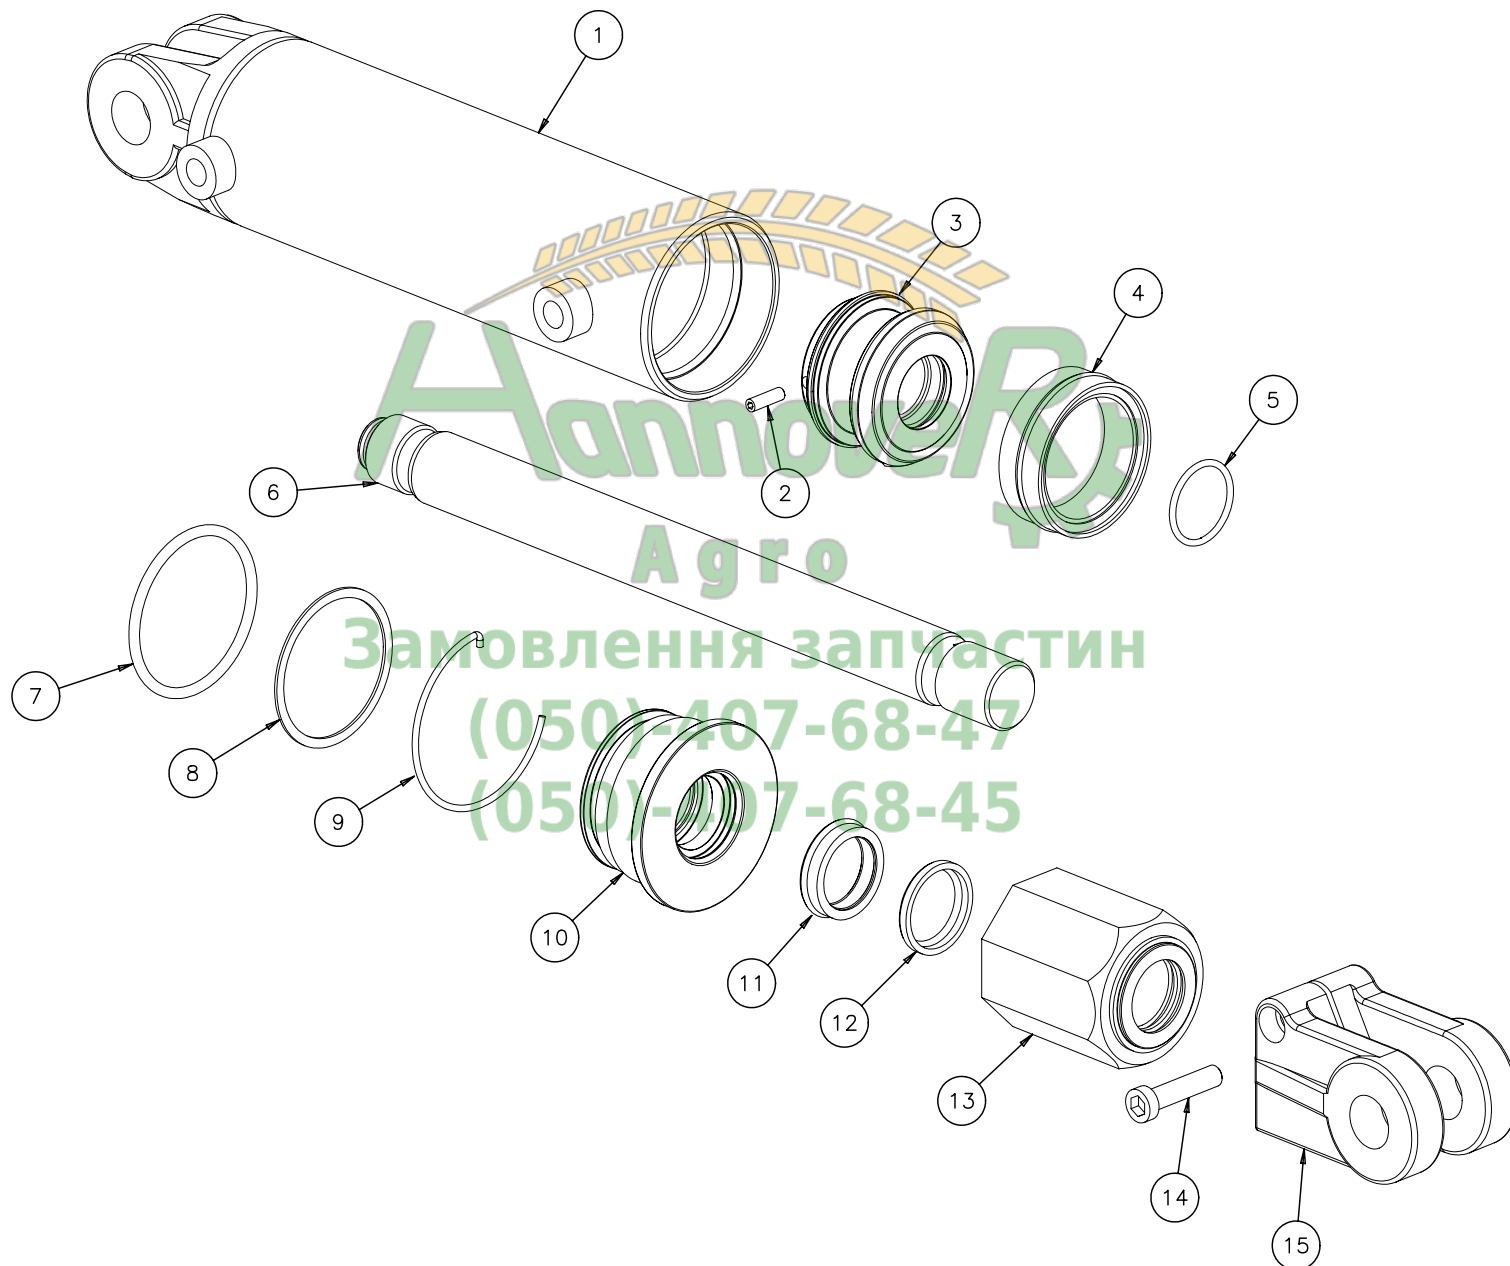


1	KK 35 37 32	Cylinder tube for art.no 353704 (cylinder D75 x 200 mm without stop) and 353705 (cylinder D75 x 200 mm w/stop)
	KK 35 37 35	Cylinder tube for art.no 353706 (cylinder D75 x 200 mm w/90° twisted end cap)
	KK 35 37 36	Cylinder tube for art.no 353707 (cylinder D75 x 400 mm w/90° twisted end cap)
2	KK 03 20 06	Screw w/inner hex M6 x 20 mm
3	KK 35 37 27	Piston
4	KK 01 17 36	Piston packing
5	KK 01 17 37	O-ring
6	KK 35 37 44	Piston rod for art.no 353705 (cylinder D75 x 200 mm w/stop)
	KK 35 37 43	Piston rod for art.no 353704 and 353706 (cylinders D75 x 200 mm without stop)
	KK 35 37 46	Piston rod for art.no 353707 (cylinder D75 x 400 mm w/twisted end cap)
7	KK 01 17 38	O-ring
8	KK 01 17 43	Ring
9	KK 01 17 46	Ring (Before 15.03.99)
	KK 35 37 93	Lock spring (From 15.03.99)
10	KK 35 37 26	Packing seal
11	KK 01 17 44	Piston rod packing
12	KK 01 17 45	Scraper
13	KK 35 37 45	Stop for art.no 353705 (cylinder D75 x 200 mm w/stop)
14	KK 03 20 16	Screw w/inner hex M10 x 45 mm
15	KK 35 37 28	Clevis
Not ill.	KK 35 37 29	Packings cpl.
	KK 35 37 04	Cylinder D75 x 200 mm without stop, cpl.
	KK 35 37 05	Cylinder D75 x 200 mm w/stop, cpl.
	KK 35 37 06	Cylinder D75 x 200 mm w/90° twisted end cap, cpl.
	KK 35 37 07	Cylinder D75 x 400 mm w/90° twisted end cap, cpl.

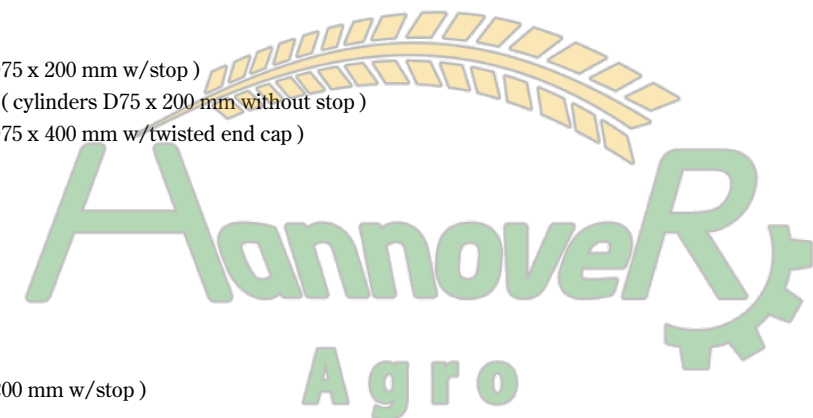

Замовлення запчастин

(050)-407-68-47

(050)-407-68-45

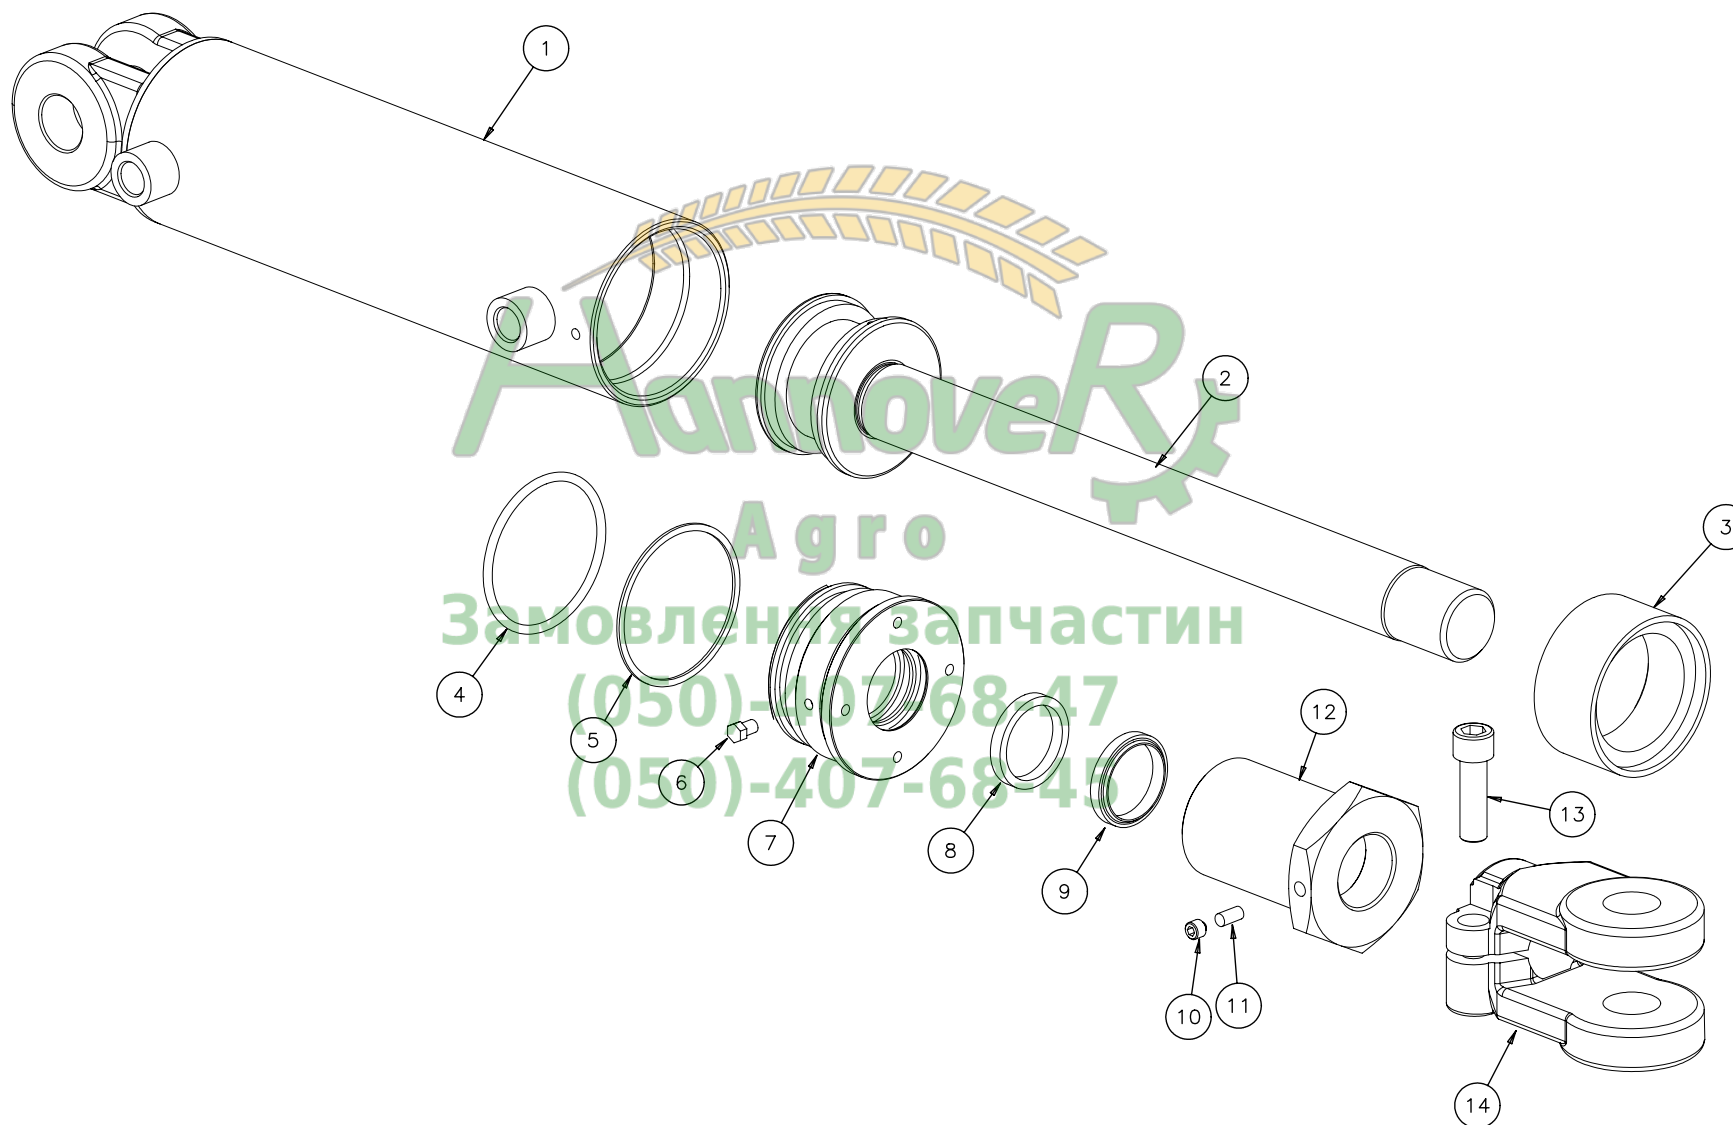

1	KK 35 39 38	Cylinder tube (for cylinder KK 35 39 04 and KK 35 39 05)
	KK 35 39 39	Cylinder tube (for cylinder KK 35 39 06)
2	KK 35 39 40	Piston rod (for cylinder KK 35 39 04 and KK 35 39 06)
	KK 35 39 41	Piston rod (for cylinder KK 35 39 05)
3	KK 01 30 93	Piston packing
4	KK 01 30 96	O-ring D67 x 4 mm
5	KK 01 30 95	Support ring
6	KK 03 33 06	Hex screw M6 x 8 mm
7	KK 35 39 27	Packing seal
8	KK 01 30 94	Piston rod packing
9	KK 01 30 92	Scraper
10	KK 03 21 10	Set screw M8 x 8 mm (for cylinder KK 35 39 05)
11	KK 35 39 46	Pin for stop (for cylinder KK 35 39 05)
12	KK 35 39 45	Stop (for cylinder KK 35 39 05)
13	UH 82 56 40	Cylinder screw M12 x 40 mm
14	KK 35 39 23	Clevis

Not ill.	KK 01 30 87	Packings cpl.
	KK 35 39 04	Hydraulic cylinder D75 x 200 mm cpl.
	KK 35 39 05	Hydraulic cylinder D75 x 200 mm w/stop cpl.
	KK 35 39 06	Hydraulic cylinder D75 x 200 mm w/90° twisted end cap cpl.



564 Turn-over cylinder D100 x 400 mm (before 01.03.99) and
D125 x 400 mm (From 01.01.97)



**564 Turn-over cylinder D100 x 400 mm (before 01.03.99)and
D125 x 400 mm (From 01.01.97)**

1	KK 35 33 98	Clevis M36 x 2
2	KK 03 20 40	Screw M10 x 40 mm
3	KK 01 20 39	Scraper D50/60 x 7/10 mm
4	KK 01 20 32	Gasket ring D50/60 x 7.5 mm

for 4, 5, 6 and 7 furrows only: D100 x 400 mm: (Before 01.03.99)

5	KK 35 34 58	Rod cap w/packings
6	KK 01 18 88	Ring D95 x 2.5 x 1.3 mm
7	KK 01 18 06	O-ring D94 x 3 mm
8	KK 35 34 57	Piston rod D50 mm w/piston
9	KK 01 19 08	Gasket ring D100/75 x 22.4 mm
10	KK 35 34 56	Cylinder tube D100 mm

for 8 furrow only: D125 x 400 mm:

5	KK 35 34 60	Rod cap w/packings
	KK 35 36 36	Rod cap w/packings (stamped from 01.01.97 to 01.12.98)
6	KK 01 20 18	O-ring D120 x 2.5 mm
7	KK 01 26 49	O-ring D124.5 x 3 mm
8	KK 35 34 52	Piston rod D50 mm w/piston
9	KK 01 20 43	Gasket ring D125 x 105 x 25 mm
10	KK 35 34 59	Cylinder tube D125 mm
	KK 35 36 37	Cylinder tube D125 mm (stamped from 01.01.97 to 01.12.98)

Not ill.	KK 01 20 15	Packings cpl. for D100 x 400 mm (Before 01.03.99)
	KK 01 20 16	Packings cpl. for D125 x 400 mm
	KK 35 34 00	Turn over cylinder D100 x 400 mm cpl. (Before 01.03.99)
	KK 35 34 09	Turn over cylinder D125 x 400 mm cpl.






1	KK 35 38 57	Cylinder tube
2	KK 01 20 43	Piston packing
3	KK 35 34 52	Piston rod w/piston
4	KK 01 20 17	O-ring D114,5
5	KK 01 20 18	Support ring
6	KK 35 38 56	Rod cap
7	KK 01 20 32	Piston rod packing
8	KK 01 20 39	Scraper
9	KK 03 20 40	Cylinder screw D6 x 10 mm
10	KK 35 33 98	Clevis

Not ill.	KK 01 20 16	Packing set cpl.
	KK 35 38 36	Hydraulic cylinder D125 x 400 mm cpl.



Замовлення запчастин
(050)-407-68-47
(050)-407-68-45

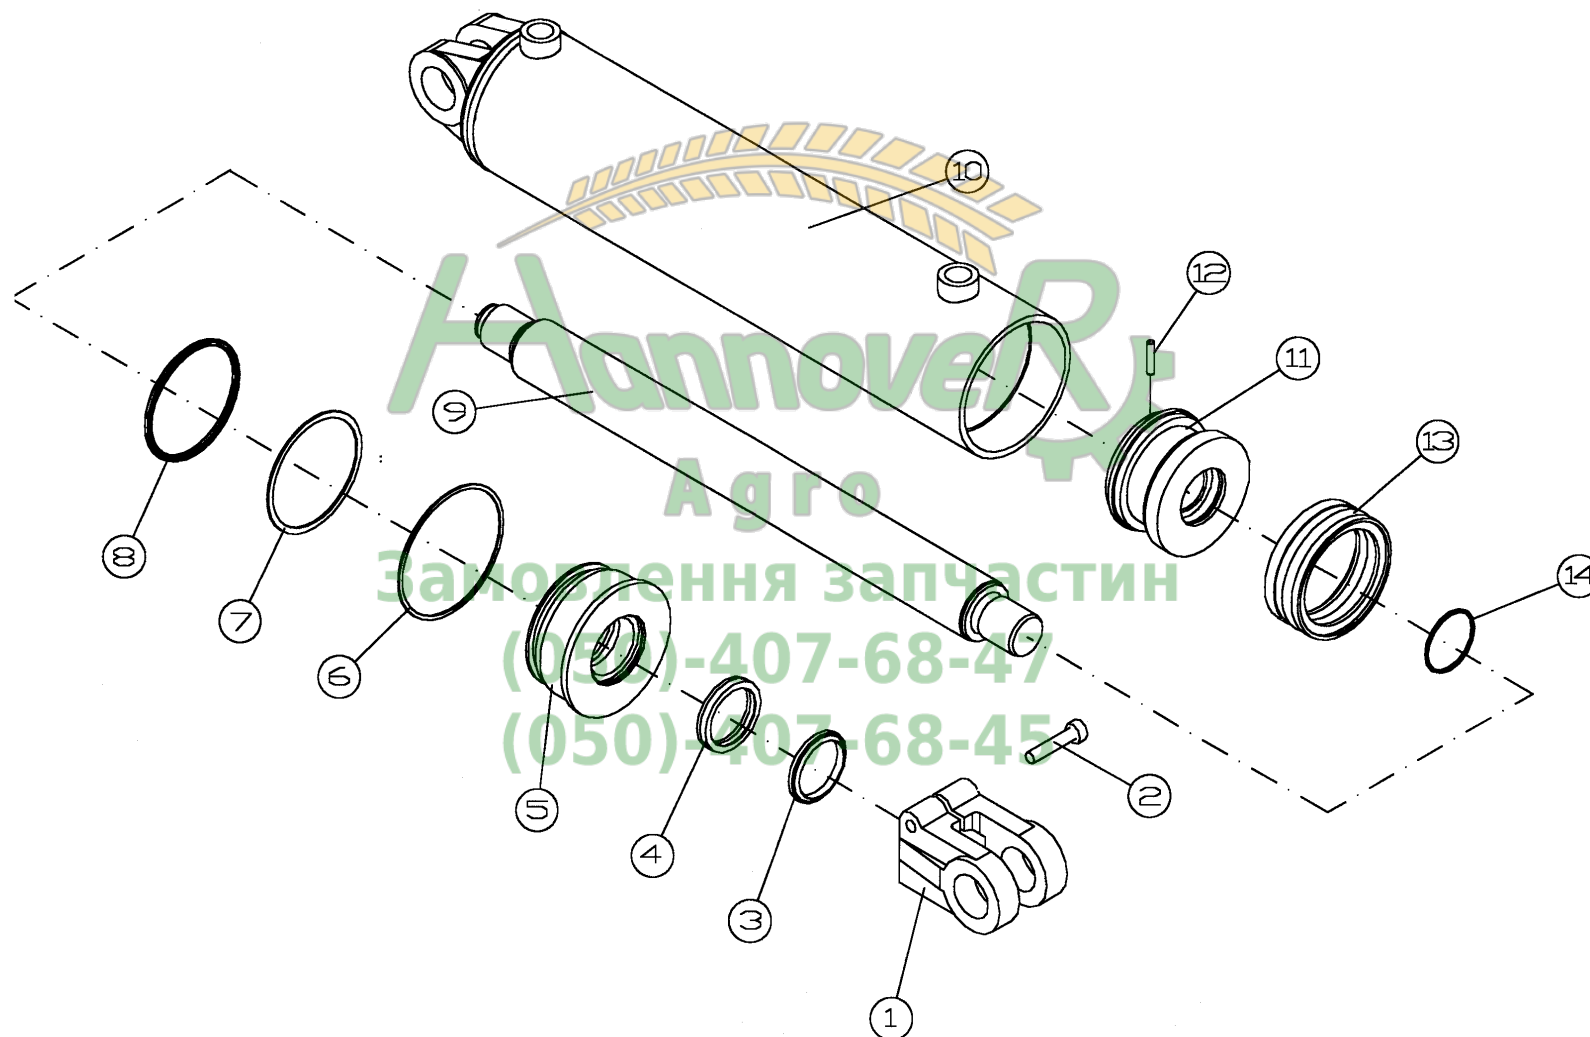

1	KK 35 37 73	Clevis
2	KK 03 20 16	Screw M10 x 45 mm
3	KK 01 17 27	Scraper
4	KK 01 17 17	Seal for piston rod
5	KK 35 37 39	Rod cap
6	KK 01 17 49	Lock ring
7	KK 01 17 24	Support
8	KK 01 17 19	O-ring D93
9	KK 35 37 72	Piston rod
10	KK 35 37 71	Cylinder tube
11	KK 35 37 49	Piston
12	KK 03 20 06	Screw M6 x 20 mm
13	KK 01 17 25	Packing
14	KK 01 17 18	O-ring D50
Not ill.	KK 01 36 01	Packings cpl.
	KK 35 38 11	Hydraulic cylinder D100 x 400 mm cpl.



Замовлення запчастин
(050)-407-68-47
(050)-407-68-45



1	KK 35 21 55	Cylinder tube
2	KK 01 15 65	Gasket ring 1/2"
3	KK 01 20 60	Threaded coupling 3/8" - 1/2"
4	KK 01 20 70	Threaded coupling 3/8" - 1/2" (From serial no. 5668)
	KK 01 21 04	Threaded coupling 3/8" - 1/2" (Before serial no. 5668)
5	KK 01 19 06	Packing
6	KK 35 21 37	Piston rod w/piston
7	KK 01 18 02	O-ring
8	KK 01 18 61	Supporting ring 70 x 2.5 x 1.3 mm
9	KK 35 21 57	Rod cap w/packings
10	KK 01 19 50	Seal for piston rod
11	KK 01 19 11	Scraper packing
12	KK 01 12 61	Circlip
13	KK 02 99 20	Grease nipple
14	KK 35 21 53	Rod head
15	KK 01 12 23	Bearing
16	KK 03 50 10	Cylinder screw M8 x 90 mm
Not ill.	KK 01 19 26	Packings 75 mm cpl.
	KK 35 24 01	Hydraulic cylinder D75 x 400 mm cpl.



Замовлення запчастин
(050)-407-68-47
(050)-407-68-45




1	KK 35 21 53	Rod head
2	KK 02 99 20	Grease nipple
3	KK 01 17 45	Scraper 35 x 43 mm
4	KK 01 17 44	Seal for piston rod
5	KK 35 37 26	Rod cap
6	KK 01 17 46	Ring (Before 15.03.99)
	KK 35 37 93	Lock ring (From 15.03.99)
7	KK 01 17 43	Support ring
8	KK 01 17 38	O-ring
9	KK 35 37 47	Piston rod
10	KK 35 37 37	Cylinder tube
11	KK 01 17 36	Packing
12	KK 03 20 06	Cylinder screw M6 x 20 mm
13	KK 35 37 27	Piston D75/35
14	KK 01 17 37	O-ring
15	KK 03 50 15	Cylinder screw M8 x 25 mm
16	KK 01 12 61	Circlip
17	KK 01 12 23	Bearing

Not ill.	KK 35 37 29	Packings set D75 mm cpl. (ill. no. 3, 4, 7, 8, 11 and 14)
	KK 35 37 08	Hydraulic cylinder D75 x 420 mm cpl. (ill. no. 1 - 17)



Замовлення запчастин
(050)-407-68-47
(050)-407-68-45

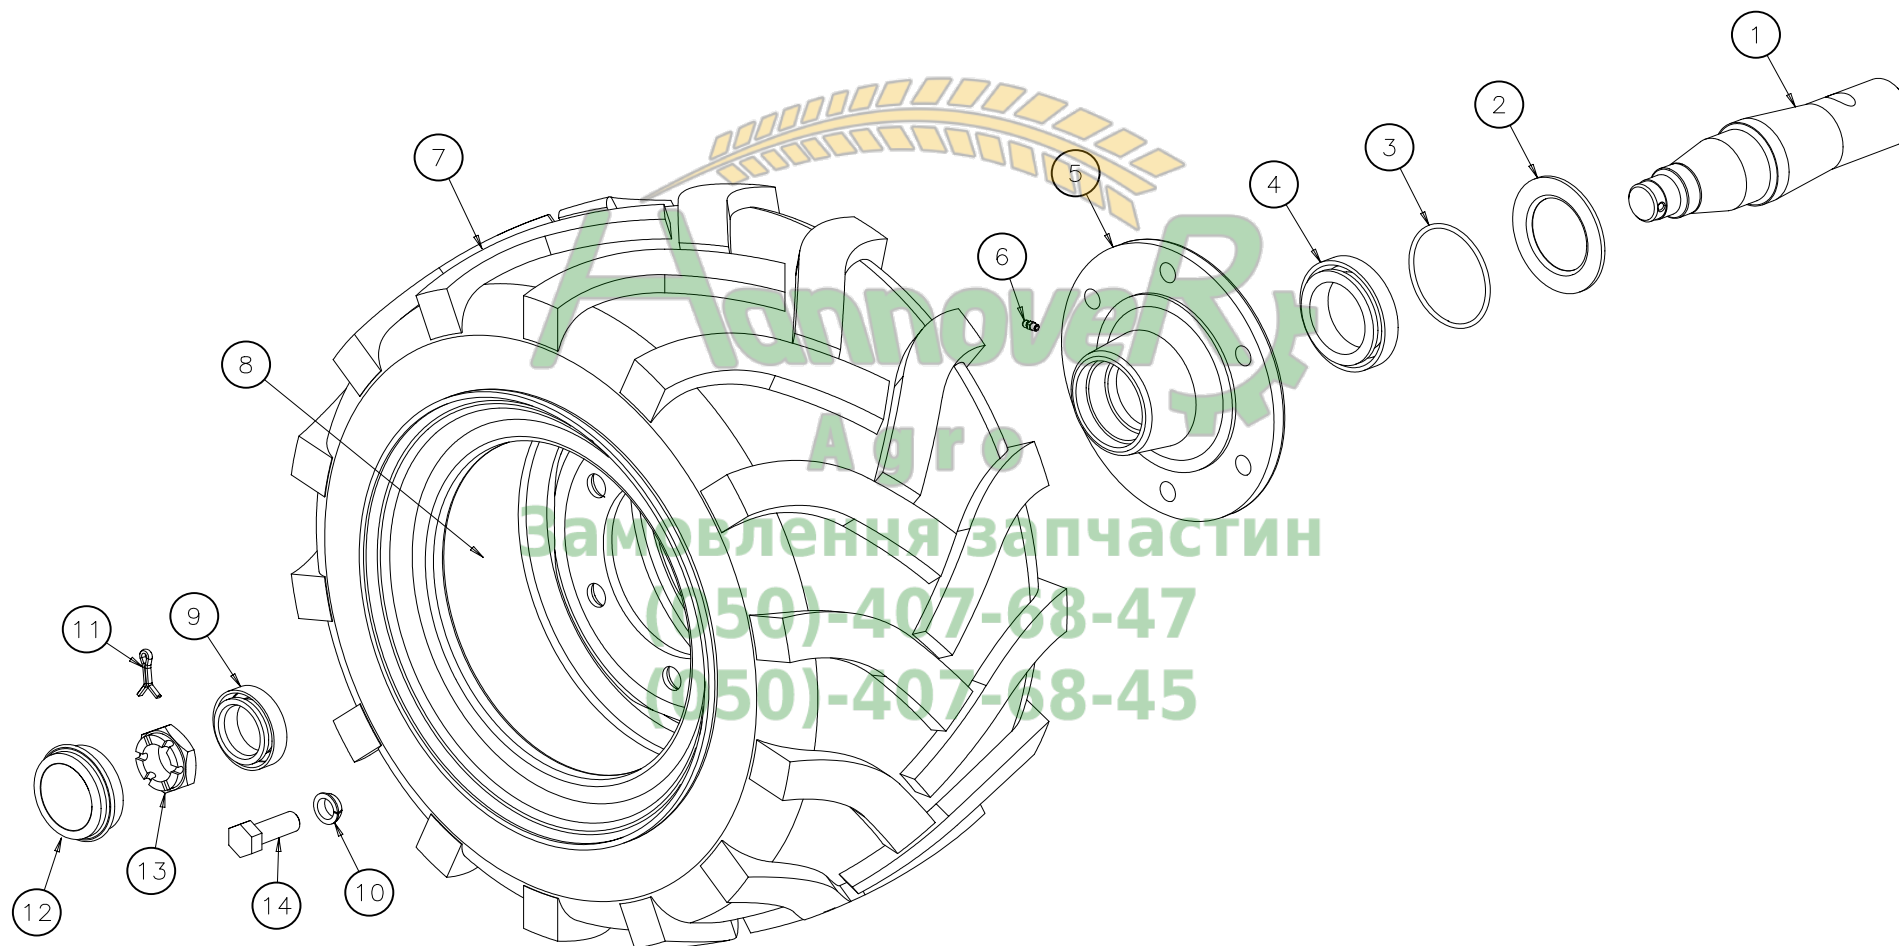

1	KK 07 86 10	Axle (Before 01.05.95)
	KK 07 86 15	Axle (From 01.05.95)
2	KK 01 11 76	Plate (Before 01.05.95)
	KK 01 11 97	Plate (From 01.05.95)
3	KK 01 11 75	O-ring D98.02 x 3.53 mm (Before 01.05.95)
	KK 01 11 96	O-ring D98.02 x 3.53 mm (From 01.05.95)
4	KK 01 05 10	Bearing (Before 01.05.95)
	KK 01 62 00	Bearing (From 01.05.95)
5	KK 01 13 80	Hub cpl. without axle HDL-55 (Before 01.05.95)
	KK 01 14 30	Hub cpl. without axle HDL-65 (From 01.05.95)
6	KK 02 99 18	Grease nipple
7	KK 01 13 42	Tyre 400 x 15.5", 8 ply
	KK 01 14 16	Tyre 400 x 15.5", 14 ply
	KK 01 13 43	Inner tube
8	KK 01 13 44	Rim
9	KK 01 12 43	Bearing
10	KK 01 11 63	Washer
11	KK 02 97 37	Pin D6.3 x 63 mm
12	KK 01 11 77	Cap
13	KK 01 11 78	Nut M36 x 1.5 mm
14	KK 01 11 62	Screw M18 x 47.5 mm



Замовлення запчастин
(050)-407-68-47
(050)-407-68-45

527 Wheel 400 x 15.5", 400 x 22.5", 500 x 22.5", 500 x 26.6", 14.9 x 24" and 12.5 x 18"
(From 01.03.97)






527 Wheel 400 x 15.5", 400 x 22.5", 500 x 22.5", 500 x 26.6", 14.9 x 24" and 12.5 x 18"
(From 01.03.97)

1	KK 01 14 62	Axle D75 x 287
	KK 01 14 84	Axle D50 (for DA plough, middle section only)
2	KK 01 14 61	Hub
	KK 01 14 60	Hub without axle cpl.
3	KK 01 62 01	Bearing 32210
4	KK 01 14 68	Packing w/plate
7	KK 01 14 66	Plate for seal
9	KK 01 14 65	Crown nut
10	KK 01 14 64	Pin
11	KK 01 14 63	Cap for hub D90 mm ADR-65
12	KK 01 62 03	Bearing 30213
13	KK 02 99 20	Grease nipple M8 x 1
14	KK 01 14 79	Wheel bolt M18 x 1.5
15	KK 01 14 69	Nut for wheel M18 x 1.5
16	KK 01 13 44	Rim for tyre 400 x 15.5"
	KK 01 13 70	Rim for tyre 400 x 22.5"
	KK 01 14 53	Rim for tyre 500 x 22.5"
	KK 01 14 78	Rim for tyre 500 x 26.5"
17	KK 01 13 42	Tyre 400 x 15.5", 8 ply (also for DA plough, middle section)
	KK 01 14 16	Tyre 400 x 15.5", 14 ply (also for DA plough, middle section)
	KK 01 13 68	Tyre 400 x 22.5", 8 ply
	KK 01 14 14	Tyre 400 x 22.5", 14 ply
	KK 01 14 51	Tyre 500 x 22.5", 8 ply
	KK 01 14 76	Tyre 500 x 26.5", 8 ply
	KK 01 13 43	Inner tube to 400 x 15.5" tyre
	KK 01 13 69	Inner tube to 400 x 22.5" tyre
	KK 01 14 52	Inner tube to 500 x 22.5" tyre
	KK 01 14 77	Inner tube to 500 x 26.5" tyre
18	KK 01 14 72	Tyre 14.9 x 24", 8 ply
	KK 01 14 73	Inner tube to 14.9 x 24" tyre
19	KK 01 14 74	Rim for tyre 14.9 x 24"
20	KK 01 14 57	Rim for tyre 12.5/80 - 12/18
21	KK 01 14 59	Tyre 12.5/80 - 18/12
	KK 01 14 58	Inner tube for tyre 12.5/80 - 12/18





Kverneland
PB 100

Kverneland
PB 115

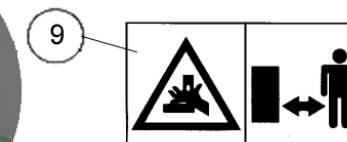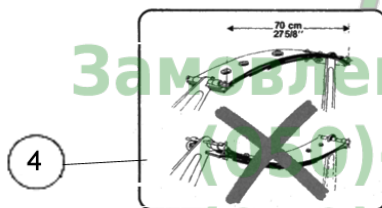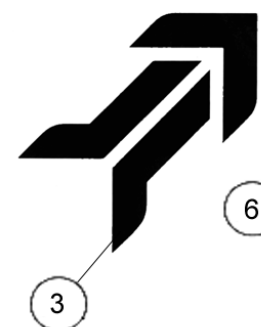

1. ARBEID
WORK
ARBEIT
LABOUR

2. TRANSPORT

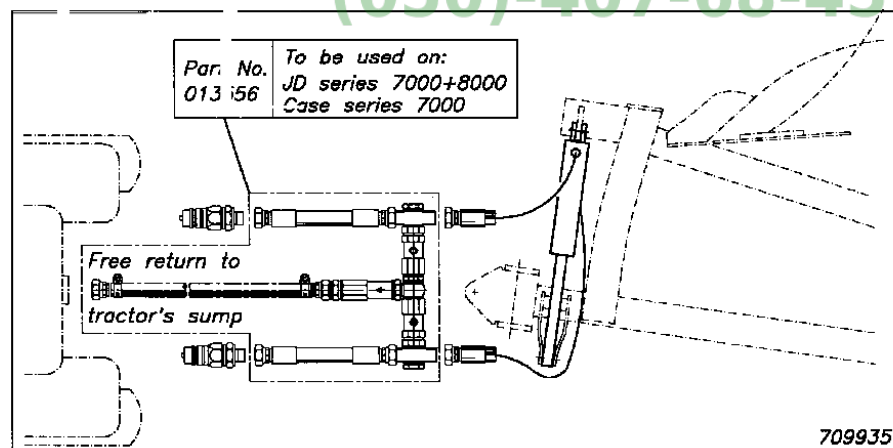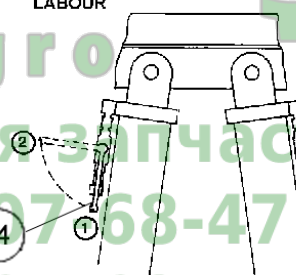

1	KK 70 96 70	Kverneland PB100
	KK 70 99 33	Kverneland RB100
2	KK 70 96 71	Kverneland PB115
3	KK 70 97 37	Arrow
4	KK 70 92 34	Info., spring
5	KK 70 94 79	Info., nuts
6	KK 70 98 31	Kverneland w/arrow
7	KK 70 98 43	Safty sign, parking support
8	KK 70 98 95	Safty sign, sharp egdes
9	KK 70 98 23	Safty sign, crush danger
10	KK 70 98 42	Safty sign, reversible plough
11	KK 70 98 44	Safty sign, read the instruction manual
12	KK 70 98 41	Safty sign, crush danger, tracktor - implement
13	KK 70 97 81	Speed limit
14	KK 70 93 04	Info., hydraulics
15	KK 70 99 49	Warning tractor hydraulic semi-mounted



Замовлення запчастин
(050)-407-68-47
(050)-407-68-45

Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page
KK 01 01 55	11	KK 01 07 00	41	KK 01 11 63	95	KK 01 14 16	97	KK 01 15 67	73	KK 01 17 43	81	KK 01 19 10	75	KK 01 20 60	59
KK 01 01 55	13	KK 01 07 00	45	KK 01 11 75	95	KK 01 14 30	95	KK 01 15 75	57	KK 01 17 43	93	KK 01 19 11	91	KK 01 20 60	91
KK 01 01 55	19	KK 01 07 00	49	KK 01 11 76	95	KK 01 14 51	97	KK 01 15 75	59	KK 01 17 44	81	KK 01 19 12	67	KK 01 20 62	59
KK 01 01 55	7	KK 01 07 00	51	KK 01 11 77	95	KK 01 14 52	97	KK 01 15 85	59	KK 01 17 44	93	KK 01 19 12	69	KK 01 20 62	63
KK 01 01 56	11	KK 01 07 00	53	KK 01 11 78	95	KK 01 14 53	97	KK 01 15 85	63	KK 01 17 45	81	KK 01 19 12	71	KK 01 20 70	91
KK 01 01 56	13	KK 01 07 00	55	KK 01 11 96	95	KK 01 14 57	97	KK 01 15 94	73	KK 01 17 45	93	KK 01 19 12	73	KK 01 20 82	59
KK 01 01 56	19	KK 01 07 00	57	KK 01 11 97	95	KK 01 14 58	97	KK 01 15 94	75	KK 01 17 46	81	KK 01 19 15	71	KK 01 21 04	91
KK 01 01 56	7	KK 01 07 00	59	KK 01 12 03	35	KK 01 14 59	97	KK 01 15 96	57	KK 01 17 46	93	KK 01 19 17	75	KK 01 21 14	59
KK 01 03 15	49	KK 01 07 72	27	KK 01 12 23	91	KK 01 14 60	97	KK 01 15 96	59	KK 01 17 49	89	KK 01 19 19	71	KK 01 21 16	57
KK 01 03 15	51	KK 01 07 72	35	KK 01 12 23	93	KK 01 14 61	97	KK 01 16 37	53	KK 01 17 50	29	KK 01 19 26	91	KK 01 21 42	57
KK 01 03 18	55	KK 01 07 75	27	KK 01 12 43	95	KK 01 14 62	97	KK 01 16 52	55	KK 01 17 50	31	KK 01 19 42	73	KK 01 21 44	57
KK 01 03 19	55	KK 01 08 18	29	KK 01 12 59	29	KK 01 14 63	97	KK 01 16 82	39	KK 01 17 50	33	KK 01 19 43	73	KK 01 21 44	59
KK 01 03 19	57	KK 01 08 18	33	KK 01 12 59	31	KK 01 14 64	97	KK 01 16 82	41	KK 01 17 98	77	KK 01 19 45	71	KK 01 21 47	57
KK 01 03 19	59	KK 01 09 07	49	KK 01 12 59	33	KK 01 14 65	97	KK 01 16 82	43	KK 01 17 99	77	KK 01 19 47	75	KK 01 21 47	59
KK 01 03 28	53	KK 01 09 09	29	KK 01 12 61	91	KK 01 14 66	97	KK 01 16 82	55	KK 01 18 02	75	KK 01 19 49	71	KK 01 21 49	57
KK 01 03 28	57	KK 01 09 09	33	KK 01 12 61	93	KK 01 14 68	97	KK 01 16 85	39	KK 01 18 02	91	KK 01 19 50	91	KK 01 21 64	57
KK 01 03 28	57	KK 01 09 60	59	KK 01 12 62	49	KK 01 14 69	97	KK 01 16 85	41	KK 01 18 06	67	KK 01 19 51	67	KK 01 21 71	41
KK 01 03 28	59	KK 01 09 61	59	KK 01 12 62	51	KK 01 14 72	97	KK 01 16 91	47	KK 01 18 06	69	KK 01 19 51	69	KK 01 21 71	43
KK 01 03 32	55	KK 01 10 05	39	KK 01 12 66	27	KK 01 14 73	97	KK 01 16 91	53	KK 01 18 06	85	KK 01 19 51	73	KK 01 21 77	57
KK 01 03 35	57	KK 01 10 05	41	KK 01 12 66	29	KK 01 14 74	97	KK 01 16 94	51	KK 01 18 10	71	KK 01 19 52	71	KK 01 21 77	59
KK 01 03 90	79	KK 01 10 05	45	KK 01 12 66	31	KK 01 14 76	97	KK 01 17 17	89	KK 01 18 11	73	KK 01 19 53	75	KK 01 21 80	57
KK 01 04 72	57	KK 01 10 05	55	KK 01 12 66	33	KK 01 14 77	97	KK 01 17 18	89	KK 01 18 12	71	KK 01 20 15	85	KK 01 21 84	57
KK 01 05 10	95	KK 01 10 17	49	KK 01 12 69	25	KK 01 14 78	97	KK 01 17 19	89	KK 01 18 12	73	KK 01 20 16	85	KK 01 21 85	39
KK 01 05 32	29	KK 01 10 19	57	KK 01 12 70	57	KK 01 14 79	97	KK 01 17 24	89	KK 01 18 61	91	KK 01 20 16	87	KK 01 21 85	41
KK 01 05 32	31	KK 01 10 20	51	KK 01 12 92	27	KK 01 14 84	97	KK 01 17 25	89	KK 01 18 66	29	KK 01 20 17	87	KK 01 22 11	57
KK 01 05 32	33	KK 01 10 20	59	KK 01 13 42	95	KK 01 15 08	57	KK 01 17 27	89	KK 01 18 66	31	KK 01 20 18	85	KK 01 22 11	59
KK 01 05 72	29	KK 01 10 21	55	KK 01 13 42	97	KK 01 15 08	59	KK 01 17 29	77	KK 01 18 66	33	KK 01 20 18	87	KK 01 22 21	57
KK 01 05 72	31	KK 01 10 21	57	KK 01 13 43	95	KK 01 15 35	57	KK 01 17 30	77	KK 01 18 88	67	KK 01 20 27	67	KK 01 22 21	59
KK 01 05 72	33	KK 01 10 21	59	KK 01 13 43	97	KK 01 15 35	59	KK 01 17 31	77	KK 01 18 88	69	KK 01 20 32	85	KK 01 22 22	57
KK 01 05 83	35	KK 01 10 24	53	KK 01 13 44	95	KK 01 15 53	57	KK 01 17 32	77	KK 01 18 88	85	KK 01 20 32	87	KK 01 22 22	59
KK 01 05 84	35	KK 01 10 32	35	KK 01 13 44	97	KK 01 15 53	59	KK 01 17 33	77	KK 01 19 06	91	KK 01 20 39	85	KK 01 22 23	57
KK 01 06 06	39	KK 01 10 32	53	KK 01 13 68	97	KK 01 15 65	57	KK 01 17 36	81	KK 01 19 07	73	KK 01 20 39	87	KK 01 22 25	57
KK 01 06 06	41	KK 01 10 32	59	KK 01 13 69	97	KK 01 15 65	59	KK 01 17 36	93	KK 01 19 08	67	KK 01 20 43	85	KK 01 22 25	59
KK 01 06 27	39	KK 01 10 37	21	KK 01 13 70	97	KK 01 15 65	73	KK 01 17 37	81	KK 01 19 08	69	KK 01 20 43	87	KK 01 22 61	59
KK 01 06 27	41	KK 01 10 42	21	KK 01 13 80	95	KK 01 15 65	75	KK 01 17 37	93	KK 01 19 08	73	KK 01 20 59	59	KK 01 22 63	59
KK 01 06 55	41	KK 01 10 59	59	KK 01 14 14	97	KK 01 15 65	91	KK 01 17 38	81	KK 01 19 08	85	KK 01 20 59	59	KK 01 22 66	59
KK 01 07 00	39	KK 01 11 62	95	KK 01 14 16	95	KK 01 15 67	57	KK 01 17 38	93	KK 01 19 09	71	KK 01 20 60	57	KK 01 22 89	57

Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page
KK 01 23 07 63		KK 01 29 29 13		KK 01 32 28 13		KK 01 35 95 69		KK 01 58 35 41		KK 02 99 18 25		KK 03 20 40 69		KK 03 27 25 51	
KK 01 23 19 59		KK 01 29 29 19		KK 01 32 28 15		KK 01 35 96 69		KK 01 58 41 37		KK 02 99 18 95		KK 03 20 40 85		KK 03 27 25 55	
KK 01 23 25 63		KK 01 29 29 7		KK 01 32 28 17		KK 01 35 97 69		KK 01 58 51 49		KK 02 99 20 21		KK 03 20 40 87		KK 03 27 25 9	
KK 01 23 51 59		KK 01 29 31 47		KK 01 32 28 19		KK 01 36 01 89		KK 01 58 60 51		KK 02 99 20 27		KK 03 21 10 79		KK 03 27 29 25	
KK 01 25 44 65		KK 01 29 31 51		KK 01 32 28 7		KK 01 58 11 65		KK 01 60 01 25		KK 02 99 20 29		KK 03 21 10 83		KK 03 27 30 13	
KK 01 25 48 59		KK 01 29 36 55		KK 01 32 28 9		KK 01 58 13 17		KK 01 60 04 31		KK 02 99 20 31		KK 03 23 10 65		KK 03 27 30 15	
KK 01 25 51 59		KK 01 29 40 51		KK 01 32 34 13		KK 01 58 13 17		KK 01 60 04 35		KK 02 99 20 33		KK 03 23 35 41		KK 03 27 30 41	
KK 01 26 16 59		KK 01 29 41 55		KK 01 32 34 15		KK 01 58 16 37		KK 01 60 12 35		KK 02 99 20 35		KK 03 23 35 43		KK 03 27 35 13	
KK 01 26 49 85		KK 01 29 49 57		KK 01 32 34 5		KK 01 58 17 17		KK 01 60 12 41		KK 02 99 20 39		KK 03 24 03 39		KK 03 27 35 5	
KK 01 26 55 63		KK 01 29 49 59		KK 01 32 34 9		KK 01 58 17 17		KK 01 60 13 17		KK 02 99 20 41		KK 03 24 03 41		KK 03 27 35 9	
KK 01 26 59 59		KK 01 29 56 47		KK 01 33 32 13		KK 01 58 17 17		KK 01 60 15 11		KK 02 99 20 43		KK 03 24 70 39		KK 03 27 40 11	
KK 01 26 68 59		KK 01 29 57 43		KK 01 33 32 15		KK 01 58 17 17		KK 01 60 15 13		KK 02 99 20 53		KK 03 24 70 41		KK 03 27 40 13	
KK 01 26 69 59		KK 01 29 57 55		KK 01 33 32 15		KK 01 58 17 17		KK 01 60 15 17		KK 02 99 20 55		KK 03 25 35 65		KK 03 27 40 15	
KK 01 27 23 59		KK 01 29 59 39		KK 01 33 32 17		KK 01 58 17 19		KK 01 60 15 19		KK 02 99 20 91		KK 03 25 40 29		KK 03 27 40 19	
KK 01 27 24 59		KK 01 29 59 41		KK 01 33 32 5		KK 01 58 17 31		KK 01 60 15 7		KK 02 99 20 93		KK 03 25 40 43		KK 03 27 40 53	
KK 01 27 33 59		KK 01 29 60 29		KK 01 33 32 9		KK 01 58 17 51		KK 01 60 22 23		KK 02 99 20 97		KK 03 25 40 45		KK 03 27 40 7	
KK 01 27 37 65		KK 01 29 60 33		KK 01 33 32 9		KK 01 58 25 17		KK 01 60 25 25		KK 02 99 22 43		KK 03 26 50 55		KK 03 27 45 39	
KK 01 27 38 65		KK 01 29 84 41		KK 01 33 33 13		KK 01 58 25 17		KK 01 60 25 25		KK 02 99 22 49		KK 03 26 50 71		KK 03 27 45 51	
KK 01 28 74 25		KK 01 29 84 43		KK 01 33 33 7		KK 01 58 25 17		KK 01 60 31 27		KK 02 99 22 51		KK 03 26 55 21		KK 03 27 50 11	
KK 01 29 06 37		KK 01 29 87 39		KK 01 33 33 9		KK 01 58 25 19		KK 01 60 31 31		KK 02 99 22 53		KK 03 26 65 21		KK 03 27 50 13	
KK 01 29 13 21		KK 01 29 87 41		KK 01 33 46 11		KK 01 58 25 19		KK 01 60 40 73		KK 02 99 27 51		KK 03 27 00 39		KK 03 27 50 17	
KK 01 29 19 13		KK 01 29 95 35		KK 01 33 46 13		KK 01 58 25 19		KK 01 60 45 23		KK 02 99 27 53		KK 03 27 02 29		KK 03 27 50 19	
KK 01 29 19 15		KK 01 29 98 25		KK 01 33 46 15		KK 01 58 25 35		KK 01 60 49 23		KK 03 04 50 75		KK 03 27 02 33		KK 03 27 50 33	
KK 01 29 19 5		KK 01 30 00 25		KK 01 33 46 19		KK 01 58 25 37		KK 01 60 50 29		KK 03 10 30 33		KK 03 27 02 35		KK 03 27 50 7	
KK 01 29 19 9		KK 01 30 01 15		KK 01 33 46 7		KK 01 58 30 15		KK 01 60 50 33		KK 03 13 40 27		KK 03 27 02 51		KK 03 27 50 9	
KK 01 29 22 13		KK 01 30 73 69		KK 01 33 46 7		KK 01 58 30 25		KK 01 60 52 35		KK 03 17 30 27		KK 03 27 02 55		KK 03 27 52 51	
KK 01 29 22 15		KK 01 30 86 79		KK 01 33 46 9		KK 01 58 30 25		KK 01 60 58 29		KK 03 17 40 27		KK 03 27 12 25		KK 03 27 62 23	
KK 01 29 22 17		KK 01 30 87 83		KK 01 33 61 11		KK 01 58 30 31		KK 01 60 58 33		KK 03 19 41 25		KK 03 27 14 25		KK 03 27 65 11	
KK 01 29 22 5		KK 01 30 89 79		KK 01 33 61 13		KK 01 58 30 31		KK 01 62 00 95		KK 03 20 02 69		KK 03 27 16 49		KK 03 27 65 13	
KK 01 29 22 55		KK 01 30 91 79		KK 01 33 61 19		KK 01 58 30 39		KK 01 62 01 97		KK 03 20 02 77		KK 03 27 16 51		KK 03 27 65 19	
KK 01 29 22 9		KK 01 30 92 83		KK 01 33 61 7		KK 01 58 30 43		KK 01 62 03 97		KK 03 20 06 81		KK 03 27 24 25		KK 03 27 65 49	
KK 01 29 23 29		KK 01 30 93 83		KK 01 33 85 11		KK 01 58 32 5		KK 01 62 08 35		KK 03 20 06 89		KK 03 27 25 35		KK 03 27 65 51	
KK 01 29 24 49		KK 01 30 94 83		KK 01 33 85 13		KK 01 58 34 13		KK 01 65 17 79		KK 03 20 06 93		KK 03 27 25 39		KK 03 27 65 55	
KK 01 29 24 51		KK 01 30 95 83		KK 01 33 85 19		KK 01 58 34 15		KK 02 97 22 35		KK 03 20 16 77		KK 03 27 25 41		KK 03 27 65 7	
KK 01 29 27 5		KK 01 30 96 83		KK 01 33 85 7		KK 01 58 34 25		KK 02 97 27 21		KK 03 20 16 81		KK 03 27 25 43		KK 03 27 70 33	
KK 01 29 27 9		KK 01 32 28 11		KK 01 35 17 63		KK 01 58 34 35		KK 02 97 27 21		KK 03 20 16 89		KK 03 27 25 45		KK 03 27 70 49	
KK 01 29 29 11		KK 01 32 28 13		KK 01 35 19 63		KK 01 58 34 9		KK 02 97 37 95		KK 03 20 40 67		KK 03 27 25 5		KK 03 27 70 51	

Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page
KK 03 27 70 51		KK 03 28 28 43		KK 03 28 85 53		KK 03 31 75 15		KK 03 44 46 37		KK 05 61 12 27		KK 06 22 70 55		KK 06 24 52 39	
KK 03 27 70 53		KK 03 28 28 45		KK 03 28 90 25		KK 03 31 75 17		KK 03 50 10 91		KK 05 61 14 27		KK 06 22 96 55		KK 06 24 53 39	
KK 03 27 70 55		KK 03 28 30 31		KK 03 28 90 49		KK 03 31 75 5		KK 03 50 15 93		KK 05 61 15 27		KK 06 23 55 55		KK 06 24 54 41	
KK 03 27 74 25		KK 03 28 30 39		KK 03 28 90 53		KK 03 31 75 9		KK 03 50 20 21		KK 05 61 16 27		KK 06 23 60 55		KK 06 24 55 39	
KK 03 27 75 11		KK 03 28 30 41		KK 03 29 21 45		KK 03 31 81 15		KK 03 50 21 21		KK 05 61 56 27		KK 06 23 61 55		KK 06 24 55 41	
KK 03 27 75 13		KK 03 28 30 41		KK 03 29 21 47		KK 03 31 85 15		KK 03 50 22 71		KK 05 68 73 37		KK 06 23 62 55		KK 06 24 57 39	
KK 03 27 75 19		KK 03 28 35 39		KK 03 29 23 51		KK 03 32 51 13		KK 03 50 31 27		KK 05 70 63 21		KK 06 23 65 55		KK 06 24 57 41	
KK 03 27 75 29		KK 03 28 35 41		KK 03 29 25 25		KK 03 32 51 15		KK 03 50 31 31		KK 05 70 64 21		KK 06 23 69 55		KK 06 24 58 39	
KK 03 27 75 33		KK 03 28 36 25		KK 03 29 26 25		KK 03 32 51 17		KK 03 50 48 23		KK 05 70 65 21		KK 06 23 70 55		KK 06 24 58 41	
KK 03 27 75 35		KK 03 28 36 47		KK 03 29 29 33		KK 03 32 51 5		KK 03 50 60 23		KK 05 70 66 21		KK 06 23 73 55		KK 06 24 62 43	
KK 03 27 75 49		KK 03 28 40 21		KK 03 29 31 45		KK 03 32 51 9		KK 03 50 72 23		KK 05 70 67 21		KK 06 23 74 55		KK 06 24 79 55	
KK 03 27 75 55		KK 03 28 40 23		KK 03 29 31 47		KK 03 32 56 13		KK 03 50 87 25		KK 05 70 68 21		KK 06 23 75 55		KK 06 24 82 55	
KK 03 27 75 7		KK 03 28 40 23		KK 03 29 34 29		KK 03 32 56 17		KK 03 50 87 25		KK 05 70 89 21		KK 06 23 80 55		KK 06 24 84 55	
KK 03 27 85 55		KK 03 28 40 31		KK 03 29 34 33		KK 03 32 56 5		KK 03 51 14 35		KK 06 01 08 21		KK 06 23 88 43		KK 06 24 85 55	
KK 03 27 90 55		KK 03 28 40 39		KK 03 30 04 13		KK 03 32 56 9		KK 03 51 34 25		KK 06 01 09 21		KK 06 23 90 43		KK 06 24 88 55	
KK 03 27 92 35		KK 03 28 40 41		KK 03 30 06 17		KK 03 32 86 13		KK 03 51 38 25		KK 06 01 19 21		KK 06 23 94 55		KK 06 24 91 43	
KK 03 27 95 37		KK 03 28 40 49		KK 03 30 06 37		KK 03 32 86 15		KK 03 51 56 25		KK 06 06 24 27		KK 06 23 95 41		KK 06 24 93 43	
KK 03 28 03 23		KK 03 28 40 53		KK 03 30 07 37		KK 03 32 86 17		KK 03 51 65 21		KK 06 06 57 37		KK 06 23 95 43		KK 06 25 00 39	
KK 03 28 03 53		KK 03 28 45 23		KK 03 30 16 17		KK 03 32 86 5		KK 03 51 78 35		KK 06 07 03 21		KK 06 23 97 43		KK 06 25 00 41	
KK 03 28 07 23		KK 03 28 45 23		KK 03 31 00 13		KK 03 32 86 9		KK 03 51 79 55		KK 06 12 79 47		KK 06 23 97 45		KK 06 25 05 39	
KK 03 28 08 49		KK 03 28 45 41		KK 03 31 00 15		KK 03 32 95 13		KK 03 52 09 21		KK 06 12 79 49		KK 06 23 98 55		KK 06 25 05 41	
KK 03 28 08 55		KK 03 28 45 47		KK 03 31 00 5		KK 03 32 95 17		KK 03 52 15 23		KK 06 12 79 55		KK 06 24 09 39		KK 06 25 06 39	
KK 03 28 11 55		KK 03 28 45 55		KK 03 31 00 9		KK 03 32 95 5		KK 03 52 16 23		KK 06 12 80 21		KK 06 24 09 41		KK 06 25 06 41	
KK 03 28 13 43		KK 03 28 50 23		KK 03 31 07 15		KK 03 32 95 9		KK 03 52 34 51		KK 06 12 91 21		KK 06 24 14 39		KK 06 25 16 57	
KK 03 28 13 53		KK 03 28 55 21		KK 03 31 07 17		KK 03 33 06 79		KK 05 07 06 21		KK 06 15 15 23		KK 06 24 21 43		KK 06 30 90 11	
KK 03 28 15 39		KK 03 28 60 21		KK 03 31 07 5		KK 03 33 06 83		KK 05 30 90 11		KK 06 15 15 51		KK 06 24 24 39		KK 06 30 90 13	
KK 03 28 15 41		KK 03 28 60 23		KK 03 31 07 9		KK 03 33 25 35		KK 05 30 90 13		KK 06 16 37 51		KK 06 24 33 39		KK 06 30 90 13	
KK 03 28 16 55		KK 03 28 60 23		KK 03 31 07 9		KK 03 33 32 5		KK 05 30 90 13		KK 06 18 95 43		KK 06 24 35 43		KK 06 30 90 15	
KK 03 28 18 49		KK 03 28 60 39		KK 03 31 08 15		KK 03 34 01 35		KK 05 30 90 15		KK 06 18 99 45		KK 06 24 37 43		KK 06 30 90 17	
KK 03 28 20 41		KK 03 28 60 41		KK 03 31 11 17		KK 03 35 40 31		KK 05 30 90 17		KK 06 19 42 43		KK 06 24 39 43		KK 06 30 90 19	
KK 03 28 20 43		KK 03 28 65 23		KK 03 31 16 17		KK 03 37 70 55		KK 05 30 90 19		KK 06 19 42 45		KK 06 24 40 43		KK 06 30 90 5	
KK 03 28 21 43		KK 03 28 70 49		KK 03 31 17 17		KK 03 41 22 49		KK 05 30 90 5		KK 06 20 20 23		KK 06 24 43 43		KK 06 30 90 7	
KK 03 28 21 45		KK 03 28 70 51		KK 03 31 18 13		KK 03 41 22 51		KK 05 30 90 7		KK 06 20 25 13		KK 06 24 49 43		KK 06 30 90 9	
KK 03 28 21 55		KK 03 28 75 29		KK 03 31 19 13		KK 03 42 25 25		KK 05 30 90 9		KK 06 20 25 9		KK 06 24 50 39		KK 06 30 91 15	
KK 03 28 24 23		KK 03 28 80 33		KK 03 31 73 15		KK 03 42 25 37		KK 05 33 87 13		KK 06 22 70 41		KK 06 24 50 41		KK 06 30 91 17	
KK 03 28 26 47		KK 03 28 80 53		KK 03 31 74 13		KK 03 42 28 37		KK 05 33 87 5		KK 06 22 70 43		KK 06 24 51 39		KK 06 30 91 5	
KK 03 28 26 55		KK 03 28 85 33		KK 03 31 75 15		KK 03 42 50 37		KK 05 33 87 9		KK 06 22 70 45		KK 06 24 51 41		KK 06 30 92 15	

Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page
KK 06 30 92	17	KK 06 61 89	31	KK 06 86 94	57	KK 07 12 12	23	KK 07 20 10	51	KK 07 30 02	17	KK 07 30 56	13	KK 07 30 89	13
KK 06 30 92	5	KK 06 61 90	27	KK 06 86 94	59	KK 07 12 28	23	KK 07 21 24	53	KK 07 30 02	5	KK 07 30 56	15	KK 07 30 89	15
KK 06 33 88	13	KK 06 61 90	31	KK 07 02 92	15	KK 07 12 56	51	KK 07 22 00	51	KK 07 30 03	17	KK 07 30 56	17	KK 07 30 89	17
KK 06 33 88	5	KK 06 68 11	37	KK 07 02 93	15	KK 07 12 70	23	KK 07 22 01	51	KK 07 30 03	5	KK 07 30 56	9	KK 07 30 89	5
KK 06 33 88	9	KK 06 68 11	37	KK 07 02 94	15	KK 07 12 71	23	KK 07 26 06	49	KK 07 30 04	17	KK 07 30 57	13	KK 07 30 89	9
KK 06 36 07	15	KK 06 68 12	37	KK 07 03 88	9	KK 07 12 72	23	KK 07 26 06	51	KK 07 30 04	5	KK 07 30 57	15	KK 07 30 91	13
KK 06 36 07	7	KK 06 68 61	37	KK 07 03 89	9	KK 07 12 73	23	KK 07 26 06	53	KK 07 30 05	17	KK 07 30 57	17	KK 07 30 91	15
KK 06 36 07	9	KK 06 68 68	37	KK 07 03 90	5	KK 07 12 74	23	KK 07 26 07	49	KK 07 30 05	5	KK 07 30 57	9	KK 07 30 91	17
KK 06 38 01	5	KK 06 68 69	37	KK 07 03 91	5	KK 07 12 75	23	KK 07 26 07	51	KK 07 30 06	17	KK 07 30 62	13	KK 07 30 91	5
KK 06 38 01	5	KK 06 68 73	37	KK 07 03 92	9	KK 07 12 80	23	KK 07 26 07	53	KK 07 30 06	5	KK 07 30 62	15	KK 07 30 91	9
KK 06 43 17	39	KK 06 68 80	37	KK 07 03 93	9	KK 07 12 81	23	KK 07 26 21	53	KK 07 30 07	17	KK 07 30 62	17	KK 07 30 92	13
KK 06 43 17	41	KK 06 68 81	37	KK 07 03 94	5	KK 07 13 02	51	KK 07 27 51	25	KK 07 30 07	5	KK 07 30 62	9	KK 07 30 92	15
KK 06 43 19	39	KK 06 70 16	21	KK 07 03 95	5	KK 07 13 06	51	KK 07 27 55	25	KK 07 30 08	5	KK 07 30 63	13	KK 07 30 92	17
KK 06 43 19	41	KK 06 70 25	21	KK 07 03 96	9	KK 07 14 03	51	KK 07 27 57	25	KK 07 30 09	5	KK 07 30 63	15	KK 07 30 92	5
KK 06 43 20	39	KK 06 70 26	21	KK 07 03 97	9	KK 07 14 10	47	KK 07 27 59	25	KK 07 30 16	15	KK 07 30 63	17	KK 07 30 92	9
KK 06 43 20	41	KK 06 70 31	21	KK 07 03 98	9	KK 07 14 10	49	KK 07 27 60	25	KK 07 30 30	17	KK 07 30 63	9	KK 07 32 24	9
KK 06 43 21	39	KK 06 70 39	21	KK 07 03 99	9	KK 07 14 10	51	KK 07 27 61	25	KK 07 30 30	5	KK 07 30 64	13	KK 07 32 25	9
KK 06 43 21	41	KK 06 70 39	43	KK 07 06 39	37	KK 07 14 11	47	KK 07 27 65	25	KK 07 30 31	17	KK 07 30 64	15	KK 07 32 27	9
KK 06 43 23	39	KK 06 70 39	45	KK 07 06 40	5	KK 07 14 11	49	KK 07 27 66	25	KK 07 30 31	5	KK 07 30 64	17	KK 07 32 28	9
KK 06 43 23	41	KK 06 70 40	21	KK 07 06 40	9	KK 07 14 11	51	KK 07 27 67	25	KK 07 30 40	5	KK 07 30 64	9	KK 07 32 30	17
KK 06 43 60	39	KK 06 70 49	25	KK 07 06 41	5	KK 07 14 12	47	KK 07 27 69	25	KK 07 30 41	5	KK 07 30 65	13	KK 07 32 30	9
KK 06 43 60	41	KK 06 70 51	21	KK 07 06 41	9	KK 07 14 12	49	KK 07 27 70	25	KK 07 30 42	17	KK 07 30 65	15	KK 07 32 31	17
KK 06 61 02	27	KK 06 70 57	21	KK 07 06 42	5	KK 07 14 12	51	KK 07 27 71	25	KK 07 30 42	5	KK 07 30 65	17	KK 07 32 31	9
KK 06 61 08	27	KK 06 70 59	21	KK 07 06 42	9	KK 07 14 17	25	KK 07 27 73	25	KK 07 30 43	17	KK 07 30 65	9	KK 07 32 36	9
KK 06 61 40	27	KK 06 70 60	21	KK 07 06 53	37	KK 07 14 93	51	KK 07 27 77	25	KK 07 30 43	5	KK 07 30 80	13	KK 07 32 37	9
KK 06 61 42	27	KK 06 70 68	21	KK 07 11 34	51	KK 07 14 95	51	KK 07 27 88	25	KK 07 30 44	17	KK 07 30 80	15	KK 07 32 39	9
KK 06 61 43	27	KK 06 70 70	21	KK 07 11 35	51	KK 07 15 00	15	KK 07 27 89	25	KK 07 30 44	5	KK 07 30 80	17	KK 07 32 40	9
KK 06 61 45	27	KK 06 70 75	21	KK 07 11 97	49	KK 07 15 08	23	KK 07 27 92	25	KK 07 30 45	17	KK 07 30 80	9	KK 07 32 41	9
KK 06 61 70	31	KK 06 70 76	21	KK 07 11 97	51	KK 07 15 29	23	KK 07 28 17	41	KK 07 30 45	5	KK 07 30 81	13	KK 07 32 42	9
KK 06 61 75	27	KK 06 70 77	21	KK 07 11 98	49	KK 07 16 64	49	KK 07 28 19	25	KK 07 30 54	13	KK 07 30 81	15	KK 07 32 45	15
KK 06 61 75	31	KK 06 70 80	21	KK 07 11 98	51	KK 07 16 64	51	KK 07 28 20	25	KK 07 30 54	15	KK 07 30 81	17	KK 07 32 46	15
KK 06 61 78	27	KK 06 70 90	21	KK 07 11 99	49	KK 07 16 64	55	KK 07 28 21	25	KK 07 30 54	17	KK 07 30 81	9	KK 07 32 50	5
KK 06 61 78	31	KK 06 70 92	21	KK 07 11 99	51	KK 07 16 70	51	KK 07 28 22	25	KK 07 30 54	9	KK 07 30 88	13	KK 07 32 51	5
KK 06 61 82	27	KK 06 86 70	39	KK 07 12 07	23	KK 07 17 68	49	KK 07 28 24	25	KK 07 30 55	13	KK 07 30 88	15	KK 07 32 56	17
KK 06 61 82	31	KK 06 86 70	41	KK 07 12 08	23	KK 07 17 68	51	KK 07 28 25	25	KK 07 30 55	15	KK 07 30 88	17	KK 07 32 56	5
KK 06 61 85	27	KK 06 86 91	57	KK 07 12 09	23	KK 07 18 53	51	KK 07 30 00	5	KK 07 30 55	17	KK 07 30 88	5	KK 07 32 57	17
KK 06 61 89	27	KK 06 86 91	59	KK 07 12 11	23	KK 07 20 10	49	KK 07 30 01	5	KK 07 30 55	9	KK 07 30 88	9	KK 07 32 57	5

Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page
KK 07 32 60	5	KK 07 33 10	9	KK 07 36 08	13	KK 07 38 01	9	KK 07 60 23	35	KK 07 64 27	29	KK 07 68 59	37	KK 07 85 37	45
KK 07 32 61	5	KK 07 33 11	5	KK 07 36 08	15	KK 07 38 03	15	KK 07 60 53	35	KK 07 64 27	33	KK 07 68 72	37	KK 07 85 37	47
KK 07 32 63	5	KK 07 33 11	9	KK 07 36 08	17	KK 07 38 03	5	KK 07 60 58	35	KK 07 64 30	35	KK 07 69 36	25	KK 07 85 38	45
KK 07 32 64	5	KK 07 33 28	13	KK 07 36 08	5	KK 07 38 03	5	KK 07 60 65	35	KK 07 64 34	35	KK 07 69 43	37	KK 07 85 38	47
KK 07 32 66	5	KK 07 33 29	13	KK 07 36 08	9	KK 07 38 04	9	KK 07 60 66	35	KK 07 64 35	35	KK 07 69 44	37	KK 07 85 40	47
KK 07 32 66	9	KK 07 33 32	15	KK 07 36 09	13	KK 07 38 04	9	KK 07 60 68	35	KK 07 64 37	35	KK 07 70 21	25	KK 07 85 45	47
KK 07 32 67	5	KK 07 33 33	15	KK 07 36 09	15	KK 07 38 05	15	KK 07 60 70	35	KK 07 64 99	29	KK 07 70 23	23	KK 07 85 46	45
KK 07 32 67	9	KK 07 33 38	13	KK 07 36 09	17	KK 07 38 05	9	KK 07 60 72	35	KK 07 64 99	31	KK 07 70 24	23	KK 07 85 46	47
KK 07 32 72	13	KK 07 33 39	13	KK 07 36 09	5	KK 07 38 07	5	KK 07 60 76	29	KK 07 64 99	33	KK 07 71 14	45	KK 07 85 49	45
KK 07 32 72	15	KK 07 33 50	13	KK 07 36 09	9	KK 07 38 08	5	KK 07 60 76	33	KK 07 64 99	35	KK 07 71 20	41	KK 07 85 50	45
KK 07 32 73	13	KK 07 33 51	13	KK 07 36 14	13	KK 07 38 10	15	KK 07 61 22	29	KK 07 65 15	29	KK 07 71 26	41	KK 07 85 51	51
KK 07 32 73	15	KK 07 33 52	13	KK 07 36 14	15	KK 07 38 11	15	KK 07 61 23	29	KK 07 65 15	33	KK 07 71 27	41	KK 07 85 55	45
KK 07 32 75	13	KK 07 33 53	13	KK 07 36 14	17	KK 07 38 12	15	KK 07 61 48	35	KK 07 65 17	33	KK 07 71 57	41	KK 07 85 58	41
KK 07 32 75	15	KK 07 33 54	13	KK 07 36 14	7	KK 07 38 13	15	KK 07 62 85	35	KK 07 65 18	33	KK 07 79 55	53	KK 07 85 60	41
KK 07 32 76	13	KK 07 34 06	5	KK 07 36 14	9	KK 07 38 15	15	KK 07 62 94	35	KK 07 65 27	29	KK 07 79 56	53	KK 07 85 64	41
KK 07 32 76	15	KK 07 34 07	5	KK 07 36 15	13	KK 07 38 16	15	KK 07 62 96	35	KK 07 65 27	33	KK 07 79 60	53	KK 07 85 65	45
KK 07 32 78	13	KK 07 34 11	5	KK 07 36 15	15	KK 07 38 17	15	KK 07 62 97	35	KK 07 65 32	29	KK 07 79 62	53	KK 07 85 66	45
KK 07 32 79	13	KK 07 34 12	5	KK 07 36 15	17	KK 07 38 20	15	KK 07 62 98	35	KK 07 65 32	33	KK 07 79 63	53	KK 07 85 67	45
KK 07 32 80	5	KK 07 34 14	5	KK 07 36 15	5	KK 07 38 21	15	KK 07 64 00	29	KK 07 65 33	29	KK 07 79 66	53	KK 07 85 68	45
KK 07 32 81	5	KK 07 34 15	5	KK 07 36 15	9	KK 07 38 22	15	KK 07 64 00	33	KK 07 65 33	33	KK 07 79 67	53	KK 07 85 69	45
KK 07 32 86	5	KK 07 34 17	9	KK 07 36 16	13	KK 07 38 26	13	KK 07 64 00	35	KK 07 65 37	29	KK 07 79 69	53	KK 07 85 70	45
KK 07 32 87	5	KK 07 34 18	9	KK 07 36 16	17	KK 07 38 26	9	KK 07 64 06	29	KK 07 65 37	33	KK 07 79 71	53	KK 07 85 71	45
KK 07 32 90	5	KK 07 34 35	9	KK 07 36 16	5	KK 07 38 26	9	KK 07 64 06	31	KK 07 65 44	35	KK 07 79 75	53	KK 07 85 72	45
KK 07 32 90	9	KK 07 34 36	9	KK 07 36 16	9	KK 07 38 29	13	KK 07 64 06	33	KK 07 65 45	35	KK 07 79 90	55	KK 07 85 73	45
KK 07 32 91	5	KK 07 34 40	9	KK 07 36 34	11	KK 07 38 29	9	KK 07 64 07	29	KK 07 65 48	35	KK 07 79 91	55	KK 07 85 74	45
KK 07 32 91	9	KK 07 34 41	9	KK 07 36 34	13	KK 07 38 30	5	KK 07 64 07	31	KK 07 65 75	33	KK 07 79 92	55	KK 07 85 75	45
KK 07 33 00	15	KK 07 34 64	13	KK 07 36 34	19	KK 07 38 31	5	KK 07 64 07	33	KK 07 65 77	33	KK 07 79 93	55	KK 07 85 76	45
KK 07 33 00	17	KK 07 34 64	15	KK 07 36 34	7	KK 07 38 31	9	KK 07 64 07	35	KK 07 68 12	37	KK 07 79 94	55	KK 07 85 77	45
KK 07 33 00	5	KK 07 34 65	13	KK 07 36 35	11	KK 07 38 34	15	KK 07 64 09	29	KK 07 68 13	37	KK 07 85 19	45	KK 07 85 78	45
KK 07 33 00	9	KK 07 34 65	15	KK 07 36 35	13	KK 07 38 35	15	KK 07 64 09	31	KK 07 68 17	37	KK 07 85 19	47	KK 07 85 79	45
KK 07 33 01	15	KK 07 34 70	13	KK 07 36 35	19	KK 07 38 36	15	KK 07 64 09	33	KK 07 68 18	37	KK 07 85 26	45	KK 07 85 80	45
KK 07 33 01	17	KK 07 34 70	15	KK 07 36 35	7	KK 07 38 42	9	KK 07 64 09	35	KK 07 68 25	37	KK 07 85 26	47	KK 07 85 82	45
KK 07 33 01	5	KK 07 34 71	13	KK 07 38 00	13	KK 07 47 60	25	KK 07 64 09	35	KK 07 68 26	37	KK 07 85 27	45	KK 07 85 83	59
KK 07 33 01	9	KK 07 34 71	15	KK 07 38 00	5	KK 07 49 10	23	KK 07 64 10	29	KK 07 68 33	37	KK 07 85 27	47	KK 07 85 84	59
KK 07 33 03	15	KK 07 36 07	15	KK 07 38 00	9	KK 07 49 11	23	KK 07 64 10	31	KK 07 68 34	37	KK 07 85 30	45	KK 07 85 85	45
KK 07 33 04	15	KK 07 36 07	7	KK 07 38 01	13	KK 07 60 08	35	KK 07 64 10	33	KK 07 68 58	37	KK 07 85 31	39	KK 07 85 90	51
KK 07 33 10	5	KK 07 36 07	9	KK 07 38 01	5	KK 07 60 22	35	KK 07 64 10	35	KK 07 68 58	37	KK 07 85 31	45	KK 07 85 91	51

Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page
KK 07 85 92	51	KK 07 87 05	51	KK 07 87 43	49	KK 07 89 82	65	KK 08 32 28	5	KK 08 61 00	33	KK 35 21 80	73	KK 35 23 82	57
KK 07 85 93	51	KK 07 87 06	47	KK 07 87 44	49	KK 07 89 85	65	KK 08 32 29	5	KK 08 61 01	29	KK 35 21 82	73	KK 35 23 82	73
KK 07 85 94	51	KK 07 87 06	51	KK 07 87 44	51	KK 07 89 86	65	KK 08 32 35	17	KK 08 61 01	31	KK 35 21 88	73	KK 35 23 85	73
KK 07 85 96	53	KK 07 87 07	47	KK 07 87 45	49	KK 07 89 87	65	KK 08 32 35	7	KK 08 61 01	33	KK 35 21 89	73	KK 35 23 86	57
KK 07 85 98	45	KK 07 87 07	51	KK 07 87 46	51	KK 07 89 91	65	KK 08 33 00	17	KK 08 61 10	31	KK 35 21 92	73	KK 35 23 86	73
KK 07 86 10	95	KK 07 87 08	49	KK 07 87 50	49	KK 07 89 92	65	KK 08 33 01	17	KK 08 61 11	31	KK 35 21 93	73	KK 35 24 01	53
KK 07 86 15	95	KK 07 87 09	49	KK 07 87 50	51	KK 07 89 94	65	KK 08 34 06	17	KK 08 61 12	31	KK 35 21 97	73	KK 35 24 01	59
KK 07 86 41	49	KK 07 87 10	49	KK 07 87 55	49	KK 07 97 24	53	KK 08 34 07	17	KK 08 61 13	31	KK 35 22 37	59	KK 35 24 01	91
KK 07 86 42	49	KK 07 87 10	51	KK 07 87 57	43	KK 07 97 24	59	KK 08 34 08	17	KK 08 61 14	31	KK 35 22 47	59	KK 35 27 74	69
KK 07 86 42	51	KK 07 87 12	43	KK 07 87 57	53	KK 07 98 21	51	KK 08 34 09	17	KK 08 61 15	31	KK 35 22 52	71	KK 35 33 70	57
KK 07 86 43	49	KK 07 87 13	43	KK 07 87 59	49	KK 07 98 24	45	KK 08 34 15	17	KK 08 68 01	37	KK 35 22 57	75	KK 35 33 70	59
KK 07 86 43	51	KK 07 87 14	43	KK 07 87 61	49	KK 07 98 25	51	KK 08 34 16	17	KK 12 30 05	39	KK 35 22 58	71	KK 35 33 70	67
KK 07 86 50	43	KK 07 87 15	43	KK 07 87 61	51	KK 07 98 26	51	KK 08 34 17	17	KK 35 11 10	39	KK 35 22 60	71	KK 35 33 71	67
KK 07 86 51	43	KK 07 87 16	49	KK 07 87 66	49	KK 07 98 27	51	KK 08 34 18	17	KK 35 11 11	39	KK 35 22 62	75	KK 35 33 72	67
KK 07 86 52	43	KK 07 87 17	49	KK 07 87 66	51	KK 07 98 28	51	KK 08 38 02	17	KK 35 11 13	39	KK 35 22 66	71	KK 35 33 72	69
KK 07 86 53	43	KK 07 87 18	49	KK 07 87 71	49	KK 07 98 30	59	KK 08 38 03	17	KK 35 11 39	49	KK 35 22 67	75	KK 35 33 73	67
KK 07 86 54	43	KK 07 87 19	47	KK 07 87 77	39	KK 07 98 31	59	KK 08 38 04	17	KK 35 11 40	49	KK 35 22 68	71	KK 35 33 92	67
KK 07 86 55	43	KK 07 87 19	49	KK 07 87 79	39	KK 07 98 32	59	KK 08 38 05	17	KK 35 11 86	49	KK 35 22 71	73	KK 35 33 92	69
KK 07 86 75	39	KK 07 87 19	51	KK 07 87 85	47	KK 07 98 33	59	KK 08 38 06	17	KK 35 11 91	49	KK 35 22 72	73	KK 35 33 98	85
KK 07 86 76	45	KK 07 87 20	49	KK 07 87 85	51	KK 07 98 37	45	KK 08 38 07	17	KK 35 11 93	51	KK 35 22 80	71	KK 35 33 98	87
KK 07 86 77	45	KK 07 87 20	51	KK 07 87 86	49	KK 07 98 38	45	KK 08 38 08	17	KK 35 11 95	51	KK 35 22 84	75	KK 35 34 00	59
KK 07 86 78	43	KK 07 87 21	49	KK 07 87 91	55	KK 08 11 50	41	KK 08 38 09	5	KK 35 21 37	91	KK 35 22 88	71	KK 35 34 00	85
KK 07 86 79	43	KK 07 87 21	51	KK 07 87 94	57	KK 08 26 40	25	KK 08 38 10	5	KK 35 21 53	91	KK 35 22 90	71	KK 35 34 09	59
KK 07 86 80	43	KK 07 87 22	49	KK 07 87 94	59	KK 08 32 10	17	KK 08 50 76	37	KK 35 21 53	93	KK 35 22 92	75	KK 35 34 09	85
KK 07 86 86	51	KK 07 87 22	51	KK 07 87 95	57	KK 08 32 11	17	KK 08 60 80	31	KK 35 21 55	91	KK 35 22 93	71	KK 35 34 52	85
KK 07 86 90	47	KK 07 87 23	49	KK 07 87 95	59	KK 08 32 12	17	KK 08 60 81	31	KK 35 21 57	91	KK 35 22 96	73	KK 35 34 52	87
KK 07 86 90	51	KK 07 87 23	51	KK 07 87 96	57	KK 08 32 13	17	KK 08 60 82	31	KK 35 21 61	75	KK 35 22 97	71	KK 35 34 56	85
KK 07 86 91	47	KK 07 87 25	43	KK 07 87 96	59	KK 08 32 14	17	KK 08 60 83	31	KK 35 21 62	73	KK 35 22 98	75	KK 35 34 57	85
KK 07 86 91	51	KK 07 87 26	43	KK 07 87 97	57	KK 08 32 15	17	KK 08 60 84	31	KK 35 21 63	71	KK 35 22 99	67	KK 35 34 58	85
KK 07 86 93	41	KK 07 87 27	43	KK 07 87 97	59	KK 08 32 16	17	KK 08 60 85	31	KK 35 21 63	73	KK 35 22 99	71	KK 35 34 59	85
KK 07 86 96	41	KK 07 87 33	55	KK 07 87 98	57	KK 08 32 17	17	KK 08 60 86	29	KK 35 21 63	73	KK 35 23 42	57	KK 35 34 60	85
KK 07 87 01	49	KK 07 87 36	49	KK 07 87 98	59	KK 08 32 18	17	KK 08 60 86	33	KK 35 21 74	71	KK 35 23 42	71	KK 35 36 27	69
KK 07 87 02	49	KK 07 87 36	51	KK 07 87 99	57	KK 08 32 20	17	KK 08 60 87	29	KK 35 21 74	73	KK 35 23 51	57	KK 35 36 36	85
KK 07 87 03	49	KK 07 87 40	43	KK 07 87 99	59	KK 08 32 21	17	KK 08 60 87	33	KK 35 21 74	73	KK 35 23 51	71	KK 35 36 37	85
KK 07 87 04	49	KK 07 87 41	49	KK 07 88 98	41	KK 08 32 22	17	KK 08 60 89	31	KK 35 21 75	73	KK 35 23 70	57	KK 35 37 01	77
KK 07 87 05	47	KK 07 87 42	49	KK 07 89 53	49	KK 08 32 23	17	KK 08 60 90	29	KK 35 21 76	71	KK 35 23 70	75	KK 35 37 02	59
KK 07 87 05	49	KK 07 87 42	51	KK 07 89 79	65	KK 08 32 24	17	KK 08 60 90	31	KK 35 21 77	73	KK 35 23 71	75	KK 35 37 02	77

Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page
KK 35 37 03	77	KK 35 37 26	81	KK 35 37 39	89	KK 35 37 92	77	KK 35 39 02	59	KK 35 39 36	79	KK 36 11 38	49	KK 70 98 44	99
KK 35 37 04	59	KK 35 37 26	93	KK 35 37 40	77	KK 35 37 93	81	KK 35 39 02	79	KK 35 39 37	79	KK 70 92 34	99	KK 70 98 95	99
KK 35 37 04	81	KK 35 37 27	81	KK 35 37 41	77	KK 35 37 93	93	KK 35 39 03	79	KK 35 39 38	83	KK 70 93 04	99	KK 70 99 33	99
KK 35 37 05	81	KK 35 37 27	93	KK 35 37 42	77	KK 35 38 11	89	KK 35 39 04	59	KK 35 39 39	83	KK 70 94 79	99	KK 70 99 49	99
KK 35 37 06	81	KK 35 37 28	81	KK 35 37 43	81	KK 35 38 36	87	KK 35 39 04	83	KK 35 39 40	83	KK 70 96 70	99	KK 80 60 90	33
KK 35 37 07	81	KK 35 37 29	81	KK 35 37 44	81	KK 35 38 37	59	KK 35 39 05	83	KK 35 39 41	83	KK 70 96 71	99	UH 82 56 40	79
KK 35 37 08	53	KK 35 37 29	93	KK 35 37 45	81	KK 35 38 37	69	KK 35 39 06	83	KK 35 39 44	79	KK 70 97 37	99	UH 82 56 40	83
KK 35 37 08	59	KK 35 37 30	77	KK 35 37 46	81	KK 35 38 38	69	KK 35 39 22	79	KK 35 39 45	83	KK 70 97 81	99		
KK 35 37 08	93	KK 35 37 31	77	KK 35 37 47	93	KK 35 38 50	69	KK 35 39 23	83	KK 35 39 46	79	KK 70 98 23	99		
KK 35 37 20	77	KK 35 37 32	81	KK 35 37 49	89	KK 35 38 51	69	KK 35 39 26	79	KK 35 39 46	83	KK 70 98 31	99		
KK 35 37 21	77	KK 35 37 35	81	KK 35 37 71	89	KK 35 38 56	87	KK 35 39 27	83	KK 35 61 31	39	KK 70 98 41	99		
KK 35 37 22	77	KK 35 37 36	81	KK 35 37 72	89	KK 35 38 57	87	KK 35 39 34	79	KK 35 61 31	49	KK 70 98 42	99		
KK 35 37 25	77	KK 35 37 37	93	KK 35 37 73	89	KK 35 39 01	79	KK 35 39 35	79	KK 36 11 33	39	KK 70 98 43	99		

Аггро
Замовлення запчастин
(050)-407-68-47
(050)-407-68-45