

Spare Parts List

Model PG/RG


Semi mounted plough

No 733005



Notes

GB Model	GB Interbody clearance	GB Headstock
D Modell	D Körperlängsabstand	D Drehwerk
F Modèle	F Dégagement sous age	F Type de tête
E Modelo	E Separación entre cuerpos	E Tipo de cabezal

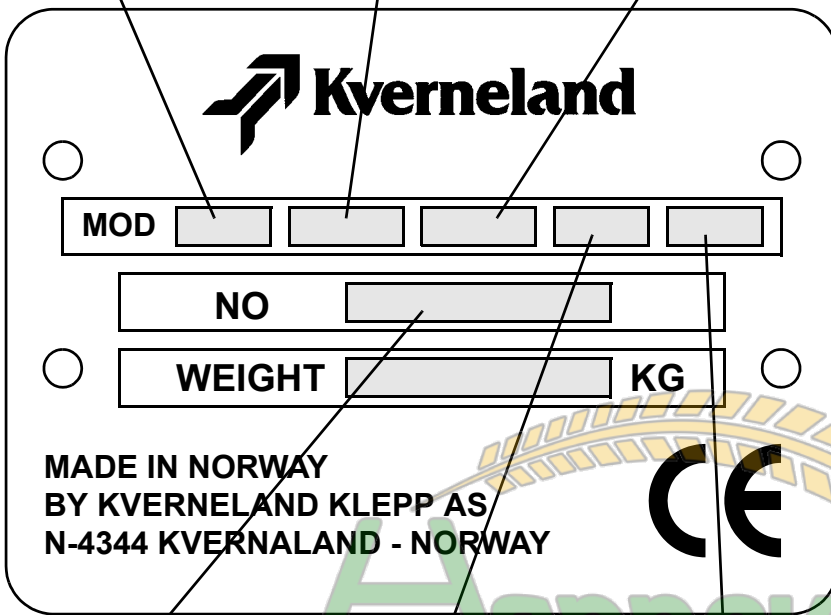

GB Serial number	Type of beam:	GB Type of body
D Seriennummer	Heavy Duty	D Körperform
F Numéro de série	Vibromat	F Type de corps
E Numero de serie	On-land	E Tipo de cuerpo

Замовлення запчастин

(GB) Complete model code and serial number must be stated to avoid mistakes when ordering spare parts and misunderstandings regarding service consultations. The identification plate is located on the headstock.

(F) Le code complet et le numéro de série doivent être indiqués pour éviter des erreurs lors de la commande de pièces de rechange et des malentendus concernant des demandes de Service-Après-Vente. La plaque d'identité est située sur la tête.

(D) Um bei Ersatzteilbestellungen und Serviceleistungen Fehler und Mißverständnisse zu vermeiden ist es erforderlich, daß die genaue Bezeichnung und die Seriennummer angegeben werden. Die Plakette befindet sich am Drehwerk.

(E) Debe figura el código completo del modelo y el número de serie para evitar errores al pedir las piezas de recambio y al hacer consultas técnicas. La placa de identificación esta situada en el cabezal.

Plate		Page
244	Bodies no 6, 7, 8, 9 and 28	4
367	Bodies no 12, 15 and 19	8
494	Body no 14 (Plastic mouldboard)	12
414	Body no 20 (Finger Body) (Before 01.03.99)	14
1089	Bodies no. 29 and no. 30.....	16
458	Auto Reset Beam.....	20
1009	Beam (Shear bolt)	22
187	Disc coulter for Auto Reset beam (Before 01.01.99)	24
1073	Disc coulter 18" and 20", E-saddle (From 01.01.99)	26
1000	Springloaded disc coulter	28
1007	Disc coulter for shear bolt beam	30
341	Manure skimmer / Maize skimmer	32
900	Front for PG/RG	34
902	Main frame for PG/RG.....	36
901	Wheel for PG/RG.....	40
1225	Fix for on-land wheel PG/RG	42
1029	Hydraulic layout for turnover PG and PN/RN	44
1266	Relief valve kit	48
1001	Hydraulic layout for PG.....	50
1028	Hydraulic front furrow width adjustment (PL/RL from 01.11.99, PL/RL..... and PM/RM before 01.08.00)	52
1025)	Hydraulic cylinder D75 x 400 and D100 x 400 mm w/stop (D100 x 400 before 15.05.99)	54
1084	Hydraulic cylinder D100 x 400 mm w/stop (From 15.05.99) (Before 01.10.00) ...	56
1145	Hydraulic cylinder D100 x 400 mm w/stop (From 01.10.00)	58
1031	Hydraulic cylinder D100 x 190 mm.....	60
1130	Hydraulic cylinder w/stop and bellow D100 x 190 mm (From 01.07.00)	62
1030	Hydraulic cylinder D75 x 300 mm.....	64
445	Hydraulic cylinder D75 x 130 mm w/90° turned connectors (Before 01.09.99)	66
1092	Hydraulic cylinder D75 x 130 mm w/90° turned connectors (From 01.09.99)	68
863	Transfers for PG/RG	70
	Index.....	72




	KK 06 38 01	Extra stay R + L, no. 9 E - saddle L = 550 (From 01.12.95)
	KK 07 03 94	Extra stay R for body no. 9 E - saddle, cpl. w. bracket (pos. 12) (From 01.12.95)
	KK 07 03 95	Extra stay L for body no. 9 E - saddle, cpl. w. bracket (pos. 12) (From 01.12.95)
	KK 07 38 03	Extra stay R + L, no. 9 A - saddle L = 560 (From 01.12.95)
	KK 07 03 90	Extra stay R for body no. 9 A - saddle, cpl. w. bracket (pos. 12) (From 01.12.95)
	KK 07 03 91	Extra stay L for body no. 9 A - saddle, cpl. w. bracket (pos. 12) (From 01.12.95)
	KK 08 38 09	Stay R + L for body no. 28 A - saddle (From 01.03.03)
	KK 08 38 10	Stay R + L for body no. 28 E - saddle (From 01.03.03)
10	KK 07 36 08	Landside, R and L, short
11	KK 01 58 32	Nut M20 mm
12	KK 07 38 00	Bracket for stay, R for body no. 6, 7, 8 (And no. 9 before 01.12.95)
	KK 07 38 01	Bracket for stay, L for body no. 6, 7, 8 (And no. 9 before 01.12.95)
	KK 07 38 07	Bracket for stay, R for body no. 9 (From 01.12.95)




35	KK 06 36 07	Plate
	KK 07 36 07	Plate cpl.
36	KK 01 33 46	Screw M14 x 45 mm w/nut
37	KK 07 36 14	Wearing plate
38	KK 01 33 33	Cone screw M14 x 34 mm
39	KK 08 32 35	Mouldboard knife R and L (From 01.12.01)
Pos. 100 - 107 Eco-share from 01.04.00		
100	KK 05 30 90	Reversible point, R
	KK 06 30 90	Reversible point, L
101	KK 01 32 28	Cone screw M12 x 34 mm w/nut
102	KK 07 36 34	Eco-share, R
	KK 07 36 35	Eco-share, L
103	KK 01 01 55	Bushing (for ploughs w/share bolt beam)
	KK 01 01 56	Bushing (for ploughs w/A-beam)
104	KK 03 27 40	Hex screw M16 x 40 mm w/nut (for ploughs w/E-saddle) (Before 01.03.00)
	KK 03 27 50	Hex screw M16 x 50 mm w/nut (for ploughs w/E-saddle) (From 01.03.00)
	KK 03 27 65	Hex screw M16 x 65 mm w/nut (for ploughs w/share bolt beam)
	KK 03 27 75	Hex screw M16 x 75 mm w/nut (for ploughs w/A-beam)
105	KK 01 33 46	Cone screw M14 x 45 mm w/flange nut (for ploughs w/E-saddle) (Before 01.03.00)
	KK 01 33 61	Cone screw M14 x 60 mm w/flange nut (for ploughs w/E-saddle) (From 01.03.00)
	KK 01 33 85	Cone screw M14 x 85 mm w/flange nut (for ploughs w/share bolt beam and A-beam)
106	KK 01 60 15	Flange nut M14
107	KK 01 29 29	Washer (for ploughs w/E-saddle) (From 01.03.00)



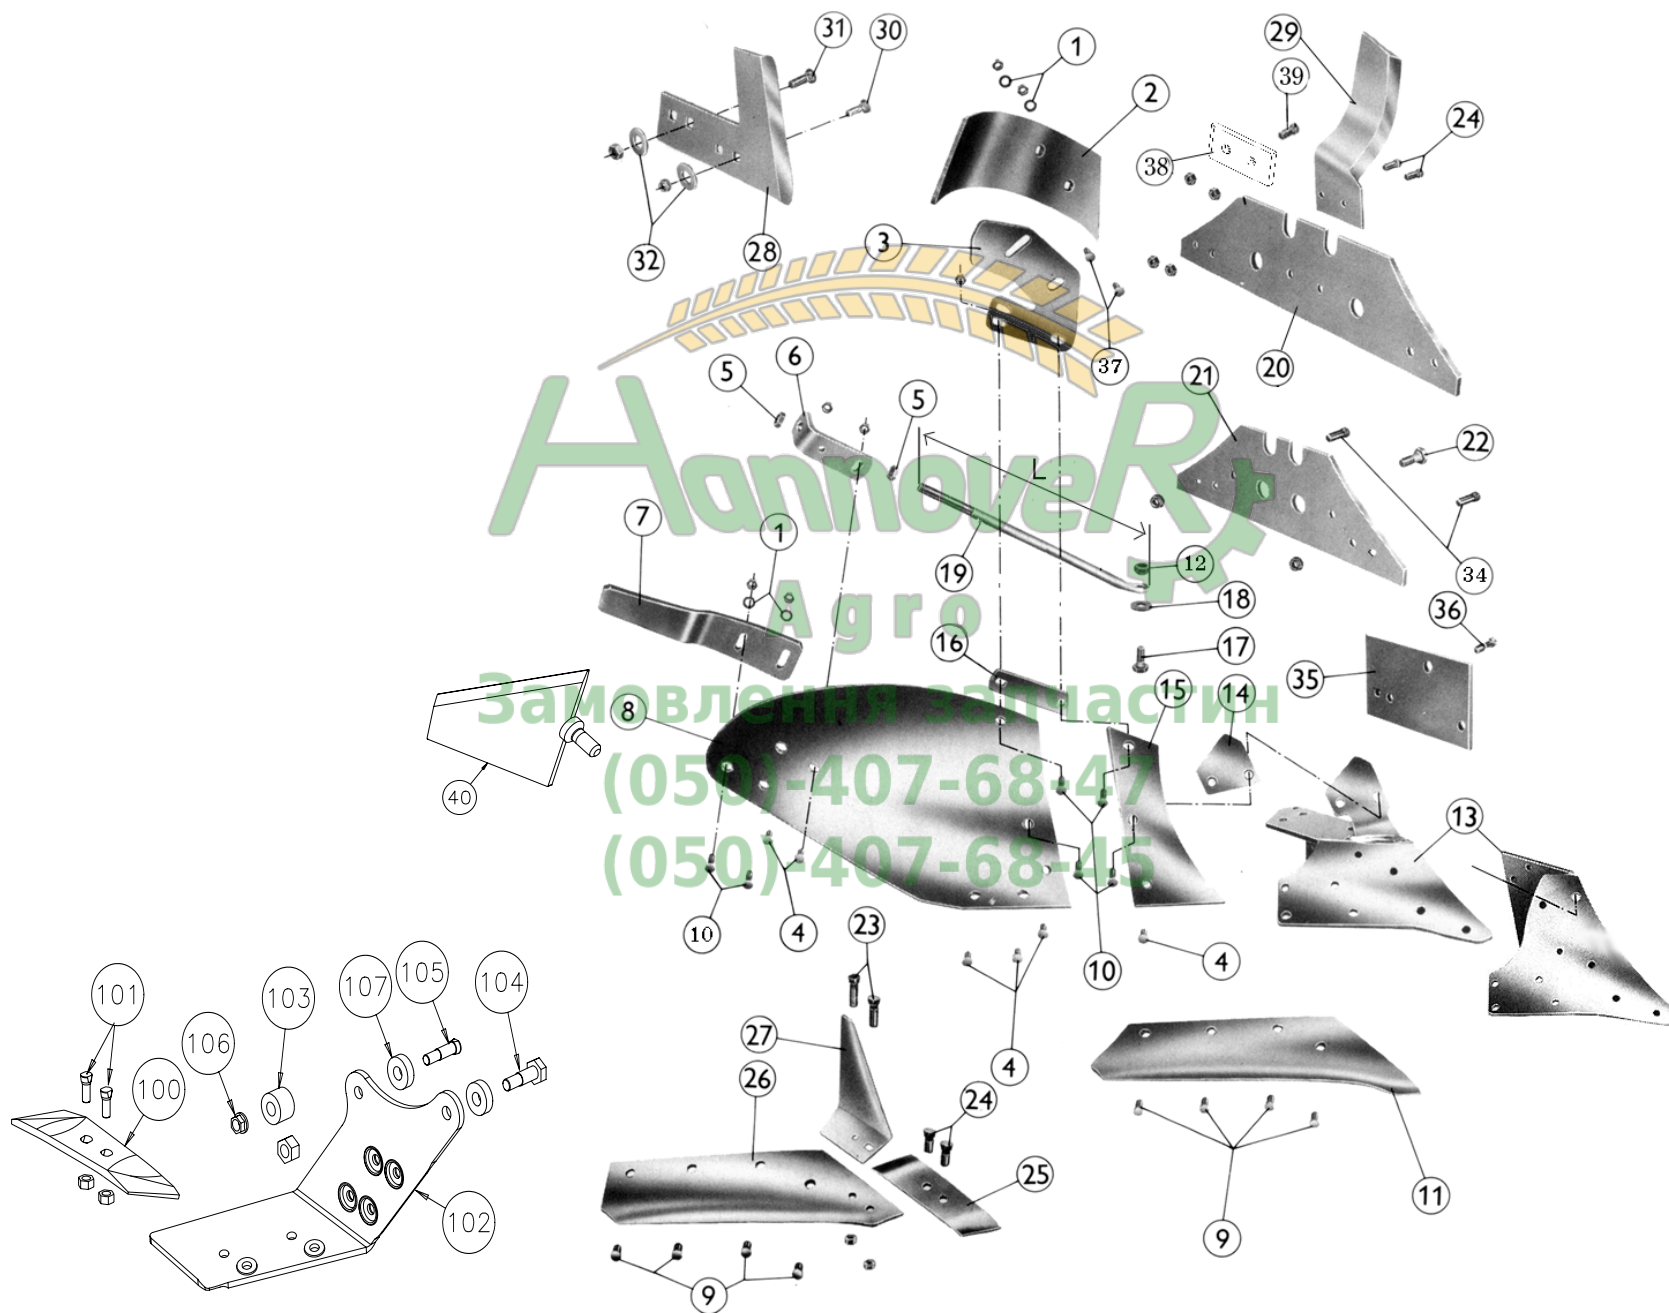

1	KK 01 29 19	Washer	KK 07 32 31	Shinpiece no. 19, L	KK 07 03 93	Extra stay L for body no. 19 A - saddle cpl.	
2	KK 07 33 00	Trashboard, R	16	KK 07 32 39		w. bracket (pos. 6) (From 01.12.95)	
	KK 07 33 01	Trashboard, L		KK 07 32 40	20	KK 07 36 09	Landside, long, R + L
	KK 07 06 40	Trashboard, R cpl.		KK 07 32 66	21	KK 07 36 08	Landside, short, R + L
	KK 07 06 41	Trashboard, L cpl.		KK 07 32 67	22	KK 03 27 25	Hex screw M16 x 27 mm
	KK 07 06 42	Trashboard, R + L cpl.	17	KK 03 27 50	23	KK 01 32 34	Cone screw M12 x 38 mm w/nut
3	KK 07 33 10	Bracket, R			24	KK 01 32 28	Cone screw M12 x 34 mm w/nut
	KK 07 33 11	Bracket, L		KK 03 27 35	25	KK 05 30 90	Reversible point, R
4	KK 03 31 00	Oval screw M12 x 30 mm w/nut				KK 06 30 90	Reversible point, L
5	KK 01 58 34	Nut M20 mm	18	KK 01 29 27	26	KK 07 30 54	Share 14", R
6	KK 07 38 00	Bracket, R				KK 07 30 55	Share 14", L
	KK 07 38 01	Bracket, L	19	KK 07 38 05		KK 07 30 56	Share 16", R
7	KK 05 33 87	Mouldboard extention, R				KK 07 30 57	Share 16", L
	KK 06 33 88	Mouldboard extention, L		KK 07 38 31		KK 07 30 80	Share 18", R
8	KK 07 32 36	Mouldboard no. 12, R				KK 07 30 81	Share 18", L
	KK 07 32 37	Mouldboard no. 12, L		KK 07 38 04	27	KK 07 30 91	Share knife, R
	KK 07 32 24	Mouldboard no. 15, R				KK 07 30 92	Share knife, L
	KK 07 32 25	Mouldboard no. 15, L		KK 07 38 26	28	KK 07 30 88	Landside knife, R w/nuts
	KK 07 32 90	Mouldboard no. 19, R				KK 07 30 89	Landside knife, L w/nuts
	KK 07 32 91	Mouldboard no. 19, L		KK 07 38 26	29	KK 07 36 15	Furrow widener, R
9	KK 01 33 32	Cone screw M14 x 34 mm w/nut				KK 07 36 16	Furrow widener, L
10	KK 03 31 07	Oval screw M12 x 35 mm w/nut		KK 07 03 88	30	KK 03 31 75	Screw M14 x 50 mm w/nut
11	KK 07 30 62	Share 14", R			31	KK 03 32 51	Screw M16 x 50 mm w/nut (for E-saddle)
	KK 07 30 63	Share 14", L		KK 07 03 89			(Before 01.02.00)
	KK 07 30 64	Share 16", R				KK 03 32 56	Screw M16 x 56 mm w/nut (for E-saddle)
	KK 07 30 65	Share 16", L		KK 07 38 29			(From 01.02.00)
12	KK 06 20 25	Nut M16 mm				KK 03 32 86	Screw M16 x 85 mm w/nut (for A-saddle)
13	KK 07 34 35	Saddle, R (for E-saddle)		KK 07 03 98			(Before 01.02.00)
	KK 07 34 36	Saddle, L (for E-saddle)				KK 03 32 95	Screw M16 x 95 mm w/nut (for A-saddle)
	KK 07 34 40	Saddle, R (for A-saddle)		KK 07 03 99			(From 01.02.00)
	KK 07 34 41	Saddle, L (for A-saddle)			32	KK 01 29 22	Washer 17 x 40 x 4.58 mm
14	KK 07 34 17	Connecting plate no. 12 and 15, R		KK 07 38 42	34	KK 01 33 33	Cone screw M14 x 34 mm w/nut
	KK 07 34 18	Connecting plate no. 12 and 15, L			35	KK 06 36 07	Plate for On-Land ploughs
15	KK 07 32 41	Shinpiece no. 12, R		KK 07 03 96		KK 07 36 07	Plate for On-Land ploughs cpl.
	KK 07 32 42	Shinpiece no. 12, L			36	KK 01 33 46	Screw M14 x 45 mm w/nut
	KK 07 32 27	Shinpiece no. 15, R		KK 07 03 97	37	KK 03 31 07	Oval screw M12 x 35 mm
	KK 07 32 28	Shinpiece no. 15, L			38	KK 07 36 14	Wearing plate
	KK 07 32 30	Shinpiece no. 19, R		KK 07 38 04	39	KK 01 33 32	Cone screw M14 x 34 mm

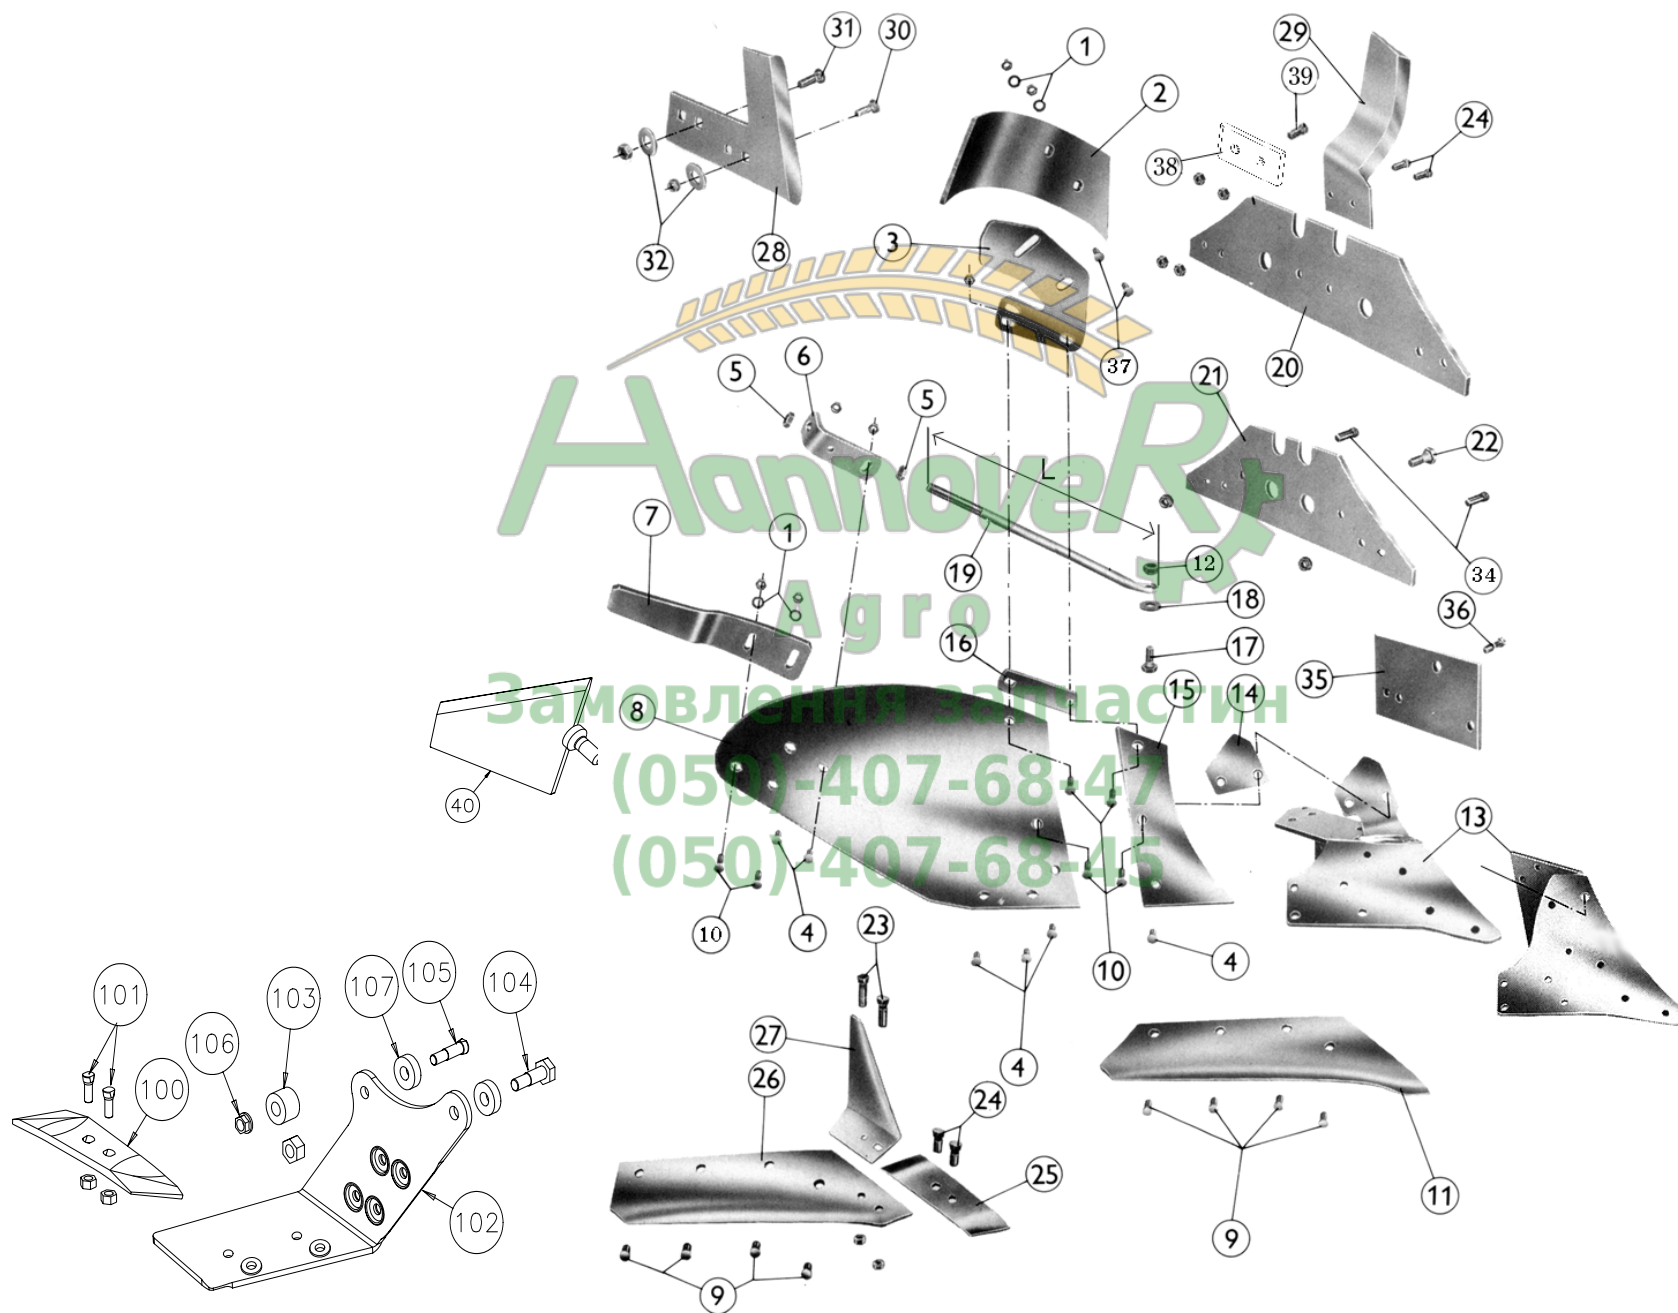

40	KK 08 32 35	Mouldboard knife R and L (From 01.12.01)
Pos. 100 - 107 Eco-share from 01.04.00		
100	KK 05 30 90	Reversible point, R
	KK 06 30 90	Reversible point, L
101	KK 01 32 28	Cone screw M12 x 34 mm w/nut
102	KK 07 36 34	Eco-share, R
	KK 07 36 35	Eco-share, L
103	KK 01 01 55	Bushing (for ploughs w/share bolt beam)
	KK 01 01 56	Bushing (for ploughs w/A-beam)
104	KK 03 27 40	Hex screw M16 x 40 mm w/nut (for ploughs w/E-saddle) (Before 01.03.00)
	KK 03 27 50	Hex screw M16 x 50 mm w/nut (for ploughs w/E-saddle) (From 01.03.00)
	KK 03 27 65	Hex screw M16 x 65 mm w/nut (for ploughs w/share bolt beam)
	KK 03 27 75	Hex screw M16 x 75 mm w/nut (for ploughs w/A-beam)
105	KK 01 33 46	Cone screw M14 x 45 mm w/flange nut (for ploughs w/E-saddle) (Before 01.03.00)
	KK 01 33 61	Cone screw M14 x 60 mm w/flange nut (for ploughs w/E-saddle) (From 01.03.00)
	KK 01 33 85	Cone screw M14 x 85 mm w/flange nut (for ploughs w/share bolt beam and A-beam)
106	KK 01 60 15	Flange nut M14
107	KK 01 29 29	Washer (for ploughs w/E-saddle) (From 01.03.00)







26	KK 03 30 04	Oval screw M10 x 20 mm w/nut
27	KK 07 33 50	Trashboard plastic, R
	KK 07 33 51	Trashboard plastic, L
28	KK 07 33 52	Support, R
	KK 07 33 53	Support, L
29	KK 05 33 87	Mouldboard extension, R
	KK 06 33 88	Mouldboard extension, L
31	KK 03 27 30	Hex screw M16 x 13 mm w/nut
32	KK 06 20 25	Nut M16 mm
33	KK 07 30 88	Landside knife w/nuts, R
	KK 07 30 89	Landside knife w/nuts, L
34	KK 03 32 51	Screw M16 x 50 mm w/nut (for E-sad- dle) (Before 01.02.00)
	KK 03 32 56	Screw M16 x 55 mm w/nut (for E-sad- dle) (From 01.02.00)
	KK 03 32 86	Screw M16 x 85 mm w/nut (for A-sad- dle) (Before 01.02.00)
	KK 03 32 95	Screw M16 x 95 mm w/nut (for A-sad- dle) (From 01.02.00)
35	KK 03 31 74	Screw M14 x 45 mm w/nut



1	KK 01 33 32	Cone screw M14 x 34 mm w/nut	21	KK 07 33 03	Bracket, R		KK 07 30 89	Landside knife w/nut, L
2	KK 07 30 54	Share 14", R		KK 07 33 04	Bracket, L	44	KK 01 29 22	Washer 17 x 40 x 4.58 mm
	KK 07 30 55	Share 14", L	22	KK 01 29 19	Washer 12.5 x 23 x 3.2 mm	45	KK 03 31 75	Screw M14 x 50 mm w/nut
	KK 07 30 56	Share 16", R	23	KK 03 27 40	Hex screw M16 x 40 mm w/nut	46	KK 03 32 51	Screw M16 x 50 mm w/nut (for E-saddle)
	KK 07 30 57	Share 16", L	24	KK 07 36 08	Landside, short, R + L		KK 03 32 86	Screw M16 x 85 mm w/nut (for A-saddle)
	KK 07 30 80	Share 18", R	25	KK 07 36 09	Landside, long, R + L	47	KK 06 36 07	Plate (For On-land ploughs only)
	KK 07 30 81	Share 18", L	26	KK 07 38 22	Stay front (for E-saddle)		KK 07 36 07	Plate cpl. (For On-land ploughs only)
3	KK 05 30 90	Reversible point, R		KK 07 38 16	Stay front (for A-saddle)	48	KK 01 33 46	Screw M14 x 45 mm w/nut
	KK 06 30 90	Reversible point, L	27	KK 01 58 30	Nut M20 mm (Before 01.06.93)	50	KK 07 36 14	Wearing plate
4	KK 07 32 45	Mouldboard, R	28	KK 07 38 17	Stay (Before 01.06.93)	51	KK 01 33 32	Cone screw M14 x 34 mm
	KK 07 32 46	Mouldboard, L	29	KK 07 38 15	Stay, rear (for A-saddle) (Before 01.06.93)			
5	KK 03 31 73	Oval screw M14 x 38 mm w/nut		KK 07 38 20	Stay, R cpl. (for E-saddle) (Before 01.06.93)			
7	KK 01 32 28	Cone screw M12 x 34 mm w/nut		KK 07 38 21	Stay, L cpl. (for E-saddle) (Before 01.06.93)			
8	KK 01 32 34	Cone screw M12 x 38 mm w/nut		KK 07 38 10	Stay, R cpl. (for A-saddle) (Before 01.06.93)			
9	KK 07 30 91	Share knife, R		KK 07 38 11	Stay, L cpl (for A-saddle) (Before 01.06.93)			
	KK 07 30 92	Share knife, L						
	KK 06 30 91	Share knife, R (for Sweden)						
	KK 06 30 92	Share knife, L (for Sweden)						
10	KK 07 34 70	Saddle, R (for E-saddle)	31	KK 07 15 00	Spacer			
	KK 07 34 71	Saddle, L (for E-saddle)	32	KK 03 31 81	Oval screw M14 x 85 mm w/nut			
	KK 07 34 64	Saddle, R (for A-saddle)	33	KK 07 36 15	Furrow widener, R			
	KK 07 34 65	Saddle, L (for A-saddle)		KK 07 30 16	Furrow widener, L			
11	KK 03 31 00	Oval screw M12 x 30 mm w/nut	34	KK 07 30 62	Share 14", R			
12	KK 07 32 72	Shinpiece, R		KK 07 30 63	Share 14", L			
	KK 07 32 73	Shinpiece, L		KK 07 30 64	Share 16", R			
13	KK 03 31 08	Oval screw M12 x 40 mm w/nut		KK 07 30 65	Share 16", L			
14	KK 03 27 30	Hex screw M16 x 30 mm w/nut	35	KK 07 38 05	Stay (for E-saddle) (From 01.06.93)			
16	KK 03 31 75	Oval screw M14 x 50 mm w/nut		KK 07 38 03	Stay (for A-saddle) (From 01.06.93)			
17	KK 07 32 75	Connecting piece, R	36	KK 07 38 34	Bracket for stay, R+L			
	KK 07 32 76	Connecting piece, L	37	KK 07 38 35	Spacing tube 27 x 20.5 x 80 mm			
18	KK 03 31 07	Oval screw M12 x 35 mm w/nut	38	KK 07 38 36	Spacing tube 27 x 20.5 x 69 mm			
19	KK 07 33 00	Trashboard, R	39	KK 07 38 12	Bracket for stay, R			
	KK 07 33 01	Trashboard, L		KK 07 38 13	Bracket for stay, L			
	KK 07 02 92	Trashboard, R cpl.	40	KK 01 30 01	Washer 14 x 30 x 7.5 mm			
	KK 07 02 93	Trashboard, L cpl.	41	KK 01 58 34	Nut M20 mm			
	KK 07 02 94	Trashboard, R + L cpl.	42	KK 03 31 85	Oval screw M14 x 130 mm w/flangenut			
20	KK 07 33 32	Mouldboard extension, R (extra)	43	KK 07 30 88	Landside knife w/nut, R			
	KK 07 33 33	Mouldboard extension,, L (extra)						

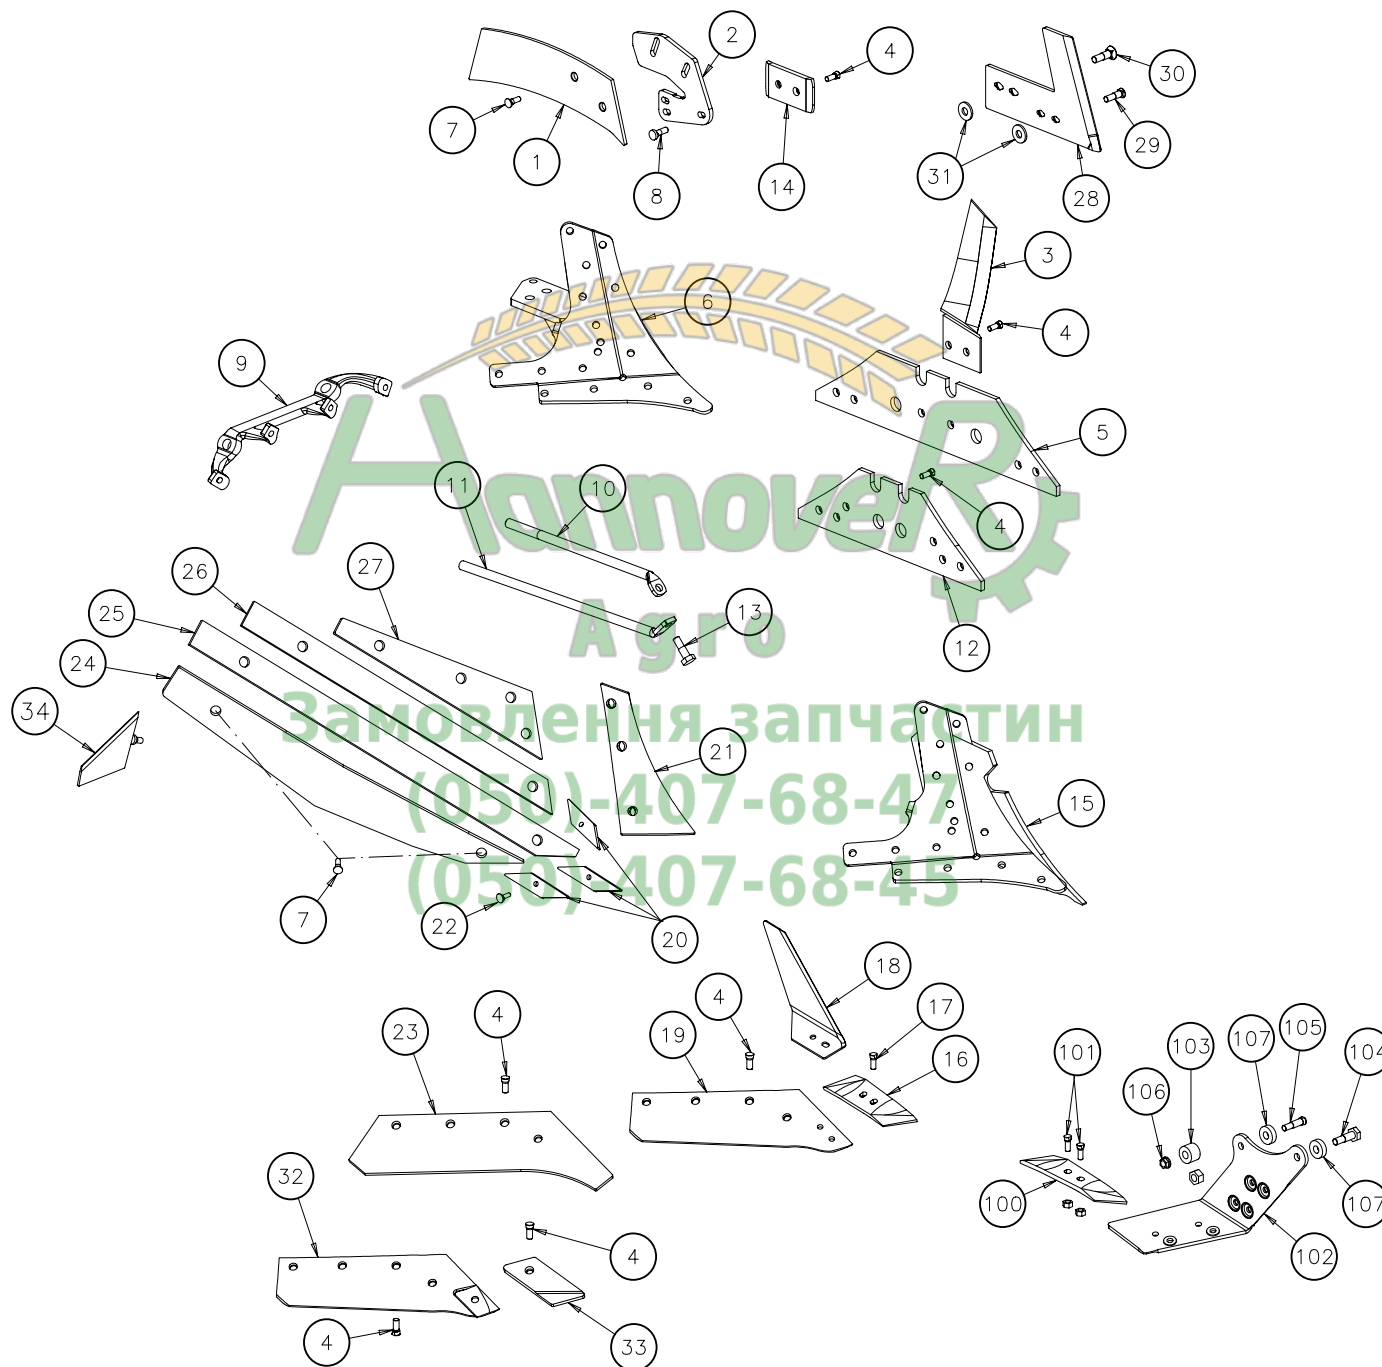


1	KK 07 33 00	Trashboard, R	15	KK 08 34 15	Saddle R, A-saddle (for body no. 29)	KK 03 30 16	Oval screw M10 x 30 mm (for body no. 30)
	KK 07 33 01	Trashboard, L		KK 08 34 16	Saddle L, A-saddle (for body no. 29)		
2	KK 08 33 00	Bracket, R		KK 08 34 06	Saddle R, A-saddle (for body no. 30)	KK 01 58 13	Nut M10
	KK 08 33 01	Bracket, L		KK 08 34 07	Saddle L, A-saddle (for body no. 30)	23	KK 07 30 62 Share 14", R (for body no. 30)
3	KK 07 36 15	Furrow widener, R	16	KK 05 30 90	Reversible point, R		KK 07 30 63 Share 14", L (for body no. 30)
	KK 07 36 16	Furrow widener, L		KK 06 30 90	Reversible point, L		KK 07 30 64 Share 16", R (for body no. 30)
4	KK 01 33 32	Cone screw M14 x 34 mm	17	KK 01 32 28	Cone screw M12 x 34 mm		KK 07 30 65 Share 16", L (for body no. 30)
	KK 01 60 13	Flange nut M14		KK 01 58 17	Nut M12	24	KK 08 32 11 Slat no 1, R
5	KK 07 36 09	Landside, long R + L	18	KK 07 30 91	Share knife, R		KK 08 32 21 Slat no 1, L
6	KK 08 34 17	Saddle R, E-saddle (for body no. 29)		KK 07 30 92	Share knife, L	25	KK 08 32 12 Slat no 2, R
	KK 08 34 18	Saddle L, E-saddle (for body no. 29)		KK 06 30 91	Share knife, R (for Sweeden)		KK 08 32 22 Slat no 2, L
	KK 08 34 08	Saddle R, E-saddle (for body no. 30)		KK 06 30 92	Share knife, L (for Sweeden)	26	KK 08 32 13 Slat no 3, R
	KK 08 34 09	Saddle L, E-saddle (for body no. 30)	19	KK 07 30 02	Share 14", R (for body no. 29)		KK 08 32 23 Slat no 3, L
7	KK 03 31 16	Oval screw M12 x 35 mm (for body no. 29 and 30)		KK 07 30 03	Share 14", L (for body no. 29)	27	KK 08 32 14 Slat no 4, R
	KK 01 58 17	Nut M12		KK 07 30 54	Share 14", R (for body no. 30)		KK 08 32 24 Slat no 4, L
	KK 03 31 07	Oval screw M12 x 35 mm (for body no. 30) (Before 01.01.01)		KK 07 30 55	Share 14", L (for body no. 30)	28	KK 07 30 88 Landside knife, R
	KK 01 58 17	Nut M12		KK 07 30 04	Share 16", R (for body no. 29)		KK 07 30 89 Landside knife, L
8	KK 03 31 17	Oval screw M12 x 45 mm (for body no. 29 and 30)		KK 07 30 05	Share 16", L (for body no. 29)	29	KK 03 31 75 Screw M14 x 50 mm
	KK 01 58 17	Nut M12		KK 07 30 56	Share 16", R (for body no. 30)		KK 01 60 15 Flange nut M14
	KK 03 31 11	Oval screw M12 x 45 mm (for body no. 30) (Before 01.01.01)		KK 07 30 57	Share 16", L (for body no. 30)	30	KK 03 32 51 Screw M16 x 50 mm (for E-saddle) (Before 01.02.00)
	KK 01 58 17	Nut M12		KK 07 30 06	Share 18", R (for body no. 29)		KK 03 32 56 Screw M16 x 56 mm (for E-saddle) (From 01.02.00)
	KK 03 31 11	Oval screw M12 x 45 mm (for body no. 30) (Before 01.01.01)		KK 07 30 07	Share 18", L (for body no. 29)		KK 01 58 25 Nut M16
	KK 01 58 17	Nut M12		KK 07 30 80	Share 18", R (for body no. 30)		KK 03 32 86 Screw M16 x 85 mm (for A-saddle) (Before 01.02.00)
9	KK 08 32 10	Slat support, R	20	KK 08 32 15	Connecting piece, plastic (for slat 1-2)		KK 03 32 95 Screw M16 x 95 mm (for A-saddle) (From 01.02.00)
	KK 08 32 20	Slat support, L		KK 08 32 18	Connecting piece, plastic (for slat 2) (for body no. 29)		KK 01 58 25 Nut M16
10	KK 08 38 03	Stay		KK 08 32 16	Connecting piece, plastic (for slat 2-3) (for body no. 30)	31	KK 01 29 22 Washer 17 x 40 x 4.58 mm
11	KK 08 38 05	Stay 1, saddle A (for body no. 29)		KK 08 32 17	Connecting piece, plastic (for slat 3-4)	32	KK 07 30 42 Flush fit share 14", R (for body no. 29)
	KK 08 38 06	Stay 2, saddle A (for body no. 29)	21	KK 07 32 56	Shinpiece, R (for body no. 29)		KK 07 30 43 Flush fit share 14", L (for body no. 29)
	KK 08 38 02	Stay, saddle A (for body no. 30)		KK 07 32 57	Shinpiece, L (for body no. 29)		KK 07 30 44 Flush fit share 16", R (for body no. 29)
	KK 08 38 07	Stay 1, saddle E (for body no. 29)		KK 07 32 30	Shinpiece, R (for body no. 30)		KK 07 30 45 Flush fit share 16", L (for body no. 29)
	KK 08 38 08	Stay 2, saddle E (for body no. 29)		KK 07 32 31	Shinpiece, L (for body no. 30)	33	KK 07 30 30 Flush fit point, R
	KK 08 38 04	Stay, saddle E (for body no. 30)	22	KK 03 30 06	Oval screw M10 x 30 mm (for body no. 29)		KK 07 30 31 Flush fit point, L
12	KK 07 36 08	Landside, short R + L		KK 01 58 13	Nut M10	34	KK 08 32 35 Mouldboard knife R and L (From 01.12.01)
13	KK 03 27 50	Hex screw M16 x 50 mm					
	KK 01 58 25	Nut M16					
14	KK 07 36 14	Wearing plate					

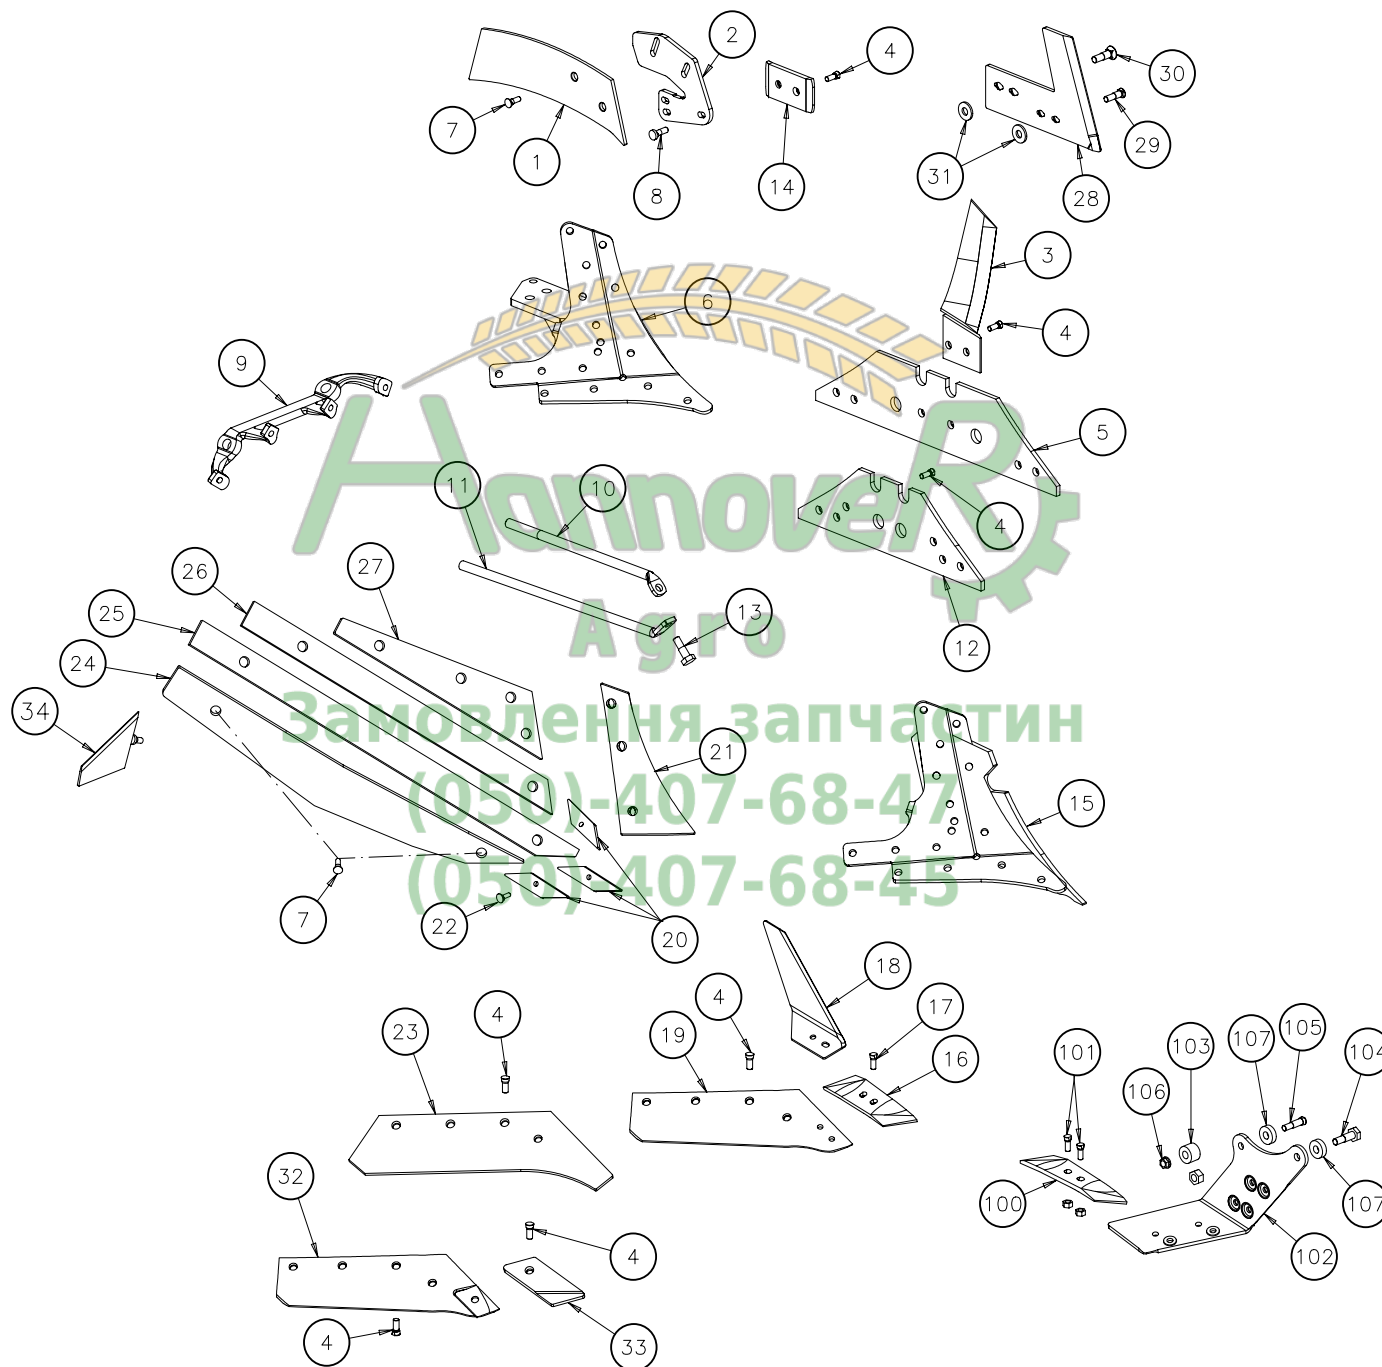

Pos. 100 - 107 Eco-share from 01.04.00		
100	KK 05 30 90	Reversible point, R
	KK 06 30 90	Reversible point, L
101	KK 01 32 28	Cone screw M12 x 34 mm
	KK 01 58 17	Nut M12
102	KK 07 36 34	Eco-share, R
	KK 07 36 35	Eco-share, L
103	KK 01 01 55	Bushing (for ploughs w/share bolt beam)
	KK 01 01 56	Bushing (for ploughs w/A-beam)
104	KK 03 27 40	Hex screw M16 x 40 (for ploughs w/E-saddle) (Before 01.03.00)
	KK 03 27 50	Hex screw M16 x 50 mm (for ploughs w/E-saddle) (From 01.03.00)
	KK 01 58 25	Nut M16
	KK 03 27 65	Hex screw M16 x 65 mm w/nut (for ploughs w/share bolt beam)
	KK 01 58 25	Nut M16
	KK 03 27 75	Hex screw M16 x 75 mm w/nut (for ploughs w/A-beam)
	KK 01 58 25	Nut ;16
105	KK 01 33 46	Cone screw M14 x 45 mm (for ploughs w/E-saddle) (Before 01.03.00)
	KK 01 33 61	Cone screw M14 x 60 mm (for ploughs w/E-saddle) (From 01.03.00)
	KK 01 33 85	Cone screw M14 x 85 mm (for ploughs w/share bolt beam and A-beam)
106	KK 01 60 15	Flange nut M14
107	KK 01 29 29	Washer (for ploughs w/E-saddle) (From 01.03.00)



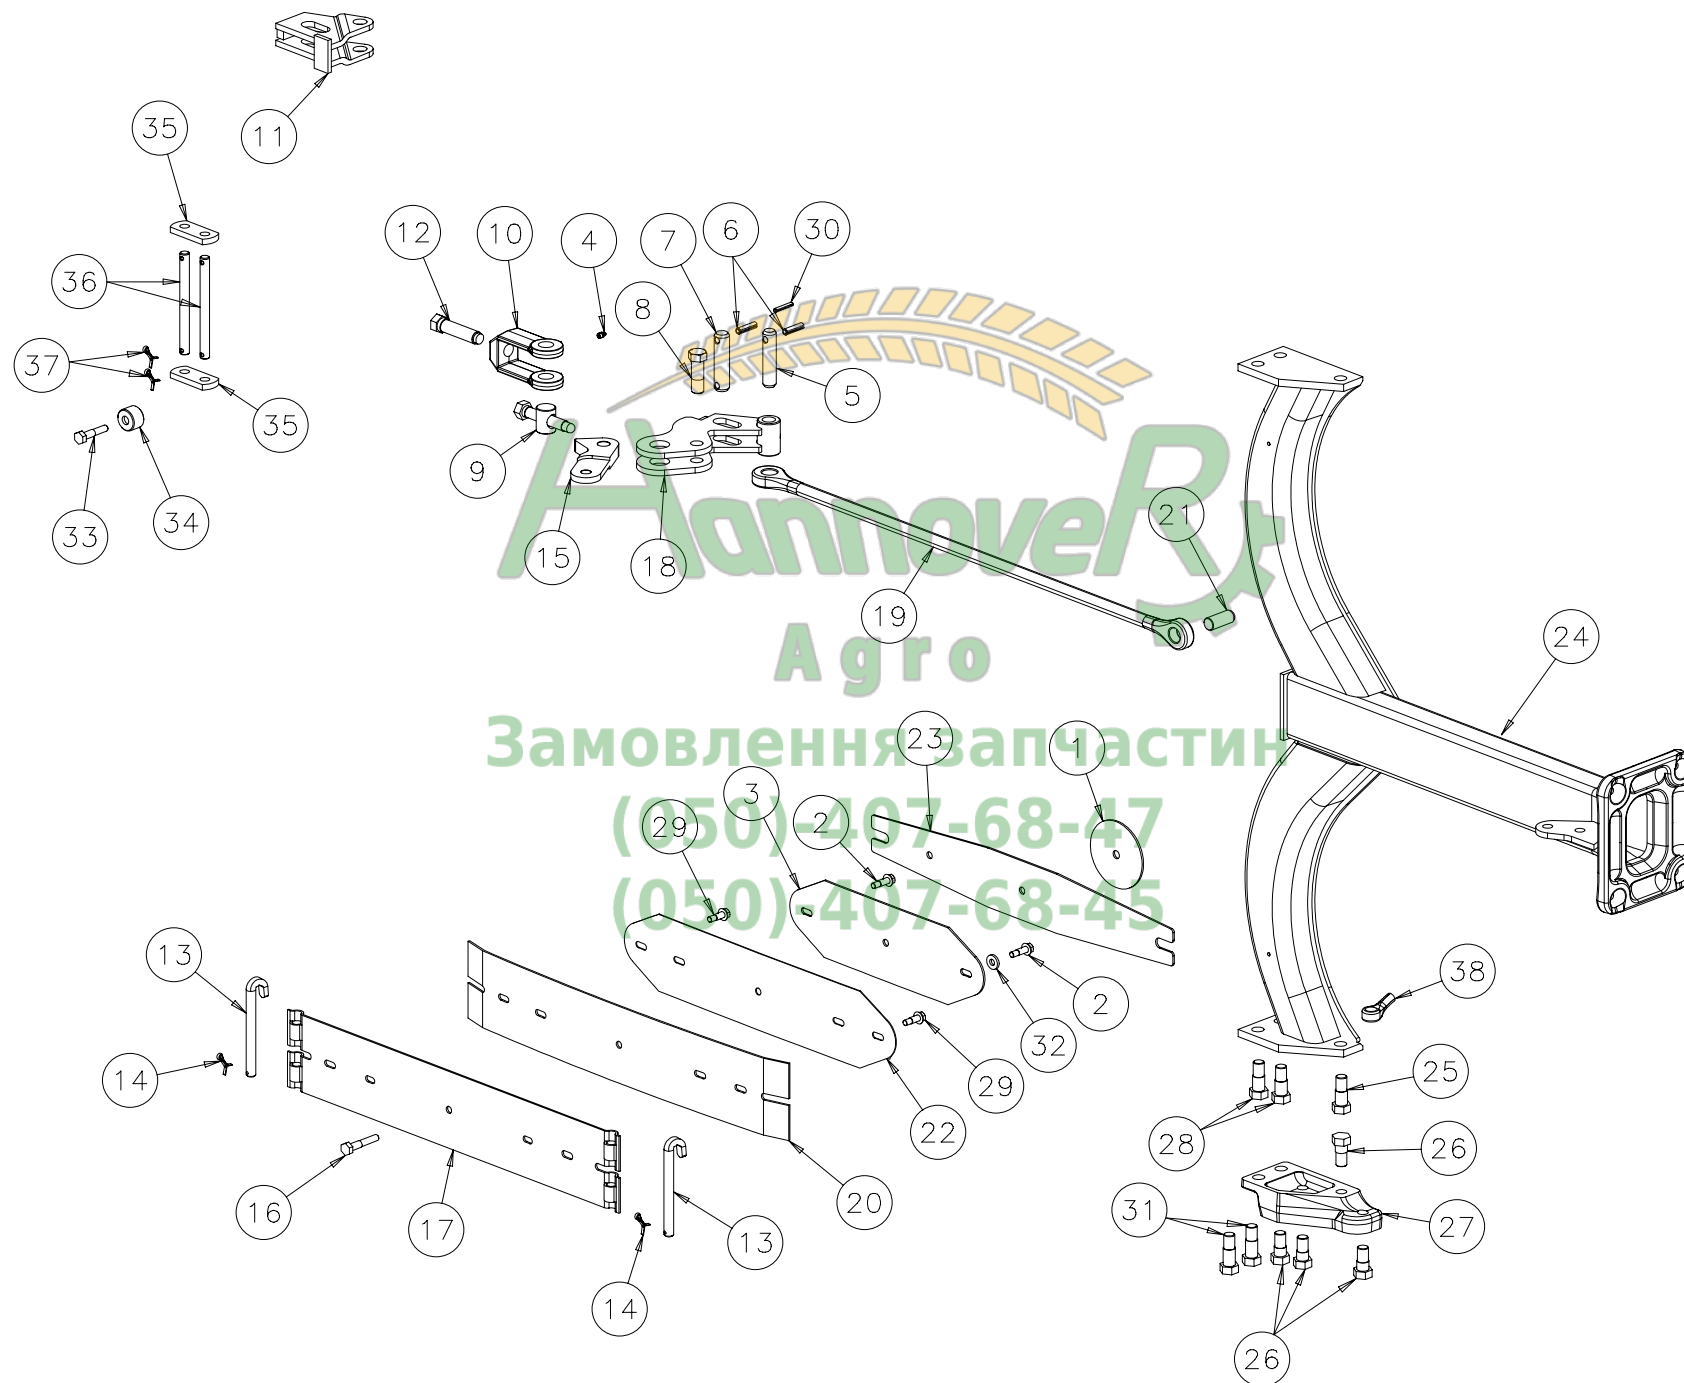

1	KK 05 70 67	Blade no 4	33	KK 03 26 55	Hex screw M12 x 55 mm w/nut (for extra additional leaf spring cpl.)
2	KK 03 50 20	Hex screw w/flange M10 x 34 mm w/nut	34	KK 06 70 77	Bushing (for extra additional leaf spring cpl.)
3	KK 05 70 66	Blade no 3	35	KK 06 70 75	Linkage (for extra additional leaf spring cpl.)
4	KK 02 99 20	Grease nipple M8 x 1	36	KK 06 70 76	Bolt D15.7 (for extra additional leaf spring cpl.)
5	KK 06 70 59	Bolt	37	KK 02 97 27	Split pin D5 x 32 mm (for extra additional leaf spring cpl.)
6	KK 01 10 37	Roll pin D10 x 40 mm	38	KK 06 12 91	Threaded piece
7	KK 06 70 57	Bolt (Before 01.08.02)			
	KK 06 70 16	Bolt (From 01.08.02)	Not ill.	KK 05 07 06	Leaf spring cpl. (1 x ill. no. 3, 13, 14, 16, 17 and 22 + 2 x ill. no. 1, 2, 20 and 29)
8	KK 03 28 60	Hex screw M20 x 60 mm w/nut		KK 06 07 03	Leaf spring HD cpl. (1 x ill. no 3, 16, 17 22 and 32 + 2 x ill. no. 1, 2, 20, 23 and 29)
9	KK 06 70 51	Adjustment screw w/threaded piece		KK 06 01 19	Spacer kit w/ hex screws R & L cpl.
10	KK 06 70 40	Holder (Before 01.08.02)			
	KK 06 70 25	Holder (From 01.08.02)			
11	KK 06 70 68	Bracket (Before 01.08.02)			
	KK 06 70 92	Bracket (From 01.08.02)			
12	KK 06 70 39	Adjustment screw M24 x 90 mm			
13	KK 05 70 89	Bolt			
14	KK 02 97 27	Split pin D5 x 32 mm			
15	KK 06 70 80	Spring arm			
16	KK 03 26 65	Hex screw M12 x 65 mm w/nut			
17	KK 05 70 63	Main blade			
18	KK 06 70 60	Regulator (Before 01.08.02)			
	KK 06 70 90	Regulator (From 01.08.02)			
19	KK 06 70 70	Tie rod (Before 01.08.02)			
	KK 06 70 26	Tie rod (From 01.08.02)			
20	KK 05 70 64	Blade no 1			
21	KK 06 70 31	Axle D22 x 53 mm			
22	KK 05 70 65	Blade no 2			
23	KK 05 70 68	Blade no 5			
24	KK 06 12 80	Beam			
25	KK 03 52 09	Hex screw M20 x 50 mm w/threaded piece			
26	KK 03 28 40	Hex screw M20 x 40 mm w/nut			
27	KK 06 01 08	Spacer cpl. w/hex screws R			
	KK 06 01 09	Spacer cpl. w/hex screws L			
28	KK 03 51 65	Hex screw M20 x 50 mm w/flange nut			
29	KK 03 50 21	Hex screw w/flange M10 x 30.5 mm w/nut			
30	KK 01 10 42	Roll pin D6 x 40 mm (to be mounted into roll pin 011037)			
31	KK 03 28 55	Hex screw M20 x 55 mm			
32	KK 01 29 13	Washer			



For LS, RL, LM, RM and RG ploughs

For LD, LO, RS, RX, LB, and RB ploughs



1	KK 07 12 08	Beam, R (Before 15.08.01)		KK 03 28 60	Hex screw M20 x 60 mm (for LB, LO and RB only) (From 01.04.02)
	KK 07 12 72	Beam, R (From 15.08.01)	23	KK 01 60 49	Lock nut M20 (From 01.04.02)
2	KK 07 12 09	Beam, L (Before 15.08.01)			
	KK 07 12 73	Beam, L (From 15.08.01)	Not ill.	KK 07 12 11	Beam, H = 700 mm cpl. (ill. no. 1, 2, 3 and 5 - 8) (Before 15.08.01)
3	KK 07 12 28	Support, H = 700 mm (Before 15.08.01)		KK 07 12 80	Beam, H = 700 mm cpl. (ill. no. 1, 2, 3 and 5 - 8) (From 15.08.01)
	KK 07 12 71	Support, H = 700 mm (From 15.08.01)		KK 07 12 12	Beam, H = 800 mm cpl. (ill. no. 1, 2, 4 and 5 - 8) (Before 15.08.01)
4	KK 07 12 07	Support, H = 800 mm (Before 15.08.01)		KK 07 12 81	Beam, H = 800 mm cpl. (ill. no. 1, 2, 4 and 5 - 8) (From 15.08.01)
	KK 07 12 70	Support, H = 800 mm (From 15.08.01)			
5	KK 07 70 24	Main bolt M30 x 72 mm, L (Before 15.08.01)			
	KK 07 12 75	Main bolt M30 x 84 mm, L (From 15.08.01)			
6	KK 07 70 23	Main bolt M30 x 72 mm, R (Before 15.08.01)			
	KK 07 12 74	Main bolt M30 x 84 mm, R (From 15.08.01)			
7	KK 01 60 22	Nut M30, R			
8	KK 01 60 45	Nut M30, L			
9	KK 07 49 10	Plate for support, H = 700 mm (for LS, RL, LM, RM and RG ploughs only)			
10	KK 07 49 11	Plate for support, H = 800 mm (for LS, RL, LM, RM and RG ploughs only)			
11	KK 06 15 15	Bushing D28 x D20.5 x 35.2 mm			
12	KK 03 28 40	Hex screw M20 x 40 mm w/nut (Before 01.04.02)			
	KK 03 28 45	Hex screw M20 x 45 mm (From 01.04.02)			
	KK 03 28 50	Hex screw M20 x 50 mm w/nut (for disc coultter, for front piece and rear beam)			
	KK 03 28 60	Hex screw M20 x 60 mm w/nut (for front piece w/disc coultter)			
13	KK 03 28 65	Hex screw M20 x 65 mm w/nut			
14	KK 03 52 15	Hex screw M20 x 80 mm w/flange nut qual. 12.9			
	KK 03 52 16	Hex screw M20 x 90 mm w/flange nut qual. 12.9 (for RL/ LB/ LO/ RB ploughs front section, rear leg only)			
15	KK 03 28 07	Hex screw M20 x 100 mm			
	KK 03 28 03	Hex screw M20 x 110 mm (for LB, LO and RB only) (From 01.04.02)			
	KK 03 28 24	Hex screw M20 x 105 mm (when using fixing device KK 07 72 95 for RL plough) (From 01.04.02)			
16	KK 06 20 20	Washer			
17	KK 03 50 60	Shear bolt M20 x 62 mm w/nut (for support H = 800 mm) (Before 15.08.01)			
	KK 03 50 48	Shear bolt M20 x 72 mm w/nut (for support H = 800 mm) (From 15.08.01)			
18	KK 03 50 72	Shear bolt M20 x 81 mm w/nut (for support H = 700 mm)			
19	KK 07 15 08	Plate for support H = 700 mm (for LD, LO, RS, RX, LB and RB ploughs only)			
20	KK 07 15 29	Plate for support H = 800 mm (for LD, LO, RS, RX, LB and RB ploughs only)			
21	KK 03 27 62	Hex screw M16 x 60 w/nut qual. 12.9			
22	KK 03 28 40	Hex screw M20 x 40 mm w/nut (Before 01.04.02)			
	KK 03 28 45	Hex screw M20 x 45mm (From 01.04.02)			



1	KK 03 13 40	Hex screw M8 x 40 mm
2	KK 05 61 56	Cap
3	KK 01 07 75	O-ring D54.5 x 3 mm
4	KK 01 12 66	Circlip
5	KK 01 12 92	Washer D30 x 45 x 2.5 mm
6	KK 05 61 12	Disc 18"
	KK 05 61 14	Disc 20"
	KK 05 61 15	Disc 18" Notched
	KK 05 61 16	Disc 20" Notched
7	KK 06 61 02	Hub w/needles
	KK 06 61 24	Hub cpl (ill 1, 3 - 5 and 7 - 9)
8	KK 01 07 72	Seal ring
9	KK 06 61 08	Axle D30
10	KK 02 99 20	Grease nipple M8 x 1 mm
11	KK 06 61 40	Disc coulters arm 18" R
	KK 06 61 43	Disc coulters arm 20" R
12	KK 06 61 90	Clip
13	KK 03 50 31	Hex screw M12 x 45 mm w/nut
14	KK 06 61 85	Bracket
15	KK 06 61 42	Disc coulters arm 18" L
	KK 06 61 45	Disc coulters arm 20" L
16	KK 01 60 31	Cone nut M16
17	KK 06 61 89	Bracket 18"
	KK 06 61 82	Bracket 20"
18	KK 06 61 78	Eccentric
19	KK 06 61 75	U - bolt
20	KK 03 17 30	Hex screw M20 x 30 mm
	KK 03 17 40	Hex screw M20 x 40 mm (for eccentric nut)




Замовлення запчастин
(050)-407-68-47
(050)-407-68-45




1	KK 07 64 06	Disc coulters 18"	22	KK 03 28 30	Hex screw M20 x 30 mm
	KK 07 64 07	Disc coulters 20"		KK 01 58 30	Nut M20
2	KK 07 64 09	Disc coulters, notched 18"	23	KK 03 28 40	Hex screw M20 x 40 mm
	KK 07 64 10	Disc coulters, notched 20"		KK 01 58 30	Nut M20
3	KK 07 64 99	Plate	24	KK 01 60 31	Cone nut M16
4	KK 03 35 40	Screw M10 x 40 mm			
	KK 01 60 04	Lock nut M10			
5	KK 01 17 50	O-ring 124,5 x 4 mm			
6	KK 01 18 66	O-ring 67 x 3 mm			
7	KK 01 12 59	Circlip I 62 x 2 mm			
8	KK 01 12 66	Circlip A 30 x 1,5 mm			
9	KK 01 05 72	Bearing			
10	KK 01 05 32	Gasket ring			
11	KK 08 60 89	Bearing housing cpl. (ill. 3 - 11)			
	KK 08 60 90	Bearing housing cpl. w/axle			
12	KK 08 61 01	Axle			
	KK 08 60 80	Disc coulters arm w/bearing 18", R			
	KK 08 60 81	Disc coulters arm w/bearing 18", L			
	KK 08 60 82	Disc coulters arm w/bearing 20", R			
	KK 08 60 83	Disc coulters arm w/bearing 20", L			
	KK 08 60 84	Disc coulters arm w/bearing 20", lowered R			
	KK 08 60 85	Disc coulters arm w/bearing 20", lowered L			
13	KK 08 61 10	Arm 18", R			
	KK 08 61 12	Arm 20", R			
	KK 08 61 14	Arm 20", lowered R			
14	KK 08 61 11	Arm 18", L			
	KK 08 61 13	Arm 20", L			
	KK 08 61 15	Arm 20", lowered L			
15	KK 06 61 70	Bracket			
16	KK 02 99 20	Grease nipple			
17	KK 06 61 90	Clip			
18	KK 03 50 31	Hex screw M12 x 45 mm			
	KK 01 58 17	Nut M12			
19	KK 06 61 89	Bracket 18"			
	KK 06 61 82	Bracket 20"			
20	KK 06 61 78	Eccentric			
21	KK 06 61 75	U-bolt			




Замовлення запчастин
(050)-407-68-47
(050)-407-68-45

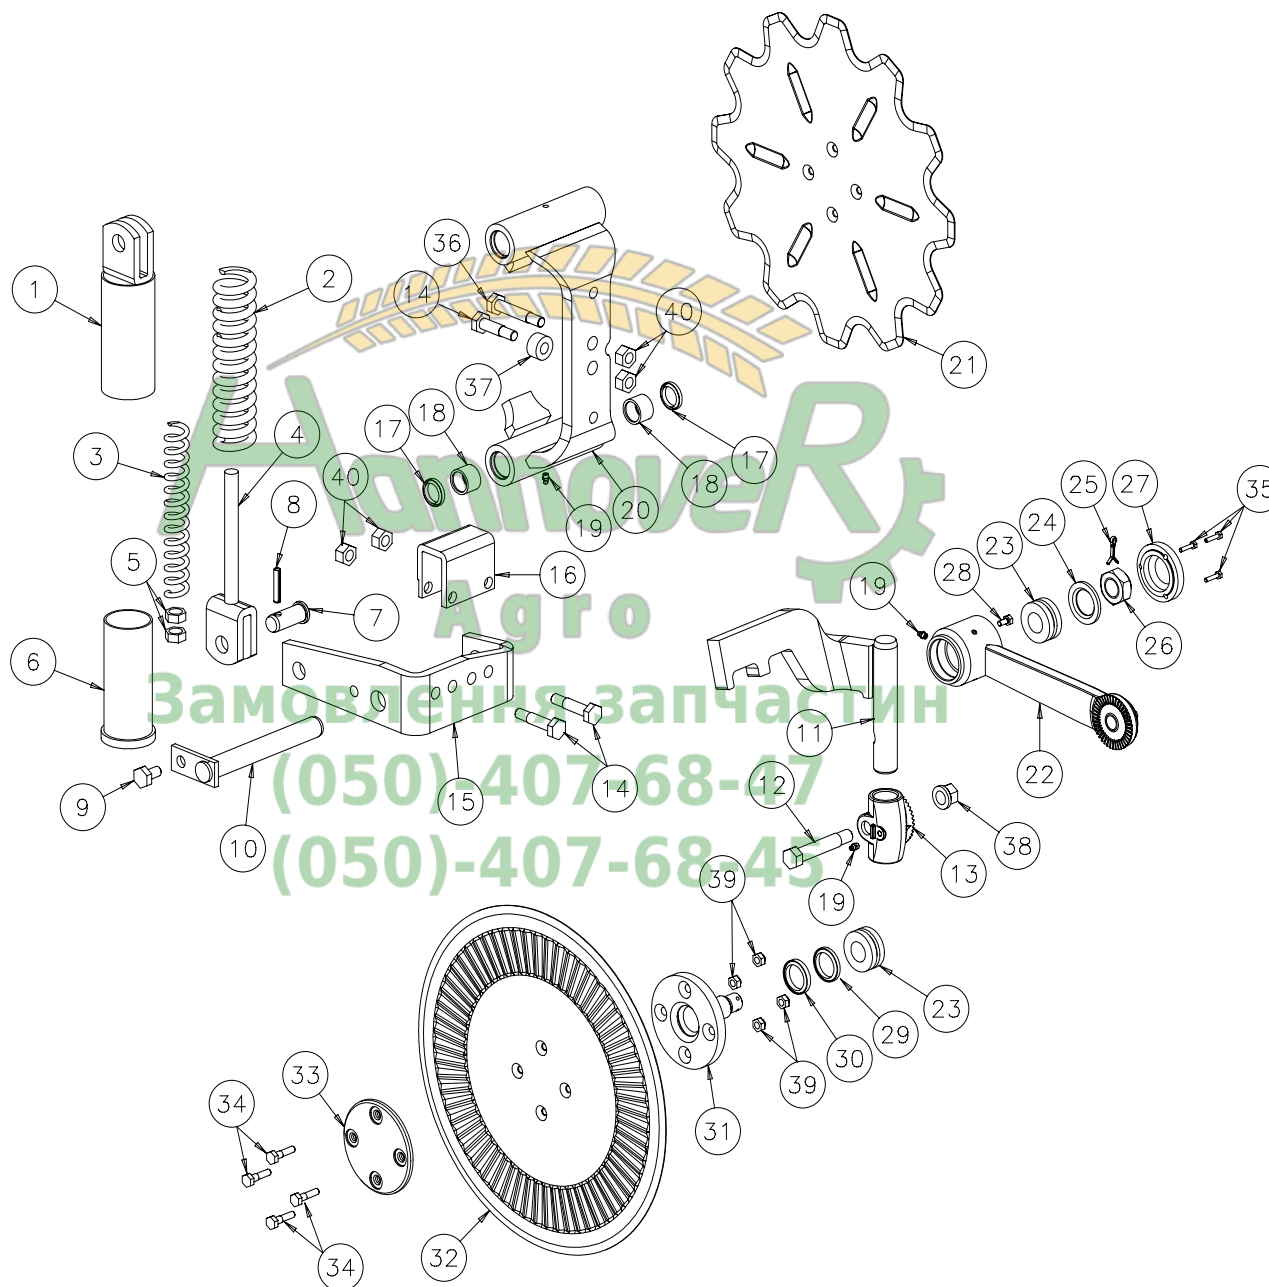


1	KK 07 65 45	Outer tube	30	KK 01 05 83	Gasket ring
2	KK 07 60 23	Spring	31	KK 07 62 85	Axle
3	KK 07 60 22	Spring	32	KK 07 64 09	Disc 18"
4	KK 07 65 48	Clevis w/M20 axle		KK 07 64 07	Disc 20"
5	KK 01 58 34	Nut M20, H = 12		KK 07 62 94	Disc 22" (From 01.07.97)
6	KK 07 65 44	Inner tube	33	KK 07 64 99	Plate
7	KK 07 60 58	Bolt	34	KK 03 51 14	Hex screw M10 x 40 mm w/ lock nut
8	KK 01 10 32	Sleeve D10 x 50 mm	35	KK 03 33 25	Hex screw M6 x 25 mm
9	KK 03 27 25	Hex screw M16 x 27 mm	36	KK 03 27 92	Hex screw M16 x 90 mm
10	KK 07 60 08	Pivot pin	37	KK 07 60 72	Bushing
11	KK 07 60 66	Plate w/axle, L (Before 01.10.02)	38	KK 01 60 12	Flange nut M20
	KK 07 64 35	Plate w/axle D20, L (From 01.10.02)	39	KK 01 60 04	Lock nut M10
	KK 07 60 68	Plate w/axle, R (Before 01.10.02)	40	KK 01 58 25	Nut M16
	KK 07 64 34	Plate w/axle D20, R (From 01.06.02)			
12	KK 03 27 02	Hex screw M16 x 110 mm w/nut (Before 01.10.02)			
	KK 03 51 78	Hex screw M20 x 110 mm w/ flange nut (From 01.10.02)			
13	KK 07 64 00	Support (Before 01.10.02)			
	KK 07 64 37	Support (From 01.10.02)			
14	KK 03 27 75	Hex screw M16 x 75 mm			
15	KK 07 60 65	Hoop, L + R			
16	KK 07 60 53	U-bracket			
17	KK 01 07 72	Gasket ring			
18	KK 01 12 03	Bearing			
19	KK 02 99 20	Grease nipple			
20	KK 07 60 70	Bearing housing			
21	KK 07 64 09	Disc 18" notched			
	KK 07 64 10	Disc 20" notched			
	KK 07 61 48	Disc 22" notched (From 01.07.97)			
22	KK 07 62 96	Arm (Before 01.10.02)			
	KK 07 64 30	Arm (From 01.10.02)			
23	KK 01 62 08	Bearing			
24	KK 01 29 95	Washer			
	KK 07 62 98	Washer (From 01.07.97)			
25	KK 02 97 22	Pin D5 x 50 mm			
26	KK 01 60 52	Nut 1" x 9/16"			
27	KK 07 62 97	Cap			
28	KK 03 34 01	Hex screw M8 x 16 mm			
29	KK 01 05 84	Gasket ring			

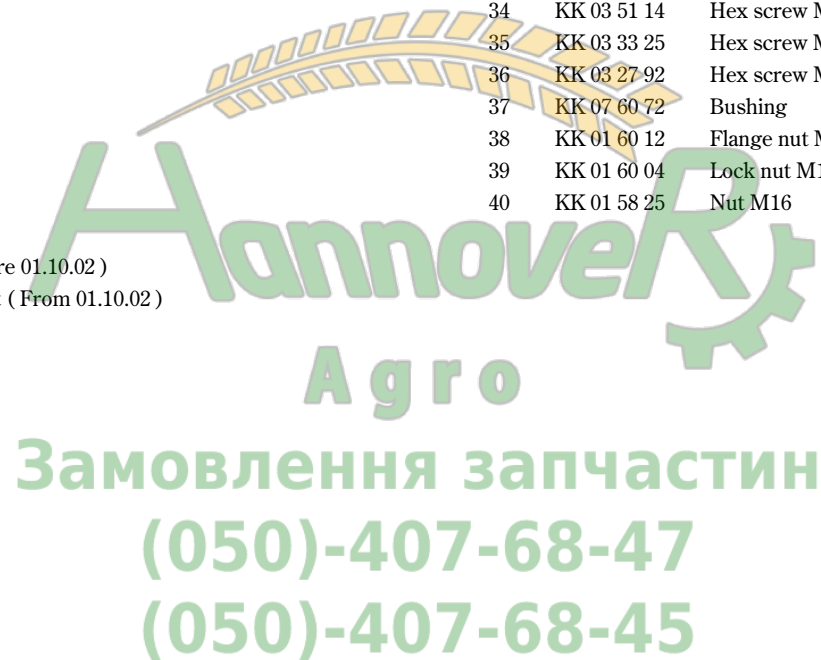

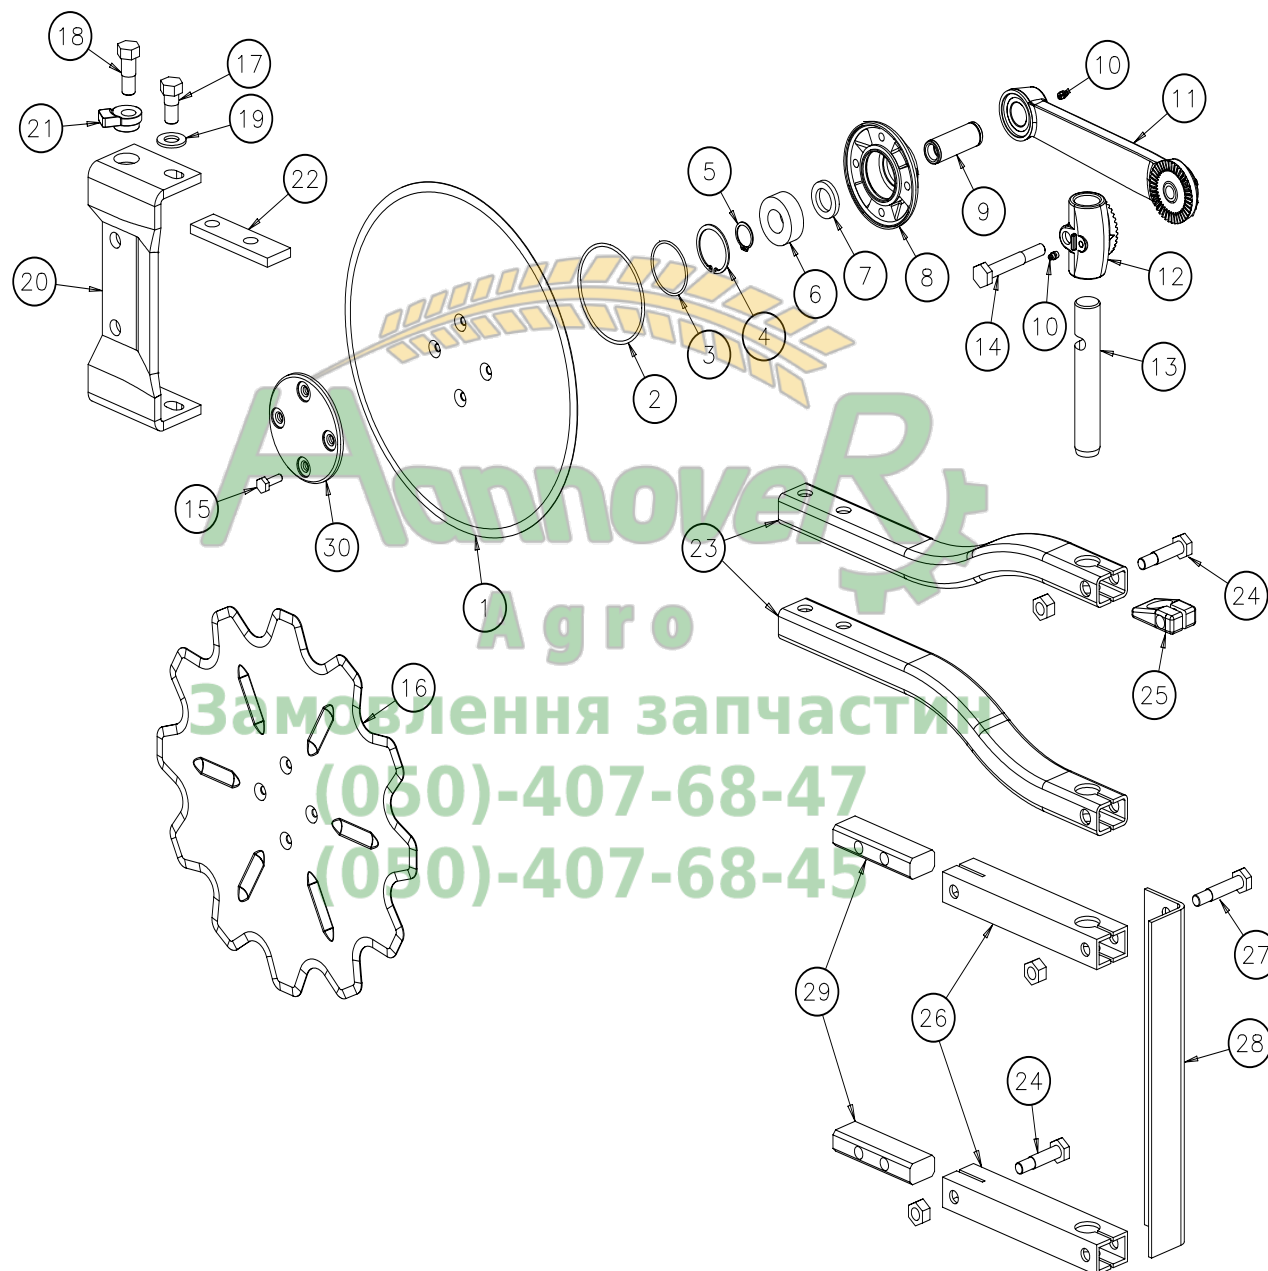


1	KK 07 64 06	Disc coulters 18"
	KK 07 64 07	Disc coulters 20"
2	KK 01 17 50	O-ring
3	KK 01 18 66	O-ring
4	KK 01 12 59	Circlip
5	KK 01 12 66	Circlip
6	KK 01 05 72	Ball bearing
7	KK 01 08 18	Rubber ring (Before 01.01.99)
	KK 01 05 32	Gasket ring (From 01.01.99)
8	KK 08 60 90	Bearing housing cpl. (ill. no. 2-3-4-5-6-7-8-10) (Before 01.01.99)
	KK 08 60 89	Bearing housing cpl. (ill. no. 2-3-4-5-6-7-8) (From 01.01.99)
9	KK 07 60 76	Axle (Before 01.01.99)
	KK 08 61 01	Axle (From 01.01.99)
	KK 08 60 86	Disc coulters arm w/bearing (From 01.01.99)
	KK 08 60 87	Disc coulters bearing cpl. (ill. no. 4-6-7-8) (From 01.01.99)
10	KK 02 99 20	Grease nipple
11	KK 07 65 75	Arm
12	KK 07 64 00	Support
13	KK 07 65 27	Axle
14	KK 03 27 02	Hex screw M16 x 110 mm w/nut
15	KK 03 10 30	Hex screw M10 x 30 mm
16	KK 07 64 09	Disc coulters 18" notched
	KK 07 64 10	Disc coulters 20" notched
17	KK 03 28 50	Hex screw M20 x 50 mm
18	KK 03 28 40	Hex screw M20 x 40 mm
19	KK 06 61 78	Eccentric for bracket
20	KK 07 49 31	Bracket
21	KK 01 29 60	Washer 20.5 x 40 x 3.4 mm
22	KK 07 49 36	Plate w/threads
23	KK 07 49 30	Tube
24	KK 03 27 75	Hex screw M16 x 75 mm w/nut
25	KK 07 65 15	Supporting piece for tube
26	KK 07 49 39	Extended tube
27	KK 03 27 85	Hex screw M16 x 85 mm w/nut
28	KK 07 49 38	Support
29	KK 07 49 37	Support
30	KK 07 64 99	Plate



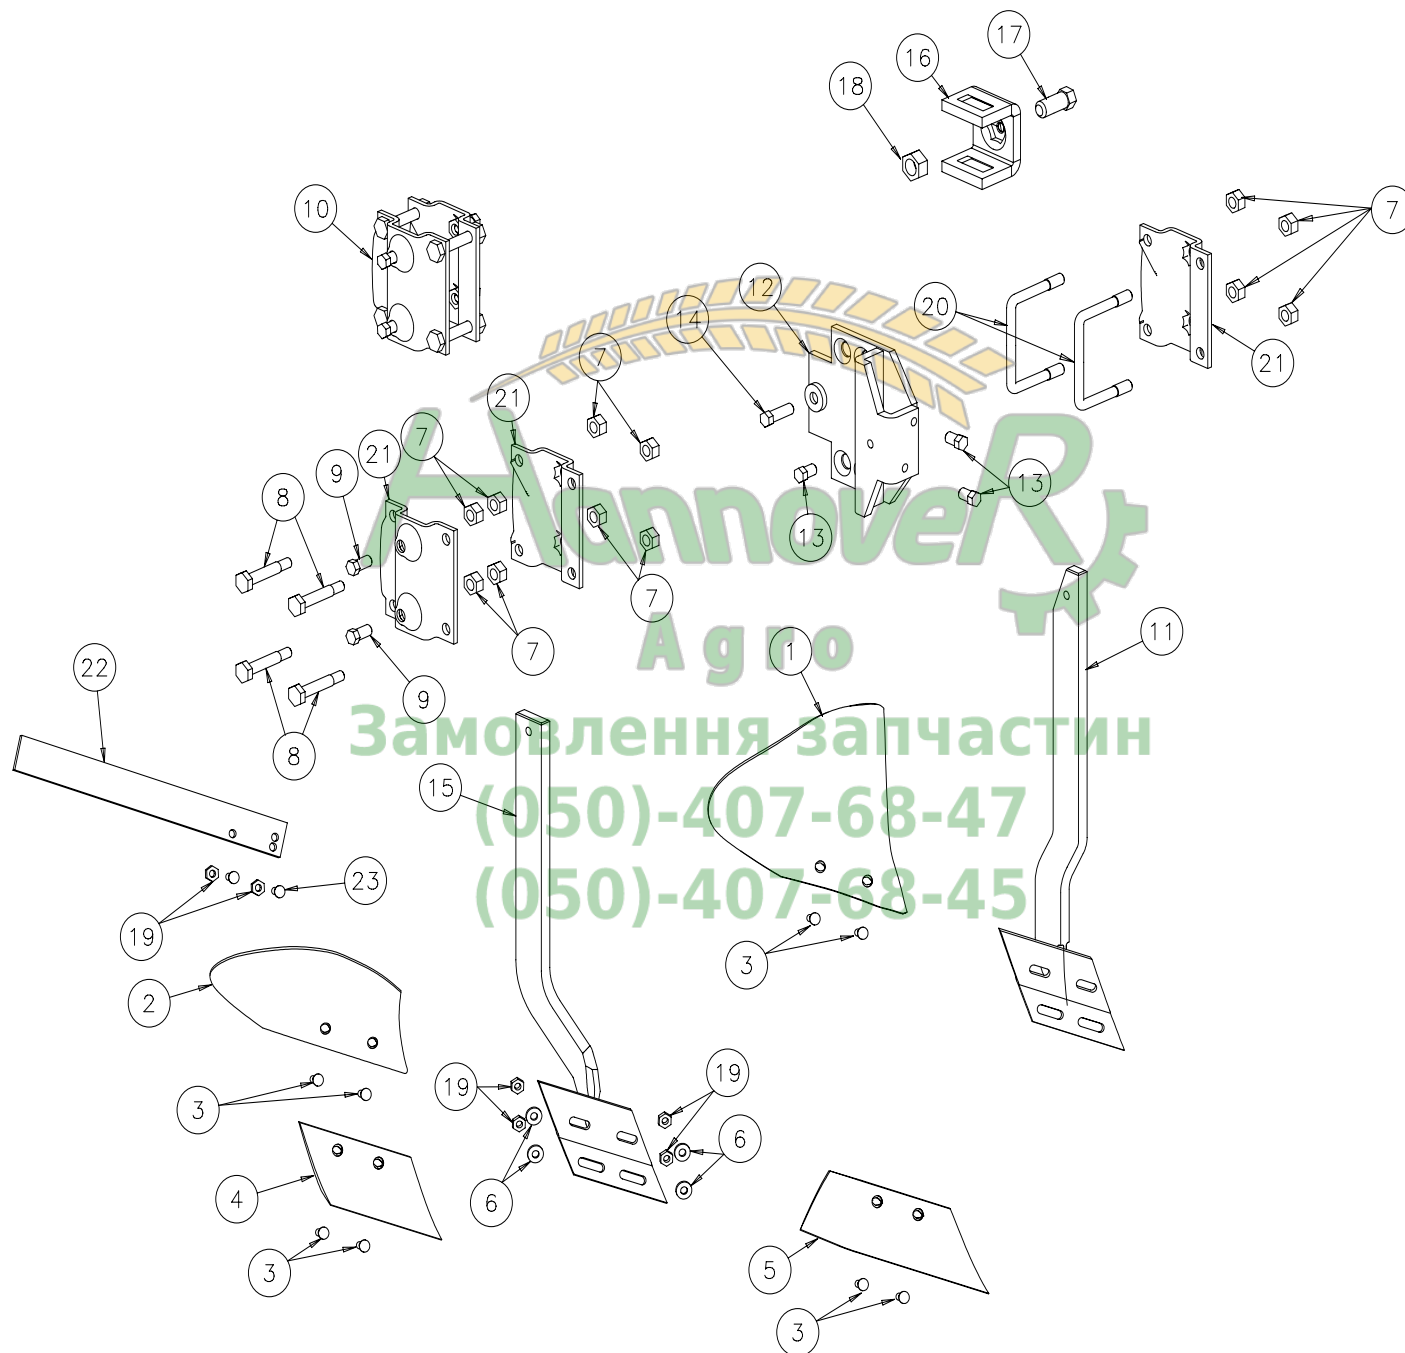


1	KK 07 68 12	Mouldboard maize R	11	KK 06 68 11	Arm R, H = 700 mm for HD beam and std. beam H700
	KK 07 68 13	Mouldboard maize L		KK 07 68 58	Arm R, H = 750 mm for std. beam H800 (From 01.12.00)
2	KK 06 68 80	Mouldboard R	16	KK 07 06 53	Fixing bracket with screw and nut (for beam 071240 and 071241)
	KK 07 69 43	Mouldboard R, plastic	17	KK 03 44 46	Setscrew M24 x 53 mm
	KK 06 68 81	Mouldboard L	18	KK 01 58 41	Nut M24
	KK 07 69 44	Mouldboard L, plastic	19	KK 01 58 16	Nut M10
3	KK 03 30 06	Oval screw M10 x 30 mm	20	KK 08 50 76	Clevis
4	KK 05 68 73	Share, short R	21	KK 06 68 61	Bracket HD beam
	KK 06 68 73	Share, short L			
5	KK 06 68 68	Share, long R			
	KK 06 68 69	Share, long L			
6	KK 01 29 06	Washer 10.5 x 25 x 3.4			
7	KK 01 58 25	Nut M16			
22	KK 08 68 01	Skimmer extension			
23	KK 03 30 07	Oval screw M10 x 35 mm			
for all turnable ploughs with Auto Reset beams:					
8	KK 03 27 95	Hex screw M16 x 95 mm			
9	KK 03 42 28	Setscrew M16 x 32 mm			
10	KK 06 06 57	Bracket cpl.			
11	KK 06 68 11	Arm R, H = 700 mm			
	KK 07 68 58	Arm R, H = 750 mm (From 01.12.00)			
	KK 06 68 12	Arm L, H = 700 mm			
	KK 07 68 59	Arm L, H = 750 mm (From 01.12.00)			
for all turnable ploughs with Shear Bolt beams:					
12	KK 07 06 39	Bracket with screws (for LB, LD, RB, RS, RX)			
	KK 07 68 72	Bracket (for LM, LS, RG, RL, RM, VD)			
13	KK 03 42 25	Setscrew M16 x 25 mm			
14	KK 03 42 50	Setscrew M16 x 50 mm			
15	KK 07 68 17	Arm R, H = 700 mm			
	KK 07 68 18	Arm L, H = 700 mm			
	KK 07 68 25	Arm R, H = 800 mm			
	KK 07 68 26	Arm L, H = 800 mm			
	KK 07 68 33	Arm R, H = 700 mm (for VD plough only) (Before 15.03.98)			
	KK 07 68 34	Arm L, H = 700 mm (for VD plough only) (Before 15.03.98)			
for beams on conventional ploughs:					




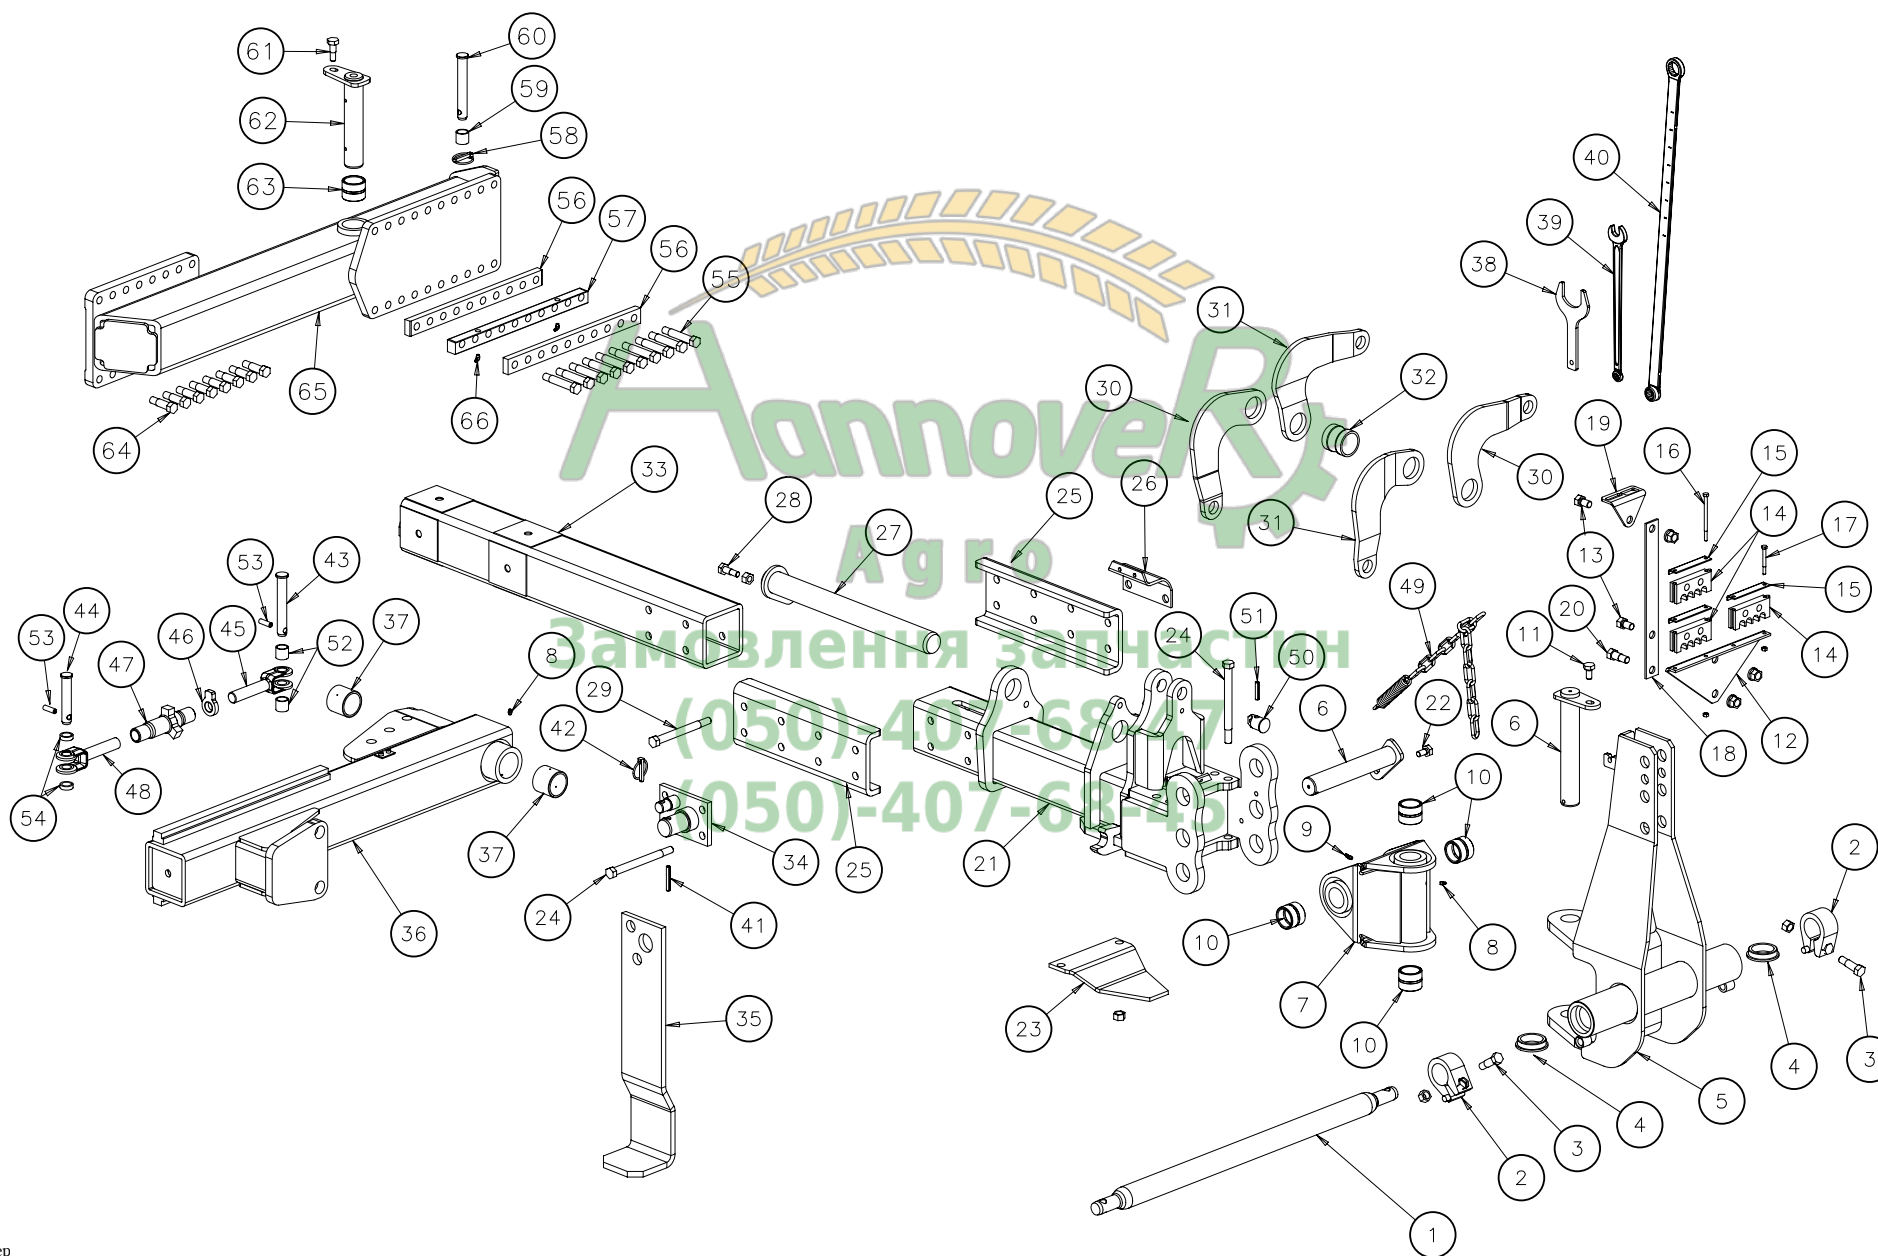

1	KK 06 43 21	Crossshaft Cat 3, L = 965 mm	KK 08 10 52	Towing tube 7 furrow (Before 01.10.00)	53	KK 01 10 20	Roll pin D12 x 40 mm
2	KK 06 43 60	Stop collar			54	KK 01 00 08	Bushing
3	KK 03 28 65	Hex screw M20 x 65 mm w/nut	KK 08 21 55	Towing tube 7 furrow (From 01.10.00, serial no. 294 and RG132)	55	KK 03 28 03	Hex screw M20 x 110 w/ nut
4	KK 06 43 17	Bushing	KK 08 10 54	Towing tube 8 furrow (Before 01.10.00)	56	KK 07 19 42	Slide rail outer 10 H - D20
5	KK 08 11 50	Headstock			57	KK 07 19 43	Slide rail inner 10 H - D20
6	KK 07 88 98	Axle D50x305	KK 08 21 56	Towing tube 8 furrow (From 01.10.00, serial no. 294 and RG132)	58	KK 01 07 00	Pin D12
7	KK 07 97 65	Link w/bushing	KK 08 24 54	Towing tube 6 furrow, PG/RG-115 (From 15.03.01)	59	KK 01 01 53	Bushing D27,3 - d33,8 x 30
8	KK 02 99 20	Grease nipple M8x1	KK 08 24 55	Towing tube 7 furrow, PG/RG-115 (From 15.03.01)	60	KK 01 03 37	Bolt w/ head D25,3 x 180
9	KK 02 99 27	Grease M8 x 1 90°	KK 08 80 52	Towing tube 8 furrow, PG/RG-115 (From 15.03.02)	61	KK 03 27 50	Hex screw M16 x 50 w/ nut
10	KK 01 16 82	Bushing D50 x D62 x 50 mm			62	KK 07 16 08	Axle w/ lock plate D50 x 244
11	KK 03 27 30	Hex screw M16 x 30 mm w/nut	34	KK 08 10 85	63	KK 01 16 82	Bushing D62 x d50 x 50
12	KK 06 25 05	Bracket for hose	35	KK 07 85 31	64	KK 03 28 70	Hex screw M20 x 70 w/ nut
13	KK 03 52 35	Hex screw M20 x 30 mm w/flange nut		Stand, H = 550 (for PG/RG standard legs)	65	KK 08 82 07	Arm w/ bushings 7 x 100 On-land PG/RG
14	KK 01 21 85	Hose bracket		KK 07 85 30		KK 08 82 08	Arm w/ bushings 8 x 100 On-land PG/RG
15	KK 06 25 06	Plate		KK 07 98 24	66	KK 02 99 27	Grease nipple
16	KK 03 24 03	Hex screw M8 x 130 mm w/nut		Stand, H = 630 (for PG w/high beams)			
17	KK 03 24 75	Hex screw M8 x 75 mm w/nut		Stand, H = 700 (for RG w/high beams)			
18	KK 06 24 58	Arm	36	KK 08 10 08			
19	KK 06 25 00	Holder for spanner	37	KK 01 16 91			
20	KK 03 51 65	Hex screw M20 x 50 mm w/flange nut	38	KK 01 06 55			
21	KK 07 71 91	Front piece (Before 01.10.00)	39	KK 01 06 06			
	KK 08 00 80	Front piece (From 01.10.00)	40	KK 01 06 50			
22	KK 03 27 30	Hex screw M16 x 30 mm	41	KK 01 10 31			
23	KK 08 10 44	Support (Before 01.10.00) (Replaced by pos. 49)	42	KK 01 07 00			
24	KK 03 28 28	Hex screw M20 x 220 mm w/nut	43	KK 01 03 35			
25	KK 07 85 64	Connection plate	44	KK 01 03 19			
26	KK 08 10 98	Hose bracket	45	KK 35 11 72			
27	KK 07 85 46	Axle D60 w/lock plate	46	KK 35 11 48			
28	KK 03 27 50	Hex screw M16 x 50 mm w/nut	47	KK 35 11 70			
29	KK 03 28 20	Hex screw M20 x 200 mm w/nut	48	KK 35 11 73			
30	KK 07 72 81	Arm bended		KK 36 11 20			
31	KK 07 72 80	Arm streight	49	KK 08 21 77			
32	KK 07 85 50	Spacing tube					
33	KK 08 10 50	Towing tube 6 furrow (Before 01.10.00)	50	KK 08 21 79			
	KK 08 21 54	Towing tube 6 furrow (From 01.10.00, serial no. 294 and RG132)	51	KK 01 10 32			
			52	KK 01 01 53			

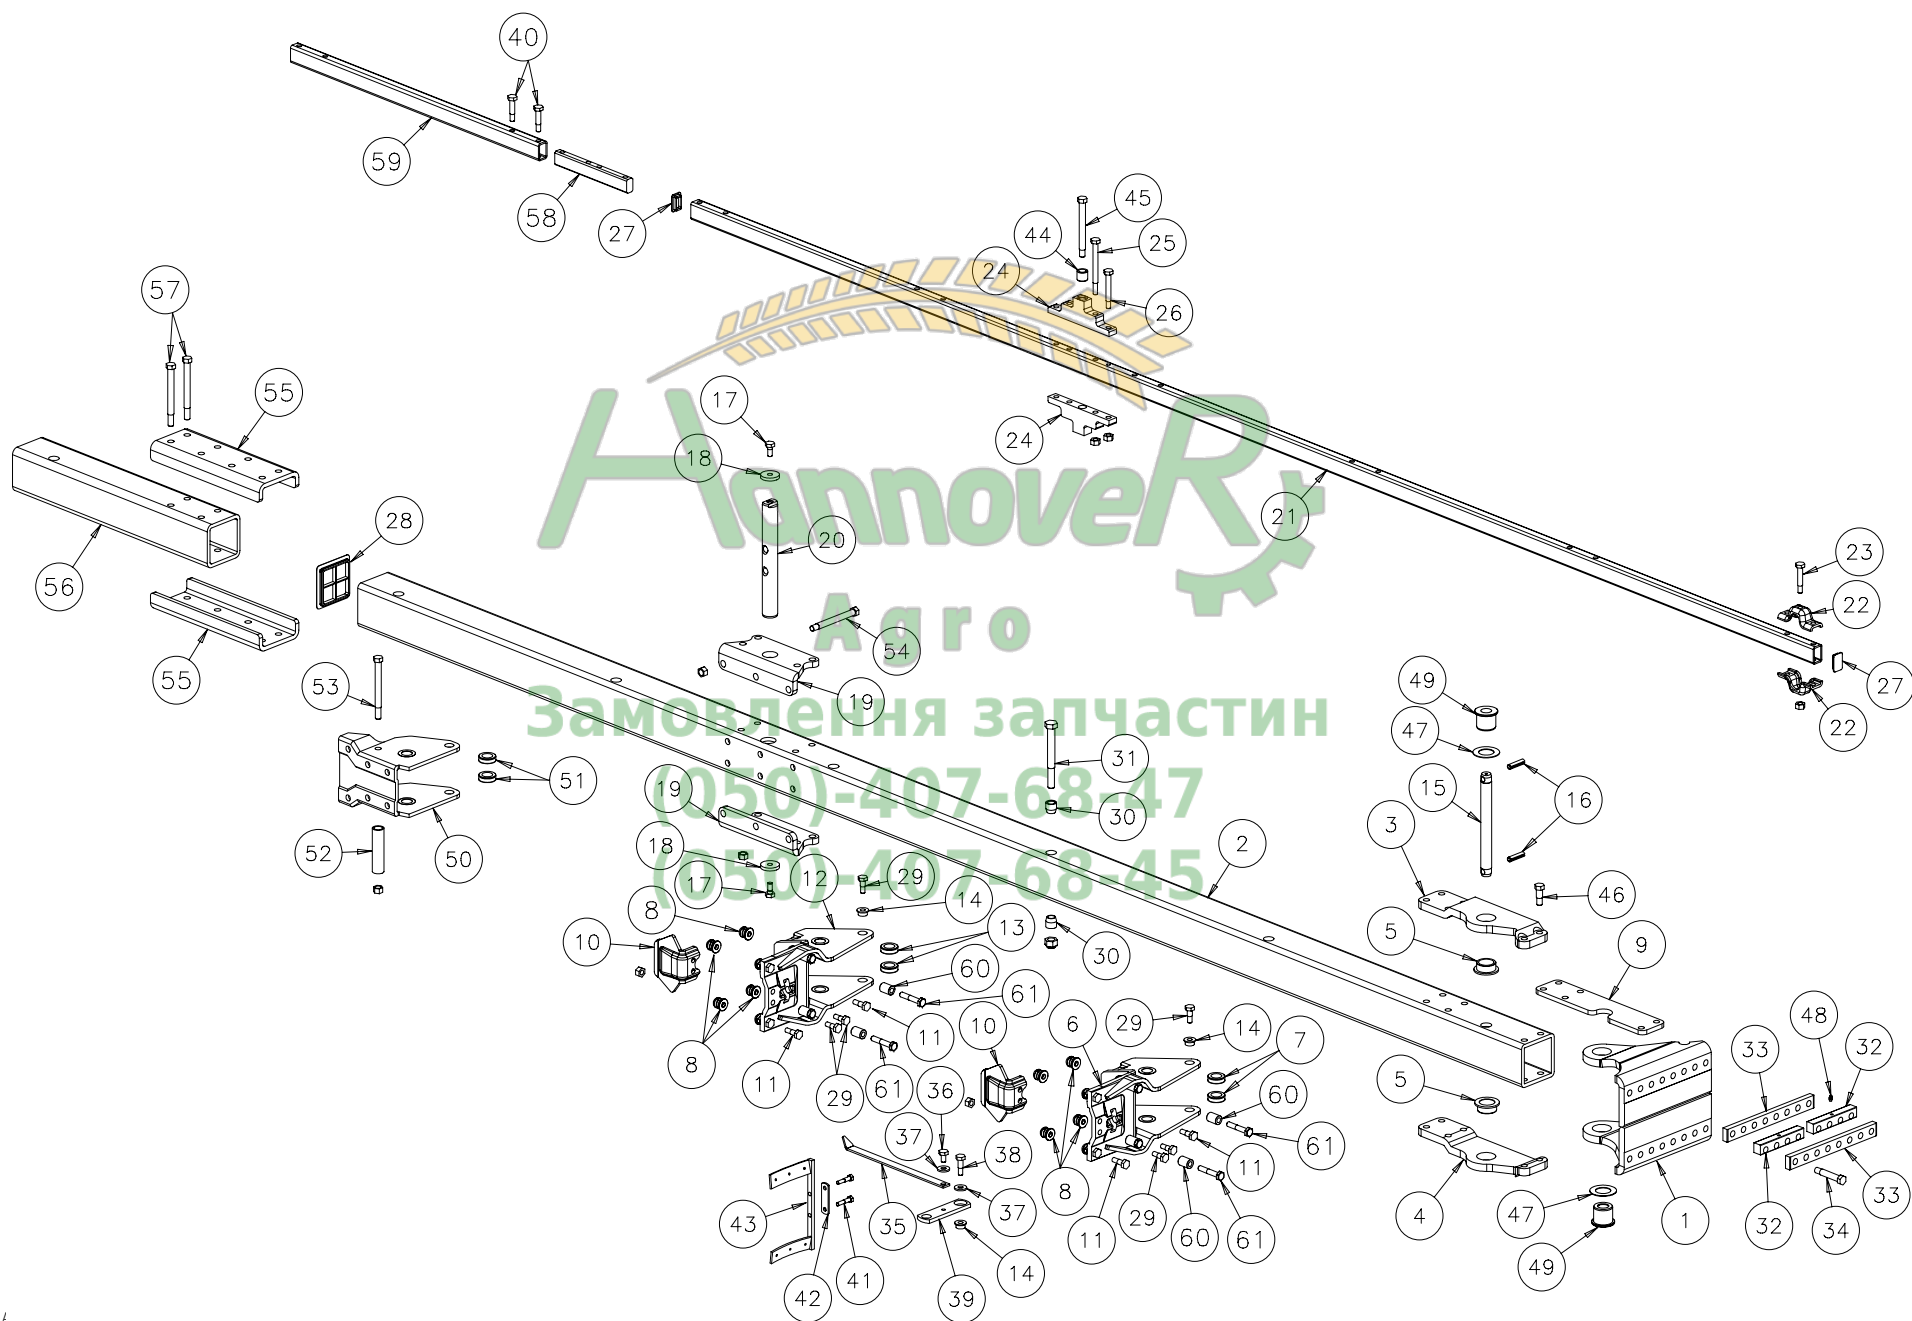


1	KK 08 10 30	Frame support (Before 01.01.98)	18	KK 08 10 92	Washer 16.5 x 16.5 x 10 mm
	KK 08 10 19	Frame support (From 01.01.98)	19	KK 08 10 90	Main frame support
2	KK 08 10 10	Main tube 6 furrow (Before 01.01.98)	20	KK 08 10 91	Axle D50 x 395 mm (Before 01.11.00)
	KK 08 10 13	Main tube 6 furrow (From 01.01.98)		KK 08 21 91	Axle (From 01.11.00)
	KK 08 10 11	Main tube 7 furrow (Before 01.01.98)	21	KK 08 10 15	Parallel rod 6 furrow
	KK 08 10 14	Main tube 7 furrow (From 01.01.98)		KK 08 10 16	Parallel rod 7 furrow
	KK 08 10 12	Main tube 8 furrow (Before 01.01.98)		KK 08 10 17	Parallel rod 8 furrow
	KK 08 10 18	Main tube 8 furrow (From 01.01.98)		KK 08 24 52	Parallel rod 6 furrow, PG/RG-115 (From 15.03.01)
	KK 08 24 50	Main tube 6 furrow, PG/RG-115 (From 15.03.01)		KK 08 24 53	Parallel rod 7 furrow, PG/RG-115 (From 15.03.01)
	KK 08 24 51	Main tube 7 furrow, PG/RG-115 (From 15.03.01)		KK 08 80 54	Parallel rod 5 furrow, PG/RG-115 (From 15.03.02)
	KK 08 80 50	Main tube 5 furrow, PG/RG-115 (From 15.03.02)		KK 08 80 55	Parallel rod 8 furrow, PG/RG-115 (From 15.03.02)
	KK 08 80 51	Main tube 8 furrow, PG/RG-115 (From 15.03.02)	22	KK 07 58 72	Bracket beam support - parallel tube
3	KK 08 10 01	Main frame support, upper w/bushing (Before 01.01.98)	23	KK 03 27 95	Hex screw M16 x 95 mm w/nut
	KK 08 10 27	Main frame support, upper (08 10 27 = 08 10 01 without bushing) (From 01.01.98)	24	KK 08 10 93	Bracket parallel tube
4	KK 08 10 02	Main frame support, lower w/bushing (Before 01.01.98)	25	KK 03 27 18	Hex screw M16 x 180 mm w/nut
	KK 08 10 28	Main frame support, lower (08 10 28 = 08 10 02 without bushing) (From 01.01.98)	26	KK 03 27 04	Hex screw M16 x 120 mm w/nut
5	KK 01 16 90	Bushing w/flange 50x62x28 (Before 01.01.98)	27	KK 01 09 09	Plastic cover 60 x 40 x 5 mm
	KK 08 10 26	Bushing (From 01.01.98)	28	KK 01 09 40	Plastic cover 150 x 150 x 12.5 mm
6	KK 08 10 09	Beam support w/bushing and balls (for PG, first body only) (Before 01.01.98)	29	KK 03 27 45	Hex screw M16 x 45 mm w/nut
	KK 07 59 11	Beam support w/bushing and balls (for PG, all bodies) (From 01.01.98)	30	KK 07 58 87	Tapered bush D35 x 33 mm (Before 01.04.98)
7	KK 08 11 33	Bushing D65 x D50 x 13 mm (Before 01.01.98)		KK 07 49 13	Cone D35/24 x 33 mm (From 01.04.98)
	KK 07 58 81	Bushing (From 01.01.98 - 01.04.98)	31	KK 03 52 19	Hex screw M20 x 220 mm w/flange nut (Before 01.04.98)
	KK 01 16 32	Bushing (From 01.04.98)		KK 03 51 97	Hex screw M24 x 210 mm w/lock nut (From 01.04.98)
8	KK 07 12 56	2 balls w/bolt M16 x 50 mm and locktite	32	KK 07 26 17	Slide rail, inner
9	KK 08 10 29	Inner plate	33	KK 07 19 40	Slide rail, outer
10	KK 06 16 37	Plate	34	KK 03 28 03	Hex screw M20 x 110 mm w/nut
11	KK 03 27 52	Hex screw M16 x 50	35	KK 07 59 04	Pointer
12	KK 07 59 11	Beam support w/bushing and balls (for PG, all bodies)	36	KK 03 27 25	Hex screw M16 x 27 mm
13	KK 07 58 81	Bushing w/flange (Before 01.04.98)	37	KK 01 29 22	Washer 17 x 40 x 4.58 mm
	KK 01 16 32	Bushing (From 01.04.98)	38	KK 03 27 55	Hex screw M16 x 55 mm
14	KK 07 16 64	Bushing w/flange	39	KK 07 59 05	Plate for M20 hex screw (Before 01.04.98)
15	KK 08 10 40	Axle (Before 01.01.98)		KK 07 49 19	Plate for M24 hex screw (From 01.04.98)
	KK 08 10 43	Axle (From 01.01.98)	40	KK 03 27 75	Hex screw M16 x 75 mm w/nut (From 15.03.02)
	KK 08 21 80	Axle (From 01.11.00)	41	KK 03 26 55	Hex screw M12 x 55 mm
16	KK 01 10 25	Roll pin D16 x 65 mm	42	KK 07 59 03	Plate
17	KK 03 27 35	Hex screw M16 x 35 mm	43	KK 07 59 06	Indicator
			44	KK 08 10 94	Bushing 35 x 24 x 30 mm
			45	KK 03 29 50	Hex screw M24 x 50 mm

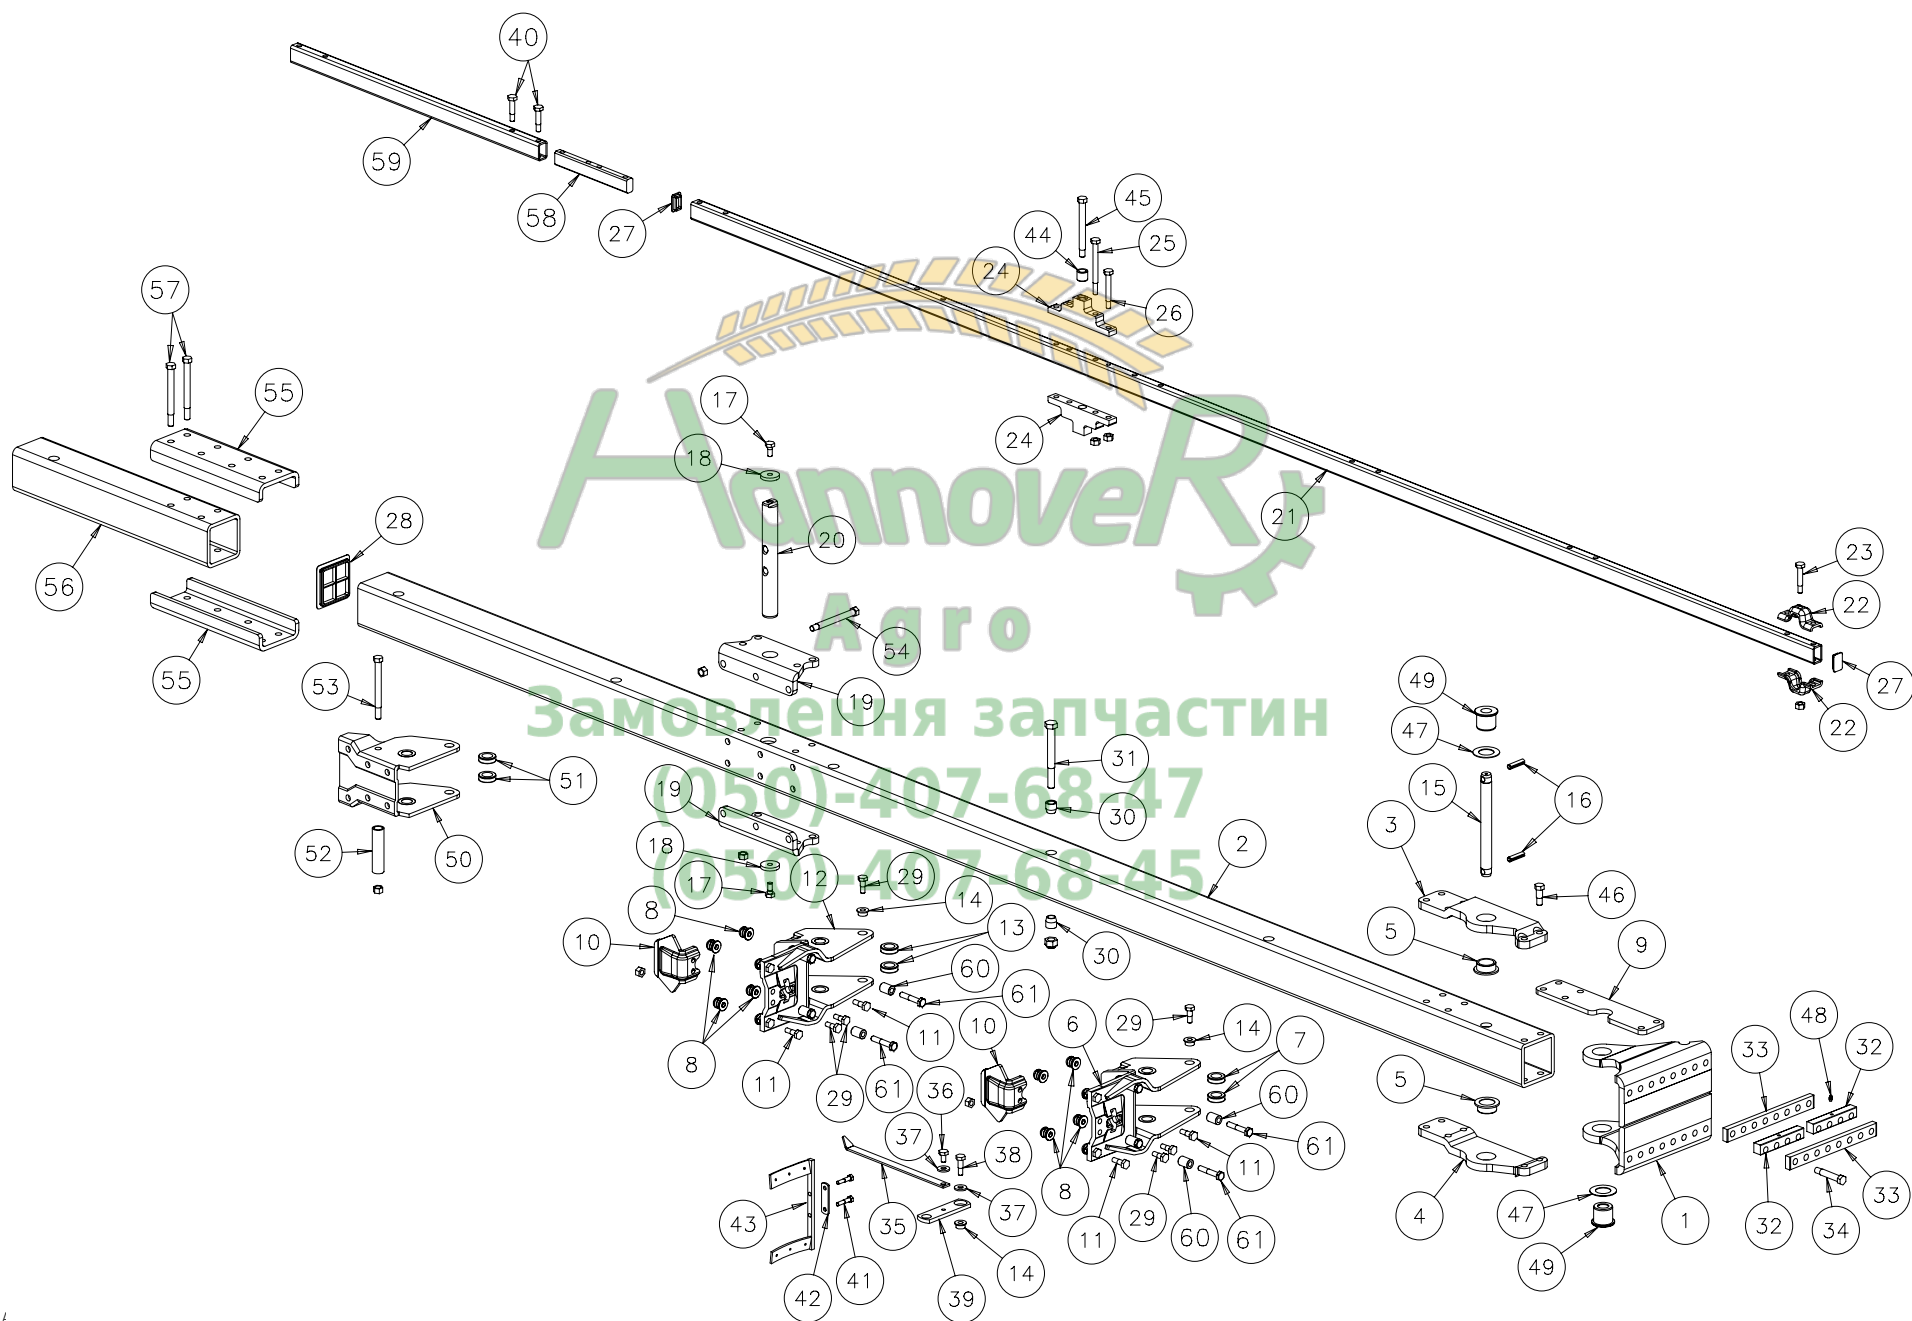


46	KK 03 28 55	Hex screw M20 x 55 mm
47	KK 01 29 71	Washer 50.1 x 87 x 2 mm
48	KK 02 99 97	Grease nipple 45°
49	KK 08 10 26	Bushing D62/D35 (From 01.01.98)
50	KK 07 49 02	Beam support share bolt (for RG, all bodies)
51	KK 01 16 32	Bushing
52	KK 07 49 12	Sleeve
53	KK 03 28 20	Hex screw M20 x 200 w/nut
54	KK 03 28 21	Hex screw M20 x 190 mm w/nut
55	KK 07 85 64	Connection plate (From 15.03.02)
56	KK 08 80 59	Main tube 1 furrow, PG/RG-115 (From 15.03.02) (For 5+1 and 7+1 only)
57	KK 03 28 20	Hex screw M20 x 200 mm w/nut (From 15.03.02)
58	KK 08 80 61	Supporting piece (From 15.03.02)
59	KK 08 80 60	Parallel rod 1 furrow, PG/RG-115 (From 15.03.02)
60	KK 07 14 04	Bushing
61	KK 03 27 92	Hex screw M16 x 90 mm w/ nut



Замовлення запчастин
(050)-407-68-47
(050)-407-68-45

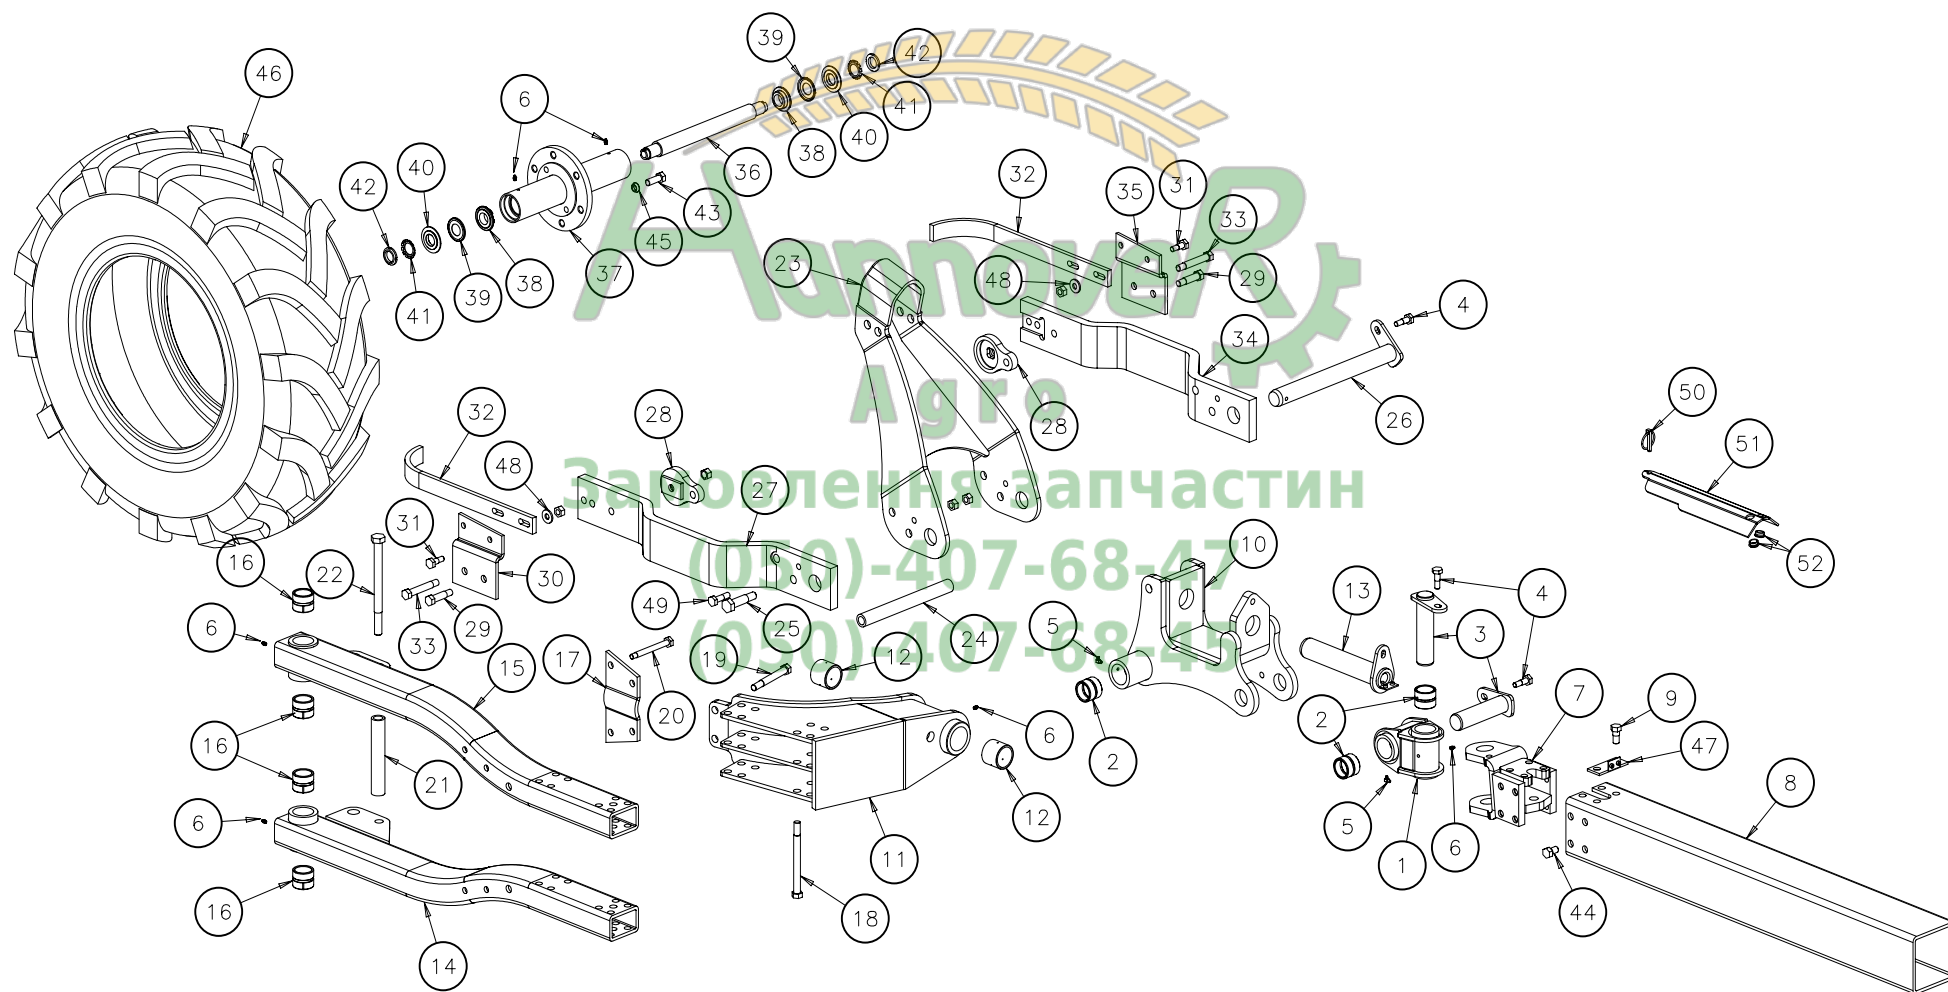


1	KK 07 88 44	Universal joint w/bushing			KK 08 21 51	Wheel arm, L (From 01.10.00, serial no. PG294 and RG132)
2	KK 01 16 82	Bushing D62 x d50 x 50 mm		35	KK 08 11 41	Scraper bracket L
3	KK 07 90 75	Axle w/lock plate		36	KK 08 10 80	Axle
4	KK 03 27 50	Hex screw M16 x 50 mm w/nut		37	KK 07 89 23	Wheel hub
5	KK 02 99 22	Grease M8 x 1, 90°		38	KK 01 07 46	Bearing D80 x d40 x 10/7mm
6	KK 02 99 20	Grease M8 x 1		39	KK 01 05 48	Nilos
7	KK 08 11 20	Bracket, rear		40	KK 07 89 32	Washer (Before 01.12.01)
8	KK 08 11 25	Tube			KK 07 94 16	Gasket w/rubber packing (From 01.12.01)
9	KK 03 28 45	Hex screw M20 x 45 mm		41	KK 01 07 31	Lock ring
10	KK 08 10 70	Bracket		42	KK 01 07 30	Special nut
11	KK 08 10 05	Bracket for wheel arm w/bushings and nipples		43	KK 01 11 62	Screw M18 x 47.5 mm
12	KK 01 16 91	BushingD72 x d60 x 60mm		44	KK 03 28 40	Hex screw M20 x 40 mm
13	KK 08 10 96	Axle		45	KK 01 11 63	Conical washer
14	KK 08 10 07	Wheel arm, lower (Before 01.10.00)		46	KK 01 13 68	Tyre 400 x 22.5/8
	KK 08 21 04	Wheel arm, lower (From 01.10.00, serial no. PG294 and RG132)			KK 01 14 14	Tyre 400 x 22.5/14
15	KK 08 10 06	Wheel arm, upper (Before 01.10.00)			KK 01 14 15	Tyre 500 x 22.5/8
	KK 08 21 03	Wheel arm, upper (From 01.10.00, serial no. PG294 and RG132)			KK 01 14 72	Tyre 14.9 x 24/8 (From 01.03.02)
16	KK 01 16 98	Bushing (Before 01.11.00)			KK 01 13 70	Rim for tyre 400 x 22.5
	KK 01 16 40	Bushing (From 01.11.00)			KK 01 14 53	Rim for tyre 500 x 22.5
17	KK 08 11 24	Support plate			KK 01 14 74	Rim for tyre 14.9 x 24 (From 01.03.02)
18	KK 03 28 28	Hex screw M20 x 220 mm w/nut		47	KK 08 11 26	Hose bracket
19	KK 03 28 08	Hex screw M20 x 160 mm w/nut		48	KK 01 29 22	Washer
20	KK 03 27 08	Hex screw M16 x 150 mm		49	KK 03 27 60	Hex screw M16 x 60 mm w/nut
21	KK 08 10 95	Spacing tube		50	KK 01 07 00	Pin
22	KK 03 29 29	Hex screw M24 x 290 mm w/nut		51	KK 08 10 68	Cover
23	KK 08 10 75	Cylinder bracket		52	KK 01 09 21	Plastic plug
24	KK 08 10 84	Spacing tube				
25	KK 03 29 00	Hex screw M24 x 100 mm	Not ill.		KK 01 13 84	Wheel 400 x 22.5 w/8 ply cpl.
26	KK 07 91 91	Axle D50 x 478 mm			KK 01 14 08	Wheel 400 x 22.5 w/14 ply cpl.
27	KK 08 10 82	Wheel arm, R (Before 01.10.00)			KK 01 14 50	Wheel 500 x 22.5 w/8 ply cpl.
	KK 08 21 50	Wheel arm, R (From 01.10.00, serial no. PG294 and RG132)			KK 01 14 71	Wheel 14.9 x 24 w/8 ply cpl. (From 01.03.02)
28	KK 08 10 81	Cap				
29	KK 03 28 80	Hex screw M20 x 80 mm w/nut				
30	KK 08 11 40	Scraper bracket R				
31	KK 03 27 45	Hex screw M16 x 45 mm w/nut				
32	KK 08 11 42	Scraper for 400 x 22.5 and 500 x 22.5				
33	KK 03 28 11	Hex screw M20 x 130 mm w/nut				
34	KK 08 10 83	Wheel arm, L (Before 01.10.00)				

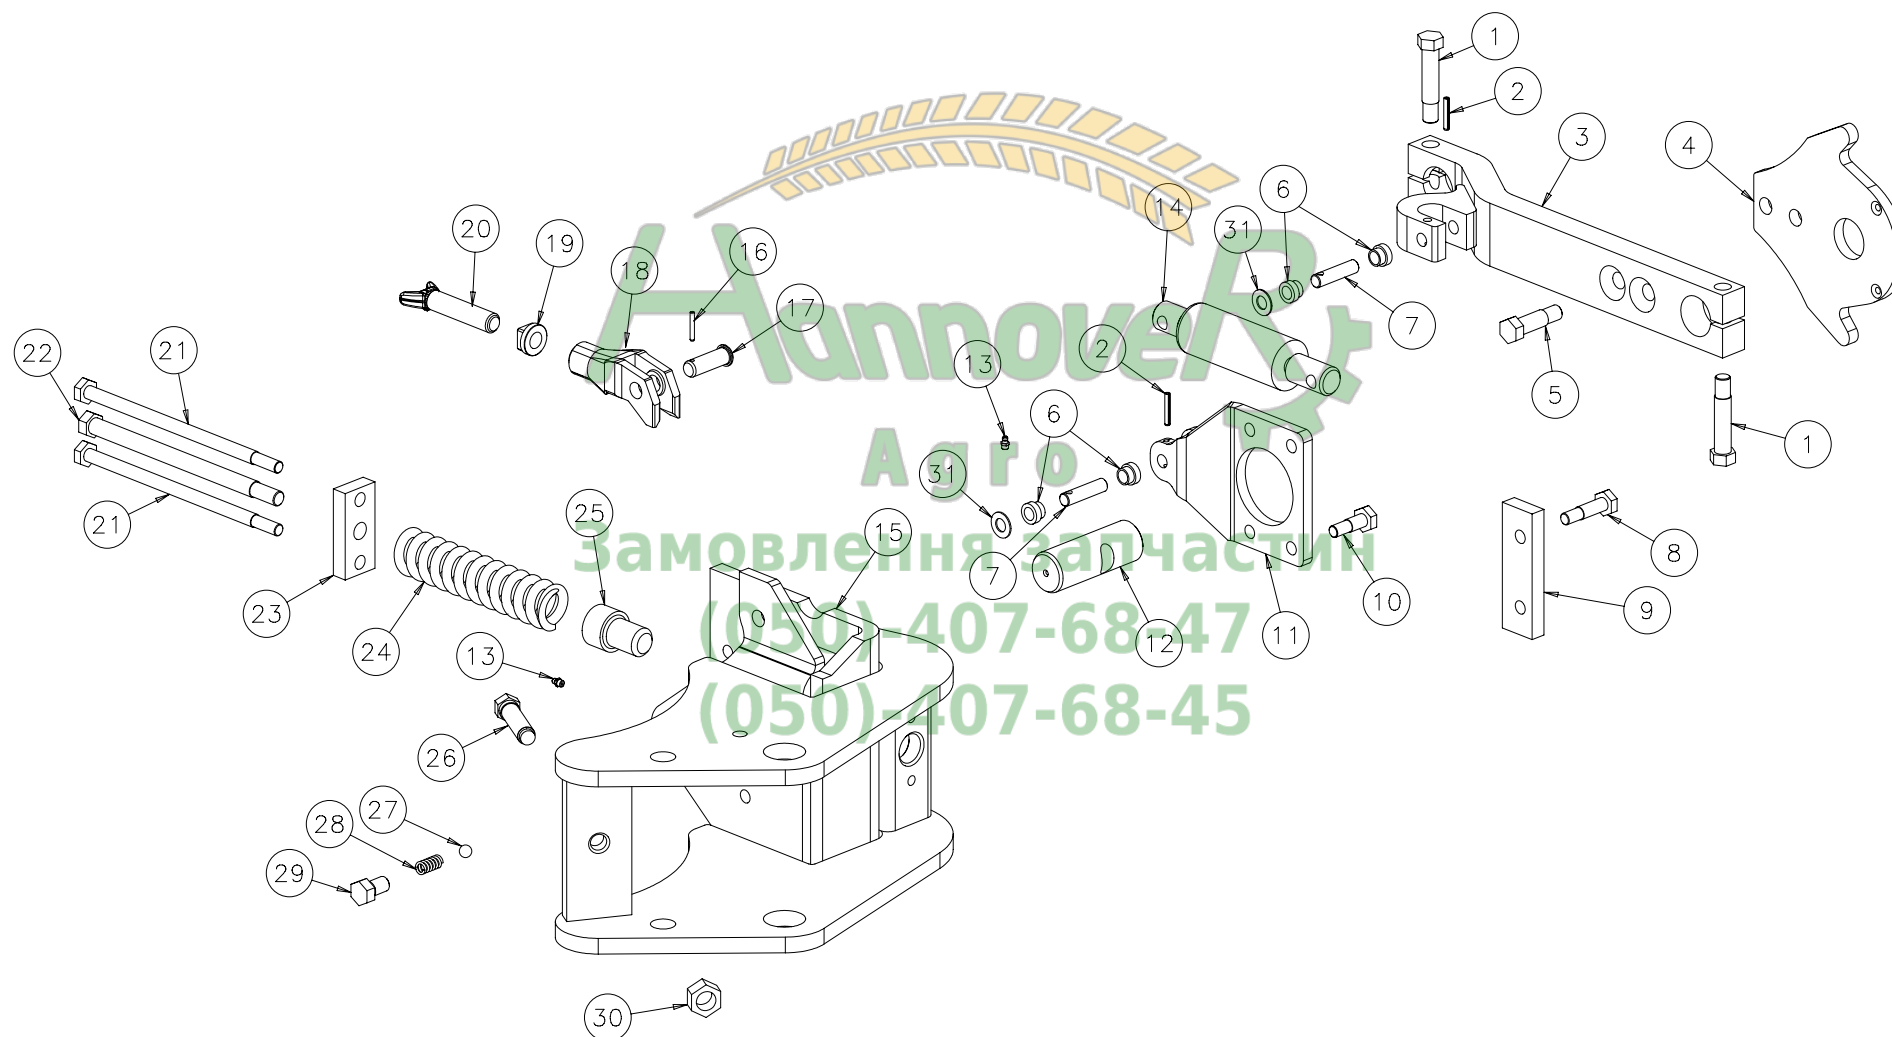

1	KK 03 28 95	Hex screw M20 x 95 mm w/ nut
2	KK 01 10 42	Roll pin D6 x 40 mm
3	KK 08 24 05	Arm for wheel
4	KK 08 24 08	Plate for support wheel PM/RM
5	KK 03 10 60	Countersunk screw M20 x 70 mm w/ nut
6	KK 01 16 13	Bushing w/ flange D16 x 17 - d20/ 9
7	KK 07 96 71	Axle for shock absorber
8	KK 03 27 55	Hex screw M16 x 55 mm w/ nut
9	KK 08 24 09	Stop plate
10	KK 03 27 50	Hex screw M16 x 50 mm w/ nut
11	KK 07 96 42	Fix for shock absorber
12	KK 07 96 36	Axle for wheel
13	KK 02 99 20	Grease nipple
14	KK 35 39 20	Shock absorber
15	KK 08 82 60	Bracket for on-land wheel welded PG/RG
16	KK 01 10 02	Roll pin
17	KK 01 02 60	Axle D20 x 53,5
18	KK 08 80 62	Clevis
19	KK 06 18 99	Counter nut M24
20	KK 08 80 63	Stop screw M24 x 120 mm
21	KK 06 27 26	Hex screw M16 x 320 mm w/ nut
22	KK 03 28 31	Hex screw M20 x 310 mm
23	KK 08 82 59	Tighten plate on-land PG/RG
24	KK 09 63 20	Spring D11,5 - d33,9 x 250
25	KK 08 82 61	Guide pin for spring on-land PG/RG
26	KK 06 70 39	Adjustment screw M24 x 90
27	KK 01 05 89	Ball D15
28	KK 01 37 02	Spring D2,75 - d12,75 x 32
29	KK 03 28 30	Hex screw M20 x 30 mm
30	KK 01 58 44	Nut M24 low
31	KK 01 29 23	Washer D31 x d16,5 x 1,8



Замовлення запчастин
(050)-407-68-47
(050)-407-68-45

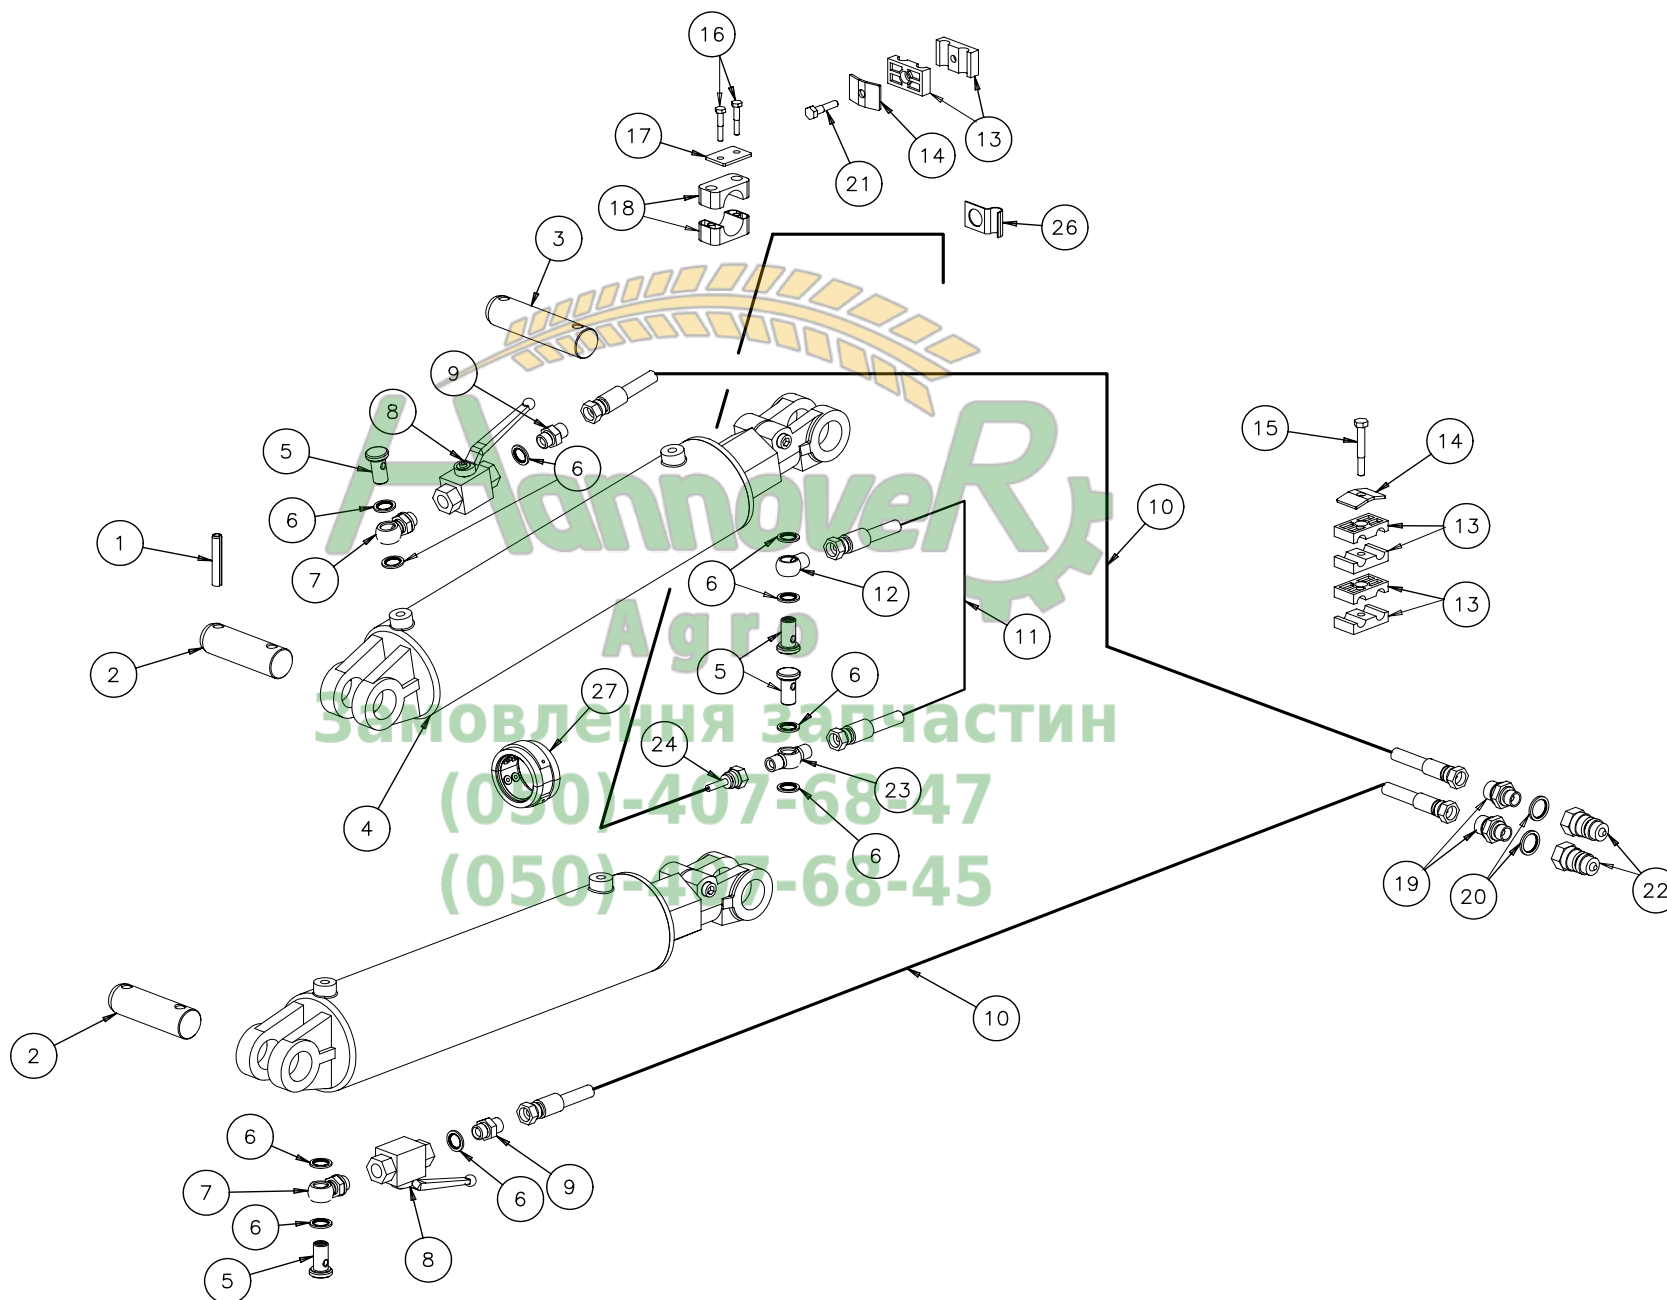

1	KK 01 10 59	Pin D10 x 60 mm
2	KK 07 85 84	Axle D35 x 110 mm
3	KK 07 85 83	Axle D35 x 150 mm
4	KK 35 27 79	Cylinder D100 x 400 w/stop (Before 15.05.99) (see plate no. 1025)
	KK 35 38 13	Cylinder D100 x 400 w/stop (From 15.05.99) (see plate no. 1084)
	KK 35 38 34	Cylinder D100 x 400 w/stop (From 01.10.00) (see plate no. 1145)
5	KK 01 25 51	Banjobolt w/filter
6	KK 01 15 85	Gasket ring 3/8"
7	KK 01 25 48	Banjo adjustable
8	KK 01 27 23	Valve w/handle 3/8"
9	KK 01 22 61	Threaded coupling 3/8" - 3/8"
10	KK 01 27 96	Hose 3/8" x 5000 mm
11	KK 01 26 55	Hose 3/8" x 350 mm
12	KK 01 20 62	Banjo
13	KK 01 25 22	Plastic D18 x 2 mm
14	KK 01 23 24	Cover
15	KK 03 24 60	Hex screw M8 x 60 mm
16	KK 03 23 35	Hex screw M6 x 35 mm
17	KK 01 20 69	Cover
18	KK 01 20 68	Plastic D18 x 1 mm
19	KK 01 20 60	Threaded coupling 3/8" - 1/2"
20	KK 01 15 65	Gasket ring 1/4"
21	KK 03 24 35	Hex screw M8 x 35 mm
22	KK 01 21 14	Quick coupling plug
23	KK 01 25 70	Banjo double
24	KK 01 35 18	Swivel 3/8" w/sleeve
25	KK 01 35 22	Hose 1/4" L=1800 mm
26	KK 01 27 00	Clamp
27	KK 35 22 46	Stop clips D35 x D50

Not ill. KK 01 35 20 Hose clamp





Замовлення запчастин

(050)-407-68-47

(050)-407-68-45



Замовлення запчастин

(050)-407-68-47


(050)-407-68-45



1	KK 01 26 55	Hose 3/8", L = 350 mm
2	KK 01 23 25	T - coupling 3/8"
3	KK 01 35 17	Relief valve 3/8", 250 bar
4	KK 01 15 85	Gasket ring 3/8"
5	KK 01 23 07	Banjo bolt 3/8" - 3/8"
6	KK 01 20 62	Banjo 3/8"
7	KK 01 35 19	Hose D6, L = 1000 mm NITRIK



Замовлення запчастин
(050)-407-68-47
(050)-407-68-45

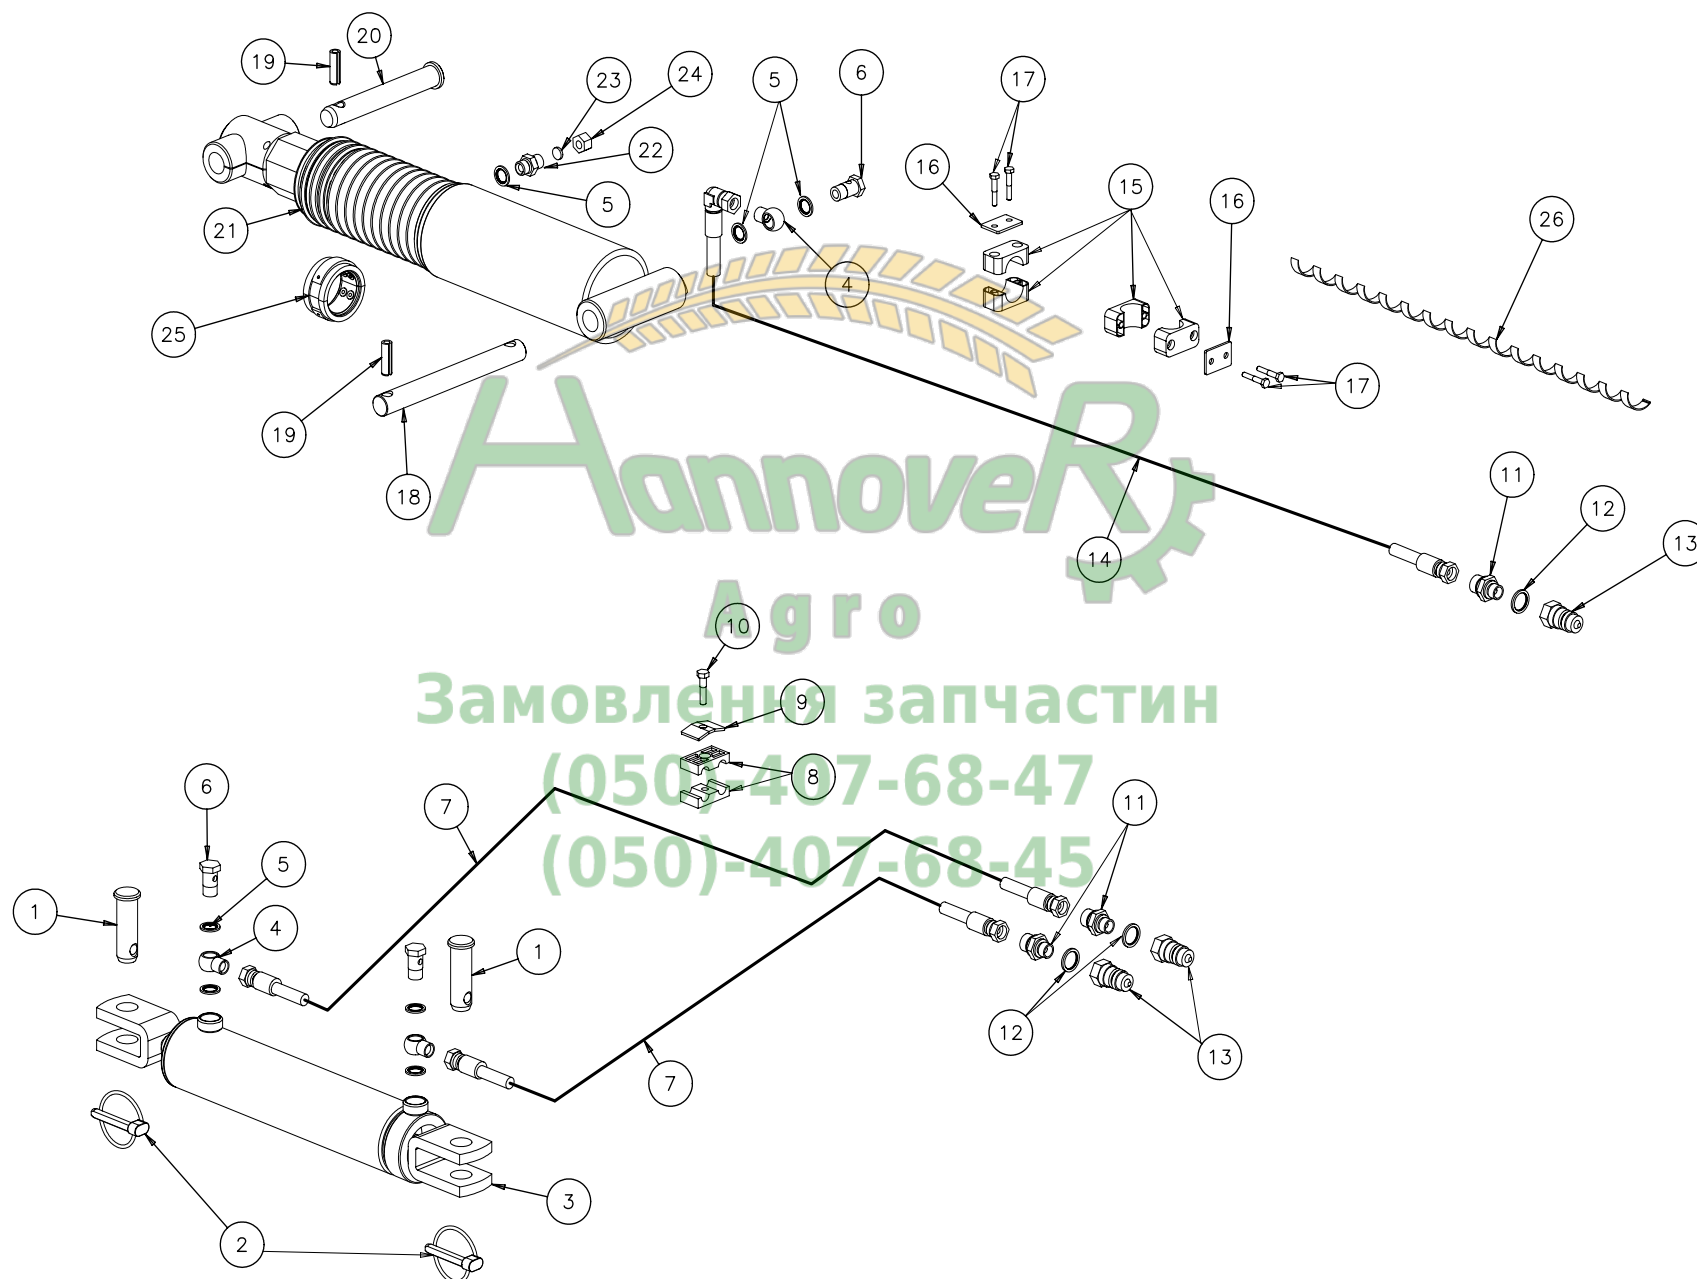

1	KK 01 03 26	Bolt D25.3 x 65 mm
2	KK 01 07 00	Pin D12
3	KK 30 08 04	Cylinder D75 x 300 mm for furrow width adjustment (see plate no. 1030)
4	KK 01 20 62	Banjo
5	KK 01 15 85	Bounded seal
6	KK 01 20 59	Banjo bolt L = 31 mm
7	KK 01 22 01	Hose 3/8" x 5500 mm for 6 furrow
	KK 01 27 79	Hose 3/8" x 7000 mm for 7 furrow
	KK 01 26 61	Hose 3/8" x 7300 mm for 8 furrow
8	KK 01 25 22	Plastic D18 x 2 mm
9	KK 01 23 24	Cover
10	KK 03 24 35	Hex screw M8 x 35 mm
11	KK 01 20 60	Threaded coupling 3/8" - 1/2"
12	KK 01 15 65	Bounded seal
13	KK 01 21 14	Fast coupling plug
14	KK 01 27 80	Hose 3/8" x 8000 mm for 6 furrow
	KK 01 27 81	Hose 3/8" x 9000 mm for 7 furrow
	KK 01 26 58	Hose 3/8" x 9400 mm for 8 furrow
15	KK 01 20 68	Plastic D18 x 1 mm
16	KK 01 20 69	Cover
17	KK 03 23 35	Hex screw M6 x 35 mm
18	KK 01 04 13	Axle D25 x 210 mm
19	KK 01 10 20	Roll pin
20	KK 01 03 37	Bolt D25 x 180 mm
21	KK 35 35 37	Cylinder D100 x 435 mm + 190 mm for wheel (Before 01.07.00) (see plate no. 1031)
	KK 35 36 35	Hydraulic cylinder w/stop and bellow D100 x 190 mm (From 01.07.00) (see plate no. 1130)
22	KK 01 22 61	Threaded coupling 3/8" - 3/8"
23	KK 01 09 61	Filter
24	KK 01 09 60	Filter cap
25	KK 35 22 46	Stop clips D35 x D50
26	KK 01 21 16	Hydraulic hose holder





**1028 Hydraulic front furrow width adjustment (PL/RL from 01.11.99, PL/RL
and PM/RM before 01.08.00)**

1	KK 01 03 35	Bolt 25.3 x 155 mm
2	KK 01 20 60	Threaded coupling 3/8" - 1/2"
3	KK 01 10 20	Roll pin D12 x 40 mm
4	KK 01 15 23	Hose 3/8" x 4500 mm
5	KK 01 15 85	Gasket ring 3/8"
6	KK 01 22 61	Threaded coupling 3/8" - 3/8"
7	KK 01 23 24	Plate
8	KK 01 25 22	Fix for hose
9	KK 03 24 45	Hex screw M8 x 45 mm w/nut
10	KK 12 41 57	Bushing
11	KK 35 24 96	Hydraulic cylinder D75 x 130 mm (Before 01.09.99.) (From 01.08.00) (see plate no. 445)
	KK 35 37 10	Hydraulic cylinder D75 x 130 mm w/stop cpl. (From 01.09.99) (Before 01.08.00) (see plate no. 1092)
	KK 35 39 05	Hydraulic cylinder D75 x 200 mm w/stop cpl. For wide wheel with settings. (From 15.01.02) (see plate no. 1195)
12	KK 01 21 14	Quick coupling
13	KK 01 15 65	Gasket ring






1	KK 35 36 16	Cylinder tube (for D75 mm)
	KK 35 27 97	Cylinder tube (for D100 mm)
2	KK 01 30 53	Piston packing (for D75 mm)
	KK 01 19 08	Piston packing (for D100 mm)
3	KK 35 36 17	Piston rod w/piston (for D75 mm)
	KK 35 27 86	Piston rod w/piston (for D100 mm)
4	KK 01 30 52	O-ring (for D75 mm)
	KK 01 18 06	O-ring (for D100 mm)
5	KK 01 20 32	Packing for rod
6	KK 35 36 18	End cap w/packings (for D75 mm)
	KK 35 34 58	End cap w/packings (for D100 mm)
7	KK 01 20 39	Scraper
8	KK 01 17 83	O-ring
9	KK 35 27 96	Stop
10	KK 03 20 40	Screw M10 x 40 mm
11	KK 35 33 98	Clevis
Not ill.	KK 01 30 51	Packings cpl. (for D75 mm)
	KK 01 20 15	Packings cpl. (for D100 mm)
	KK 35 27 87	Cylinder D75 x 400 mm w/stop cpl.
	KK 35 27 79	Cylinder D100 x 400 mm w/stop cpl. (Before 15.05.99)



Замовлення запчастин
(050)-407-68-47
(050)-407-68-45

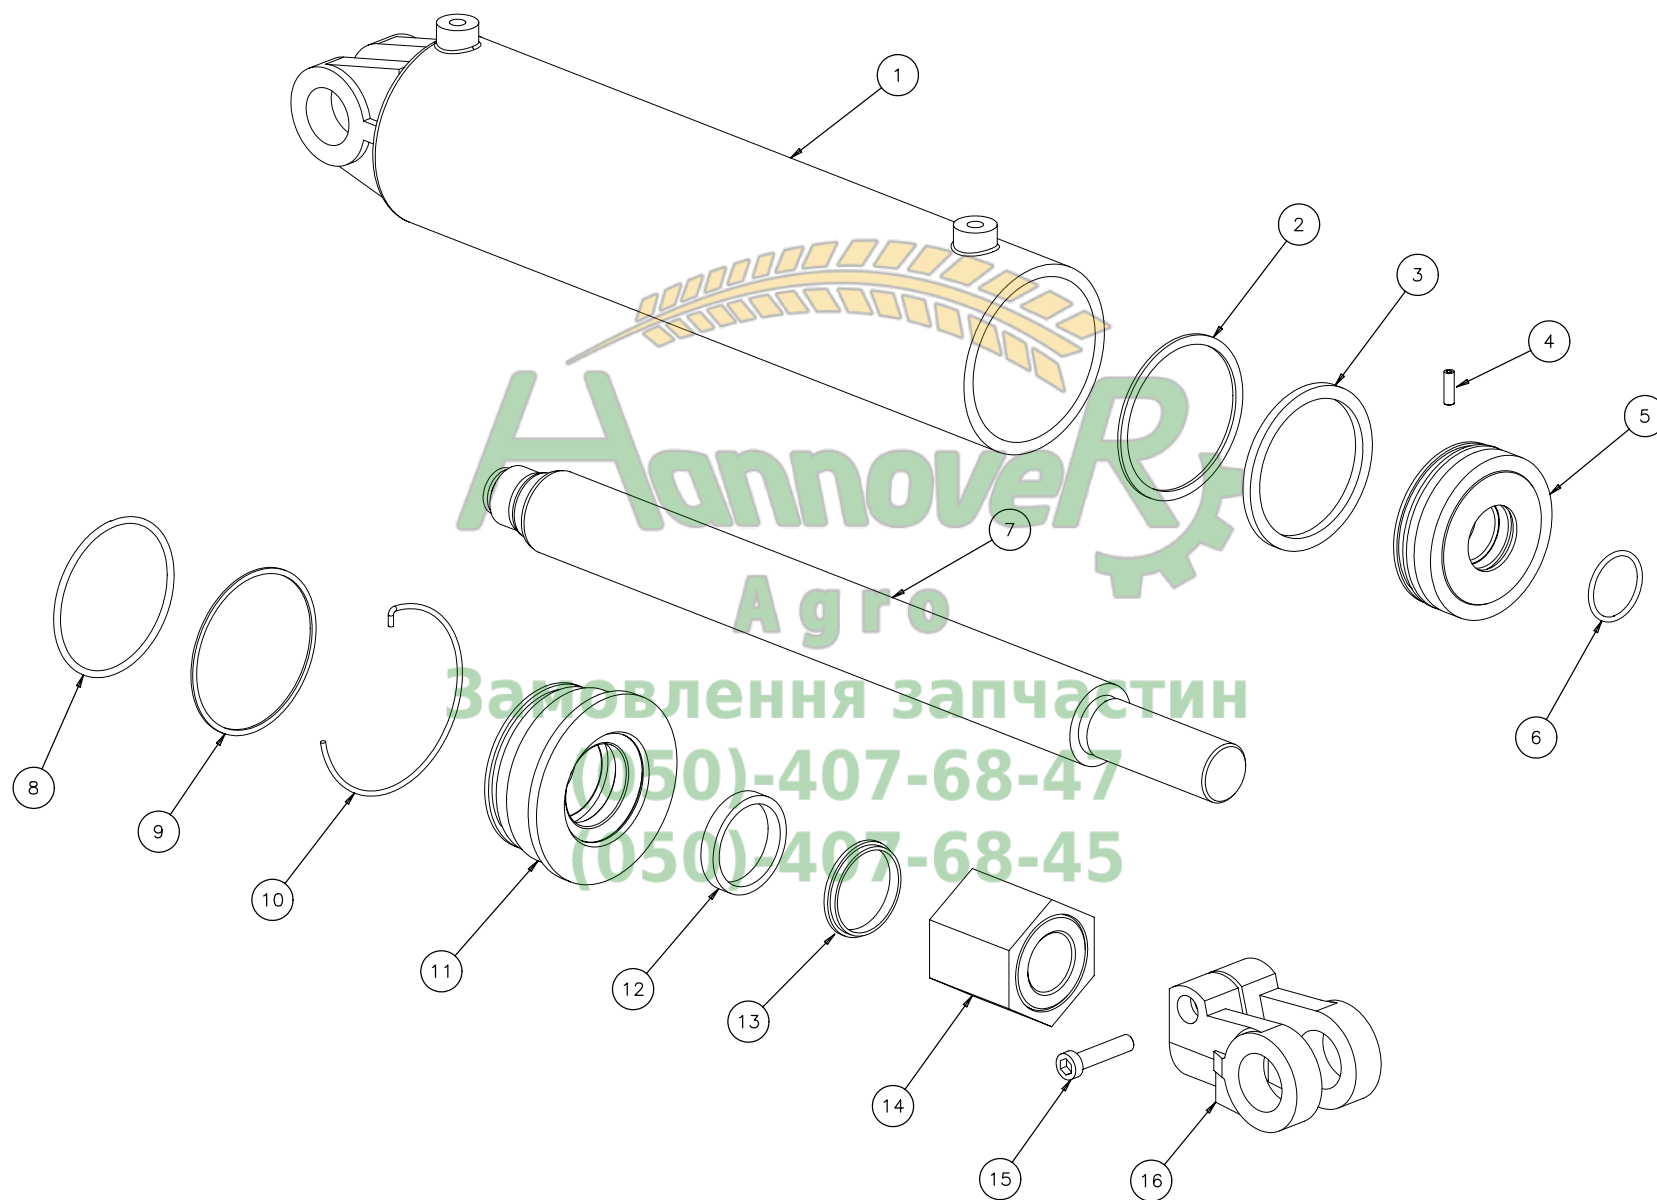

1	KK 35 37 98	Cylinder tube
2	KK 01 65 31	Sliding ring
3	KK 01 65 32	Packing
4	KK 03 20 06	Screw M6 x 20 mm
5	KK 35 37 83	Piston
6	KK 01 65 10	O-ring D40
7	KK 35 37 99	Piston rod
8	KK 01 17 19	O-ring D93
9	KK 01 17 24	Support
10	KK 35 37 95	Lock ring
11	KK 35 37 39	Rod cap
12	KK 01 17 25	Seal for piston rod
13	KK 01 17 27	Scraper
14	KK 35 37 85	Stopping nut
15	KK 03 20 16	Screw M10 x 45 mm
16	KK 35 37 73	Clevis

Not ill.	KK 01 36 05	Packings cpl.
	KK 35 38 13	Hydraulic cylinder D100 x 400 mm w/stop cpl.



Замовлення запчастин
(050)-407-68-47
(050)-407-68-45



1	KK 35 38 53	Cylinder tube
2	KK 01 19 08	Piston packing
3	KK 35 27 86	Piston rod
4	KK 01 18 88	Support ring
5	KK 01 18 12	O-ring D94
6	KK 35 38 52	Rod cap
7	KK 01 20 32	Piston rod packing
8	KK 01 20 39	Scraper
9	KK 01 17 83	O-ring D49,5
10	KK 35 27 96	Stop D100
11	KK 03 20 40	Cylinder screw M10 x 40 mm
12	KK 35 33 98	Clevis
Not ill.	KK 01 30 72	Packing set cpl.
	KK 35 38 34	Hydraulic cylinder D100 x 400 mm cpl.



Замовлення запчастин
(050)-407-68-47
(050)-407-68-45



1	KK 35 35 57	Cylinder tube
2	KK 01 19 08	Piston packing
3	KK 35 35 58	Piston rod w/piston
4	KK 01 18 06	O-ring
5	KK 01 26 37	Rod packing
6	KK 35 35 59	End cap w/packings
7	KK 01 20 39	Scraper
8	KK 01 26 19	O-ring
9	KK 35 35 60	Stop
10	KK 35 35 61	Clevis
Not ill.	KK 01 26 40	Packings set
	KK 03 24 30	Screw M8 x 30 mm for clevis



Замовлення запчастин
(050)-407-68-47
(050)-407-68-45



1	KK 35 35 57	Cylinder tube
2	KK 01 19 08	Piston packing
3	KK 35 35 58	Piston rod w/piston
4	KK 01 18 06	O-ring D94
5	KK 35 35 59	End cap w/packings
6	KK 01 26 37	Seal for piston rod
7	KK 01 20 39	Scraper
8	KK 01 35 97	Wire clamp D110
9	KK 01 35 95	Bellow
10	KK 01 26 19	O-ring D50
11	KK 01 37 05	Spring ring
12	KK 01 35 94	Ring for bellow
13	KK 35 45 30	Stop
14	KK 35 35 61	Clevis
15	UH 82 52 35	Cylinder screw M8 x 35 mm

Not ill.	KK 01 26 40	Packings set
	KK 35 36 35	Hydraulic cylinder w/stop and bellow D100 x 190 mm cpl.




Замовлення запчастин
(050)-407-68-47
(050)-407-68-45



1	KK 30 80 25	Cylinder tube
2	KK 30 80 45	Piston rod
3	KK 30 80 24	Piston
4	KK 30 80 28	Rod cap
5	KK 01 60 02	Lock nut M24
6	KK 01 19 17	Seal for piston
7	KK 01 18 18	O-ring
8	KK 01 19 53	Gland seal for piston rod
9	KK 01 19 10	Wiper seal
10	KK 01 18 02	O-ring
Not ill.	KK 01 19 47	Packing set cpl.
	KK 30 08 04	Hydraulic cylinder D75 x 300 mm cpl.




Замовлення запчастин
(050)-407-68-47
(050)-407-68-45

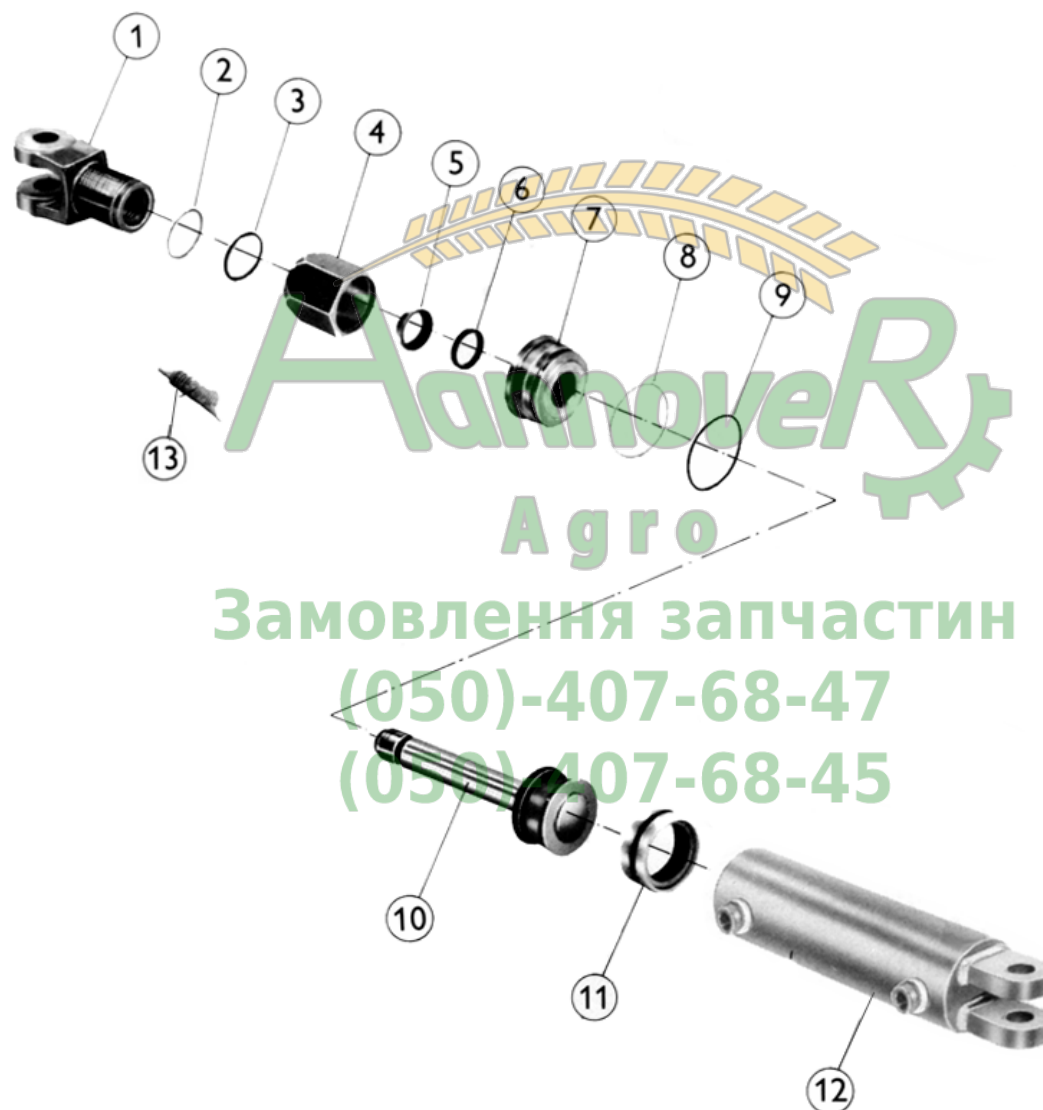

1	KK 35 33 53	Clevis
2	KK 01 18 78	Ring D45 x 2.5 x 1.3
3	KK 01 18 65	O - ring D40 x 4
4	KK 35 33 50	Stop
5	KK 01 19 13	Scraper D32/D44 x 7/10
6	KK 01 19 53	Piston rod packing D32/D40 x 6
7	KK 35 22 61	Endcap D75/D32 cpl.
8	KK 01 18 61	Ring Ø70 x 2.5 x 1.3
9	KK 01 18 02	O - ring D70 x 3 mm
10	KK 35 33 51	Piston rod w/piston D75/D32
11	KK 01 19 06	Piston packing D75/D55 x 22.4
12	KK 35 34 78	Cylinder tube w/clevis cap w/90° turned connectors
13	KK 06 02 21	Glue 3 ml "Loctite 271"
Not ill.	KK 01 20 25	Packings cpl. D75/D32
	KK 35 24 96	Cylinder D75 x 130 mm w/90° turned connectors cpl. (Before 01.09.99)



Замовлення запчастин
(050)-407-68-47
(050)-407-68-45

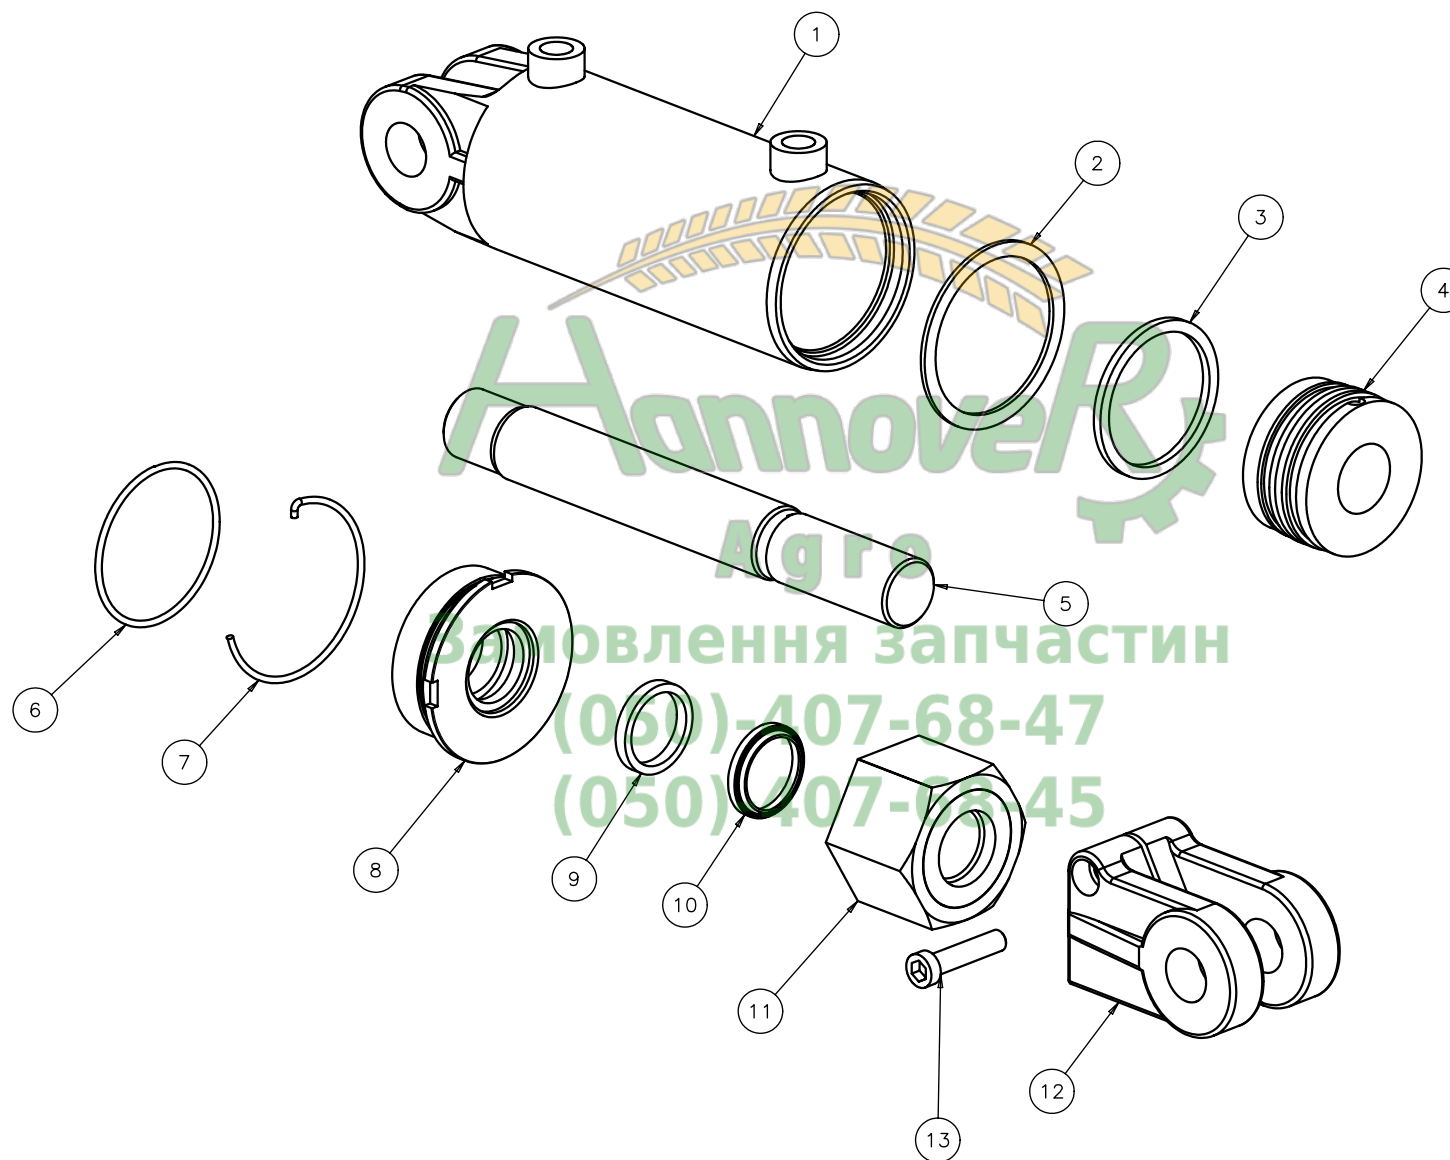


1	KK 35 37 96	Cylinder tube
2	KK 01 65 37	Sliding ring
3	KK 01 65 38	Piston packing
4	KK 35 38 20	Piston
5	KK 35 37 97	Piston rod
6	KK 01 65 36	O-ring
7	KK 35 37 93	Lock ring
8	KK 35 28 21	Rod cap
9	KK 01 65 35	Seal for piston rod
10	KK 01 17 45	Scraper
11	KK 35 38 22	Stop cpl.
12	KK 35 37 28	Clevis
13	KK 03 20 16	Hex screw M10 x 45 mm

Not ill.	KK 01 36 06	Packings cpl.
	KK 35 37 10	Hydraulic cylinder D75 x 130 mm w/90° turned connectors cpl. (From 01.09.99)





Замовлення запчастин
(050)-407-68-47
(050)-407-68-45

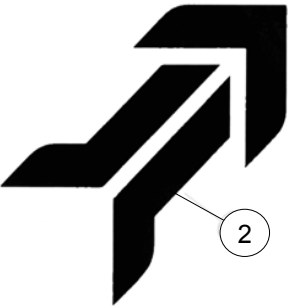

1. ARBEID
WORK
ARBEIT
LABOUR



2. TRANSPORT

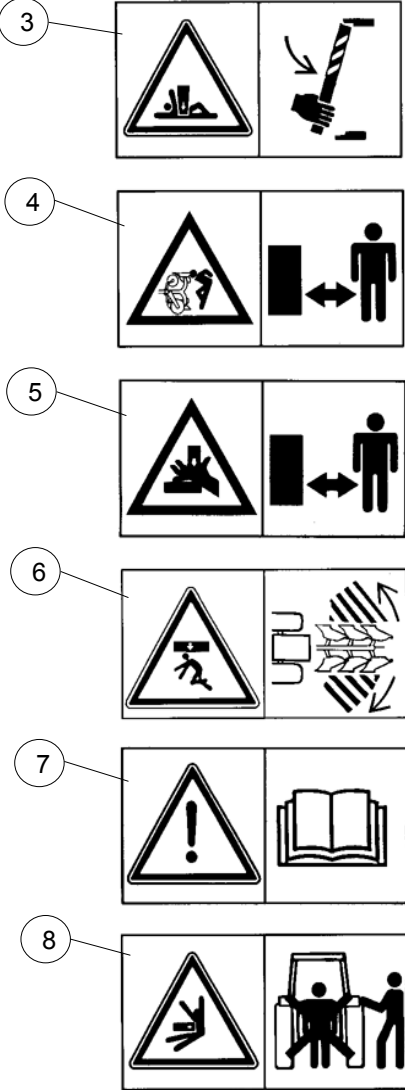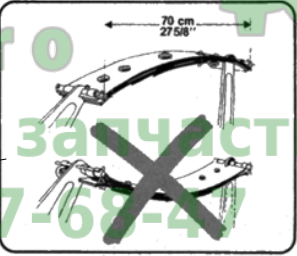

1	KK 70 98 31	Kverneland w/arrow
2	KK 70 97 37	Arrow
3	KK 70 98 43	Safety sign, parking support
4	KK 70 98 95	Safety sign, sharp edges
5	KK 70 98 23	Safety sign, crush danger
6	KK 70 98 42	Safety sign, reversible plough
7	KK 70 98 44	Safety sign, read instruction manual
8	KK 70 98 41	Safety sign, danger, tractor/implement
9	KK 70 99 41	Kverneland PG-100
	KK 70 99 45	Kverneland RG-100
10	KK 70 94 79	Info: Nuts
11	KK 70 97 81	Info: Speed Limit 30 km/h
12	KK 70 92 34	Info: Leaf spring
13	KK 70 93 04	Info: Lock valves for transport
Not ill.	KK 70 98 47	Patent label
	KK 70 99 80	Triangular reflexive foil
	KK 70 99 81	Rectangular reflexive foil



Замовлення запчастин
(050)-407-68-47
(050)-407-68-45

Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page
KK 01 00 08	35	KK 01 07 72	25	KK 01 14 53	41	KK 01 18 06	63	KK 01 20 69	45	KK 01 29 06	33	KK 01 32 34	15	KK 01 36 06	69
KK 01 01 53	35	KK 01 07 72	29	KK 01 14 71	41	KK 01 18 12	59	KK 01 20 69	51	KK 01 29 13	21	KK 01 32 34	5	KK 01 37 02	43
KK 01 01 53	35	KK 01 07 75	25	KK 01 14 72	41	KK 01 18 18	65	KK 01 21 14	45	KK 01 29 19	13	KK 01 32 34	9	KK 01 37 05	63
KK 01 01 55	11	KK 01 08 18	31	KK 01 14 74	41	KK 01 18 61	67	KK 01 21 14	51	KK 01 29 19	15	KK 01 33 32	13	KK 01 58 13	17
KK 01 01 55	13	KK 01 09 09	37	KK 01 15 23	53	KK 01 18 65	67	KK 01 21 14	53	KK 01 29 19	5	KK 01 33 32	15	KK 01 58 13	17
KK 01 01 55	19	KK 01 09 21	41	KK 01 15 65	45	KK 01 18 66	27	KK 01 21 16	51	KK 01 29 19	9	KK 01 33 32	15	KK 01 58 16	33
KK 01 01 55	7	KK 01 09 40	37	KK 01 15 65	51	KK 01 18 66	31	KK 01 21 85	35	KK 01 29 22	13	KK 01 33 32	17	KK 01 58 17	17
KK 01 01 56	11	KK 01 09 60	51	KK 01 15 65	53	KK 01 18 78	67	KK 01 22 01	51	KK 01 29 22	15	KK 01 33 32	5	KK 01 58 17	17
KK 01 01 56	13	KK 01 09 61	51	KK 01 15 85	45	KK 01 18 88	59	KK 01 22 61	45	KK 01 29 22	17	KK 01 33 32	9	KK 01 58 17	17
KK 01 01 56	19	KK 01 10 02	43	KK 01 15 85	49	KK 01 19 06	67	KK 01 22 61	51	KK 01 29 22	37	KK 01 33 32	9	KK 01 58 17	17
KK 01 01 56	7	KK 01 10 20	35	KK 01 15 85	51	KK 01 19 08	55	KK 01 22 61	53	KK 01 29 22	41	KK 01 33 33	13	KK 01 58 17	17
KK 01 02 60	43	KK 01 10 20	51	KK 01 15 85	53	KK 01 19 08	59	KK 01 23 07	49	KK 01 29 22	5	KK 01 33 33	7	KK 01 58 17	19
KK 01 03 19	35	KK 01 10 20	53	KK 01 16 13	43	KK 01 19 08	61	KK 01 23 24	45	KK 01 29 22	9	KK 01 33 33	9	KK 01 58 17	27
KK 01 03 26	51	KK 01 10 25	37	KK 01 16 32	37	KK 01 19 08	63	KK 01 23 24	51	KK 01 29 23	43	KK 01 33 46	11	KK 01 58 25	17
KK 01 03 35	35	KK 01 10 31	35	KK 01 16 32	37	KK 01 19 10	65	KK 01 23 24	53	KK 01 29 27	5	KK 01 33 46	13	KK 01 58 25	17
KK 01 03 35	53	KK 01 10 32	29	KK 01 16 32	39	KK 01 19 13	67	KK 01 23 25	49	KK 01 29 27	9	KK 01 33 46	15	KK 01 58 25	17
KK 01 03 37	35	KK 01 10 32	35	KK 01 16 40	41	KK 01 19 17	65	KK 01 25 22	45	KK 01 29 29	11	KK 01 33 46	19	KK 01 58 25	19
KK 01 03 37	51	KK 01 10 37	21	KK 01 16 82	35	KK 01 19 47	65	KK 01 25 22	51	KK 01 29 29	13	KK 01 33 46	7	KK 01 58 25	19
KK 01 04 13	51	KK 01 10 42	21	KK 01 16 82	35	KK 01 19 53	65	KK 01 25 22	53	KK 01 29 29	19	KK 01 33 46	7	KK 01 58 25	19
KK 01 05 32	27	KK 01 10 42	43	KK 01 16 82	41	KK 01 19 53	67	KK 01 25 48	45	KK 01 29 29	7	KK 01 33 46	9	KK 01 58 25	29
KK 01 05 32	31	KK 01 10 59	45	KK 01 16 90	37	KK 01 20 15	55	KK 01 25 51	45	KK 01 29 60	31	KK 01 33 61	11	KK 01 58 25	33
KK 01 05 48	41	KK 01 11 62	41	KK 01 16 91	35	KK 01 20 25	67	KK 01 25 70	45	KK 01 29 71	39	KK 01 33 61	13	KK 01 58 30	15
KK 01 05 72	27	KK 01 11 63	41	KK 01 16 91	41	KK 01 20 32	55	KK 01 26 19	61	KK 01 29 95	29	KK 01 33 61	19	KK 01 58 30	27
KK 01 05 72	31	KK 01 12 03	29	KK 01 16 98	41	KK 01 20 32	59	KK 01 26 19	63	KK 01 30 01	15	KK 01 33 61	7	KK 01 58 30	27
KK 01 05 83	29	KK 01 12 59	27	KK 01 17 19	57	KK 01 20 39	55	KK 01 26 37	61	KK 01 30 51	55	KK 01 33 85	11	KK 01 58 32	5
KK 01 05 84	29	KK 01 12 59	31	KK 01 17 24	57	KK 01 20 39	59	KK 01 26 37	63	KK 01 30 52	55	KK 01 33 85	13	KK 01 58 34	13
KK 01 05 89	43	KK 01 12 66	25	KK 01 17 25	57	KK 01 20 39	61	KK 01 26 40	63	KK 01 30 53	55	KK 01 33 85	19	KK 01 58 34	15
KK 01 06 06	35	KK 01 12 66	27	KK 01 17 27	57	KK 01 20 39	63	KK 01 26 55	45	KK 01 30 72	59	KK 01 33 85	7	KK 01 58 34	29
KK 01 06 50	35	KK 01 12 66	31	KK 01 17 45	69	KK 01 20 59	51	KK 01 26 55	49	KK 01 32 28	11	KK 01 35 17	49	KK 01 58 34	9
KK 01 06 55	35	KK 01 12 92	25	KK 01 17 50	27	KK 01 20 60	45	KK 01 26 58	51	KK 01 32 28	13	KK 01 35 18	45	KK 01 58 41	33
KK 01 07 00	35	KK 01 13 68	41	KK 01 17 50	31	KK 01 20 60	51	KK 01 26 61	51	KK 01 32 28	13	KK 01 35 19	49	KK 01 58 44	43
KK 01 07 00	35	KK 01 13 70	41	KK 01 17 83	55	KK 01 20 60	53	KK 01 27 00	45	KK 01 32 28	15	KK 01 35 20	45	KK 01 60 02	65
KK 01 07 00	41	KK 01 13 84	41	KK 01 17 83	59	KK 01 20 62	45	KK 01 27 23	45	KK 01 32 28	17	KK 01 35 22	45	KK 01 60 04	27
KK 01 07 00	51	KK 01 14 08	41	KK 01 18 02	65	KK 01 20 62	49	KK 01 27 79	51	KK 01 32 28	19	KK 01 35 94	63	KK 01 60 04	29
KK 01 07 30	41	KK 01 14 14	41	KK 01 18 02	67	KK 01 20 62	51	KK 01 27 80	51	KK 01 32 28	7	KK 01 35 95	63	KK 01 60 12	29
KK 01 07 31	41	KK 01 14 15	41	KK 01 18 06	55	KK 01 20 68	45	KK 01 27 81	51	KK 01 32 28	9	KK 01 35 97	63	KK 01 60 13	17
KK 01 07 46	41	KK 01 14 50	41	KK 01 18 06	61	KK 01 20 68	51	KK 01 27 96	45	KK 01 32 34	13	KK 01 36 05	57	KK 01 60 15	11

Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page
KK 01 60 15 13		KK 03 17 40 25		KK 03 27 40 15		KK 03 28 03 35		KK 03 29 29 41		KK 03 32 56 17		KK 05 07 06 21		KK 06 18 99 43	
KK 01 60 15 17		KK 03 20 06 57		KK 03 27 40 19		KK 03 28 03 37		KK 03 29 50 37		KK 03 32 56 5		KK 05 30 90 11		KK 06 20 20 23	
KK 01 60 15 19		KK 03 20 16 57		KK 03 27 40 7		KK 03 28 07 23		KK 03 30 04 13		KK 03 32 56 9		KK 05 30 90 13		KK 06 20 25 13	
KK 01 60 15 7		KK 03 20 16 69		KK 03 27 45 37		KK 03 28 08 41		KK 03 30 06 17		KK 03 32 86 13		KK 05 30 90 13		KK 06 20 25 9	
KK 01 60 22 23		KK 03 20 40 55		KK 03 27 45 41		KK 03 28 11 41		KK 03 30 06 33		KK 03 32 86 15		KK 05 30 90 15		KK 06 24 58 35	
KK 01 60 31 25		KK 03 20 40 59		KK 03 27 50 11		KK 03 28 20 35		KK 03 30 07 33		KK 03 32 86 17		KK 05 30 90 17		KK 06 25 00 35	
KK 01 60 31 27		KK 03 23 35 45		KK 03 27 50 13		KK 03 28 20 39		KK 03 30 16 17		KK 03 32 86 5		KK 05 30 90 19		KK 06 25 05 35	
KK 01 60 45 23		KK 03 23 35 51		KK 03 27 50 17		KK 03 28 20 39		KK 03 31 00 13		KK 03 32 86 9		KK 05 30 90 5		KK 06 25 06 35	
KK 01 60 49 23		KK 03 24 03 35		KK 03 27 50 19		KK 03 28 21 39		KK 03 31 00 15		KK 03 32 95 13		KK 05 30 90 7		KK 06 27 26 43	
KK 01 60 52 29		KK 03 24 30 61		KK 03 27 50 35		KK 03 28 24 23		KK 03 31 00 5		KK 03 32 95 17		KK 05 30 90 9		KK 06 30 90 11	
KK 01 62 08 29		KK 03 24 35 45		KK 03 27 50 35		KK 03 28 28 35		KK 03 31 00 9		KK 03 32 95 5		KK 05 33 87 13		KK 06 30 90 13	
KK 01 65 10 57		KK 03 24 35 51		KK 03 27 50 41		KK 03 28 28 41		KK 03 31 07 15		KK 03 32 95 9		KK 05 33 87 5		KK 06 30 90 13	
KK 01 65 31 57		KK 03 24 45 53		KK 03 27 50 43		KK 03 28 30 27		KK 03 31 07 17		KK 03 33 25 29		KK 05 33 87 9		KK 06 30 90 15	
KK 01 65 32 57		KK 03 24 60 45		KK 03 27 50 7		KK 03 28 30 43		KK 03 31 07 5		KK 03 33 32 5		KK 05 61 12 25		KK 06 30 90 17	
KK 01 65 35 69		KK 03 24 75 35		KK 03 27 50 9		KK 03 28 31 43		KK 03 31 07 9		KK 03 34 01 29		KK 05 61 14 25		KK 06 30 90 19	
KK 01 65 36 69		KK 03 26 55 21		KK 03 27 52 37		KK 03 28 40 21		KK 03 31 07 9		KK 03 35 40 27		KK 05 61 15 25		KK 06 30 90 5	
KK 01 65 37 69		KK 03 26 55 37		KK 03 27 55 37		KK 03 28 40 23		KK 03 31 08 15		KK 03 42 25 33		KK 05 61 16 25		KK 06 30 90 7	
KK 01 65 38 69		KK 03 26 65 21		KK 03 27 55 43		KK 03 28 40 23		KK 03 31 11 17		KK 03 42 28 33		KK 05 61 56 25		KK 06 30 90 9	
KK 02 97 22 29		KK 03 27 02 29		KK 03 27 60 41		KK 03 28 40 27		KK 03 31 16 17		KK 03 42 50 33		KK 05 68 73 33		KK 06 30 91 15	
KK 02 97 27 21		KK 03 27 02 31		KK 03 27 62 23		KK 03 28 40 31		KK 03 31 17 17		KK 03 44 46 33		KK 05 70 63 21		KK 06 30 91 17	
KK 02 97 27 21		KK 03 27 04 37		KK 03 27 65 11		KK 03 28 40 41		KK 03 31 18 13		KK 03 50 20 21		KK 05 70 64 21		KK 06 30 91 5	
KK 02 99 20 21		KK 03 27 08 41		KK 03 27 65 13		KK 03 28 45 23		KK 03 31 19 13		KK 03 50 21 21		KK 05 70 65 21		KK 06 30 92 15	
KK 02 99 20 25		KK 03 27 18 37		KK 03 27 65 19		KK 03 28 45 23		KK 03 31 73 15		KK 03 50 31 25		KK 05 70 66 21		KK 06 30 92 17	
KK 02 99 20 27		KK 03 27 25 29		KK 03 27 65 7		KK 03 28 45 41		KK 03 31 74 13		KK 03 50 31 27		KK 05 70 67 21		KK 06 30 92 5	
KK 02 99 20 29		KK 03 27 25 37		KK 03 27 75 11		KK 03 28 50 23		KK 03 31 75 15		KK 03 50 48 23		KK 05 70 68 21		KK 06 33 88 13	
KK 02 99 20 31		KK 03 27 25 5		KK 03 27 75 13		KK 03 28 50 31		KK 03 31 75 15		KK 03 50 60 23		KK 05 70 89 21		KK 06 33 88 5	
KK 02 99 20 35		KK 03 27 25 9		KK 03 27 75 19		KK 03 28 55 21		KK 03 31 75 17		KK 03 50 72 23		KK 06 01 08 21		KK 06 33 88 9	
KK 02 99 20 41		KK 03 27 30 13		KK 03 27 75 29		KK 03 28 55 39		KK 03 31 75 5		KK 03 51 14 29		KK 06 01 09 21		KK 06 36 07 15	
KK 02 99 20 43		KK 03 27 30 15		KK 03 27 75 31		KK 03 28 60 21		KK 03 31 75 9		KK 03 51 65 21		KK 06 01 19 21		KK 06 36 07 7	
KK 02 99 22 41		KK 03 27 30 35		KK 03 27 75 37		KK 03 28 60 23		KK 03 31 81 15		KK 03 51 65 35		KK 06 02 21 67		KK 06 36 07 9	
KK 02 99 27 35		KK 03 27 30 35		KK 03 27 75 7		KK 03 28 60 23		KK 03 31 85 15		KK 03 51 78 29		KK 06 06 24 25		KK 06 38 01 5	
KK 02 99 27 35		KK 03 27 35 13		KK 03 27 85 31		KK 03 28 65 23		KK 03 32 51 13		KK 03 51 97 37		KK 06 06 57 33		KK 06 38 01 5	
KK 02 99 97 39		KK 03 27 35 37		KK 03 27 92 29		KK 03 28 65 35		KK 03 32 51 15		KK 03 52 09 21		KK 06 07 03 21		KK 06 43 17 35	
KK 03 10 30 31		KK 03 27 35 5		KK 03 27 92 39		KK 03 28 70 35		KK 03 32 51 17		KK 03 52 15 23		KK 06 12 80 21		KK 06 43 21 35	
KK 03 10 60 43		KK 03 27 35 9		KK 03 27 95 33		KK 03 28 80 41		KK 03 32 51 5		KK 03 52 16 23		KK 06 12 91 21		KK 06 43 60 35	
KK 03 13 40 25		KK 03 27 40 11		KK 03 27 95 37		KK 03 28 95 43		KK 03 32 51 9		KK 03 52 19 37		KK 06 15 15 23		KK 06 61 02 25	
KK 03 17 30 25		KK 03 27 40 13		KK 03 28 03 23		KK 03 29 00 41		KK 03 32 56 13		KK 03 52 35 35		KK 06 16 37 37		KK 06 61 08 25	

Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page
KK 06 61 40	25	KK 06 70 68	21	KK 07 12 56	37	KK 07 30 30	5	KK 07 30 64	13	KK 07 32 25	9	KK 07 32 78	13	KK 07 34 11	5
KK 06 61 42	25	KK 06 70 70	21	KK 07 12 70	23	KK 07 30 31	17	KK 07 30 64	15	KK 07 32 27	9	KK 07 32 79	13	KK 07 34 12	5
KK 06 61 43	25	KK 06 70 75	21	KK 07 12 71	23	KK 07 30 31	5	KK 07 30 64	17	KK 07 32 28	9	KK 07 32 80	5	KK 07 34 14	5
KK 06 61 45	25	KK 06 70 76	21	KK 07 12 72	23	KK 07 30 40	5	KK 07 30 64	9	KK 07 32 30	17	KK 07 32 81	5	KK 07 34 15	5
KK 06 61 70	27	KK 06 70 77	21	KK 07 12 73	23	KK 07 30 41	5	KK 07 30 65	13	KK 07 32 30	9	KK 07 32 86	5	KK 07 34 17	9
KK 06 61 75	25	KK 06 70 80	21	KK 07 12 74	23	KK 07 30 42	17	KK 07 30 65	15	KK 07 32 31	17	KK 07 32 87	5	KK 07 34 18	9
KK 06 61 75	27	KK 06 70 90	21	KK 07 12 75	23	KK 07 30 42	5	KK 07 30 65	17	KK 07 32 31	9	KK 07 32 90	5	KK 07 34 35	9
KK 06 61 78	25	KK 06 70 92	21	KK 07 12 80	23	KK 07 30 43	17	KK 07 30 65	9	KK 07 32 36	9	KK 07 32 90	9	KK 07 34 36	9
KK 06 61 78	27	KK 07 02 92	15	KK 07 12 81	23	KK 07 30 43	5	KK 07 30 80	13	KK 07 32 37	9	KK 07 32 91	5	KK 07 34 40	9
KK 06 61 78	31	KK 07 02 93	15	KK 07 14 04	39	KK 07 30 44	17	KK 07 30 80	15	KK 07 32 39	9	KK 07 32 91	9	KK 07 34 41	9
KK 06 61 82	25	KK 07 02 94	15	KK 07 15 00	15	KK 07 30 44	5	KK 07 30 80	17	KK 07 32 40	9	KK 07 33 00	15	KK 07 34 64	13
KK 06 61 82	27	KK 07 03 88	9	KK 07 15 08	23	KK 07 30 45	17	KK 07 30 80	9	KK 07 32 41	9	KK 07 33 00	17	KK 07 34 64	15
KK 06 61 85	25	KK 07 03 89	9	KK 07 15 29	23	KK 07 30 45	5	KK 07 30 81	13	KK 07 32 42	9	KK 07 33 00	5	KK 07 34 65	13
KK 06 61 89	25	KK 07 03 90	5	KK 07 16 08	35	KK 07 30 54	13	KK 07 30 81	15	KK 07 32 45	15	KK 07 33 00	9	KK 07 34 65	15
KK 06 61 89	27	KK 07 03 91	5	KK 07 16 64	37	KK 07 30 54	15	KK 07 30 81	17	KK 07 32 46	15	KK 07 33 01	15	KK 07 34 70	13
KK 06 61 90	25	KK 07 03 92	9	KK 07 19 40	37	KK 07 30 54	17	KK 07 30 81	9	KK 07 32 50	5	KK 07 33 01	17	KK 07 34 70	15
KK 06 61 90	27	KK 07 03 93	9	KK 07 19 42	35	KK 07 30 54	9	KK 07 30 88	13	KK 07 32 51	5	KK 07 33 01	5	KK 07 34 71	13
KK 06 68 11	33	KK 07 03 94	5	KK 07 19 43	35	KK 07 30 55	13	KK 07 30 88	15	KK 07 32 56	17	KK 07 33 01	9	KK 07 34 71	15
KK 06 68 11	33	KK 07 03 95	5	KK 07 26 17	37	KK 07 30 55	15	KK 07 30 88	17	KK 07 32 56	5	KK 07 33 03	15	KK 07 36 07	15
KK 06 68 12	33	KK 07 03 96	9	KK 07 30 00	5	KK 07 30 55	17	KK 07 30 88	5	KK 07 32 57	17	KK 07 33 04	15	KK 07 36 07	7
KK 06 68 61	33	KK 07 03 97	9	KK 07 30 01	5	KK 07 30 55	9	KK 07 30 88	9	KK 07 32 57	5	KK 07 33 10	5	KK 07 36 07	9
KK 06 68 68	33	KK 07 03 98	9	KK 07 30 02	17	KK 07 30 56	13	KK 07 30 89	13	KK 07 32 60	5	KK 07 33 10	9	KK 07 36 08	13
KK 06 68 69	33	KK 07 03 99	9	KK 07 30 02	5	KK 07 30 56	15	KK 07 30 89	15	KK 07 32 61	5	KK 07 33 11	5	KK 07 36 08	15
KK 06 68 73	33	KK 07 06 39	33	KK 07 30 03	17	KK 07 30 56	17	KK 07 30 89	17	KK 07 32 63	5	KK 07 33 11	9	KK 07 36 08	17
KK 06 68 80	33	KK 07 06 40	5	KK 07 30 03	5	KK 07 30 56	9	KK 07 30 89	5	KK 07 32 64	5	KK 07 33 28	13	KK 07 36 08	5
KK 06 68 81	33	KK 07 06 40	9	KK 07 30 04	17	KK 07 30 57	13	KK 07 30 89	9	KK 07 32 66	5	KK 07 33 29	13	KK 07 36 08	9
KK 06 70 16	21	KK 07 06 41	5	KK 07 30 04	5	KK 07 30 57	15	KK 07 30 91	13	KK 07 32 66	9	KK 07 33 32	15	KK 07 36 09	13
KK 06 70 25	21	KK 07 06 41	9	KK 07 30 05	17	KK 07 30 57	17	KK 07 30 91	15	KK 07 32 67	5	KK 07 33 33	15	KK 07 36 09	15
KK 06 70 26	21	KK 07 06 42	5	KK 07 30 05	5	KK 07 30 57	9	KK 07 30 91	17	KK 07 32 67	9	KK 07 33 38	13	KK 07 36 09	17
KK 06 70 31	21	KK 07 06 42	9	KK 07 30 06	17	KK 07 30 62	13	KK 07 30 91	5	KK 07 32 72	13	KK 07 33 39	13	KK 07 36 09	5
KK 06 70 39	21	KK 07 06 53	33	KK 07 30 06	5	KK 07 30 62	15	KK 07 30 91	9	KK 07 32 72	15	KK 07 33 50	13	KK 07 36 09	9
KK 06 70 39	43	KK 07 12 07	23	KK 07 30 07	17	KK 07 30 62	17	KK 07 30 92	13	KK 07 32 73	13	KK 07 33 51	13	KK 07 36 14	13
KK 06 70 40	21	KK 07 12 08	23	KK 07 30 07	5	KK 07 30 62	9	KK 07 30 92	15	KK 07 32 73	15	KK 07 33 52	13	KK 07 36 14	15
KK 06 70 51	21	KK 07 12 09	23	KK 07 30 08	5	KK 07 30 63	13	KK 07 30 92	17	KK 07 32 75	13	KK 07 33 53	13	KK 07 36 14	17
KK 06 70 57	21	KK 07 12 11	23	KK 07 30 09	5	KK 07 30 63	15	KK 07 30 92	5	KK 07 32 75	15	KK 07 33 54	13	KK 07 36 14	7
KK 06 70 59	21	KK 07 12 12	23	KK 07 30 16	15	KK 07 30 63	17	KK 07 30 92	9	KK 07 32 76	13	KK 07 34 06	5	KK 07 36 14	9
KK 06 70 60	21	KK 07 12 28	23	KK 07 30 30	17	KK 07 30 63	9	KK 07 32 24	9	KK 07 32 76	15	KK 07 34 07	5	KK 07 36 15	13

Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page
KK 07 36 15	15	KK 07 38 17	15	KK 07 59 11	37	KK 07 64 99	29	KK 07 89 23	41	KK 08 10 50	35	KK 08 21 79	35	KK 08 34 16	17
KK 07 36 15	17	KK 07 38 20	15	KK 07 60 08	29	KK 07 64 99	31	KK 07 89 32	41	KK 08 10 52	35	KK 08 21 80	37	KK 08 34 17	17
KK 07 36 15	5	KK 07 38 21	15	KK 07 60 22	29	KK 07 65 15	31	KK 07 90 75	41	KK 08 10 54	35	KK 08 21 91	37	KK 08 34 18	17
KK 07 36 15	9	KK 07 38 22	15	KK 07 60 23	29	KK 07 65 27	31	KK 07 91 91	41	KK 08 10 68	41	KK 08 24 05	43	KK 08 38 02	17
KK 07 36 16	13	KK 07 38 26	13	KK 07 60 53	29	KK 07 65 44	29	KK 07 94 16	41	KK 08 10 70	41	KK 08 24 08	43	KK 08 38 03	17
KK 07 36 16	17	KK 07 38 26	9	KK 07 60 58	29	KK 07 65 45	29	KK 07 96 36	43	KK 08 10 75	41	KK 08 24 09	43	KK 08 38 04	17
KK 07 36 16	5	KK 07 38 26	9	KK 07 60 65	29	KK 07 65 48	29	KK 07 96 42	43	KK 08 10 80	41	KK 08 24 50	37	KK 08 38 05	17
KK 07 36 16	9	KK 07 38 29	13	KK 07 60 66	29	KK 07 65 75	31	KK 07 96 71	43	KK 08 10 81	41	KK 08 24 51	37	KK 08 38 06	17
KK 07 36 34	11	KK 07 38 29	9	KK 07 60 68	29	KK 07 68 12	33	KK 07 97 65	35	KK 08 10 82	41	KK 08 24 52	37	KK 08 38 07	17
KK 07 36 34	13	KK 07 38 30	5	KK 07 60 70	29	KK 07 68 13	33	KK 07 98 24	35	KK 08 10 83	41	KK 08 24 53	37	KK 08 38 08	17
KK 07 36 34	19	KK 07 38 31	5	KK 07 60 72	29	KK 07 68 17	33	KK 08 00 80	35	KK 08 10 84	41	KK 08 24 54	35	KK 08 38 09	5
KK 07 36 34	7	KK 07 38 31	9	KK 07 60 76	31	KK 07 68 18	33	KK 08 10 01	37	KK 08 10 85	35	KK 08 24 55	35	KK 08 38 10	5
KK 07 36 35	11	KK 07 38 34	15	KK 07 61 48	29	KK 07 68 25	33	KK 08 10 02	37	KK 08 10 90	37	KK 08 32 10	17	KK 08 50 76	33
KK 07 36 35	13	KK 07 38 35	15	KK 07 62 85	29	KK 07 68 26	33	KK 08 10 05	41	KK 08 10 91	37	KK 08 32 11	17	KK 08 60 80	27
KK 07 36 35	19	KK 07 38 36	15	KK 07 62 94	29	KK 07 68 33	33	KK 08 10 06	41	KK 08 10 92	37	KK 08 32 12	17	KK 08 60 81	27
KK 07 36 35	7	KK 07 38 42	9	KK 07 62 96	29	KK 07 68 34	33	KK 08 10 07	41	KK 08 10 93	37	KK 08 32 13	17	KK 08 60 82	27
KK 07 38 00	13	KK 07 49 02	39	KK 07 62 97	29	KK 07 68 58	33	KK 08 10 08	35	KK 08 10 94	37	KK 08 32 14	17	KK 08 60 83	27
KK 07 38 00	5	KK 07 49 10	23	KK 07 62 98	29	KK 07 68 58	33	KK 08 10 09	37	KK 08 10 95	41	KK 08 32 15	17	KK 08 60 84	27
KK 07 38 00	9	KK 07 49 11	23	KK 07 64 00	29	KK 07 68 59	33	KK 08 10 10	37	KK 08 10 96	41	KK 08 32 16	17	KK 08 60 85	27
KK 07 38 01	13	KK 07 49 12	39	KK 07 64 00	31	KK 07 68 72	33	KK 08 10 11	37	KK 08 10 98	35	KK 08 32 17	17	KK 08 60 86	31
KK 07 38 01	5	KK 07 49 13	37	KK 07 64 06	27	KK 07 69 43	33	KK 08 10 12	37	KK 08 11 20	41	KK 08 32 18	17	KK 08 60 87	31
KK 07 38 01	9	KK 07 49 19	37	KK 07 64 06	31	KK 07 69 44	33	KK 08 10 13	37	KK 08 11 24	41	KK 08 32 20	17	KK 08 60 89	27
KK 07 38 03	15	KK 07 49 30	31	KK 07 64 07	27	KK 07 70 23	23	KK 08 10 14	37	KK 08 11 25	41	KK 08 32 21	17	KK 08 60 89	31
KK 07 38 03	5	KK 07 49 31	31	KK 07 64 07	29	KK 07 70 24	23	KK 08 10 15	37	KK 08 11 26	41	KK 08 32 22	17	KK 08 60 90	27
KK 07 38 03	5	KK 07 49 36	31	KK 07 64 07	31	KK 07 71 91	35	KK 08 10 16	37	KK 08 11 33	37	KK 08 32 23	17	KK 08 60 90	31
KK 07 38 04	9	KK 07 49 37	31	KK 07 64 09	27	KK 07 72 80	35	KK 08 10 17	37	KK 08 11 40	41	KK 08 32 24	17	KK 08 61 01	27
KK 07 38 04	9	KK 07 49 38	31	KK 07 64 09	29	KK 07 72 81	35	KK 08 10 18	37	KK 08 11 41	41	KK 08 32 28	5	KK 08 61 01	31
KK 07 38 05	15	KK 07 49 39	31	KK 07 64 09	29	KK 07 85 30	35	KK 08 10 19	37	KK 08 11 42	41	KK 08 32 29	5	KK 08 61 10	27
KK 07 38 05	9	KK 07 58 72	37	KK 07 64 09	31	KK 07 85 31	35	KK 08 10 26	37	KK 08 11 50	35	KK 08 32 35	17	KK 08 61 11	27
KK 07 38 07	5	KK 07 58 81	37	KK 07 64 10	27	KK 07 85 46	35	KK 08 10 26	39	KK 08 21 03	41	KK 08 32 35	7	KK 08 61 12	27
KK 07 38 08	5	KK 07 58 81	37	KK 07 64 10	29	KK 07 85 50	35	KK 08 10 27	37	KK 08 21 04	41	KK 08 33 00	17	KK 08 61 13	27
KK 07 38 10	15	KK 07 58 87	37	KK 07 64 10	31	KK 07 85 64	35	KK 08 10 28	37	KK 08 21 50	41	KK 08 33 01	17	KK 08 61 14	27
KK 07 38 11	15	KK 07 59 03	37	KK 07 64 30	29	KK 07 85 64	39	KK 08 10 29	37	KK 08 21 51	41	KK 08 34 06	17	KK 08 61 15	27
KK 07 38 12	15	KK 07 59 04	37	KK 07 64 34	29	KK 07 85 83	45	KK 08 10 30	37	KK 08 21 54	35	KK 08 34 07	17	KK 08 68 01	33
KK 07 38 13	15	KK 07 59 05	37	KK 07 64 35	29	KK 07 85 84	45	KK 08 10 40	37	KK 08 21 55	35	KK 08 34 08	17	KK 08 80 50	37
KK 07 38 15	15	KK 07 59 06	37	KK 07 64 37	29	KK 07 88 44	41	KK 08 10 43	37	KK 08 21 56	35	KK 08 34 09	17	KK 08 80 51	37
KK 07 38 16	15	KK 07 59 11	37	KK 07 64 99	27	KK 07 88 98	35	KK 08 10 44	35	KK 08 21 77	35	KK 08 34 15	17	KK 08 80 52	35

Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page
KK 08 80 54	37	KK 12 41 57	53	KK 35 22 61	67	KK 35 33 51	67	KK 35 35 60	61	KK 35 37 83	57	KK 35 38 34	59	KK 70 98 31	71
KK 08 80 55	37	KK 30 08 04	51	KK 35 24 96	53	KK 35 33 53	67	KK 35 35 61	61	KK 35 37 85	57	KK 35 38 52	59	KK 70 98 41	71
KK 08 80 59	39	KK 30 08 04	65	KK 35 24 96	67	KK 35 33 98	55	KK 35 35 61	63	KK 35 37 93	69	KK 35 38 53	59	KK 70 98 42	71
KK 08 80 60	39	KK 30 80 24	65	KK 35 27 79	45	KK 35 33 98	59	KK 35 36 16	55	KK 35 37 95	57	KK 35 39 05	53	KK 70 98 43	71
KK 08 80 61	39	KK 30 80 25	65	KK 35 27 79	55	KK 35 34 58	55	KK 35 36 17	55	KK 35 37 96	69	KK 35 39 20	43	KK 70 98 44	71
KK 08 80 62	43	KK 30 80 28	65	KK 35 27 86	55	KK 35 34 78	67	KK 35 36 18	55	KK 35 37 97	69	KK 35 45 30	63	KK 70 98 47	71
KK 08 80 63	43	KK 30 80 45	65	KK 35 27 86	59	KK 35 35 37	51	KK 35 36 35	51	KK 35 37 98	57	KK 36 11 20	35	KK 70 98 95	71
KK 08 82 07	35	KK 35 11 48	35	KK 35 27 87	55	KK 35 35 57	61	KK 35 36 35	63	KK 35 37 99	57	KK 70 92 34	71	KK 70 99 41	71
KK 08 82 08	35	KK 35 11 70	35	KK 35 27 96	55	KK 35 35 57	63	KK 35 37 10	53	KK 35 38 13	45	KK 70 93 04	71	KK 70 99 45	71
KK 08 82 59	43	KK 35 11 72	35	KK 35 27 96	59	KK 35 35 58	61	KK 35 37 10	69	KK 35 38 13	57	KK 70 94 79	71	KK 70 99 80	71
KK 08 82 60	43	KK 35 11 73	35	KK 35 27 97	55	KK 35 35 58	63	KK 35 37 28	69	KK 35 38 20	69	KK 70 97 37	71	KK 70 99 81	71
KK 08 82 61	43	KK 35 22 46	45	KK 35 28 21	69	KK 35 35 59	61	KK 35 37 39	57	KK 35 38 22	69	KK 70 97 81	71	UH 82 52 35	63
KK 09 63 20	43	KK 35 22 46	51	KK 35 33 50	67	KK 35 35 59	63	KK 35 37 73	57	KK 35 38 34	45	KK 70 98 23	71		



Замовлення запчастин
(050)-407-68-47
(050)-407-68-45