

Spare Parts List

Model PM/RM


Semi mounted plough

No 733015



Notes

GB Model	GB Interbody clearance	GB Headstock
D Modell	D Körperlängsabstand	D Drehwerk
F Modèle	F Dégagement sous age	F Type de tête
E Modelo	E Separación entre cuerpos	E Tipo de cabezal

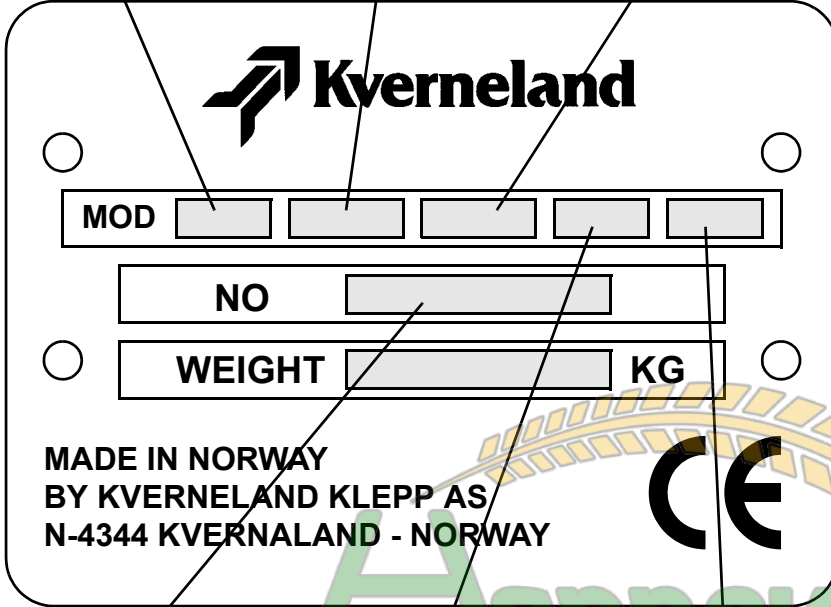

GB Serial number	Type of beam:	GB Type of body
D Seriennummer	Heavy Duty	D Körperform
F Numéro de série	Vibromat	F Type de corps
E Numero de serie	On-land	E Tipo de cuerpo

Замовлення запчастин

(GB) Complete model code and serial number must be stated to avoid mistakes when ordering spare parts and misunderstandings regarding service consultations. The identification plate is located on the headstock.

(F) Le code complet et le numéro de série doivent être indiqués pour éviter des erreurs lors de la commande de pièces de rechange et des malentendus concernant des demandes de Service-Après-Vente. La plaque d'identité est située sur la tête.

(D) Um bei Ersatzteilbestellungen und Serviceleistungen Fehler und Mißverständnisse zu vermeiden ist es erforderlich, daß die genaue Bezeichnung und die Seriennummer angegeben werden. Die Plakette befindet sich am Drehwerk.

(E) Debe figura el código completo del modelo y el número de serie para evitar errores al pedir las piezas de recambio y al hacer consultas técnicas. La placa de identificación esta situada en el cabezal.

Plate	Page
244 Bodies no 6, 7, 8, 9 and 28	4
367 Bodies no 12, 15 and 19	8
494 Body no 14 (Plastic mouldboard)	12
414 Body no 20 (Finger Body) (Before 01.03.99)	14
1089 Bodies no. 29 and no. 30	16
458 Auto Reset Beam	20
1009 Beam (Shear bolt)	22
187 Disc coultter for Auto Reset beam (Before 01.01.99)	24
1073 Disc coultter 18" and 20", E-saddle (From 01.01.99)	26
574 Disc coultter for auto reset beam	28
1007 Disc coultter for shear bolt beam	30
341 Manure skimmer / Maize skimmer	32
1041 Front for PM/RM	34
1039 Front frame for PM/RM	36
1040 Rear frame for PM/RM	38
1042 Truck for PM/RM (Before 15.01.02)	40
1217 Truck for PM/RM (From 15.01.02)	42
1016 Fixing device for PL/RL and PM/RM	44
846 Turn-over hydraulics layout for PL/RL and PM/RM	46
1266 Relief valve kit	48
1043 Hydraulic wheel lifting for PM/RM	50
1028 Hydraulic front furrow width adjustment (PL/RL from 01.11.99, PL/RL and PM/RM before 01.08.00)	52
1199 Hydraulic layout for front furrow adjustment (PL/RL and PM/RM from 01.08.00)	54
1020 Hydraulic front furrow width adjustment for On land	56
1170 Hydraulic layout for S-arm, PM/RM and PL/RL	58
1025 Hydraulic cylinder D75 x 400 and D100 x 400 mm w/stop (D100 x 400 before 15.05.99)	60
1084 Hydraulic cylinder D100 x 400 mm w/stop (From 15.05.99) (Before 01.10.00)	62
1145 Hydraulic cylinder D100 x 400 mm w/stop (From 01.10.00)	64
890 Hydraulic cylinder D75 x 200 mm (353704 - 353707)	66
1104 Support cylinder D80 x 240 mm	68
1026 Hydraulic cylinder D100 x 215 mm w/stop (Before 01.06.00)	70
1129 Hydraulic cylinder D100 x 200 mm w/stop and bellow (From 01.06.00, w/garmax from 01.08.00)	72
1210 Hydraulic cylinder D115 x 190 mm w/stop and bellow	74
445 Hydraulic cylinder D75 x 130 mm w/90° turned connectors (Before 01.09.99)	76
1092 Hydraulic cylinder D75 x 130 mm w/90° turned connectors (From 01.09.99)	78
1195 Hydraulic cylinder D75 x 200 mm (353904 - 353906) (From 01.04.01)	80
1063 Turn-over cylinder D90 x 150 mm for mod. 160(From 01.12.98)	82
1027 Telescopic cylinder D95 x 445 mm (Before 01.08.00)	84
1169 Telescopic cylinder D95 x 457 mm (From 01.08.00)	86
1062 Hydraulic cylinder D80 x 200 mm (From 01.03.99)	88
582 Fix for wheel (From 01.09.95, serial no. PX223 and RX261 and PM/RM from 01.04.00)	90
527 Wheel 400 x 15.5", 400 x 22.5", 500 x 22.5", 500 x 26.6", 14.9 x 24" and 12.5 x 18" (From 01.03.97)	92
299 Depth wheel 200 x 14.5 (Before 01.06.99)	94
1088 Depth/transport wheel 99 (From 01.06.99)	96
1228 Bracket for depth/ transport wheel 99 (From 01.06.99)	100
864 Transfers for PM/RM	102
Index	104




1	KK 07 30 00	Share 12" R (30 cm)	KK 07 38 03	Stay R + L for body no. 6, 7 and 8 A - saddle, L = 560 (And no. 9 before 01.12.95)	KK 07 06 41	Trashboard, L cpl.		
	KK 07 30 01	Share 12" L (30 cm)			KK 07 06 42	Trashboard, R + L cpl.		
	KK 07 30 02	Share 14" R (35 cm)	KK 07 38 31	Stay R + L for body no. 9 E - saddle, L = 725 (From 01.12.95)	17	KK 03 33 32	Cone screw M14 x 34 mm w/nut	
	KK 07 30 03	Share 14" L (35 cm)			18	KK 03 27 25	Hex screw M16 x 27 mm w/nut	
	KK 07 30 04	Share 16" R (40 cm)	KK 07 38 30	Stay R + L for body no. 9 A - saddle, L = 710 (From 01.12.95)	19	KK 03 31 07	Oval screw M12 x 35 mm w/nut	
	KK 07 30 05	Share 16" L (40 cm)			20	KK 01 32 34	Cone screw M12 x 38 mm w/nut	
	KK 07 30 06	Share 18" R (45 cm)	KK 06 38 01	Extra stay R + L, no. 9 E - saddle L = 550 (From 01.12.95)	21	KK 07 30 91	Share knife, R	
	KK 07 30 07	Share 18" L (45 cm)				KK 07 30 92	Share knife, L	
	KK 07 30 08	Share 20" R (50 cm)	KK 07 03 94	Extra stay R for body no. 9 E - saddle, cpl. w. bracket (pos. 12) (From 01.12.95)		KK 06 30 91	Share knife, R (for Sweden)	
	KK 07 30 09	Share 20" L (50 cm)	KK 07 03 95	Extra stay L for body no. 9 E - saddle, cpl. w. bracket (pos. 12) (From 01.12.95)		KK 06 30 92	Share knife, L (for Sweden)	
2	KK 05 30 90	Reversible point, R			23	KK 07 36 09	Landside, long R + L	
	KK 06 30 90	Reversible point, L	KK 07 38 03	Extra stay R + L, no. 9 A - saddle L = 560 (From 01.12.95)	24	KK 07 32 66	Bracket for stay, body no. 6 and 9, R	
3	KK 07 34 06	Saddle, R (for E-saddle)				KK 07 32 67	Bracket for stay, body no. 6 and 9, L	
	KK 07 34 07	Saddle, L (for E-saddle)	KK 07 03 90	Extra stay R for body no. 9 A - saddle, cpl. w. bracket (pos. 12) (From 01.12.95)	25	KK 07 34 14	Connecting plate, 16" - 20", R	
	KK 07 34 11	Saddle, R (for A-saddle)				KK 07 34 15	Connecting plate, 16" - 20", L	
	KK 07 34 12	Saddle, L (for A-saddle)	KK 07 03 91	Extra stay L for body no. 9 A - saddle, cpl. w. bracket (pos. 12) (From 01.12.95)	26	KK 07 30 40	Flush fit share 12", R	
4	KK 01 33 32	Cone screw M14 x 34 mm w/nut				KK 07 30 41	Flush fit share 12", L	
5	KK 03 31 00	Oval screw M12 x 30 mm w/nut	KK 08 38 09	Stay R + L for body no. 28 A - saddle (From 01.03.03)		KK 07 30 42	Flush fit share 14", R	
6	KK 07 32 60	Mouldboard 12" - 16" no. 6, R	KK 08 38 10	Stay R + L for body no. 28 E - saddle (From 01.03.03)		KK 07 30 43	Flush fit share 14", L	
	KK 07 32 61	Mouldboard 12" - 16" no. 6, L				KK 07 30 44	Flush fit share 16", R	
	KK 07 32 63	Mouldboard 12" - 14" no. 7, R	10	KK 07 36 08	Landside, R and L, short		KK 07 30 45	Flush fit share 16", L
	KK 07 32 64	Mouldboard 12" - 14" no. 7, L	11	KK 01 58 32	Nut M20 mm	27	KK 07 30 30	Flush point, R
	KK 07 32 80	Mouldboard 12" no. 8, R	12	KK 07 38 00	Bracket for stay, R for body no. 6, 7, 8 (And no. 9 before 01.12.95)		KK 07 30 31	Flush point, L
	KK 07 32 81	Mouldboard 12" no. 8, L				28	KK 01 29 27	Washer 17 x 30 x 3 mm (for use with two stays)
	KK 07 32 86	Mouldboard 14" - 18" no. 8, R	KK 07 38 01	Bracket for stay, L for body no. 6, 7, 8 (And no. 9 before 01.12.95)	30	KK 07 36 15	Furrow widener, R	
	KK 07 32 87	Mouldboard 14" - 18" no. 8, L				KK 07 36 16	Furrow widener, L	
	KK 07 32 90	Mouldboard 14" - 20" no. 9, R	KK 07 38 07	Bracket for stay, R for body no. 9 (From 01.12.95)	31	KK 07 30 88	Landside knife w/screw, R	
	KK 07 32 91	Mouldboard 14" - 20" no. 9, L				KK 07 30 89	Landside knife w/screw, L	
	KK 08 32 28	Mouldboard no. 28, R (From 01.03.03)	KK 07 38 08	Bracket for stay, L for body no. 9 (From 01.12.95)	32	KK 03 32 51	Screw M16 x 50 mm w/nut (for E-saddle) (Before 01.02.00)	
	KK 08 32 29	Mouldboard no. 28, L (From 01.03.03)				KK 03 32 56	Screw M16 x 55 mm w/ nut (for E-saddle) (From 01.02.00)	
7	KK 07 32 50	Shinpiece for no. 8, R	13	KK 01 29 19	Washer 12.5 x 23 x 3.2 mm		KK 03 32 86	Screw M16 x 85 mm w/nut (for A-saddle) (Before 01.02.00)
	KK 07 32 51	Shinpiece for no. 8, L	14	KK 05 33 87	Mouldboard extension, R		KK 03 32 95	Screw M16 x 95 mm w/nut (for A-saddle) (From 01.02.00)
	KK 07 32 56	Shinpiece for no. 6 and 9, R		KK 06 33 88	Mouldboard extension, L			
	KK 07 32 57	Shinpiece for no. 6 and 9, L	15	KK 07 33 10	Bracket for trashboard, R			
				KK 07 33 11	Bracket for trashboard, L			
8	KK 03 27 35	Hex screw M16 x 35 mm w/nut	16	KK 07 33 00	Trashboard, R			
9	KK 06 38 01	Stay R + L for body no. 6, 7 and 8 E - saddle, L = 550 (And no. 9 before 01.12.95)		KK 07 33 01	Trashboard L	33	KK 03 31 75	Screw M14 x 50 mm w/nut
				KK 07 06 40	Trashboard, R cpl.	34	KK 01 29 22	Washer 17 x 40 x 4.58 mm




35	KK 06 36 07	Plate
	KK 07 36 07	Plate cpl.
36	KK 01 33 46	Screw M14 x 45 mm w/nut
37	KK 07 36 14	Wearing plate
38	KK 01 33 33	Cone screw M14 x 34 mm
39	KK 08 32 35	Mouldboard knife R and L (From 01.12.01)
Pos. 100 - 107 Eco-share from 01.04.00		
100	KK 05 30 90	Reversible point, R
	KK 06 30 90	Reversible point, L
101	KK 01 32 28	Cone screw M12 x 34 mm w/nut
102	KK 07 36 34	Eco-share, R
	KK 07 36 35	Eco-share, L
103	KK 01 01 55	Bushing (for ploughs w/share bolt beam)
	KK 01 01 56	Bushing (for ploughs w/A-beam)
104	KK 03 27 40	Hex screw M16 x 40 mm w/nut (for ploughs w/E-saddle) (Before 01.03.00)
	KK 03 27 50	Hex screw M16 x 50 mm w/nut (for ploughs w/E-saddle) (From 01.03.00)
	KK 03 27 65	Hex screw M16 x 65 mm w/nut (for ploughs w/share bolt beam)
	KK 03 27 75	Hex screw M16 x 75 mm w/nut (for ploughs w/A-beam)
105	KK 01 33 46	Cone screw M14 x 45 mm w/flange nut (for ploughs w/E-saddle) (Before 01.03.00)
	KK 01 33 61	Cone screw M14 x 60 mm w/flange nut (for ploughs w/E-saddle) (From 01.03.00)
	KK 01 33 85	Cone screw M14 x 85 mm w/flange nut (for ploughs w/share bolt beam and A-beam)
106	KK 01 60 15	Flange nut M14
107	KK 01 29 29	Washer (for ploughs w/E-saddle) (From 01.03.00)



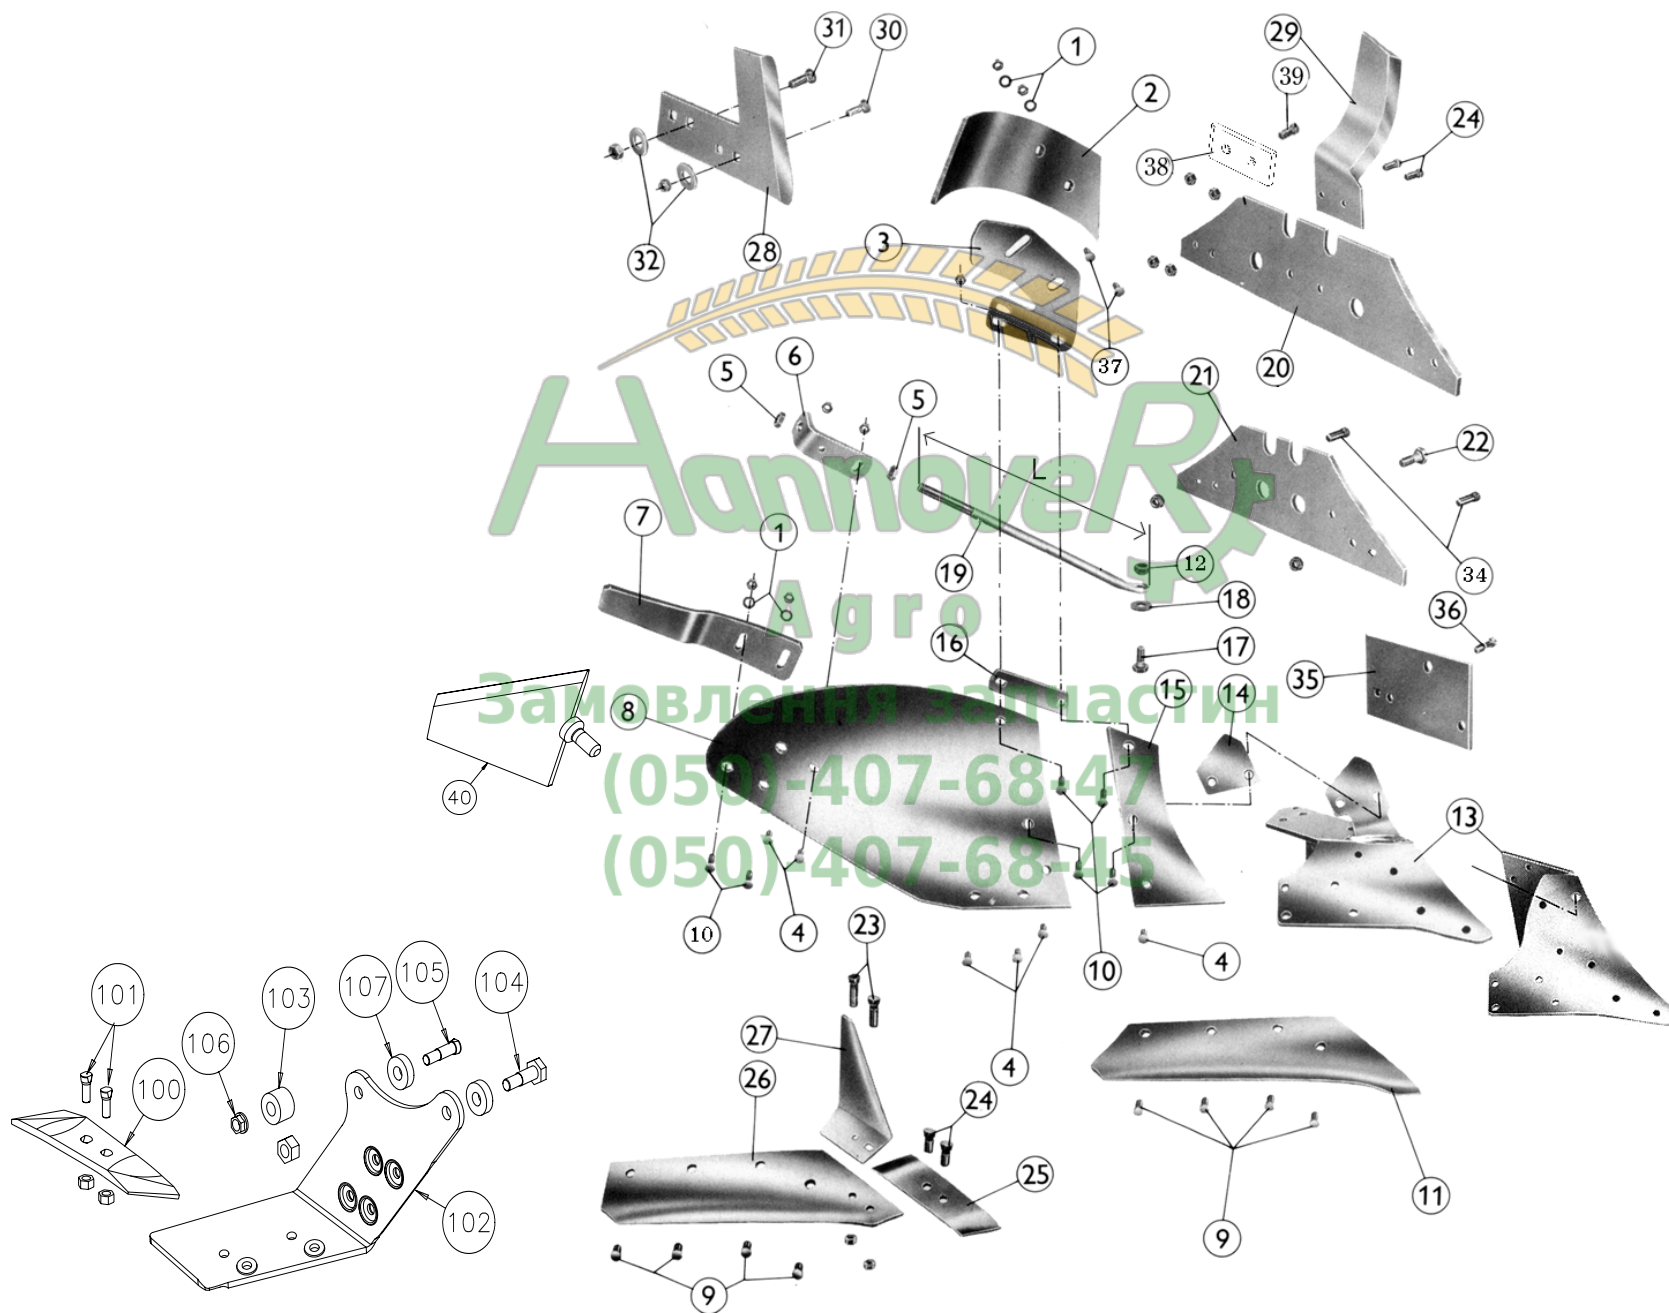

1	KK 01 29 19	Washer		KK 07 32 31	Shinpiece no. 19, L		KK 07 03 93	Extra stay L for body no. 19 A - saddle cpl.
2	KK 07 33 00	Trashboard, R	16	KK 07 32 39	Connecting piece no. 12 and 15, R			w. bracket (pos. 6) (From 01.12.95)
	KK 07 33 01	Trashboard, L		KK 07 32 40	Connecting piece no. 12 and 15, L	20	KK 07 36 09	Landside, long, R + L
	KK 07 06 40	Trashboard, R cpl.		KK 07 32 66	Connecting piece no. 19, R	21	KK 07 36 08	Landside, short, R + L
	KK 07 06 41	Trashboard, L cpl.		KK 07 32 67	Connecting piece no. 19, L	22	KK 03 27 25	Hex screw M16 x 27 mm
	KK 07 06 42	Trashboard, R + L cpl.	17	KK 03 27 50	Hex screw M16 x 50 mm w/nut (for use with two stays)	23	KK 01 32 34	Cone screw M12 x 38 mm w/nut
3	KK 07 33 10	Bracket, R		KK 03 27 35	Hex screw M16 x 35 mm w/nut (for use with one stay only)	24	KK 01 32 28	Cone screw M12 x 34 mm w/nut
	KK 07 33 11	Bracket, L				25	KK 05 30 90	Reversible point, R
4	KK 03 31 00	Oval screw M12 x 30 mm w/nut					KK 06 30 90	Reversible point, L
5	KK 01 58 34	Nut M20 mm	18	KK 01 29 27	Washer 17 x 30 x 3 mm (for use with two stays)	26	KK 07 30 54	Share 14", R
6	KK 07 38 00	Bracket, R					KK 07 30 55	Share 14", L
	KK 07 38 01	Bracket, L	19	KK 07 38 05	Stay R + L for body no. 12 and 15 E - saddle, L = 540 (And no. 19 before 12.01.95)		KK 07 30 56	Share 16", R
7	KK 05 33 87	Mouldboard extention, R		KK 07 38 31	Stay R + L for body no. 19 E - saddle, L = 730 (From 12.01.95)		KK 07 30 57	Share 16", L
	KK 06 33 88	Mouldboard extention, L		KK 07 38 04	Stay R + L for body no. 12 and 15 A - saddle, L = 550 (And no. 19 before 12.01.95)		KK 07 30 80	Share 18", R
8	KK 07 32 36	Mouldboard no. 12, R		KK 07 38 26	Stay R + L for body no. 19 A - saddle, L = 770 (From 12.01.95)	27	KK 07 30 81	Share 18", L
	KK 07 32 37	Mouldboard no. 12, L		KK 07 38 26	Extra stay R + L, no. 15 E - saddle L = 770 (From 01.12.96)		KK 07 30 91	Share knife, R
	KK 07 32 24	Mouldboard no. 15, R		KK 07 03 88	Extra stay R for body no. 15 E - saddle cpl. w. bracket (pos. 6) (From 01.12.96)	28	KK 07 30 92	Share knife, L
	KK 07 32 25	Mouldboard no. 15, L		KK 07 03 89	Extra stay L for body no. 15 E - saddle cpl. w. bracket (pos. 6) (From 01.12.96)	29	KK 07 30 88	Landside knife, R w/nuts
	KK 07 32 90	Mouldboard no. 19, R		KK 07 38 29	Extra stay R + L, no. 15 A - saddle L = 785 (From 01.12.96)		KK 07 30 89	Landside knife, L w/nuts
	KK 07 32 91	Mouldboard no. 19, L		KK 07 03 98	Extra stay R for body no. 15 A - saddle cpl. w. bracket (pos. 6) (From 01.12.96)	30	KK 07 36 15	Furrow widener, R
9	KK 01 33 32	Cone screw M14 x 34 mm w/nut		KK 07 03 99	Extra stay L for body no. 15 A - saddle cpl. w. bracket (pos. 6) (From 01.12.96)	31	KK 07 36 16	Furrow widener, L
10	KK 03 31 07	Oval screw M12 x 35 mm w/nut		KK 07 38 42	Extra stay R + L, no. 19 E - saddle L = 570 (From 01.12.95)		KK 03 31 75	Screw M14 x 50 mm w/nut
11	KK 07 30 62	Share 14", R		KK 07 03 96	Extra stay R for body no. 19 E - saddle cpl. w. bracket (pos. 6) (From 01.12.95)		KK 03 32 51	Screw M16 x 50 mm w/nut (for E-saddle) (Before 01.02.00)
	KK 07 30 63	Share 14", L		KK 07 03 97	Extra stay L for body no. 19 E - saddle cpl. w. bracket (pos. 6) (From 01.12.95)		KK 03 32 56	Screw M16 x 56 mm w/nut (for E-saddle) (From 01.02.00)
	KK 07 30 64	Share 16", R		KK 07 38 04	Extra stay R + L, no. 19 A - saddle L = 550 (From 01.12.95)		KK 03 32 86	Screw M16 x 85 mm w/nut (for A-saddle) (Before 01.02.00)
	KK 07 30 65	Share 16", L		KK 07 03 92	Extra stay R for body no. 19 A - saddle cpl. w. bracket (pos. 6) (From 01.12.95)		KK 03 32 95	Screw M16 x 95 mm w/nut (for A-saddle) (From 01.02.00)
12	KK 06 20 25	Nut M16 mm				32	KK 01 29 22	Washer 17 x 40 x 4.58 mm
13	KK 07 34 35	Saddle, R (for E-saddle)				34	KK 01 33 33	Cone screw M14 x 34 mm w/nut
	KK 07 34 36	Saddle, L (for E-saddle)				35	KK 06 36 07	Plate for On-Land ploughs
	KK 07 34 40	Saddle, R (for A-saddle)					KK 07 36 07	Plate for On-Land ploughs cpl.
	KK 07 34 41	Saddle, L (for A-saddle)				36	KK 01 33 46	Screw M14 x 45 mm w/nut
14	KK 07 34 17	Connecting plate no. 12 and 15, R				37	KK 03 31 07	Oval screw M12 x 35 mm
	KK 07 34 18	Connecting plate no. 12 and 15, L				38	KK 07 36 14	Wearing plate
15	KK 07 32 41	Shinpiece no. 12, R				39	KK 01 33 32	Cone screw M14 x 34 mm
	KK 07 32 42	Shinpiece no. 12, L						
	KK 07 32 27	Shinpiece no. 15, R						
	KK 07 32 28	Shinpiece no. 15, L						
	KK 07 32 30	Shinpiece no. 19, R						

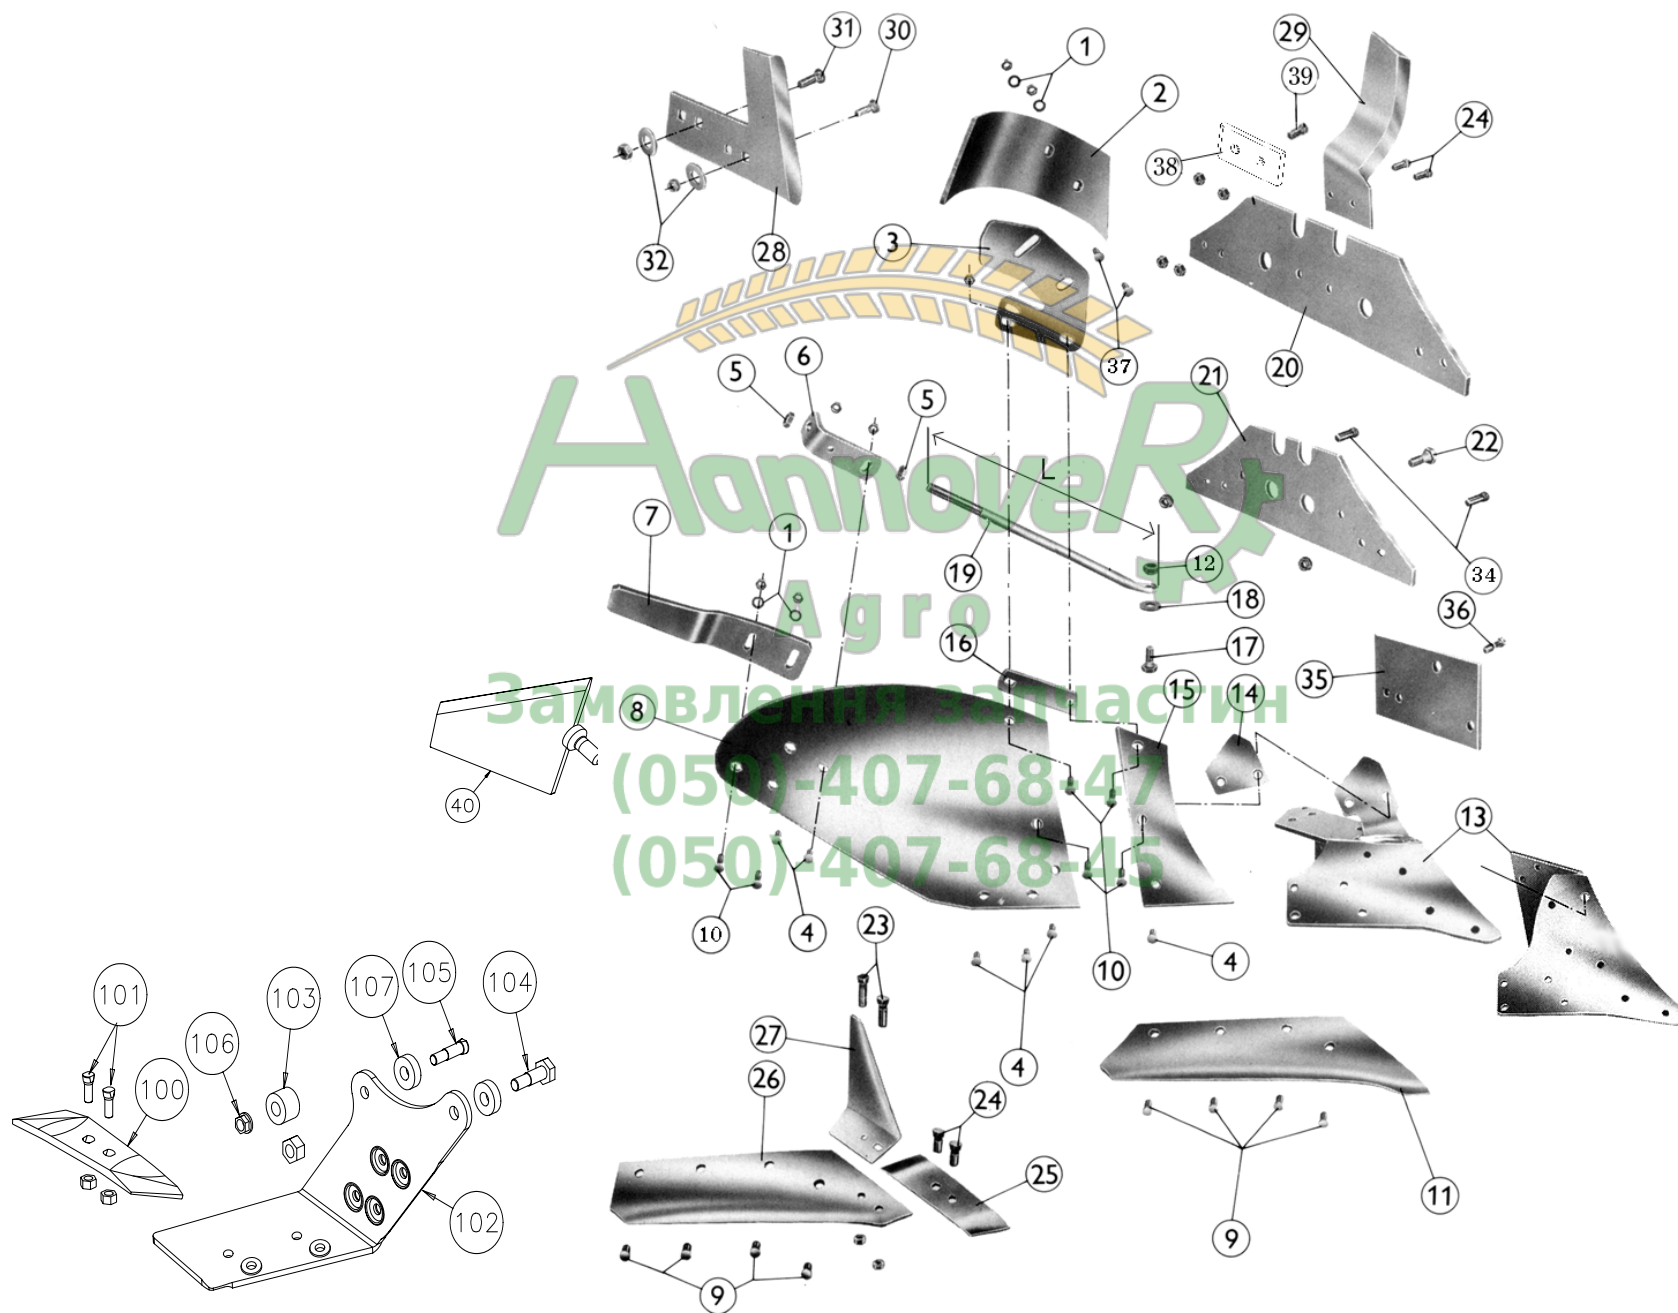

40	KK 08 32 35	Mouldboard knife R and L (From 01.12.01)
Pos. 100 - 107 Eco-share from 01.04.00		
100	KK 05 30 90	Reversible point, R
	KK 06 30 90	Reversible point, L
101	KK 01 32 28	Cone screw M12 x 34 mm w/nut
102	KK 07 36 34	Eco-share, R
	KK 07 36 35	Eco-share, L
103	KK 01 01 55	Bushing (for ploughs w/share bolt beam)
	KK 01 01 56	Bushing (for ploughs w/A-beam)
104	KK 03 27 40	Hex screw M16 x 40 mm w/nut (for ploughs w/E-saddle) (Before 01.03.00)
	KK 03 27 50	Hex screw M16 x 50 mm w/nut (for ploughs w/E-saddle) (From 01.03.00)
	KK 03 27 65	Hex screw M16 x 65 mm w/nut (for ploughs w/share bolt beam)
	KK 03 27 75	Hex screw M16 x 75 mm w/nut (for ploughs w/A-beam)
105	KK 01 33 46	Cone screw M14 x 45 mm w/flange nut (for ploughs w/E-saddle) (Before 01.03.00)
	KK 01 33 61	Cone screw M14 x 60 mm w/flange nut (for ploughs w/E-saddle) (From 01.03.00)
	KK 01 33 85	Cone screw M14 x 85 mm w/flange nut (for ploughs w/share bolt beam and A-beam)
106	KK 01 60 15	Flange nut M14
107	KK 01 29 29	Washer (for ploughs w/E-saddle) (From 01.03.00)







26	KK 03 30 04	Oval screw M10 x 20 mm w/nut
27	KK 07 33 50	Trashboard plastic, R
	KK 07 33 51	Trashboard plastic, L
28	KK 07 33 52	Support, R
	KK 07 33 53	Support, L
29	KK 05 33 87	Mouldboard extension, R
	KK 06 33 88	Mouldboard extension, L
31	KK 03 27 30	Hex screw M16 x 13 mm w/nut
32	KK 06 20 25	Nut M16 mm
33	KK 07 30 88	Landside knife w/nuts, R
	KK 07 30 89	Landside knife w/nuts, L
34	KK 03 32 51	Screw M16 x 50 mm w/nut (for E-sad- dle) (Before 01.02.00)
	KK 03 32 56	Screw M16 x 55 mm w/nut (for E-sad- dle) (From 01.02.00)
	KK 03 32 86	Screw M16 x 85 mm w/nut (for A-sad- dle) (Before 01.02.00)
	KK 03 32 95	Screw M16 x 95 mm w/nut (for A-sad- dle) (From 01.02.00)
35	KK 03 31 74	Screw M14 x 45 mm w/nut



1	KK 01 33 32	Cone screw M14 x 34 mm w/nut	21	KK 07 33 03	Bracket, R		KK 07 30 89	Landside knife w/nut, L
2	KK 07 30 54	Share 14", R		KK 07 33 04	Bracket, L	44	KK 01 29 22	Washer 17 x 40 x 4.58 mm
	KK 07 30 55	Share 14", L	22	KK 01 29 19	Washer 12.5 x 23 x 3.2 mm	45	KK 03 31 75	Screw M14 x 50 mm w/nut
	KK 07 30 56	Share 16", R	23	KK 03 27 40	Hex screw M16 x 40 mm w/nut	46	KK 03 32 51	Screw M16 x 50 mm w/nut (for E-saddle)
	KK 07 30 57	Share 16", L	24	KK 07 36 08	Landside, short, R + L		KK 03 32 86	Screw M16 x 85 mm w/nut (for A-saddle)
	KK 07 30 80	Share 18", R	25	KK 07 36 09	Landside, long, R + L	47	KK 06 36 07	Plate (For On-land ploughs only)
	KK 07 30 81	Share 18", L	26	KK 07 38 22	Stay front (for E-saddle)		KK 07 36 07	Plate cpl. (For On-land ploughs only)
3	KK 05 30 90	Reversible point, R		KK 07 38 16	Stay front (for A-saddle)	48	KK 01 33 46	Screw M14 x 45 mm w/nut
	KK 06 30 90	Reversible point, L	27	KK 01 58 30	Nut M20 mm (Before 01.06.93)	50	KK 07 36 14	Wearing plate
4	KK 07 32 45	Mouldboard, R	28	KK 07 38 17	Stay (Before 01.06.93)	51	KK 01 33 32	Cone screw M14 x 34 mm
	KK 07 32 46	Mouldboard, L	29	KK 07 38 15	Stay, rear (for A-saddle) (Before 01.06.93)			
5	KK 03 31 73	Oval screw M14 x 38 mm w/nut		KK 07 38 20	Stay, R cpl. (for E-saddle) (Before 01.06.93)			
7	KK 01 32 28	Cone screw M12 x 34 mm w/nut		KK 07 38 21	Stay, L cpl. (for E-saddle) (Before 01.06.93)			
8	KK 01 32 34	Cone screw M12 x 38 mm w/nut		KK 07 38 10	Stay, R cpl. (for A-saddle) (Before 01.06.93)			
9	KK 07 30 91	Share knife, R		KK 07 38 11	Stay, L cpl (for A-saddle) (Before 01.06.93)			
	KK 07 30 92	Share knife, L						
	KK 06 30 91	Share knife, R (for Sweden)						
	KK 06 30 92	Share knife, L (for Sweden)						
10	KK 07 34 70	Saddle, R (for E-saddle)	31	KK 07 15 00	Spacer			
	KK 07 34 71	Saddle, L (for E-saddle)	32	KK 03 31 81	Oval screw M14 x 85 mm w/nut			
	KK 07 34 64	Saddle, R (for A-saddle)	33	KK 07 36 15	Furrow widener, R			
	KK 07 34 65	Saddle, L (for A-saddle)		KK 07 30 16	Furrow widener, L			
11	KK 03 31 00	Oval screw M12 x 30 mm w/nut	34	KK 07 30 62	Share 14", R			
12	KK 07 32 72	Shinpiece, R		KK 07 30 63	Share 14", L			
	KK 07 32 73	Shinpiece, L		KK 07 30 64	Share 16", R			
13	KK 03 31 08	Oval screw M12 x 40 mm w/nut		KK 07 30 65	Share 16", L			
14	KK 03 27 30	Hex screw M16 x 30 mm w/nut	35	KK 07 38 05	Stay (for E-saddle) (From 01.06.93)			
16	KK 03 31 75	Oval screw M14 x 50 mm w/nut		KK 07 38 03	Stay (for A-saddle) (From 01.06.93)			
17	KK 07 32 75	Connecting piece, R	36	KK 07 38 34	Bracket for stay, R+L			
	KK 07 32 76	Connecting piece, L	37	KK 07 38 35	Spacing tube 27 x 20.5 x 80 mm			
18	KK 03 31 07	Oval screw M12 x 35 mm w/nut	38	KK 07 38 36	Spacing tube 27 x 20.5 x 69 mm			
19	KK 07 33 00	Trashboard, R	39	KK 07 38 12	Bracket for stay, R			
	KK 07 33 01	Trashboard, L		KK 07 38 13	Bracket for stay, L			
	KK 07 02 92	Trashboard, R cpl.	40	KK 01 30 01	Washer 14 x 30 x 7.5 mm			
	KK 07 02 93	Trashboard, L cpl.	41	KK 01 58 34	Nut M20 mm			
	KK 07 02 94	Trashboard, R + L cpl.	42	KK 03 31 85	Oval screw M14 x 130 mm w/flangenut			
20	KK 07 33 32	Mouldboard extension, R (extra)	43	KK 07 30 88	Landside knife w/nut, R			
	KK 07 33 33	Mouldboard extension,, L (extra)						

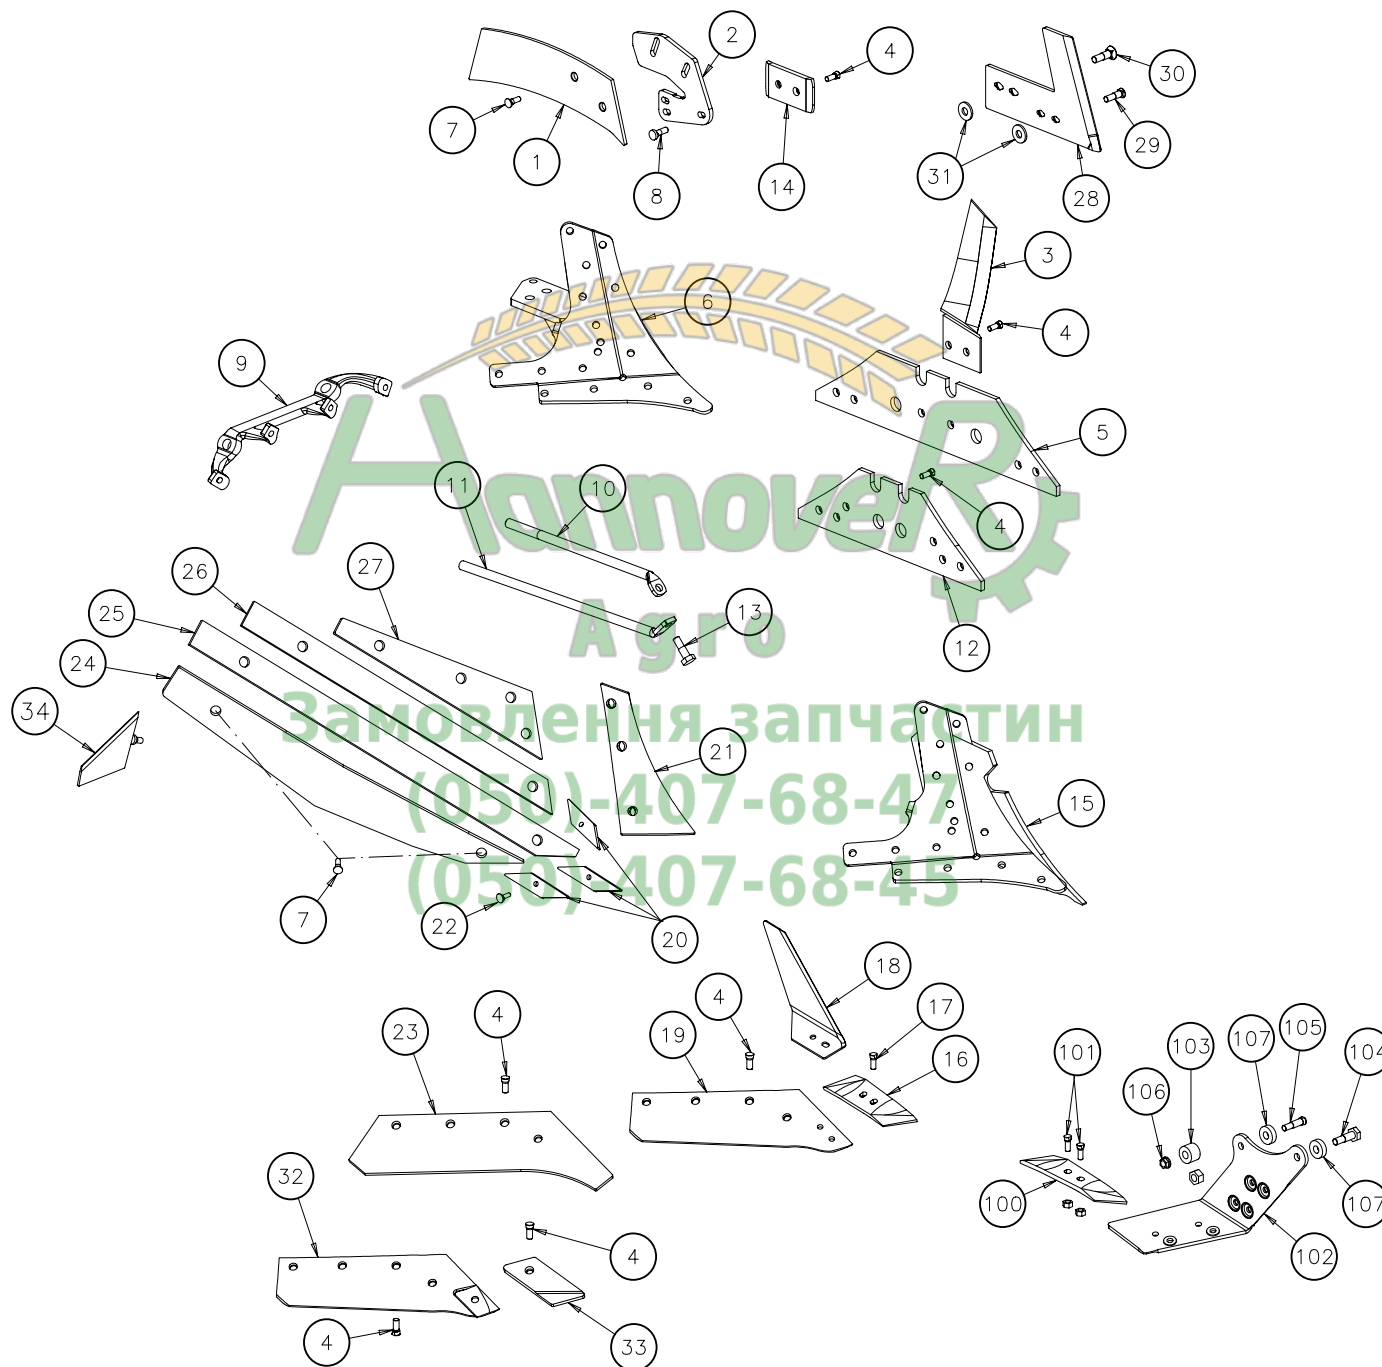


1	KK 07 33 00	Trashboard, R	15	KK 08 34 15	Saddle R, A-saddle (for body no. 29)	KK 03 30 16	Oval screw M10 x 30 mm (for body no. 30)
	KK 07 33 01	Trashboard, L		KK 08 34 16	Saddle L, A-saddle (for body no. 29)		
2	KK 08 33 00	Bracket, R		KK 08 34 06	Saddle R, A-saddle (for body no. 30)	KK 01 58 13	Nut M10
	KK 08 33 01	Bracket, L		KK 08 34 07	Saddle L, A-saddle (for body no. 30)	23	KK 07 30 62 Share 14", R (for body no. 30)
3	KK 07 36 15	Furrow widener, R	16	KK 05 30 90	Reversible point, R		KK 07 30 63 Share 14", L (for body no. 30)
	KK 07 36 16	Furrow widener, L		KK 06 30 90	Reversible point, L		KK 07 30 64 Share 16", R (for body no. 30)
4	KK 01 33 32	Cone screw M14 x 34 mm	17	KK 01 32 28	Cone screw M12 x 34 mm		KK 07 30 65 Share 16", L (for body no. 30)
	KK 01 60 13	Flange nut M14		KK 01 58 17	Nut M12	24	KK 08 32 11 Slat no 1, R
5	KK 07 36 09	Landside, long R + L	18	KK 07 30 91	Share knife, R		KK 08 32 21 Slat no 1, L
6	KK 08 34 17	Saddle R, E-saddle (for body no. 29)		KK 07 30 92	Share knife, L	25	KK 08 32 12 Slat no 2, R
	KK 08 34 18	Saddle L, E-saddle (for body no. 29)		KK 06 30 91	Share knife, R (for Sweeden)		KK 08 32 22 Slat no 2, L
	KK 08 34 08	Saddle R, E-saddle (for body no. 30)		KK 06 30 92	Share knife, L (for Sweeden)	26	KK 08 32 13 Slat no 3, R
	KK 08 34 09	Saddle L, E-saddle (for body no. 30)	19	KK 07 30 02	Share 14", R (for body no. 29)		KK 08 32 23 Slat no 3, L
7	KK 03 31 16	Oval screw M12 x 35 mm (for body no. 29 and 30)		KK 07 30 03	Share 14", L (for body no. 29)	27	KK 08 32 14 Slat no 4, R
	KK 01 58 17	Nut M12		KK 07 30 54	Share 14", R (for body no. 30)		KK 08 32 24 Slat no 4, L
	KK 03 31 07	Oval screw M12 x 35 mm (for body no. 30) (Before 01.01.01)		KK 07 30 55	Share 14", L (for body no. 30)	28	KK 07 30 88 Landside knife, R
	KK 01 58 17	Nut M12		KK 07 30 04	Share 16", R (for body no. 29)		KK 07 30 89 Landside knife, L
8	KK 03 31 17	Oval screw M12 x 45 mm (for body no. 29 and 30)		KK 07 30 05	Share 16", L (for body no. 29)	29	KK 03 31 75 Screw M14 x 50 mm
	KK 01 58 17	Nut M12		KK 07 30 56	Share 16", R (for body no. 30)		KK 01 60 15 Flange nut M14
	KK 03 31 11	Oval screw M12 x 45 mm (for body no. 30) (Before 01.01.01)		KK 07 30 57	Share 16", L (for body no. 30)	30	KK 03 32 51 Screw M16 x 50 mm (for E-saddle) (Before 01.02.00)
	KK 01 58 17	Nut M12		KK 07 30 06	Share 18", R (for body no. 29)		KK 03 32 56 Screw M16 x 56 mm (for E-saddle) (From 01.02.00)
	KK 03 31 11	Oval screw M12 x 45 mm (for body no. 30) (Before 01.01.01)		KK 07 30 07	Share 18", L (for body no. 29)		KK 01 58 25 Nut M16
	KK 01 58 17	Nut M12		KK 07 30 80	Share 18", R (for body no. 30)		KK 03 32 86 Screw M16 x 85 mm (for A-saddle) (Before 01.02.00)
9	KK 08 32 10	Slat support, R	20	KK 08 32 15	Connecting piece, plastic (for slat 1-2)		KK 03 32 95 Screw M16 x 95 mm (for A-saddle) (From 01.02.00)
	KK 08 32 20	Slat support, L		KK 08 32 18	Connecting piece, plastic (for slat 2) (for body no. 29)		KK 01 58 25 Nut M16
10	KK 08 38 03	Stay		KK 08 32 16	Connecting piece, plastic (for slat 2-3) (for body no. 30)	31	KK 01 29 22 Washer 17 x 40 x 4.58 mm
11	KK 08 38 05	Stay 1, saddle A (for body no. 29)			Connecting piece, plastic (for slat 3-4)	32	KK 07 30 42 Flush fit share 14", R (for body no. 29)
	KK 08 38 06	Stay 2, saddle A (for body no. 29)		KK 08 32 17	Connecting piece, plastic (for slat 3-4)		KK 07 30 43 Flush fit share 14", L (for body no. 29)
	KK 08 38 02	Stay, saddle A (for body no. 30)	21	KK 07 32 56	Shinpiece, R (for body no. 29)		KK 07 30 44 Flush fit share 16", R (for body no. 29)
	KK 08 38 07	Stay 1, saddle E (for body no. 29)		KK 07 32 57	Shinpiece, L (for body no. 29)		KK 07 30 45 Flush fit share 16", L (for body no. 29)
	KK 08 38 08	Stay 2, saddle E (for body no. 29)		KK 07 32 30	Shinpiece, R (for body no. 30)	33	KK 07 30 30 Flush fit point, R
	KK 08 38 04	Stay, saddle E (for body no. 30)		KK 07 32 31	Shinpiece, L (for body no. 30)		KK 07 30 31 Flush fit point, L
12	KK 07 36 08	Landside, short R + L	22	KK 03 30 06	Oval screw M10 x 30 mm (for body no. 29)	34	KK 08 32 35 Mouldboard knife R and L (From 01.12.01)
13	KK 03 27 50	Hex screw M16 x 50 mm		KK 01 58 13	Nut M10		
	KK 01 58 25	Nut M16					
14	KK 07 36 14	Wearing plate					

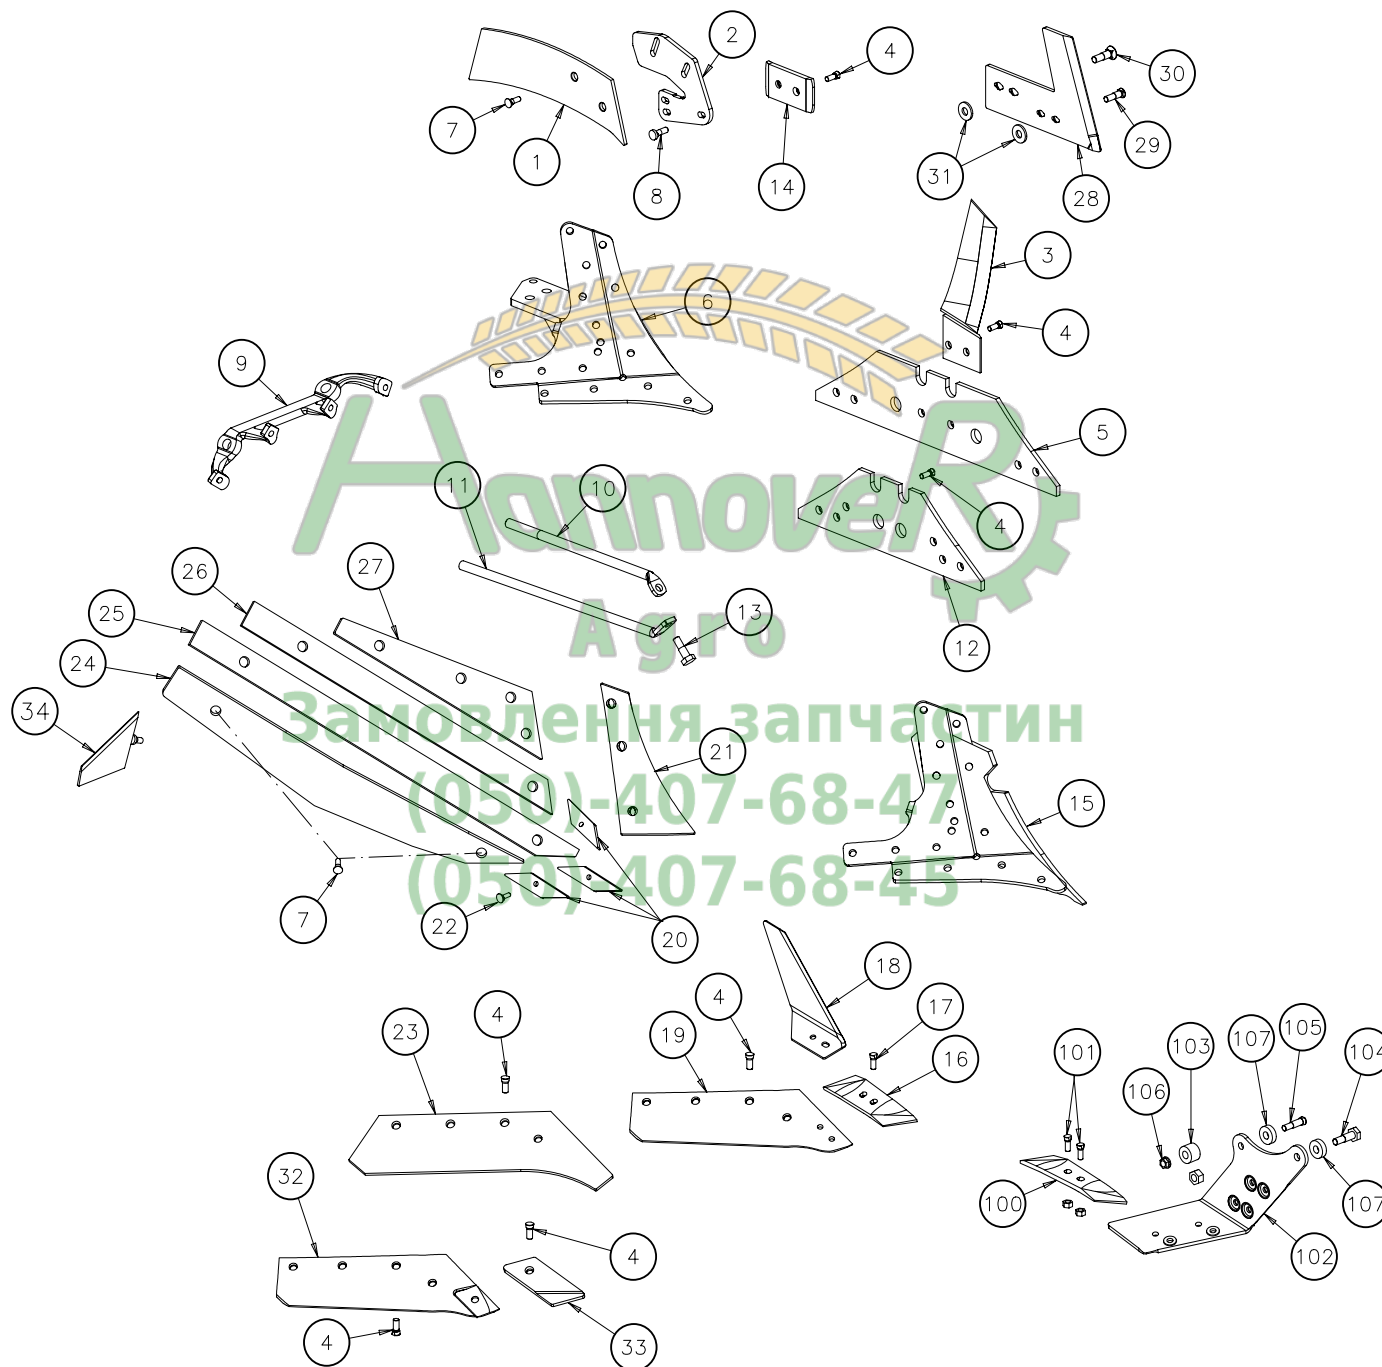

Pos. 100 - 107 Eco-share from 01.04.00		
100	KK 05 30 90	Reversible point, R
	KK 06 30 90	Reversible point, L
101	KK 01 32 28	Cone screw M12 x 34 mm
	KK 01 58 17	Nut M12
102	KK 07 36 34	Eco-share, R
	KK 07 36 35	Eco-share, L
103	KK 01 01 55	Bushing (for ploughs w/share bolt beam)
	KK 01 01 56	Bushing (for ploughs w/A-beam)
104	KK 03 27 40	Hex screw M16 x 40 (for ploughs w/E-saddle) (Before 01.03.00)
	KK 03 27 50	Hex screw M16 x 50 mm (for ploughs w/E-saddle) (From 01.03.00)
	KK 01 58 25	Nut M16
	KK 03 27 65	Hex screw M16 x 65 mm w/nut (for ploughs w/share bolt beam)
	KK 01 58 25	Nut M16
	KK 03 27 75	Hex screw M16 x 75 mm w/nut (for ploughs w/A-beam)
	KK 01 58 25	Nut ;16
105	KK 01 33 46	Cone screw M14 x 45 mm (for ploughs w/E-saddle) (Before 01.03.00)
	KK 01 33 61	Cone screw M14 x 60 mm (for ploughs w/E-saddle) (From 01.03.00)
	KK 01 33 85	Cone screw M14 x 85 mm (for ploughs w/share bolt beam and A-beam)
106	KK 01 60 15	Flange nut M14
107	KK 01 29 29	Washer (for ploughs w/E-saddle) (From 01.03.00)



Замовлення запчастин
(050)-407-68-47
(050)-407-68-45

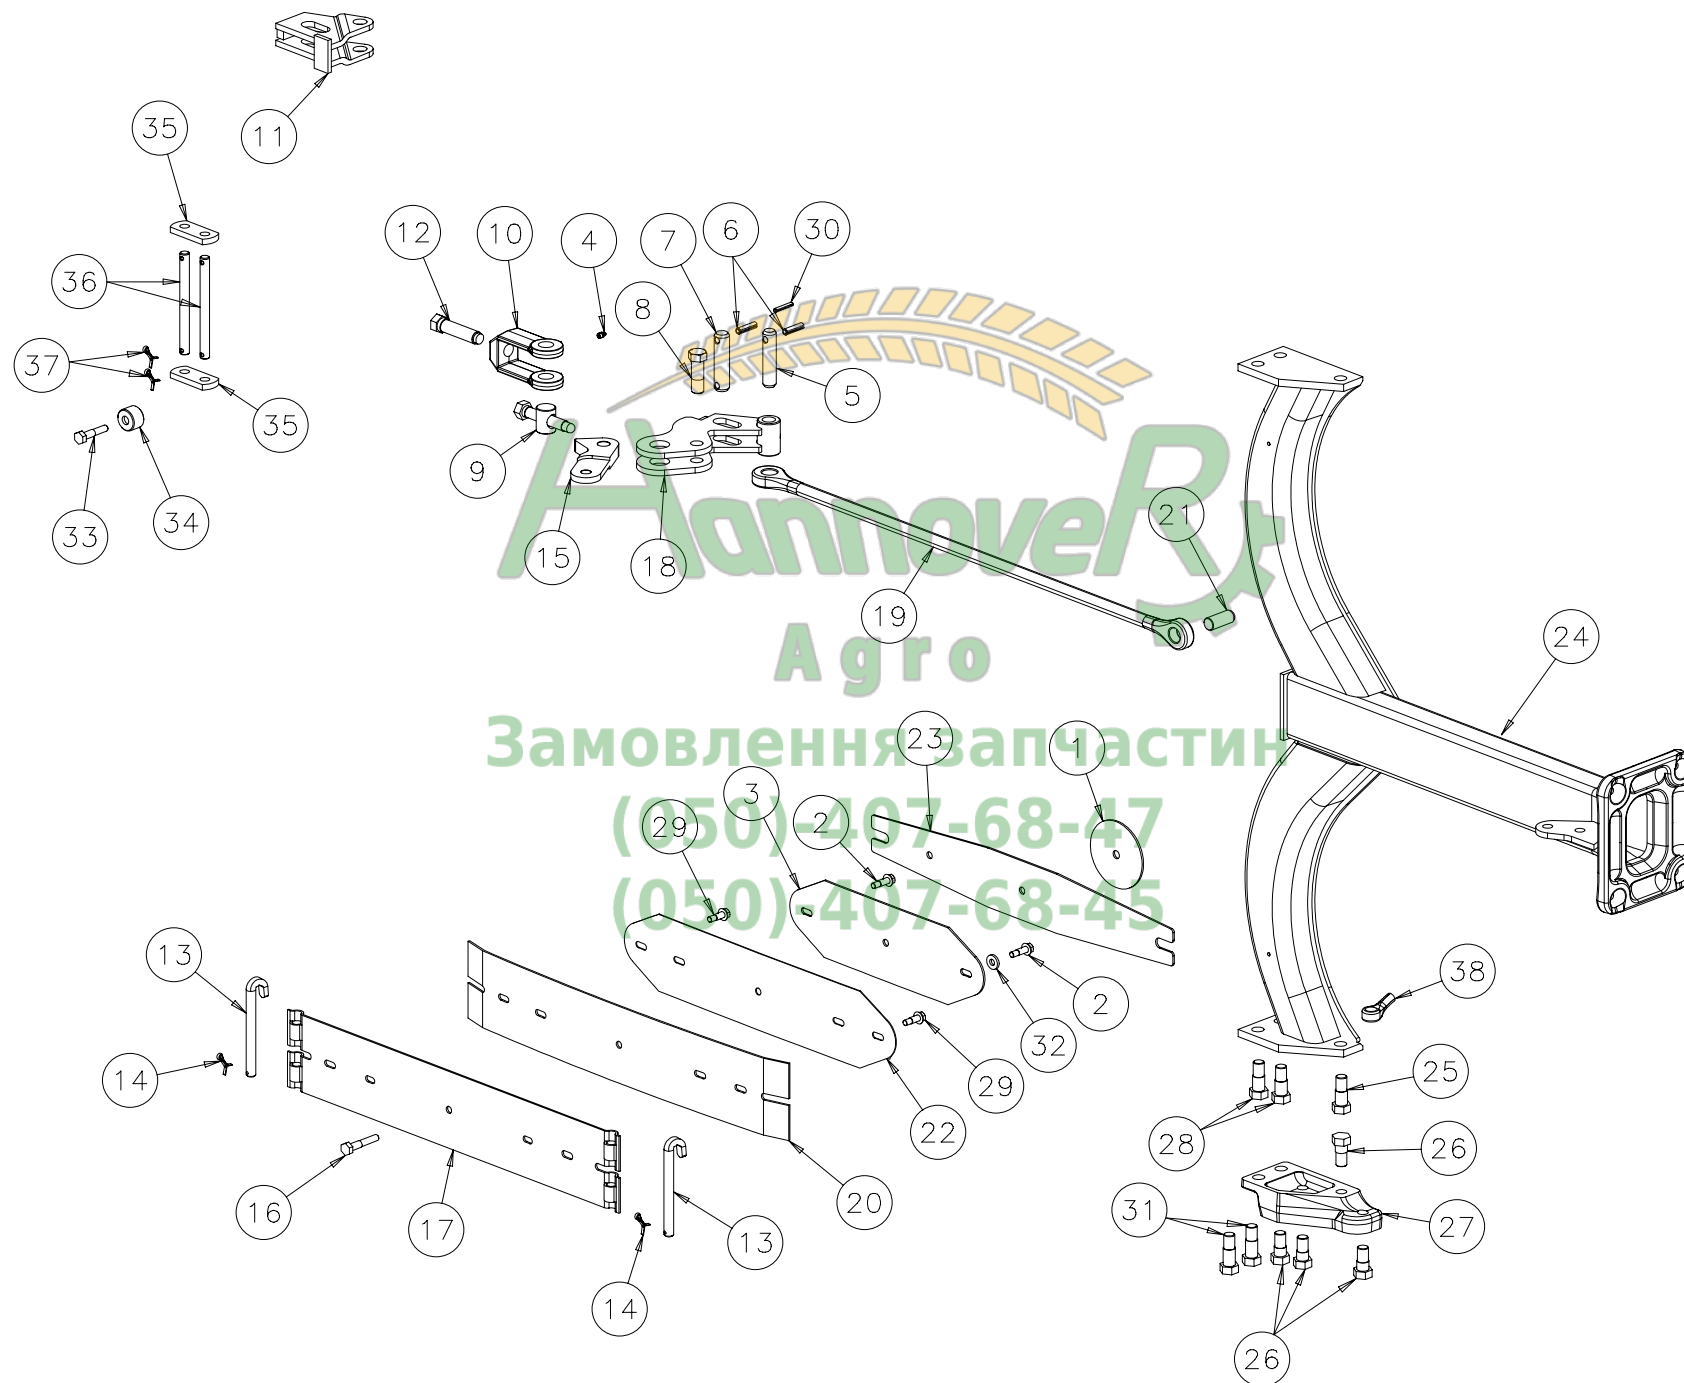

1	KK 05 70 67	Blade no 4	33	KK 03 26 55	Hex screw M12 x 55 mm w/nut (for extra additional leaf spring cpl.)
2	KK 03 50 20	Hex screw w/flange M10 x 34 mm w/nut	34	KK 06 70 77	Bushing (for extra additional leaf spring cpl.)
3	KK 05 70 66	Blade no 3	35	KK 06 70 75	Linkage (for extra additional leaf spring cpl.)
4	KK 02 99 20	Grease nipple M8 x 1	36	KK 06 70 76	Bolt D15.7 (for extra additional leaf spring cpl.)
5	KK 06 70 59	Bolt	37	KK 02 97 27	Split pin D5 x 32 mm (for extra additional leaf spring cpl.)
6	KK 01 10 37	Roll pin D10 x 40 mm	38	KK 06 12 91	Threaded piece
7	KK 06 70 57	Bolt (Before 01.08.02)			
	KK 06 70 16	Bolt (From 01.08.02)	Not ill.	KK 05 07 06	Leaf spring cpl. (1 x ill. no. 3, 13, 14, 16, 17 and 22 + 2 x ill. no. 1, 2, 20 and 29)
8	KK 03 28 60	Hex screw M20 x 60 mm w/nut		KK 06 07 03	Leaf spring HD cpl. (1 x ill. no 3, 16, 17 22 and 32 + 2 x ill. no. 1, 2, 20, 23 and 29)
9	KK 06 70 51	Adjustment screw w/threaded piece		KK 06 01 19	Spacer kit w/ hex screws R & L cpl.
10	KK 06 70 40	Holder (Before 01.08.02)			
	KK 06 70 25	Holder (From 01.08.02)			
11	KK 06 70 68	Bracket (Before 01.08.02)			
	KK 06 70 92	Bracket (From 01.08.02)			
12	KK 06 70 39	Adjustment screw M24 x 90 mm			
13	KK 05 70 89	Bolt			
14	KK 02 97 27	Split pin D5 x 32 mm			
15	KK 06 70 80	Spring arm			
16	KK 03 26 65	Hex screw M12 x 65 mm w/nut			
17	KK 05 70 63	Main blade			
18	KK 06 70 60	Regulator (Before 01.08.02)			
	KK 06 70 90	Regulator (From 01.08.02)			
19	KK 06 70 70	Tie rod (Before 01.08.02)			
	KK 06 70 26	Tie rod (From 01.08.02)			
20	KK 05 70 64	Blade no 1			
21	KK 06 70 31	Axle D22 x 53 mm			
22	KK 05 70 65	Blade no 2			
23	KK 05 70 68	Blade no 5			
24	KK 06 12 80	Beam			
25	KK 03 52 09	Hex screw M20 x 50 mm w/threaded piece			
26	KK 03 28 40	Hex screw M20 x 40 mm w/nut			
27	KK 06 01 08	Spacer cpl. w/hex screws R			
	KK 06 01 09	Spacer cpl. w/hex screws L			
28	KK 03 51 65	Hex screw M20 x 50 mm w/flange nut			
29	KK 03 50 21	Hex screw w/flange M10 x 30.5 mm w/nut			
30	KK 01 10 42	Roll pin D6 x 40 mm (to be mounted into roll pin 011037)			
31	KK 03 28 55	Hex screw M20 x 55 mm			
32	KK 01 29 13	Washer			



For LS, RL, LM, RM and RG ploughs

For LD, LO, RS, RX, LB, and RB ploughs



1	KK 07 12 08	Beam, R (Before 15.08.01)		KK 03 28 60	Hex screw M20 x 60 mm (for LB, LO and RB only) (From 01.04.02)
	KK 07 12 72	Beam, R (From 15.08.01)	23	KK 01 60 49	Lock nut M20 (From 01.04.02)
2	KK 07 12 09	Beam, L (Before 15.08.01)			
	KK 07 12 73	Beam, L (From 15.08.01)	Not ill.	KK 07 12 11	Beam, H = 700 mm cpl. (ill. no. 1, 2, 3 and 5 - 8) (Before 15.08.01)
3	KK 07 12 28	Support, H = 700 mm (Before 15.08.01)		KK 07 12 80	Beam, H = 700 mm cpl. (ill. no. 1, 2, 3 and 5 - 8) (From 15.08.01)
	KK 07 12 71	Support, H = 700 mm (From 15.08.01)		KK 07 12 12	Beam, H = 800 mm cpl. (ill. no. 1, 2, 4 and 5 - 8) (Before 15.08.01)
4	KK 07 12 07	Support, H = 800 mm (Before 15.08.01)		KK 07 12 81	Beam, H = 800 mm cpl. (ill. no. 1, 2, 4 and 5 - 8) (From 15.08.01)
	KK 07 12 70	Support, H = 800 mm (From 15.08.01)			
5	KK 07 70 24	Main bolt M30 x 72 mm, L (Before 15.08.01)			
	KK 07 12 75	Main bolt M30 x 84 mm, L (From 15.08.01)			
6	KK 07 70 23	Main bolt M30 x 72 mm, R (Before 15.08.01)			
	KK 07 12 74	Main bolt M30 x 84 mm, R (From 15.08.01)			
7	KK 01 60 22	Nut M30, R			
8	KK 01 60 45	Nut M30, L			
9	KK 07 49 10	Plate for support, H = 700 mm (for LS, RL, LM, RM and RG ploughs only)			
10	KK 07 49 11	Plate for support, H = 800 mm (for LS, RL, LM, RM and RG ploughs only)			
11	KK 06 15 15	Bushing D28 x D20.5 x 35.2 mm			
12	KK 03 28 40	Hex screw M20 x 40 mm w/nut (Before 01.04.02)			
	KK 03 28 45	Hex screw M20 x 45 mm (From 01.04.02)			
	KK 03 28 50	Hex screw M20 x 50 mm w/nut (for disc coulter, for front piece and rear beam)			
	KK 03 28 60	Hex screw M20 x 60 mm w/nut (for front piece w/disc coulter)			
13	KK 03 28 65	Hex screw M20 x 65 mm w/nut			
14	KK 03 52 15	Hex screw M20 x 80 mm w/flange nut qual. 12.9			
	KK 03 52 16	Hex screw M20 x 90 mm w/flange nut qual. 12.9 (for RL/ LB/ LO/ RB ploughs front section, rear leg only)			
15	KK 03 28 07	Hex screw M20 x 100 mm			
	KK 03 28 03	Hex screw M20 x 110 mm (for LB, LO and RB only) (From 01.04.02)			
	KK 03 28 24	Hex screw M20 x 105 mm (when using fixing device KK 07 72 95 for RL plough) (From 01.04.02)			
16	KK 06 20 20	Washer			
17	KK 03 50 60	Shear bolt M20 x 62 mm w/nut (for support H = 800 mm) (Before 15.08.01)			
	KK 03 50 48	Shear bolt M20 x 72 mm w/nut (for support H = 800 mm) (From 15.08.01)			
18	KK 03 50 72	Shear bolt M20 x 81 mm w/nut (for support H = 700 mm)			
19	KK 07 15 08	Plate for support H = 700 mm (for LD, LO, RS, RX, LB and RB ploughs only)			
20	KK 07 15 29	Plate for support H = 800 mm (for LD, LO, RS, RX, LB and RB ploughs only)			
21	KK 03 27 62	Hex screw M16 x 60 w/nut qual. 12.9			
22	KK 03 28 40	Hex screw M20 x 40 mm w/nut (Before 01.04.02)			
	KK 03 28 45	Hex screw M20 x 45mm (From 01.04.02)			



1	KK 03 13 40	Hex screw M8 x 40 mm
2	KK 05 61 56	Cap
3	KK 01 07 75	O-ring D54.5 x 3 mm
4	KK 01 12 66	Circlip
5	KK 01 12 92	Washer D30 x 45 x 2.5 mm
6	KK 05 61 12	Disc 18"
	KK 05 61 14	Disc 20"
	KK 05 61 15	Disc 18" Notched
	KK 05 61 16	Disc 20" Notched
7	KK 06 61 02	Hub w/needles
	KK 06 61 24	Hub cpl (ill 1, 3 - 5 and 7 - 9)
8	KK 01 07 72	Seal ring
9	KK 06 61 08	Axle D30
10	KK 02 99 20	Grease nipple M8 x 1 mm
11	KK 06 61 40	Disc coulters arm 18" R
	KK 06 61 43	Disc coulters arm 20" R
12	KK 06 61 90	Clip
13	KK 03 50 31	Hex screw M12 x 45 mm w/nut
14	KK 06 61 85	Bracket
15	KK 06 61 42	Disc coulters arm 18" L
	KK 06 61 45	Disc coulters arm 20" L
16	KK 01 60 31	Cone nut M16
17	KK 06 61 89	Bracket 18"
	KK 06 61 82	Bracket 20"
18	KK 06 61 78	Eccentric
19	KK 06 61 75	U - bolt
20	KK 03 17 30	Hex screw M20 x 30 mm
	KK 03 17 40	Hex screw M20 x 40 mm (for eccentric nut)



Замовлення запчастин
(050)-407-68-47
(050)-407-68-45



1	KK 07 64 06	Disc coulters 18"	22	KK 03 28 30	Hex screw M20 x 30 mm
	KK 07 64 07	Disc coulters 20"		KK 01 58 30	Nut M20
2	KK 07 64 09	Disc coulters, notched 18"	23	KK 03 28 40	Hex screw M20 x 40 mm
	KK 07 64 10	Disc coulters, notched 20"		KK 01 58 30	Nut M20
3	KK 07 64 99	Plate	24	KK 01 60 31	Cone nut M16
4	KK 03 35 40	Screw M10 x 40 mm			
	KK 01 60 04	Lock nut M10			
5	KK 01 17 50	O-ring 124,5 x 4 mm			
6	KK 01 18 66	O-ring 67 x 3 mm			
7	KK 01 12 59	Circlip I 62 x 2 mm			
8	KK 01 12 66	Circlip A 30 x 1,5 mm			
9	KK 01 05 72	Bearing			
10	KK 01 05 32	Gasket ring			
11	KK 08 60 89	Bearing housing cpl. (ill. 3 - 11)			
	KK 08 60 90	Bearing housing cpl. w/axle			
12	KK 08 61 01	Axle			
	KK 08 60 80	Disc coulters arm w/bearing 18", R			
	KK 08 60 81	Disc coulters arm w/bearing 18", L			
	KK 08 60 82	Disc coulters arm w/bearing 20", R			
	KK 08 60 83	Disc coulters arm w/bearing 20", L			
	KK 08 60 84	Disc coulters arm w/bearing 20", lowered R			
	KK 08 60 85	Disc coulters arm w/bearing 20", lowered L			
13	KK 08 61 10	Arm 18", R			
	KK 08 61 12	Arm 20", R			
	KK 08 61 14	Arm 20", lowered R			
14	KK 08 61 11	Arm 18", L			
	KK 08 61 13	Arm 20", L			
	KK 08 61 15	Arm 20", lowered L			
15	KK 06 61 70	Bracket			
16	KK 02 99 20	Grease nipple			
17	KK 06 61 90	Clip			
18	KK 03 50 31	Hex screw M12 x 45 mm			
	KK 01 58 17	Nut M12			
19	KK 06 61 89	Bracket 18"			
	KK 06 61 82	Bracket 20"			
20	KK 06 61 78	Eccentric			
21	KK 06 61 75	U-bolt			




Замовлення запчастин
(050)-407-68-47
(050)-407-68-45




1	KK 07 64 06	Disc coulters 18"
	KK 07 64 07	Disc coulters 20"
2	KK 07 64 09	Disc coulters, notched 18"
	KK 07 64 10	Disc coulters, notched 20"
3	KK 03 10 30	Screw M10 x 30 mm w/nut
4	KK 01 17 50	O-ring 124,5 x 3,0 mm
5	KK 01 18 66	O-ring 67,0 x 3,0 mm
6	KK 01 12 59	Circlip I 62 x 2 mm
7	KK 01 12 66	Circlip A 30 x 1,5 mm
8	KK 01 05 72	Bearing
9	KK 01 08 18	Gasket ring 35/52 x 7 mm (Before 01.01.99)
	KK 01 05 32	Gasket ring (From 01.01.99)
10	KK 07 60 75	Bearing housing (Before 01.01.99)
	KK 07 60 97	Bearing, mounted (Before 01.01.99)
	KK 08 61 00	Bearing (From 01.01.99)
11	KK 07 60 76	Axle (Before 01.01.99)
	KK 08 61 01	Axle (From 01.01.99)
12	KK 02 99 20	Grease nipple M8 x 1
13	KK 07 65 75	Arm
	KK 07 60 82	Arm w/bearing, mounted
14	KK 03 27 02	Hex screw M16 x 110 mm w/nut
15	KK 07 64 00	Support
16	KK 07 60 63	Axle -92
17	KK 01 60 31	Cone nut M16
18	KK 07 60 60	Bracket (Before 01.05.02)
	KK 08 61 03	Bracket (From 01.05.02)
19	KK 03 51 75	Hex screw m20 x 100 mm w/locknut
20	KK 06 61 75	Clevis M16, 120 x 90 mm
21	KK 07 64 99	Plate (From 01.01.99)
Not ill.	KK 07 62 10	Disc coulters 92, 18" R & L, without fix
	KK 07 62 11	Disc coulters 92, 20" R & L, without fix
	KK 07 62 12	Disc coulters 92, 18" R & L, notched, without fix
	KK 07 62 13	Disc coulters 92, 20" R & L, notched, without fix



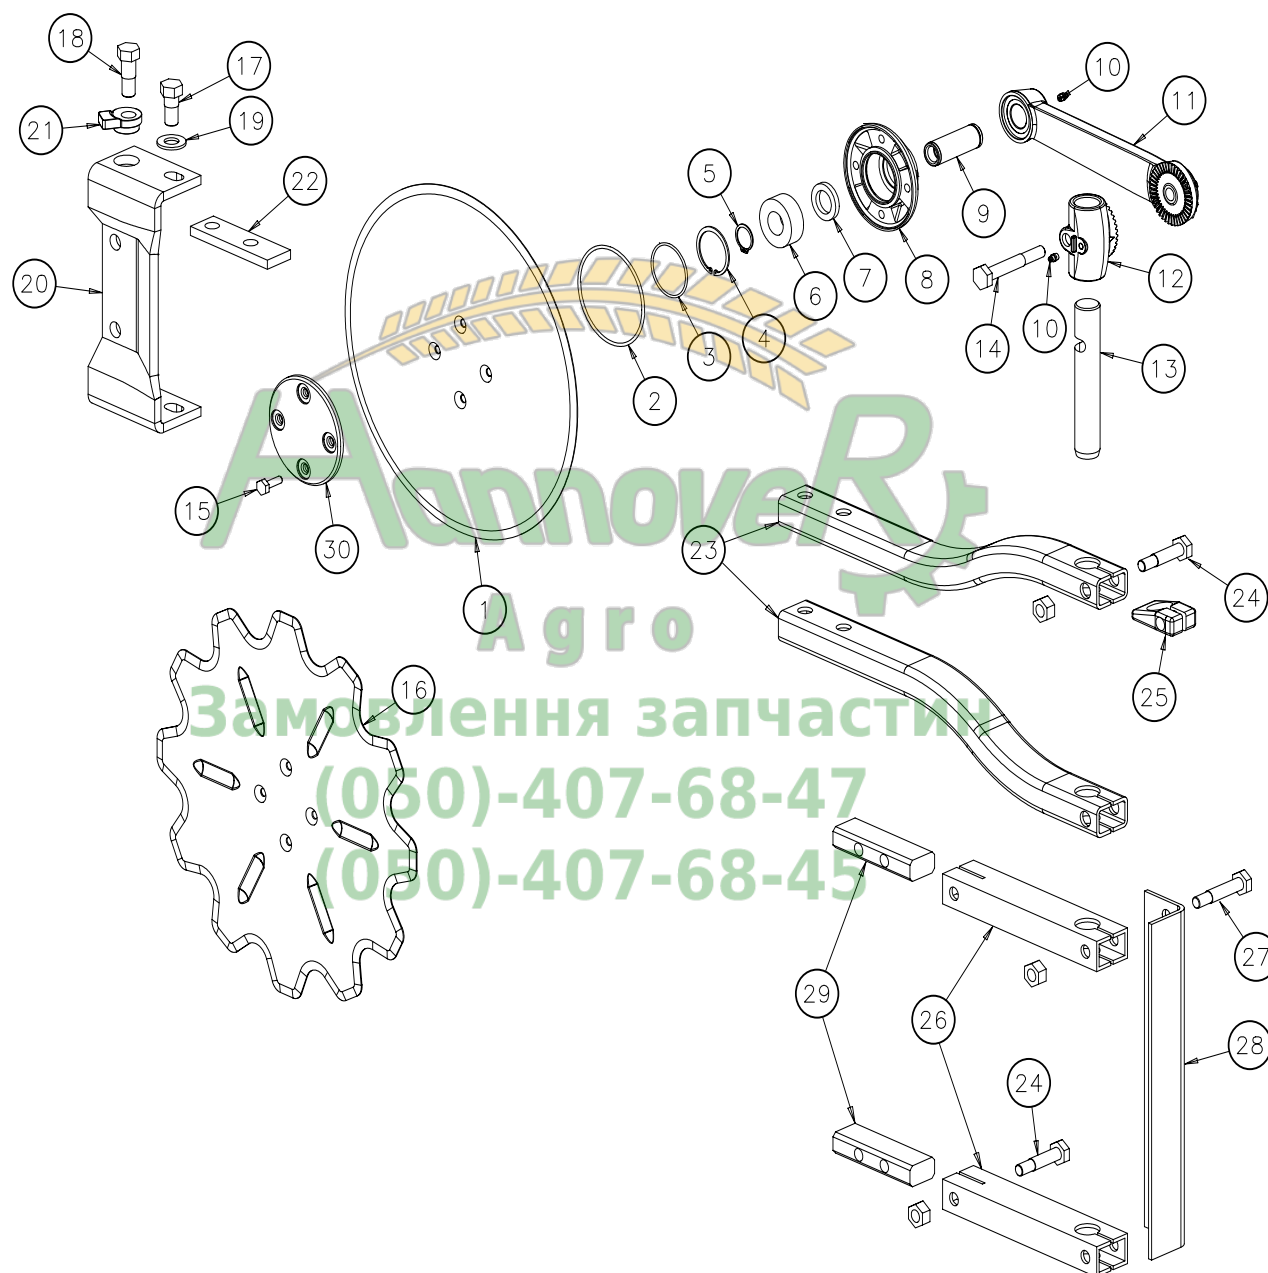


1	KK 07 64 06	Disc coulters 18"
	KK 07 64 07	Disc coulters 20"
2	KK 01 17 50	O-ring
3	KK 01 18 66	O-ring
4	KK 01 12 59	Circlip
5	KK 01 12 66	Circlip
6	KK 01 05 72	Ball bearing
7	KK 01 08 18	Rubber ring (Before 01.01.99)
	KK 01 05 32	Gasket ring (From 01.01.99)
8	KK 08 60 90	Bearing housing cpl. (ill. no. 2-3-4-5-6-7-8-10) (Before 01.01.99)
	KK 08 60 89	Bearing housing cpl. (ill. no. 2-3-4-5-6-7-8) (From 01.01.99)
9	KK 07 60 76	Axle (Before 01.01.99)
	KK 08 61 01	Axle (From 01.01.99)
	KK 08 60 86	Disc coulters arm w/bearing (From 01.01.99)
	KK 08 60 87	Disc coulters bearing cpl. (ill. no. 4-6-7-8) (From 01.01.99)
10	KK 02 99 20	Grease nipple
11	KK 07 65 75	Arm
12	KK 07 64 00	Support
13	KK 07 65 27	Axle
14	KK 03 27 02	Hex screw M16 x 110 mm w/nut
15	KK 03 10 30	Hex screw M10 x 30 mm
16	KK 07 64 09	Disc coulters 18" notched
	KK 07 64 10	Disc coulters 20" notched
17	KK 03 28 50	Hex screw M20 x 50 mm
18	KK 03 28 40	Hex screw M20 x 40 mm
19	KK 06 61 78	Eccentric for bracket
20	KK 07 49 31	Bracket
21	KK 01 29 60	Washer 20.5 x 40 x 3.4 mm
22	KK 07 49 36	Plate w/threads
23	KK 07 49 30	Tube
24	KK 03 27 75	Hex screw M16 x 75 mm w/nut
25	KK 07 65 15	Supporting piece for tube
26	KK 07 49 39	Extended tube
27	KK 03 27 85	Hex screw M16 x 85 mm w/nut
28	KK 07 49 38	Support
29	KK 07 49 37	Support
30	KK 07 64 99	Plate



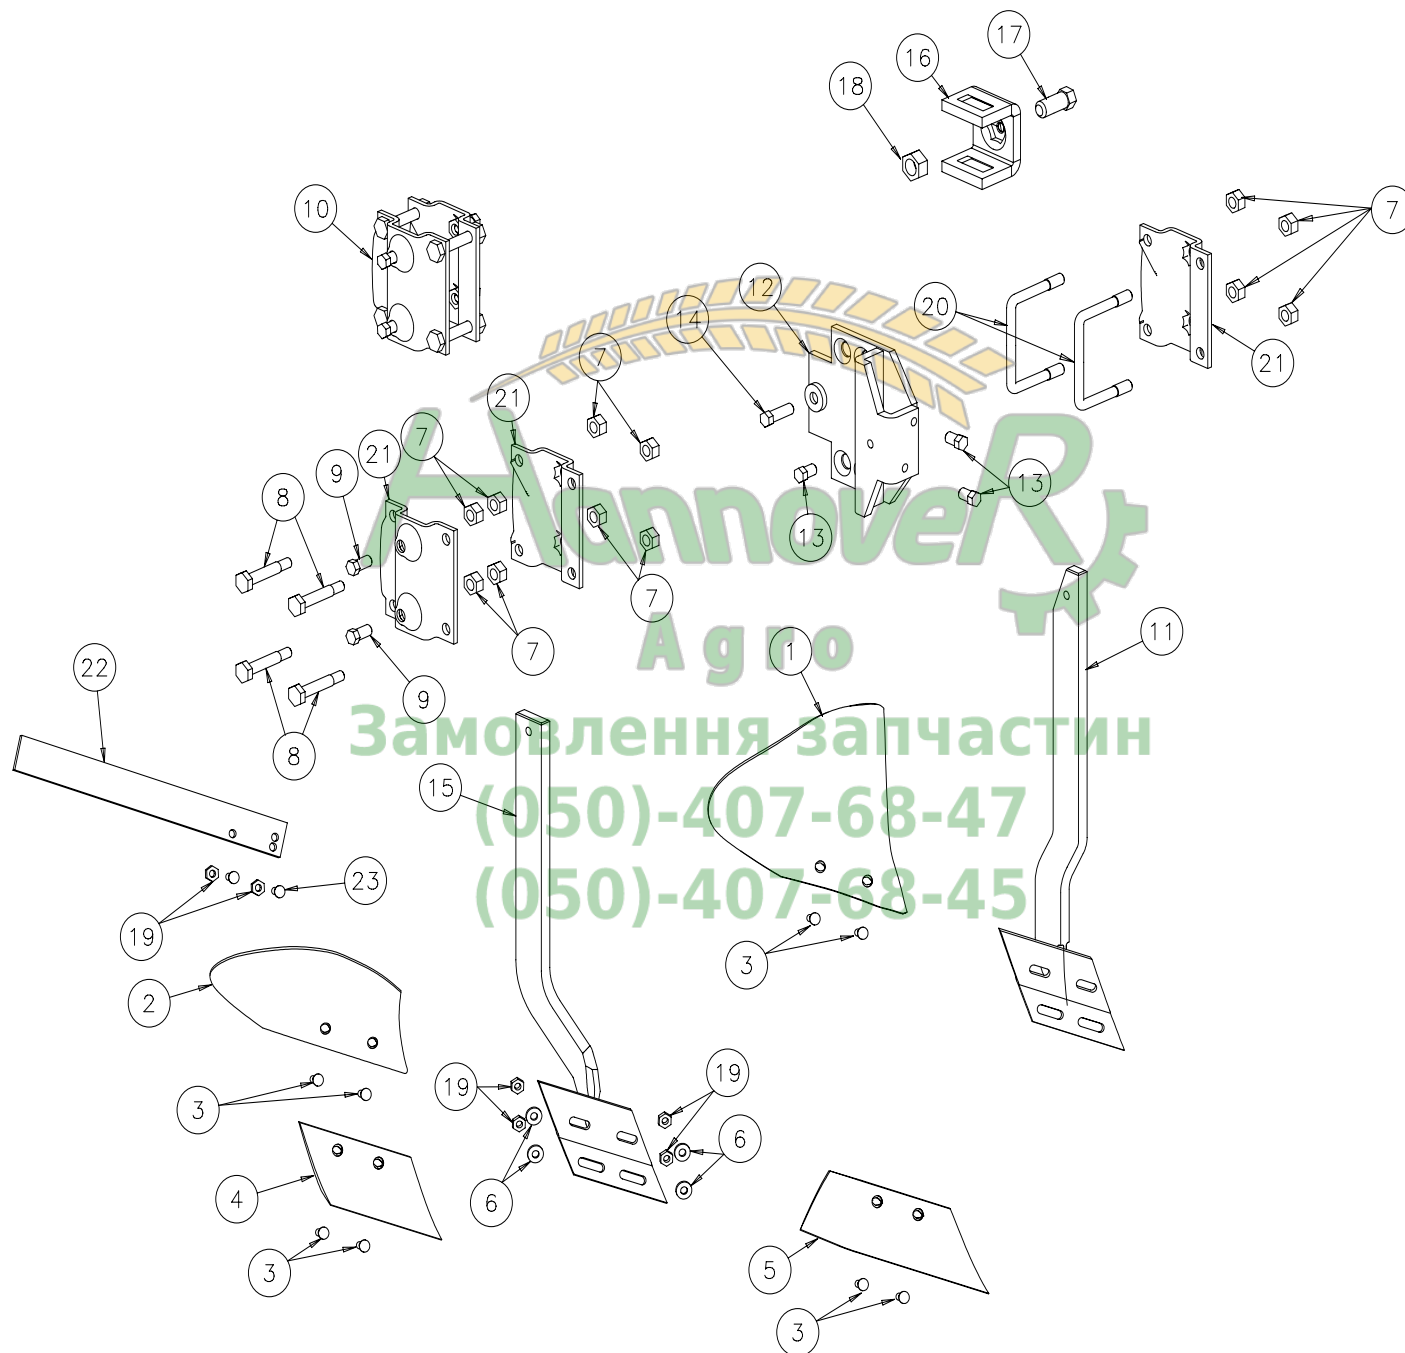


1	KK 07 68 12	Mouldboard maize R	11	KK 06 68 11	Arm R, H = 700 mm for HD beam and std. beam H700
	KK 07 68 13	Mouldboard maize L		KK 07 68 58	Arm R, H = 750 mm for std. beam H800 (From 01.12.00)
2	KK 06 68 80	Mouldboard R	16	KK 07 06 53	Fixing bracket with screw and nut (for beam 071240 and 071241)
	KK 07 69 43	Mouldboard R, plastic	17	KK 03 44 46	Setscrew M24 x 53 mm
	KK 06 68 81	Mouldboard L	18	KK 01 58 41	Nut M24
	KK 07 69 44	Mouldboard L, plastic	19	KK 01 58 16	Nut M10
3	KK 03 30 06	Oval screw M10 x 30 mm	20	KK 08 50 76	Clevis
4	KK 05 68 73	Share, short R	21	KK 06 68 61	Bracket HD beam
	KK 06 68 73	Share, short L			
5	KK 06 68 68	Share, long R			
	KK 06 68 69	Share, long L			
6	KK 01 29 06	Washer 10.5 x 25 x 3.4			
7	KK 01 58 25	Nut M16			
22	KK 08 68 01	Skimmer extension			
23	KK 03 30 07	Oval screw M10 x 35 mm			
for all turnable ploughs with Auto Reset beams:					
8	KK 03 27 95	Hex screw M16 x 95 mm			
9	KK 03 42 28	Setscrew M16 x 32 mm			
10	KK 06 06 57	Bracket cpl.			
11	KK 06 68 11	Arm R, H = 700 mm			
	KK 07 68 58	Arm R, H = 750 mm (From 01.12.00)			
	KK 06 68 12	Arm L, H = 700 mm			
	KK 07 68 59	Arm L, H = 750 mm (From 01.12.00)			
for all turnable ploughs with Shear Bolt beams:					
12	KK 07 06 39	Bracket with screws (for LB, LD, RB, RS, RX)			
	KK 07 68 72	Bracket (for LM, LS, RG, RL, RM, VD)			
13	KK 03 42 25	Setscrew M16 x 25 mm			
14	KK 03 42 50	Setscrew M16 x 50 mm			
15	KK 07 68 17	Arm R, H = 700 mm			
	KK 07 68 18	Arm L, H = 700 mm			
	KK 07 68 25	Arm R, H = 800 mm			
	KK 07 68 26	Arm L, H = 800 mm			
	KK 07 68 33	Arm R, H = 700 mm (for VD plough only) (Before 15.03.98)			
	KK 07 68 34	Arm L, H = 700 mm (for VD plough only) (Before 15.03.98)			
for beams on conventional ploughs:					




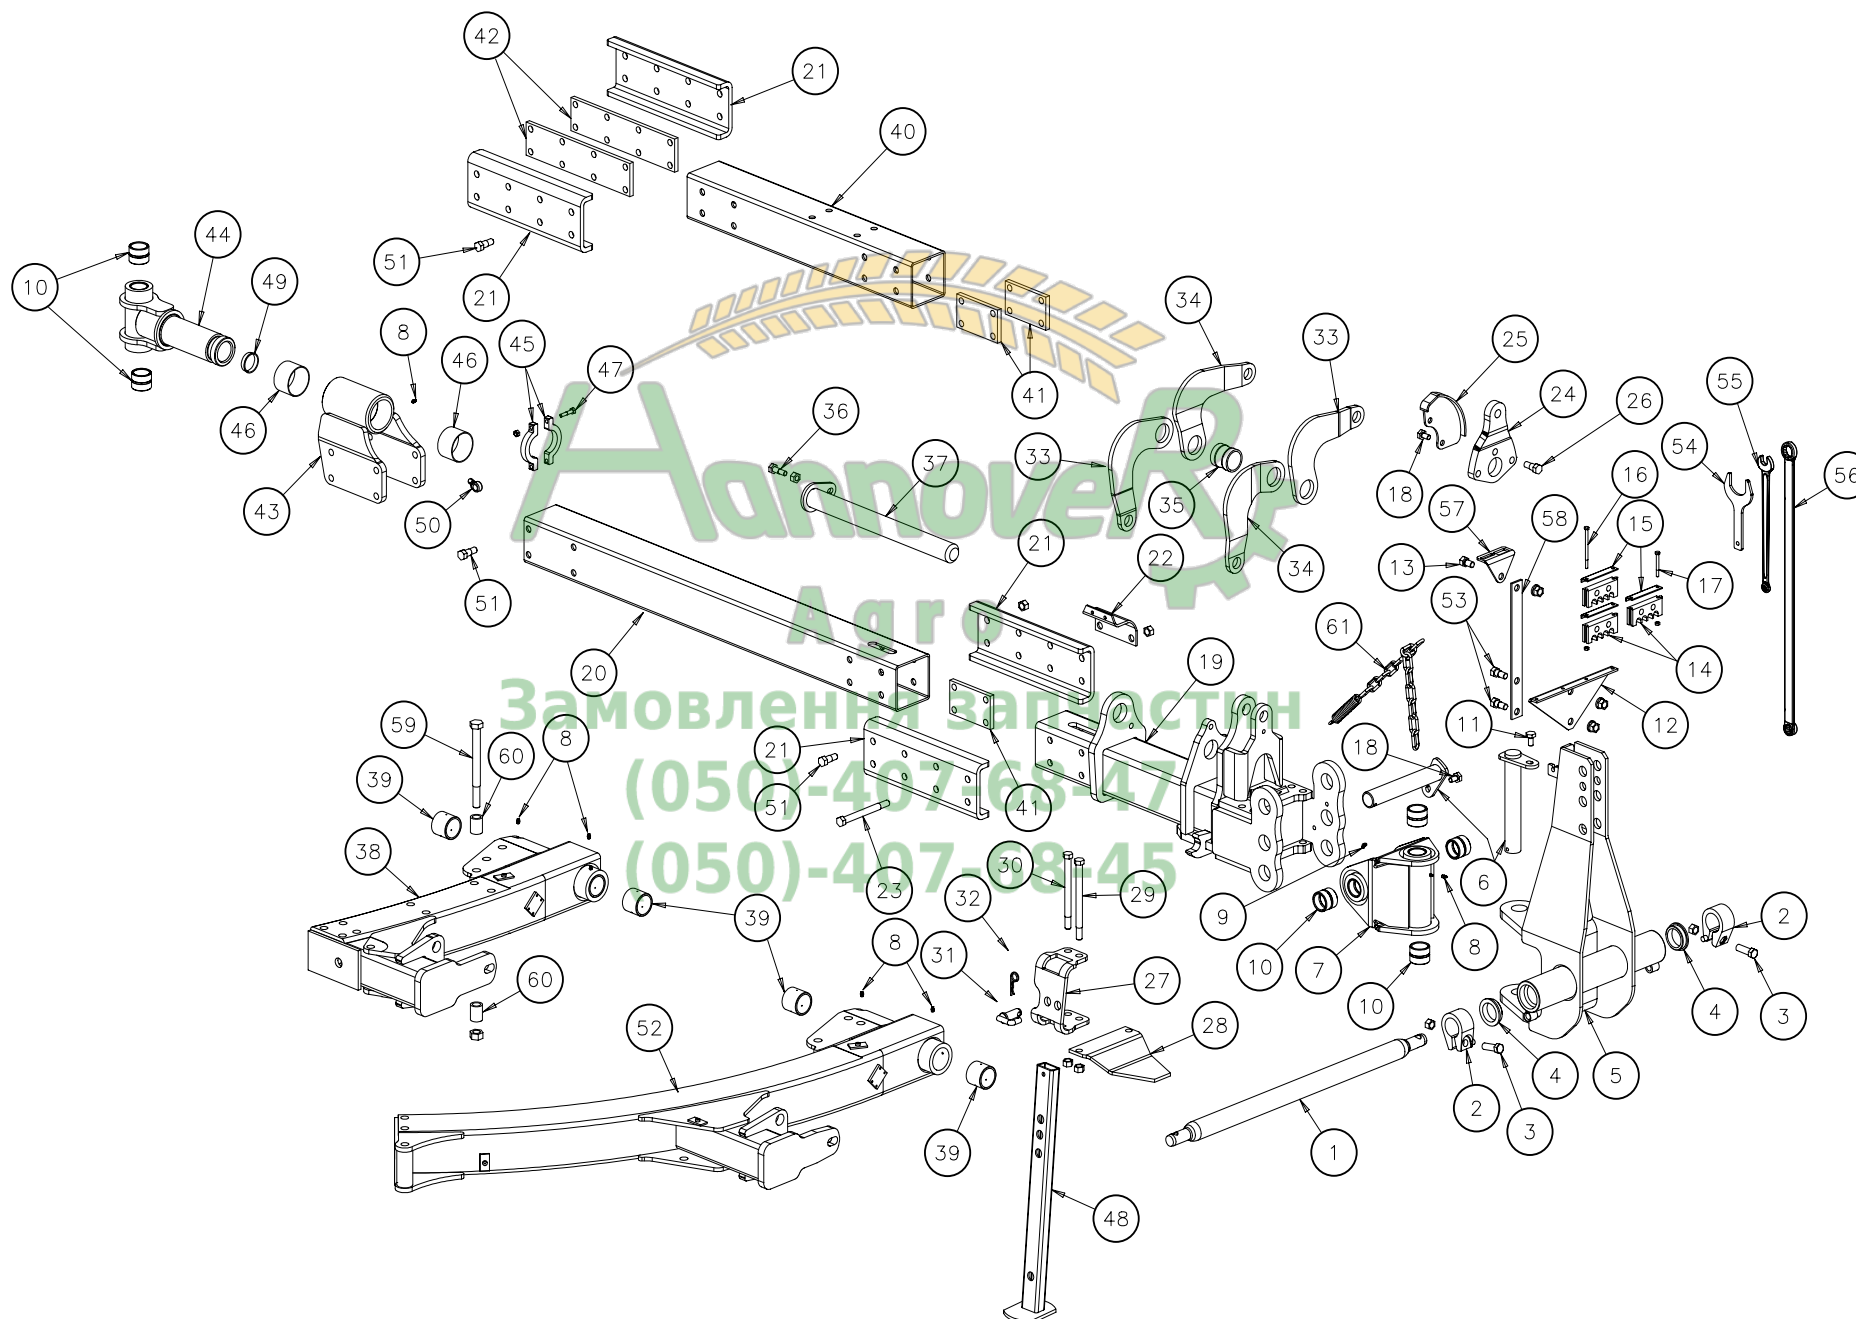


1	KK 06 43 21	Cross shaft cat. III, 965 mm	KK 08 18 86	Tube 6 furrow, PM/RM-115 (From 01.02.01) (Before 15.01.02)	44	KK 08 12 04	Link w/bushings	
	KK 07 43 89	Cross shaft cat. IV, 965 mm			45	KK 07 91 53	Locking for axle	
2	KK 06 43 60	Collar	KK 08 23 74	Tube 6 furrow, PM/RM-115 (From 15.01.02)	46	KK 01 16 68	Slide bearing	
3	KK 03 28 60	Hex screw M20 x 60 mm w/nut	KK 08 18 87	Tube 7 furrow, PM/RM-115 (From 01.02.01) (Before 15.01.02)	47	KK 03 51 09	Hex screw M10 x 50 mm w/lock nut	
4	KK 06 43 17	Bushing			48	KK 07 72 86	Machine stand	
5	KK 08 11 50	Headstock	KK 08 23 75	Tube 7 furrow, PM/RM-115 (From 15.01.02)	49	KK 01 09 67	Cover for link	
6	KK 07 88 98	Axle	KK 08 18 88	Tube 8 furrow, PM/RM-115 (From 01.02.01) (Before 15.01.02)	50	KK 06 12 91	Threaded piece	
7	KK 07 97 65	Link w/bushings			51	KK 03 28 45	Hex screw M20 x 45 mm	
8	KK 02 99 20	Grease nipple	KK 08 23 76	Tube 8 furrow, PM/RM-115 (From 15.01.02)	52	KK 07 70 31	Lift arm 6 furrow w/bushing cpl. (in furrow/onland)	
9	KK 02 99 27	Grease nipple w/45° angle				KK 07 72 07	Lift arm 7 furrow w/bushing cpl. (in furrow/onland)	
10	KK 01 16 82	Bushing	21	KK 07 85 64	Plate		KK 07 70 39	Lift arm 8 furrow w/bushing cpl. (in furrow/onland)
11	KK 03 27 30	Hex screw M16 x 30 mm	22	KK 08 10 98	Plate for hose holder			
12	KK 06 25 05	Bracket for fixing	23	KK 03 28 20	Hex screw M20 x 200 mm	53	KK 03 52 36	Hex screw M20 x 40 mm w/flange nut
13	KK 03 52 35	Hex screw M20 x 30 mm w/flange nut	24	KK 07 72 66	Fixing for cylinder	54	KK 01 06 55	Spanner NV 70
14	KK 01 21 85	Fixing for two hoses	25	KK 07 72 67	Support	55	KK 01 06 06	Spanner NV 19 - 27
15	KK 06 25 06	Piece for fixing	26	KK 03 28 45	Hex screw M20 x 45 mm	56	KK 01 06 50	Spanner NV 27 - 36
16	KK 03 24 03	Hex screw M8 x 130 mm w/nut	27	KK 07 72 30	Fixing for machine stand	57	KK 06 25 00	Holder for spanner
17	KK 03 24 75	Hex screw M8 x 75 mm w/nut	28	KK 08 10 44	Support for headstock (Before 01.10.00) (Replaced by pos. 61)	58	KK 06 24 58	Fixing for holder
18	KK 03 27 25	Hex screw M16 x 27 mm	29	KK 03 28 43	Hex screw M20 x 250 mm w/nut	59	KK 03 29 26	Hex screw M24 x 265 mm w/nut
19	KK 07 71 91	Fixing device (Before 01.10.00)	30	KK 03 28 37	Hex screw M20 x 235 mm w/nut	60	KK 07 17 34	Bushing
	KK 08 00 80	Fixing device (From 01.10.00, serial no. PM179 and RM131)	31	KK 07 72 31	Bolt for locking	61	KK 08 21 77	Chain w/spring (From 01.10.00, serial no. PM179 and RM131)
20	KK 08 12 17	Tube 6 furrow, PM/RM-100 (Before 15.01.02)	32	KK 02 97 70	Pin			
	KK 08 23 70	Tube 6 furrow, PM/RM-100 (From 15.01.02)	33	KK 07 72 81	Arm bended			
	KK 08 12 18	Tube 7 furrow, PM/RM-100 (Before 15.01.02)	34	KK 07 72 80	Arm streight			
	KK 08 23 71	Tube 7 furrow, PM/RM-100 (From 15.01.02)	35	KK 07 85 50	Spacer for arm			
	KK 08 12 19	Tube 8 furrow, PM/RM-100 (Before 15.01.02)	36	KK 03 27 50	Hex screw M16 x 50 mm w/ntu			
	KK 08 23 72	Tube 8 furrow, PM/RM-100 (From 15.01.02)	37	KK 07 71 37	Axle			
	KK 08 21 39	Tube 9 furrow, PM/RM-100 (From 15.09.00) (Before 15.01.02)	38	KK 07 72 08	Lift arm w/bushings cpl.			
	KK 08 23 73	Tube 9 furrow, PM/RM-100 (From 15.01.02)	39	KK 01 16 91	Bushing			
			40	KK 08 12 15	Extension tube			
			41	KK 08 12 14	Threaded plate, 4 holes			
			42	KK 08 12 16	Threaded plate, 8 holes			
			43	KK 07 72 09	Tube for link w/slide bearings (Before 15.01.02)			
			KK 08 45 42	Tube for link w/slide bearings (From 15.01.02)				

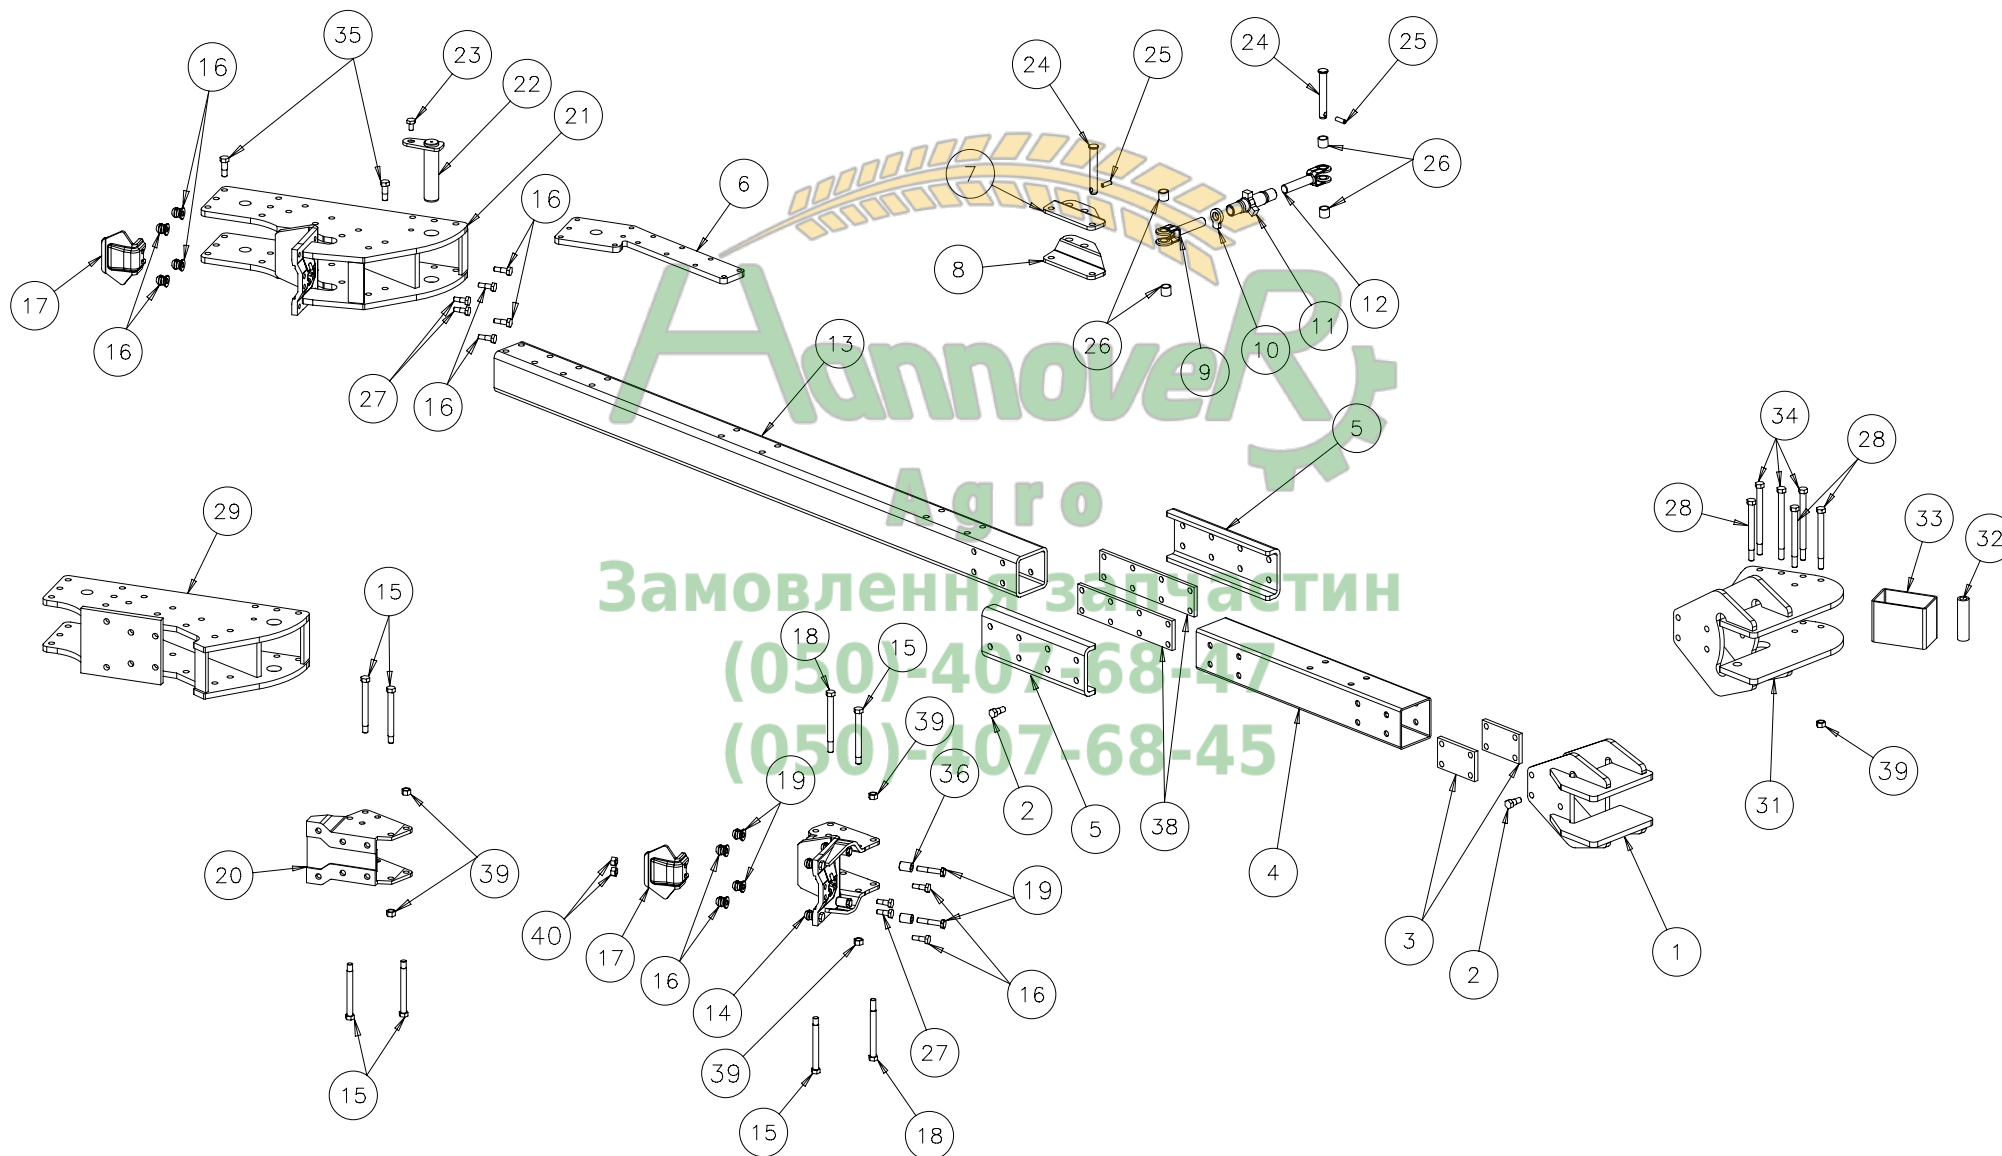


1	KK 08 12 30	Fixing device	21	KK 08 14 90	Fixing device, PM100 - 14" (Before 15.01.02)
2	KK 03 28 45	Hex screw M20 x 45 mm		KK 08 12 08	Fixing device, PM100 - 16" (Before 15.01.02)
3	KK 08 12 14	Threaded plate, 4 holes		KK 08 45 45	Fixing device, PM100 - 14" & PM115 - 16" (From 15.01.02)
4	KK 08 12 15	Extension tube		KK 08 45 46	Fixing device, PM100 - 16" & PM115 - 18" (From 15.01.02)
5	KK 07 85 64	Plate		KK 08 45 47	Fixing device, PM100 - 18" (From 15.01.02)
6	KK 08 12 16	Threaded plate, 8 holes (Before 15.01.02)	22	KK 07 90 75	Axle w/lock plate
	KK 08 24 43	Threaded plate, 14" (From 15.01.02)	23	KK 03 27 25	Hex screw M16 x 27 mm
	KK 08 24 44	Threaded plate, 16" (From 15.01.02)	24	KK 01 03 35	Bolt w/head D25.3 x 155 mm
	KK 08 24 45	Threaded plate, 18" (From 15.01.02)	25	KK 01 10 20	Roll pin D12 x 40 mm
7	KK 08 12 33	Fixing for stay, upper	26	KK 01 01 53	Bushing
8	KK 08 12 34	Fixing for stay, lower	27	KK 03 27 45	Hex screw M16 x 45 mm
	KK 08 12 33 R	Fixing for stay, upper and lower (pos. 7 and pos. 8 are delivered together)	28	KK 03 28 21	Hex screw M20 x 210 mm w/nut (for Ukraine only) (From 01.04.00)
9	KK 35 11 72	Screw R	29	KK 08 14 03	Fixing device, RM100 - 14" (Before 15.01.02)
	KK 36 11 74	Screw R (for Ukraine only) (From 01.04.00)		KK 08 12 80	Fixing device, RM100 - 16" (Before 15.01.02)
10	KK 35 11 48	Contra nut		KK 08 24 15	Fixing device, RM100 - 14" & RM115 - 16" (From 15.01.02)
11	KK 35 11 70	Tube		KK 08 24 16	Fixing device, RM100 - 16" & RM115 - 18" (From 15.01.02)
	KK 36 11 66	Tube (for Ukraine only) (From 01.04.00)		KK 08 24 17	Fixing device, RM100 - 18" (From 15.01.02)
12	KK 35 11 73	Screw L	31	KK 08 11 17	Fixing device (for Ukraine only) (From 01.04.00)
	KK 36 11 75	Screw L (for Ukraine only) (From 01.04.00)	32	KK 08 11 29	Tube D40 x D25 x 150 mm (for Ukraine only) (From 01.04.00)
13	KK 08 12 10	Tube 3 furrow, front	33	KK 08 11 28	Spacer (for Ukraine only) (From 01.04.00)
	KK 08 18 80	Tube 3 furrow, front L = 1150 (From 01.02.00)	34	KK 03 28 43	Hex screw M20 x 250 mm (for Ukraine only) (From 01.04.00)
	KK 08 12 11	Tube 4 furrow, front	35	KK 03 28 55	Hex screw M20 x 55 mm w/nut
	KK 08 18 81	Tube 4 furrow, front L = 1150 (From 01.02.00)	36	KK 01 01 68	Bushing D30 x d16 x 41
	KK 08 12 12	Tube 5 furrow, front	38	KK 08 12 16	Threaded plate
	KK 08 18 82	Tube 5 furrow, front L = 1150 (From 01.02.00)	39	KK 01 58 30	Nut M20
	KK 08 21 38	Tube 6 furrow, front (From 15.09.00)	40	KK 01 58 25	Nut M16
14	KK 08 45 36	Beam support w/balls PM100 - 14" & PM115 - 16"	Not ill.	KK 36 11 20	Turnbuckle 390 - 520 cpl. (ill. pos. 9 - 12)
	KK 08 45 37	Beam support w/balls PM100 - 16" & PM115 - 18"		KK 36 11 19	Turnbuckle L = 810 - 1180 mm cpl. (ill. pos. 9 - 12) (for Ukraine only) (From 01.04.00)
	KK 08 45 38	Beam support w/balls PM100 - 18"			
15	KK 03 28 22	Hex screw M20 x 190 mm w/nut			
16	KK 07 12 56	2 balls w/bolt M16 x 50 mm and locktite			
17	KK 06 16 37	Plate			
18	KK 03 28 28	Hex screw M20 x 220 mm for 2. beamholder			
	KK 03 28 22	Hex screw M20 x 190 mm for other beamholders			
19	KK 07 12 59	2 balls w/ bolts M16 x 90 mm and locktite			
20	KK 08 24 96	Beam support, RM100 - 14" & RM115 - 16"			
	KK 08 24 97	Beam support, RM100 - 16" & RM115 - 18"			
	KK 08 24 98	Beam support, RM100 - 18"			

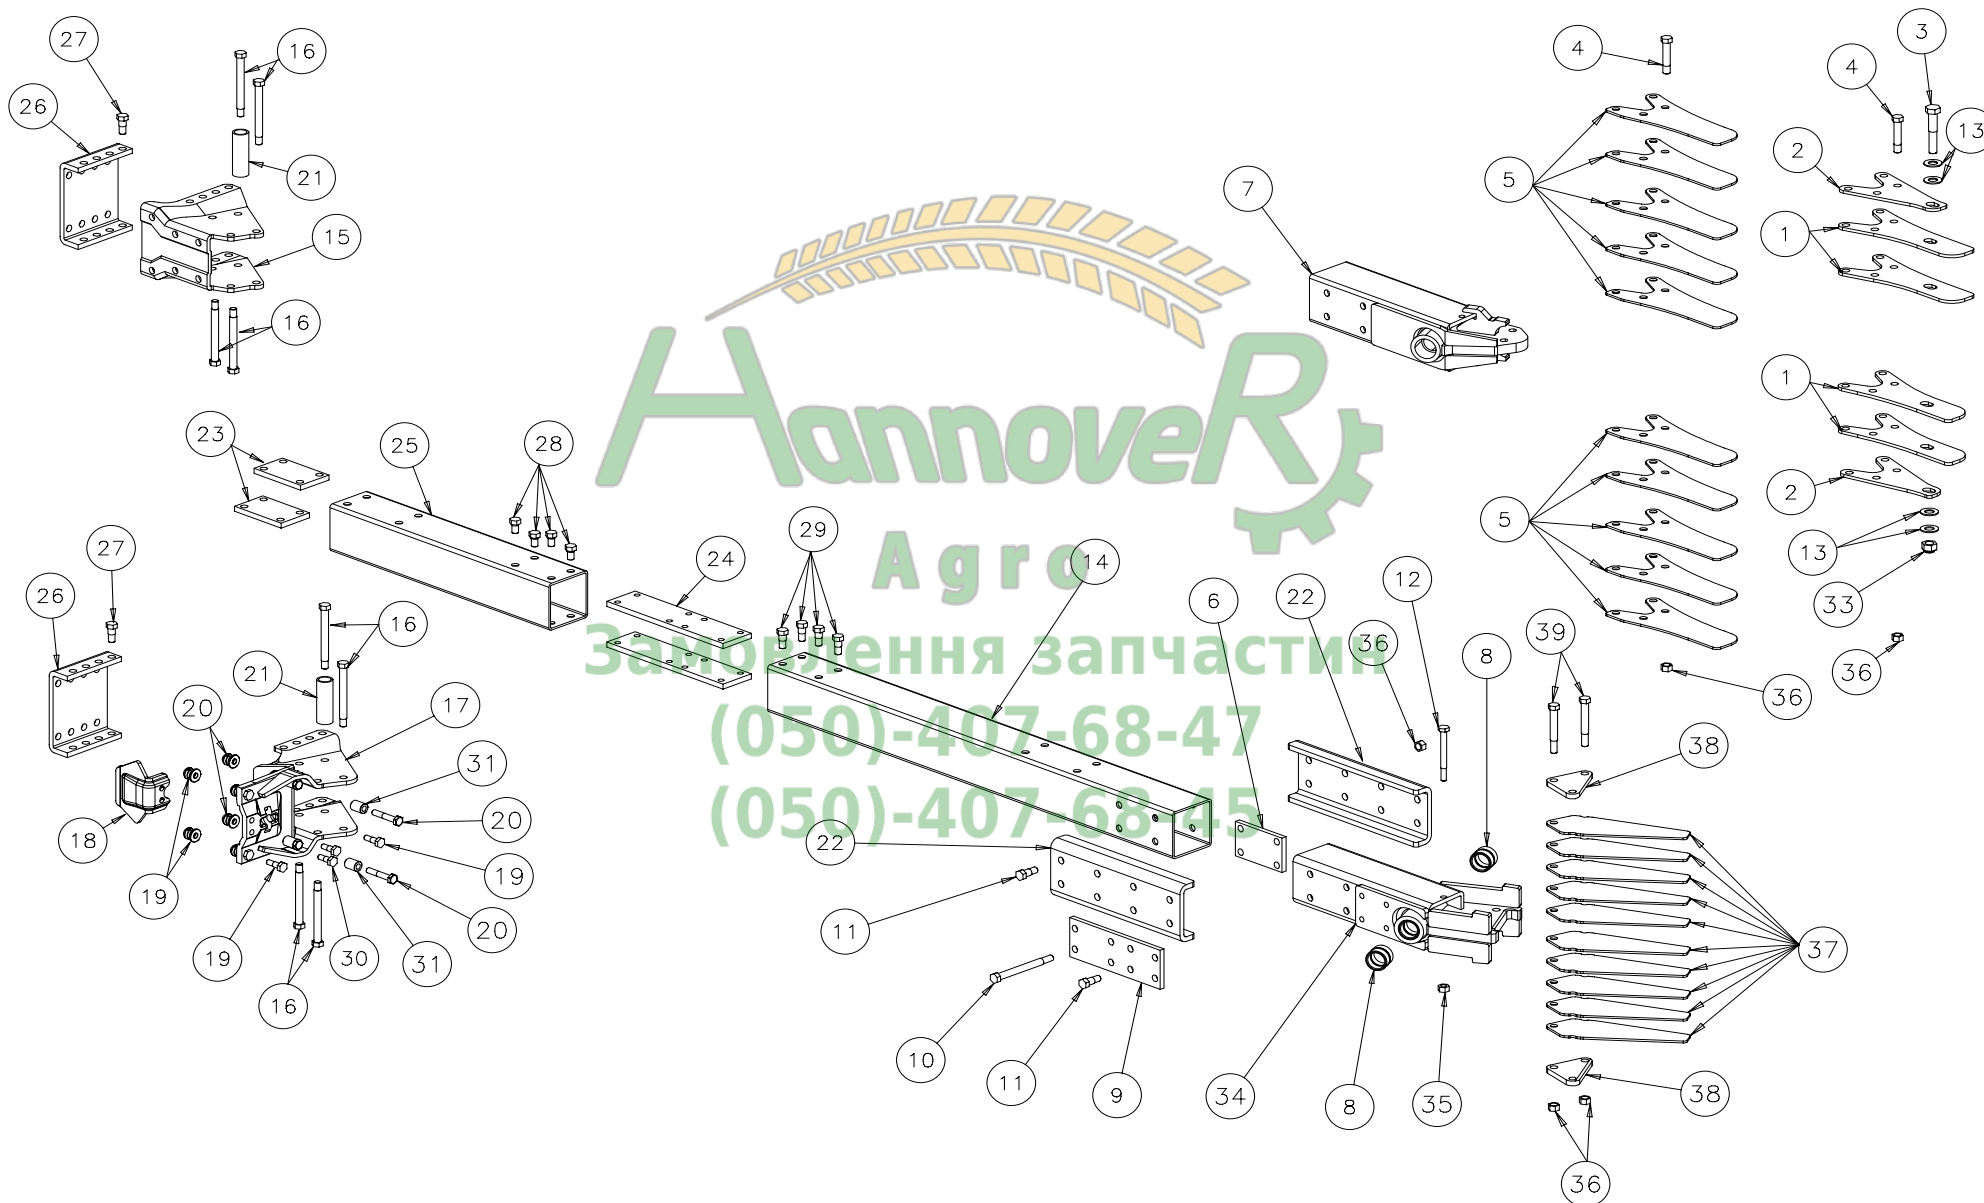

1	KK 08 12 65	Leaf spring (Before 01.02.00)	23	KK 08 12 14	Connecting piece, inner (From 01.09.99)
2	KK 08 12 68	Strengthening plate (Before 01.02.00)	24	KK 08 13 40	Threaded plate for extension kit (From 01.05.00)
3	KK 03 51 98	Hex screw M24 x 130 mm	25	KK 08 13 19	Extension tube EM/LM-100 (From 01.05.00)
4	KK 03 28 24	Hex screw M20 x 105 mm		KK 08 18 85	Extension tube PM/RM, L = 1150 (From 01.02.01)
5	KK 08 18 89	Leaf spring, 5 pieces (From 15.03.01) (Replaces KK081265 + KK081268, 3 pieces)	26	KK 08 13 69	Plate for beam support (From 15.08.00)
6	KK 08 12 14	Connecting piece, inner	27	KK 03 28 45	Hex screw M20 x 45 mm (From 15.08.00)
7	KK 08 13 02	Tube w/bracket for springs (for PM/RM100 - 16") (Before 15.06.03)	28	KK 03 28 30	Hex screw M20 x 30 mm
	KK 08 14 01	Tube w/bushing (for PM/RM100 - 14") (From 15.08.00) (Before 15.06.03)	29	KK 03 28 45	Hex screw M20 x 45 mm
	KK 08 45 44	Tube w/bushing (for PM/RM100 - 18") (From 15.01.02) (Before 15.06.03)	30	KK 03 27 45	Hex screw M16 x 45 mm
8	KK 01 16 82	Bushing D62 x D50 x 50 mm	31	KK 01 01 68	Bushing D30 x d16 x 41
9	KK 08 12 69	Connecting piece, outer	33	KK 01 60 01	M24 lock nut
10	KK 03 28 21	Hex screw M20 x 210 mm	34	KK 08 84 60	Tube (w/ bracket) for springs 14" w/ bushing (From 15.06.03)
11	KK 03 28 50	Hex screw M20 x 50 mm		KK 08 84 61	Tube (w/ bracket) for springs 16" w/ bushing (From 15.06.03)
12	KK 03 27 13	Hex screw M16 x 160 mm		KK 08 84 62	Tube (w/ bracket) for springs 18" w/ bushing (From 15.06.03)
13	KK 01 28 73	Washer D50 x D25.4 x 3 mm	35	KK 01 58 25	Nut M16
14	KK 08 12 13	Tube, rear (3 furrows)PM100	36	KK 01 58 30	Nut M20
	KK 08 12 23	Tube, rear (2 + 1 furrows) PM/RM100	37	KK 08 84 37	Leaf spring (From 15.06.03)
	KK 08 18 83	Tube 2 furrow, rear L = 1150 (From 01.02.01)	38	KK 08 84 38	Plate (From 15.06.03)
	KK 08 18 84	Tube 3 furrow, rear L = 1150 (From 01.02.01)	39	KK 03 28 15	Hex screw M20 x 140 mm
15	KK 08 12 91	Beam support, rear (for RM100 - 16") (Before 01.06.99)			
	KK 08 16 20	Beam support, rear (for RM100 - 16") (From 01.06.99 - 15.08.00)			
	KK 08 12 93	Beam support, rear (for RM100 - 14") (From 15.08.00) (for RM115 - 16") (From 01.02.01)			
	KK 08 13 76	Beam support, rear (for RM100 - 16") (From 15.08.00) (for RM115 - 18") (From 01.02.01)			
16	KK 03 28 22	Hex screw M20 x 190 mm (Before 01.09.99)			
	KK 03 28 50	Hex screw M20 x 50 mm (From 01.09.99)			
17	KK 08 13 91	Beam support w/balls, rear (for PM100 - 16") (Before 01.06.99)			
	KK 08 13 92	Beam support w/balls, rear (for PM100 - 16") (From 01.06.99 - 01.11.00)			
	KK 08 17 83	Beam support w/balls, rear (for PM100 - 16") (From 01.11.00) (for PM115 - 18") (From 01.02.01)			
	KK 08 13 59	Beam support w/balls, rear (for PM100 - 14") (From 01.11.00) (for PM115 - 16 ") (From 01.02.01)			
18	KK 06 16 37	Plate			
19	KK 07 12 56	2 balls w/bolt M16 x 50 mm and locktite			
20	KK 07 12 59	2 balls w/bolt M16 x 90 mm and locktite			
21	KK 07 58 89	Bushing (Before 01.09.99)			
22	KK 07 85 64	Supporting plate			


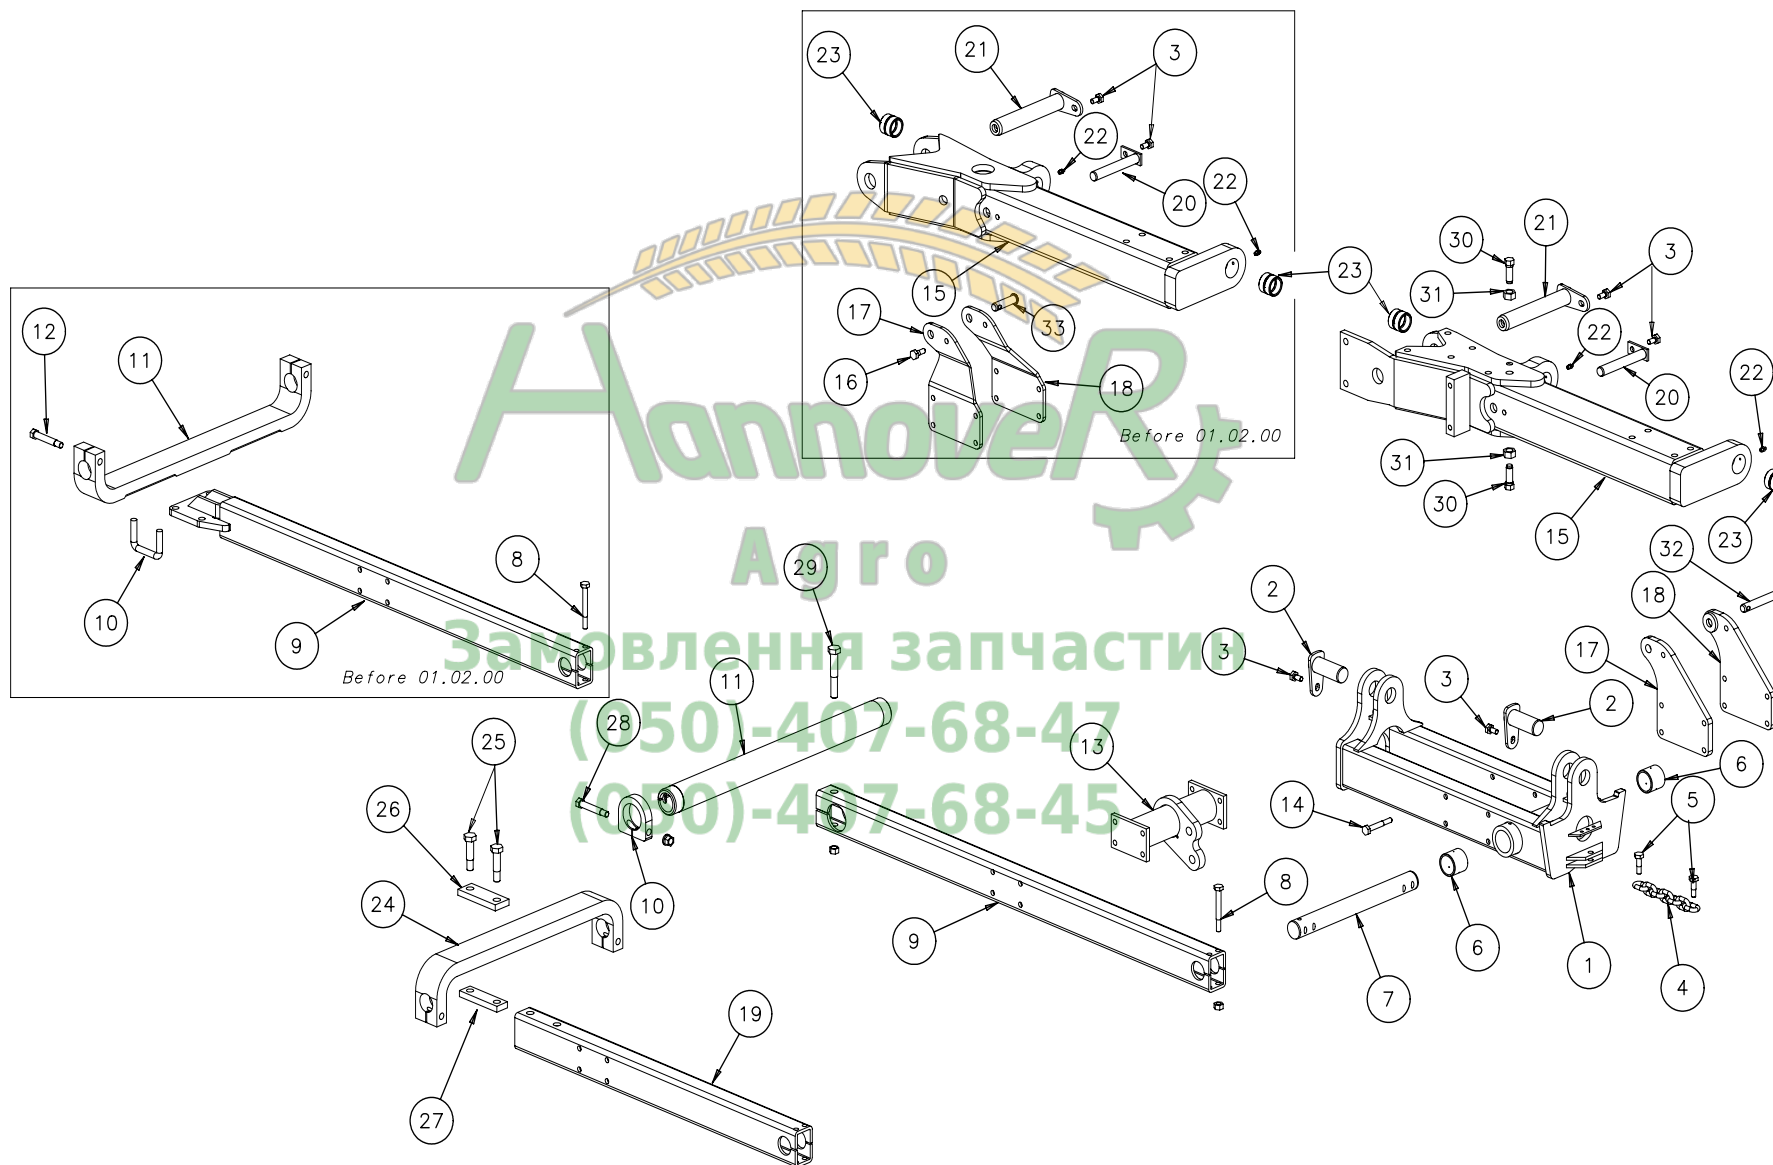


1	KK 08 12 29	Truck w/bearings	29	KK 03 29 08	Hex screw M24 x 150 mm w/nut (From 01.02.00)
2	KK 07 21 46	Axle	30	KK 06 70 39	Foot screw M24 x 90 mm (From 01.02.00)
3	KK 03 27 30	Hex screw M16 x 30 mm	31	KK 06 18 99	Cone nut M24 (From 01.02.00)
4	KK 07 71 72	Chain	32	KK 01 03 23	Bolt w/head D25.3 x 150 mm (From 01.02.00)
5	KK 03 51 43	Hex screw M16 x 55 mm w/lock nut	33	KK 01 03 28	Bolt w/head D25.3 x 78 mm (Before 01.02.00)
6	KK 01 16 91	Bushing			
7	KK 07 72 72	Axle			
8	KK 03 27 16	Hex screw M16 x 140 mm w/nut			
9	KK 08 12 71	Arm for wheel (for PM) (Before 01.02.00)			
	KK 08 11 82	Arm for wheel (for PM) (From 01.02.00)			
10	KK 19 54 15	U-bolt M20 x 100 x 80 mm w/flange nut (Before 01.02.00)			
	KK 08 11 94	Clamp (From 01.02.00)			
11	KK 08 12 70	Wheel suspension for PM (Before 01.02.00)			
	KK 08 11 98	Wheel suspension for PM, L = 1020 (From 01.02.00)			
12	KK 03 51 79	Hex screw M20 x 120 mm w/flange nut			
13	KK 08 12 74	Fixing for cylinder			
14	KK 03 27 02	Hex screw M16 x 110 mm			
15	KK 08 12 09	Middle frame section w/bushing (Before 01.02.00)			
	KK 08 11 09	Middle frame section w/bushing (From 01.02.00)			
16	KK 03 27 40	Hex screw M16 x 40 mm			
17	KK 08 12 48	Cylinder plate R (Before 01.02.00) (as spare part KK 08 12 98 + KK 08 12 99)			
	KK 08 12 98	Cylinder plate R (From 01.02.00)			
18	KK 08 12 49	Cylinder plate L (Before 01.02.00) (as spare part KK 08 12 98 + KK 08 12 99)			
	KK 08 12 99	Cylinder plate L (From 01.02.00)			
19	KK 08 12 83	Arm for wheel (for RM)			
20	KK 07 78 82	Axle D30 x 202 mm			
21	KK 08 12 58	Axle D50 x 300 mm			
22	KK 02 99 20	Grease nipple			
23	KK 01 16 82	Bushing			
24	KK 08 12 78	Wheel suspension (for RM)			
25	KK 03 29 00	Hex screw M24 x 100 mm			
26	KK 08 12 84	Plate			
27	KK 08 12 85	Threaded piece			
28	KK 03 51 79	Hex screw M20 x 120 mm w/flange nut (From 01.02.00)			

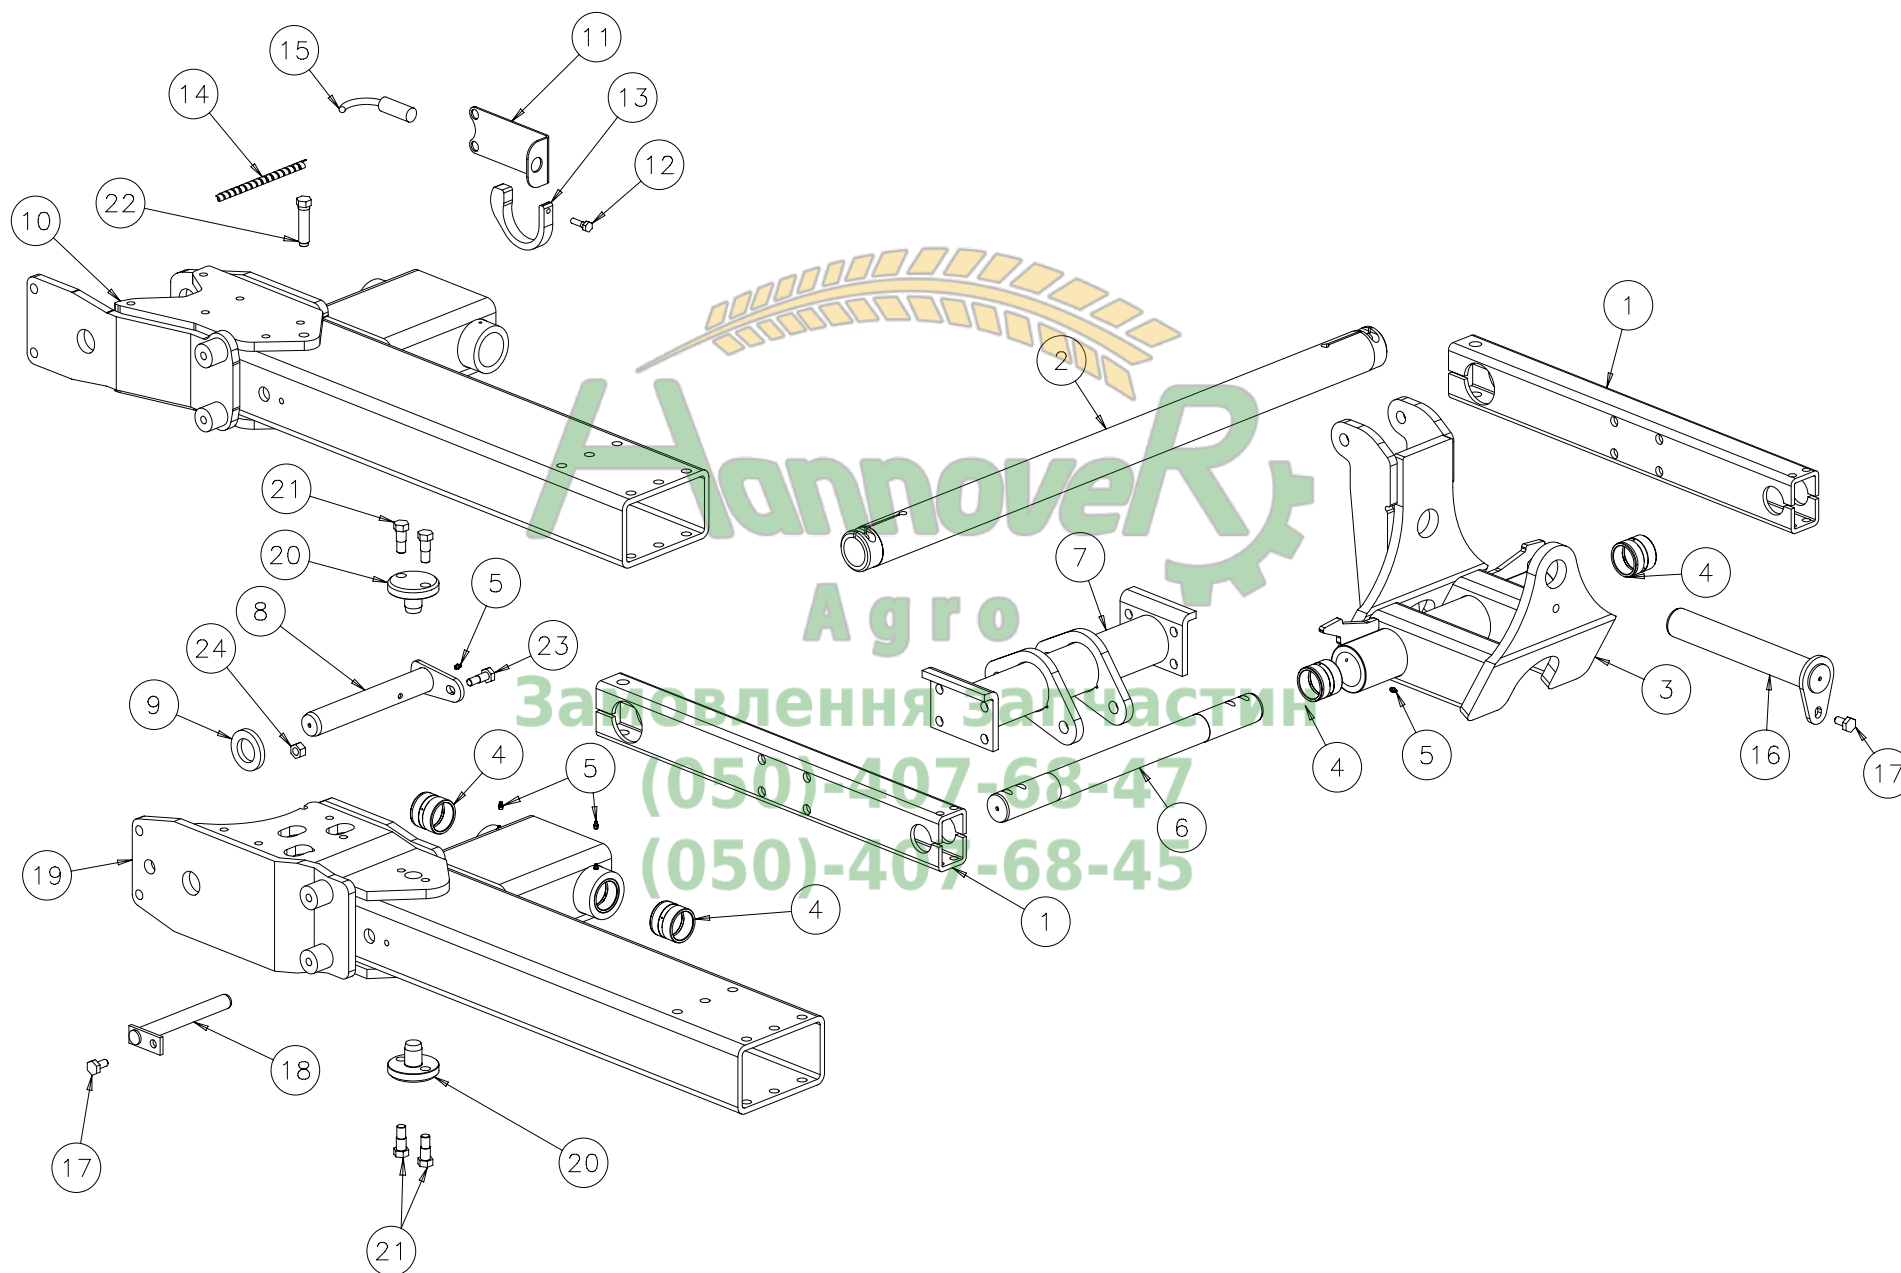

1	KK 08 24 49	Arm for wheel
2	KK 08 24 39	Wheel suspension
3	KK 08 45 43	Truck w/bushing
4	KK 01 16 91	Bushing
5	KK 02 99 20	Grease nipple
6	KK 08 24 48	Axle
7	KK 08 24 35	Cylinder bracket
8	KK 08 24 46	Axle w/lock plate D50 x 335 mm
9	KK 08 24 59	Washer
10	KK 08 45 40	Middle frame section w/bushing, PM (Before 15.06.03)
	KK 08 45 41	Middle frame section w/bushing, RM (Before 15.06.03)
11	KK 08 82 68	Holder for indicator dual control, PM/RM
12	KK 03 26 40	Hex screw M12 x 40 mm
13	KK 08 82 67	Cam for dual control, PM/RM
14	KK 01 15 96	Hose wrapper D12,5 x 250 mm
15	KK 07 89 91	Indicator dual control
16	KK 08 80 28	Axle w/ lock plate D60 x 400 mm
17	KK 03 27 30	Hex screw M16 x 30 mm
18	KK 06 87 50	Axle w/ lock plate D30 x 255 mm
19	KK 08 84 55	Middle frame section w/ bushing PM (From 15.06.03)
	KK 08 84 56	Middle frame section w/ bushing RM (From 15.06.03)
20	KK 08 84 53	Axle w/ flange
21	KK 03 28 50	Hex screw M20 x 50 mm
22	KK 06 70 79	Hex screw M24 x 90 mm w/ nut (Before 15.06.03)
23	KK 03 27 50	Hex screw M16 x 50 mm
24	KK 01 58 25	Nut M16




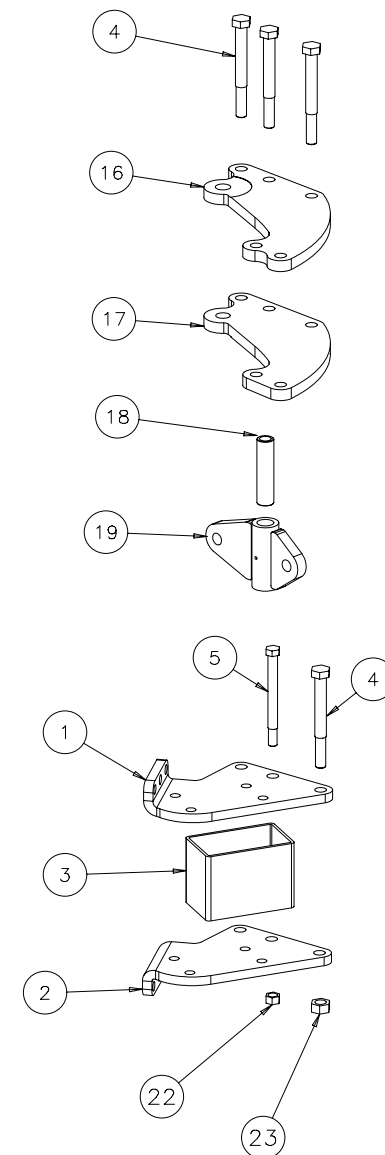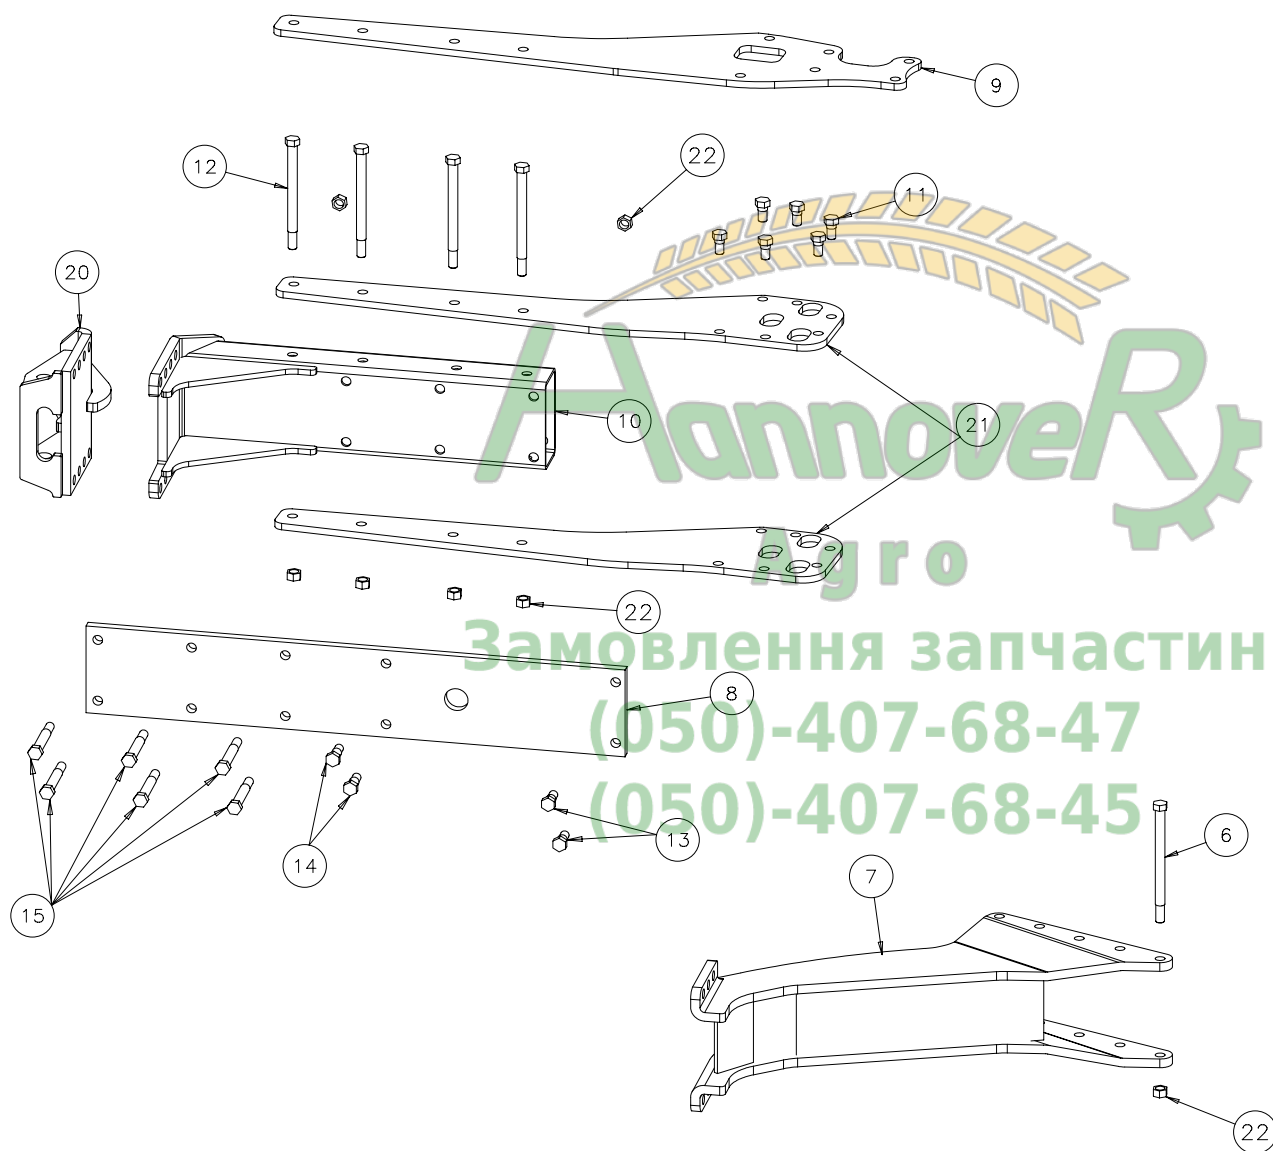

1	KK 07 70 90	Clamping plate, upper
2	KK 07 70 91	Clamping plate, lower
3	KK 07 70 92	Distance tube
4	KK 03 29 31	Hex screw M24 x 230 mm
5	KK 03 28 21	Hex screw M20 x 210 mm
6	KK 03 28 26	Hex screw M20 x 260 mm (for PL/RL)
7	KK 07 72 90	Fixing for packomat rear section (for PL/RL)
8	KK 08 11 38	Plate (for PM/RM)
9	KK 08 11 59	Plate (for PM/RM) (Before 15.01.02)
	KK 08 24 29	Plate (for PM/RM) (From 15.01.02) (Before 15.06.03)
10	KK 08 11 55	Fixing for packomat rear section (for PM/RM)
11	KK 03 28 35	Hex screw M20 x 35 mm (for PM/RM)
12	KK 03 28 36	Hex screw M20 x 240 mm (for PM/RM)
13	KK 03 28 45	Hex screw M20 x 45 mm (for PM/RM)
14	KK 03 28 55	Hex screw M20 x 55 mm (for PM/RM)
15	KK 03 28 15	Hex screw M20 x 140 mm (for PM/RM)
16	KK 08 21 81	Clamping plate, upper (for S-arm, from 01.02.01)
17	KK 08 21 82	Clamping plate, lower (for S-arm, from 01.02.01)
18	KK 08 21 83	Bushing (for S-arm, from 01.02.01)
19	KK 08 21 84	Cylinder bracket (for S-arm, from 01.02.01)
20	KK 08 21 90	Fixing bracket (for S-arm, from 01.02.01)
21	KK 08 84 39	Plate Packomat (From 15.06.03)
22	KK 01 58 30	Nut M20
23	KK 01 58 41	Nut M24



Замовлення запчастин
(050)-407-68-47
(050)-407-68-45

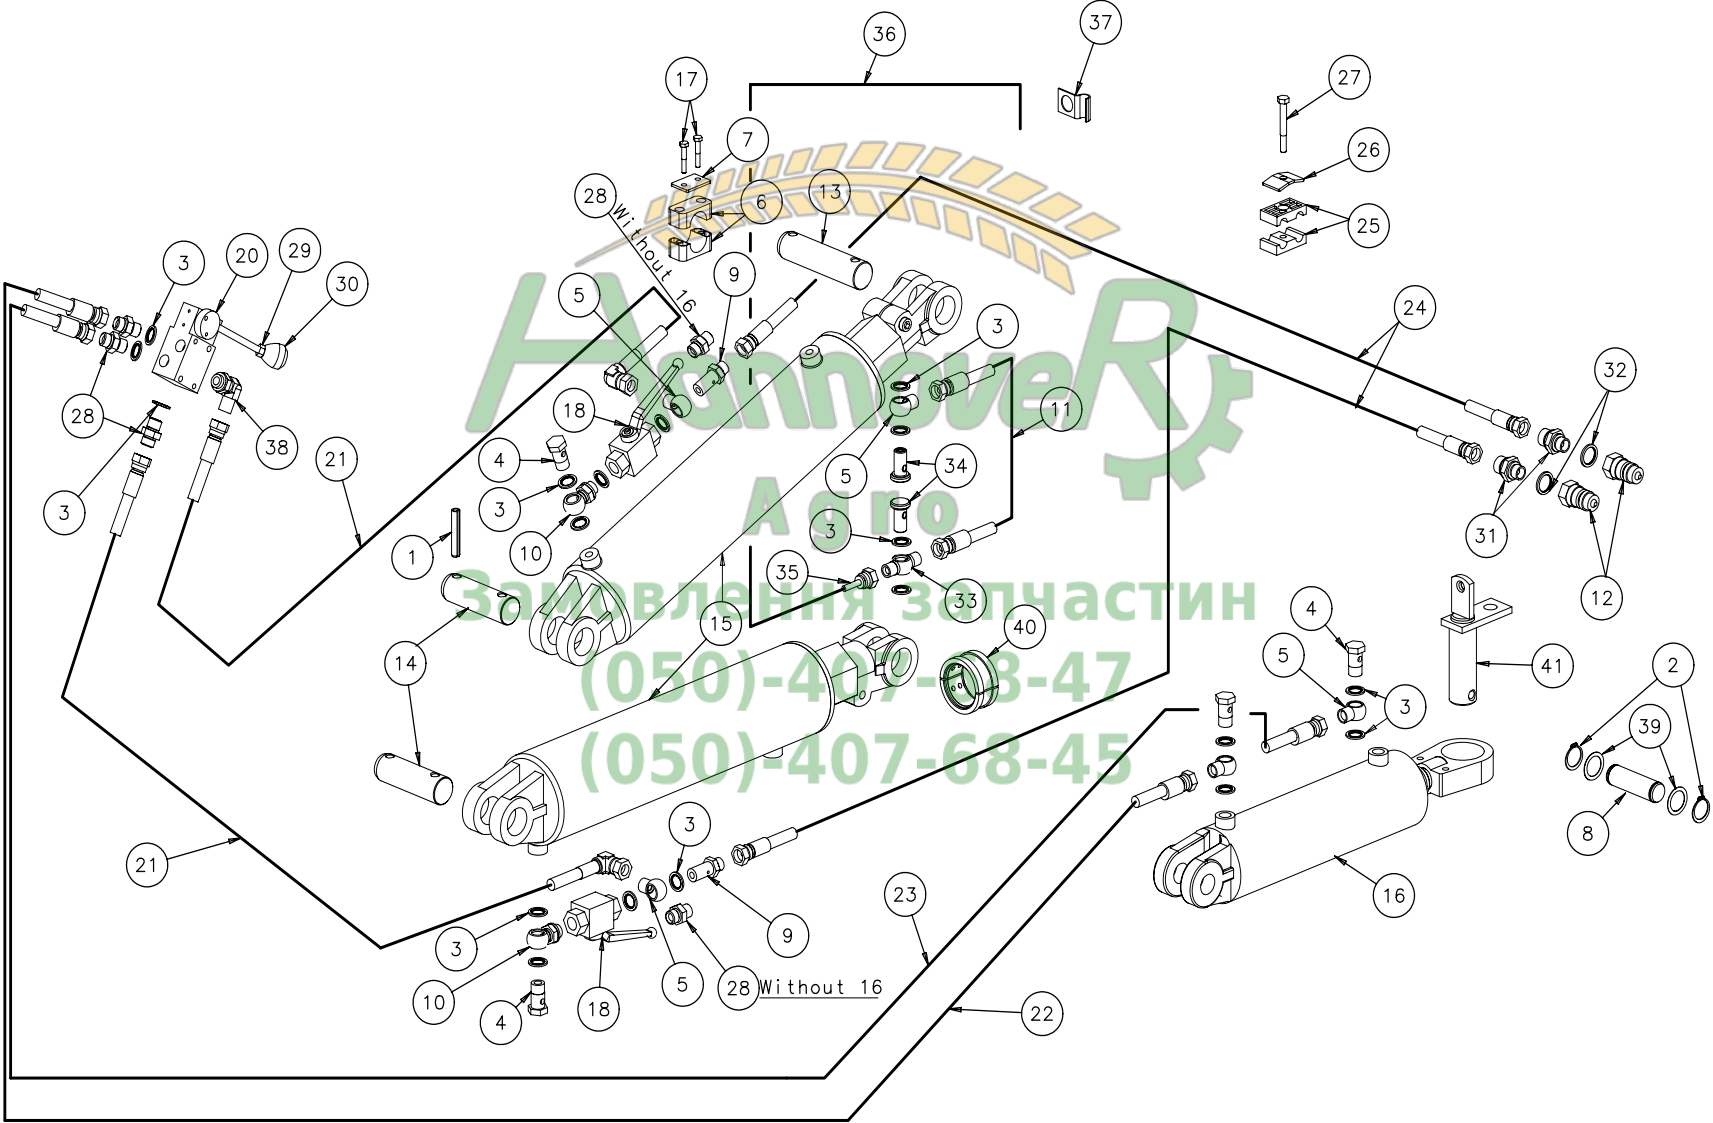


1	KK 01 10 59	Roll pin D10 x 60 mm	30	KK 07 76 82	Steering for valve
2	KK 01 12 77	Circlip (Before 01.10.00)	31	KK 01 20 60	Threaded coupling 3/8" - 1/2"
3	KK 01 15 85	Gasket ring	32	KK 01 15 65	Gasket ring 1/2"
4	KK 01 20 59	Banjo bolt 3/8" x 31 mm	33	KK 01 25 70	Banjo double
	KK 01 20 84	Banjo bolt 3/8" x 31 mm w/2 mm choke (for PM/RM when using Packomat)	34	KK 01 25 51	Banjobolt w/filter
	KK 01 20 85	Banjo bolt 3/8" x 31 mm w/3 mm choke (for PL/RL when using Packomat)	35	KK 01 35 18	Swivel 3/8" w/sleeve
5	KK 01 20 62	Banjo 3/8" - 3/8"	36	KK 01 35 22	Hose 1/4" L=1800 mm
6	KK 01 20 68	Clamp for hoses	37	KK 01 27 00	Clamp
7	KK 01 20 69	Plate for clamp	38	KK 01 27 30	Angle
8	KK 07 72 64	Bolt (Before 01.10.00)	39	KK 01 29 80	Washer (Before 01.10.00)
9	KK 01 23 07	Banjo 3/8" x 31 mm w/extra outlet	40	KK 35 22 46	Stop clip
10	KK 01 25 48	Banjo 3/8" w/adjustable end	41	KK 08 21 71	Axle w/lock plate and chain fastener (From 01.10.00, serial no. PL229, RL138, PM179 and RM131)
11	KK 01 26 55	Hose 3/8". L= 350 mm			
12	KK 01 21 14	Quick coupling			
13	KK 07 85 83	Axle			
14	KK 07 85 84	Axle			
15	KK 35 27 79	Cylinder D100 x 400 mm w/adjustable nut (for PL/RL) (Before 15.05.99) (see plate no. 1025)			
	KK 35 38 13	Cylinder D100 x 400 mm (for PL/RL) (From 15.05.99) (Before 01.10.00) (see plate no. 1084)			
	KK 35 38 34	Cylinder D100 x 400 mm (for PL/RL) (From 01.10.00, serial no. PL229 and RL138) (see plate no. 1145)			
	KK 35 27 87	Cylinder D75 x 400 mm w/adjustable nut (for PM/RM) (see plate no. 1025)			
16	KK 35 37 06	Cylinder D75 x 200 mm (optional equipment for PM/RM) (Before 01.10.00) (see plate no. 890)			
	KK 35 27 77	Support cylinder D80 x 240 mm (From 01.10.00, serial no. PL229, RL138, PM179 and RM131) (see plate no. 1104)			
17	KK 03 23 35	Hex screw M6 x 35 mm			
18	KK 01 27 23	Tap 3/8" w/handle			
20	KK 01 23 39	Valve (optional equipment for PM/RM)			
21	KK 01 15 41	Hose 3/8". L= 700 (optional equipment for PM/RM)			
22	KK 01 27 73	Hose 3/8". L= 1300 (optional equipment for PM/RM)			
23	KK 01 27 78	Hose 3/8". L= 1000 (optional equipment for PM/RM)			
24	KK 01 27 96	Hose 3/8". L= 5000			
25	KK 01 25 22	Clamp for hoses			
26	KK 01 23 24	Plate for clamp			
27	KK 03 24 65	Hex screw M8 x 65 mm			
28	KK 01 22 61	Threaded coupling			
29	KK 01 58 11	Nut M8			



1	KK 01 26 55	Hose 3/8", L = 350 mm
2	KK 01 23 25	T - coupling 3/8"
3	KK 01 35 17	Relief valve 3/8", 250 bar
4	KK 01 15 85	Gasket ring 3/8"
5	KK 01 23 07	Banjo bolt 3/8" - 3/8"
6	KK 01 20 62	Banjo 3/8"
7	KK 01 35 19	Hose D6, L = 1000 mm NITRIK



Замовлення запчастин
(050)-407-68-47
(050)-407-68-45

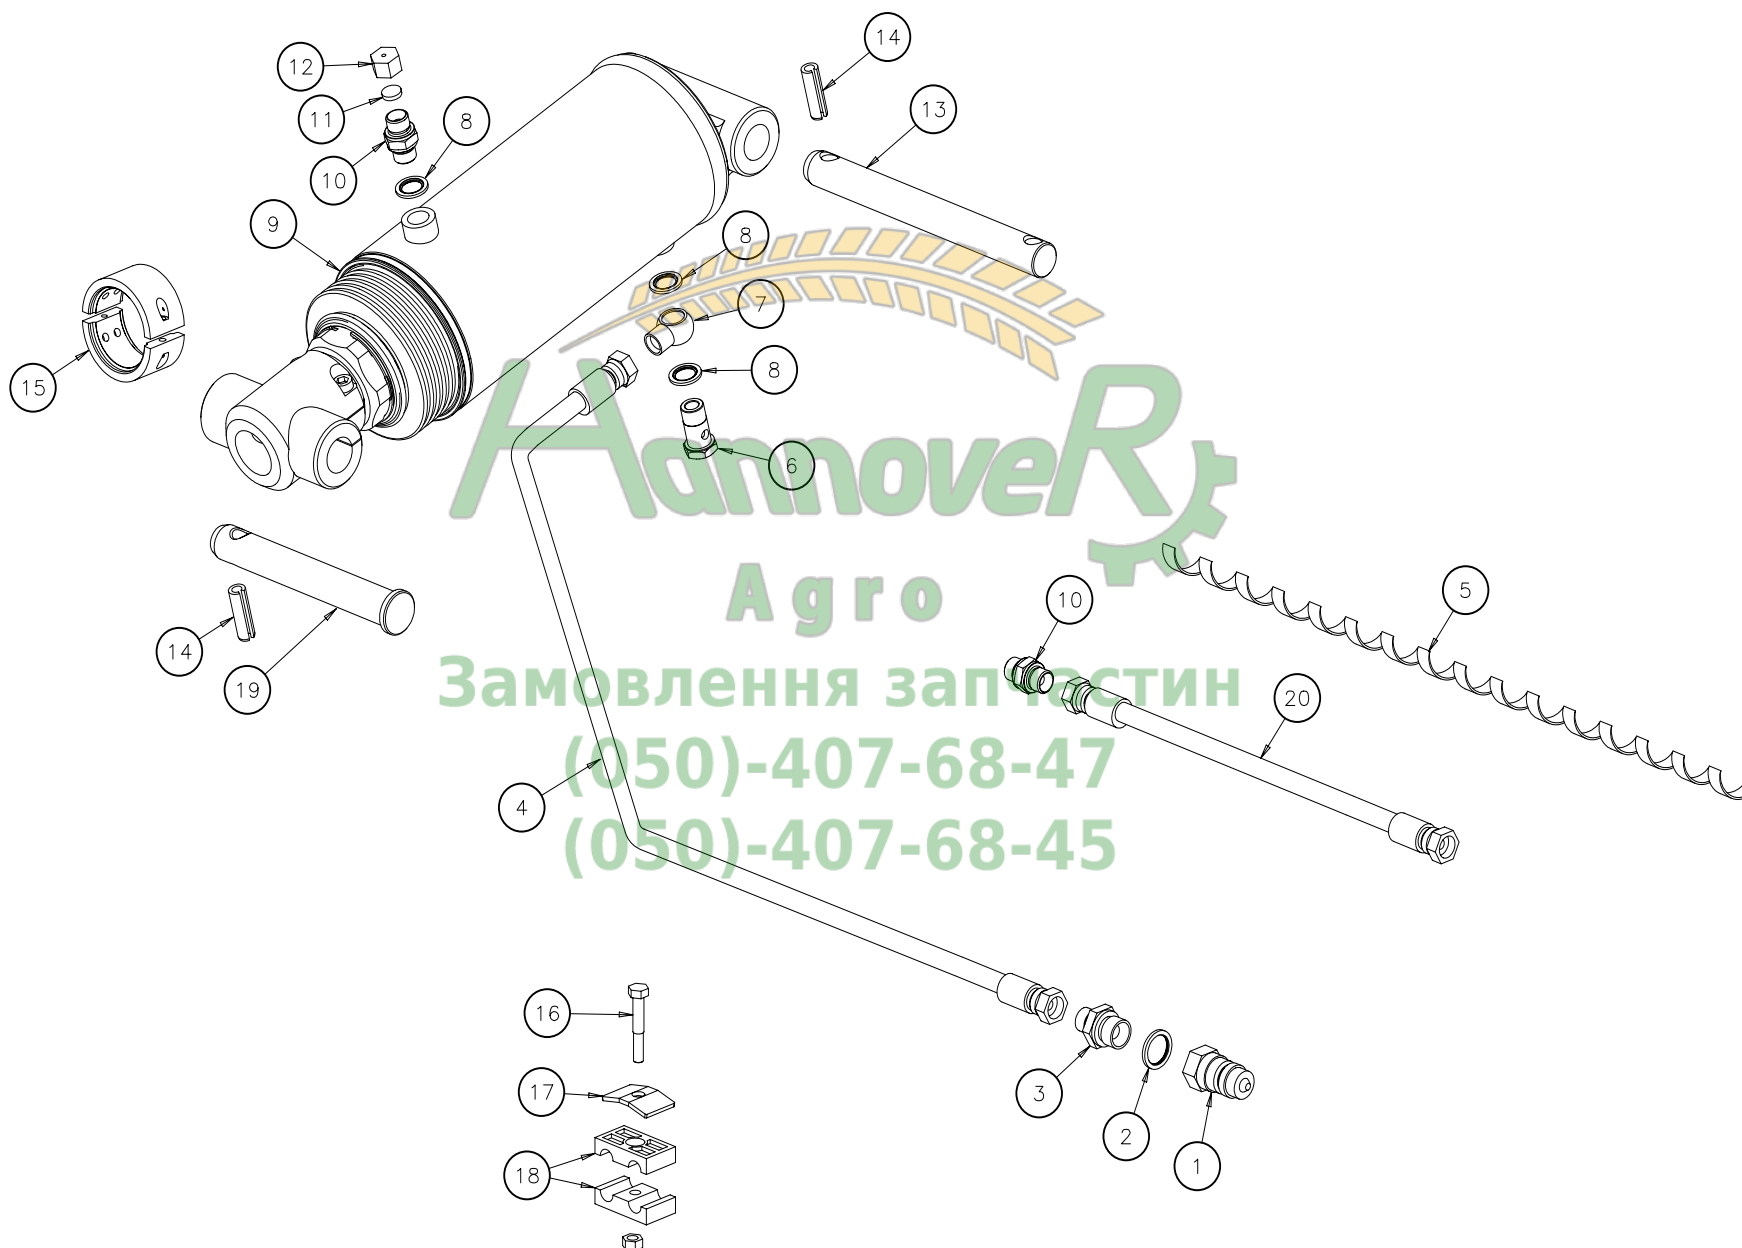

1	KK 01 21 14	Quick coupling
2	KK 01 15 65	Gasket ring 1/2"
3	KK 01 20 60	Threaded coupling 3/8" - 1/2"
4	KK 01 27 80	Hose 3/8" x 8000 mm, PM/RM-100 6 furrow and PM/RM-115 5 - 6 furrow
	KK 01 27 81	Hose 3/8" x 9000 mm, PM/RM-100 7, 8 and 9 furrow and PM/RM-115 7 and 8 furrow (8 and 9 furrow w/pos. 20)
5	KK 01 21 16	Hose wrapper
6	KK 01 20 59	Banjo bolt 3/8"
7	KK 01 20 62	Banjo 3/8"
8	KK 01 15 85	Gasket ring 3/8"
9	KK 35 33 70	Hydraulic cylinder D100 x 215 mm w/stop (see plate no. 1026) (Before 01.06.00)
	KK 35 38 37	Hydraulic cylinder D100 x 200 mm w/stop and bellow (see plate no. 1129) (From 01.06.00) (Before 15.01.02)
	KK 35 45 01	Hydraulic cylinder D115 x 190 mm w/stop and bellow (see plate no. 1210) (From 15.01.02)
10	KK 01 22 61	Threaded coupling 3/8" - 3/8"
11	KK 01 09 61	Filter
12	KK 01 09 60	Filter cap
13	KK 01 04 13	Axle D25 x 210 mm
14	KK 01 10 20	Roll pin D12 x 40 mm
15	KK 35 22 48	Clip
16	KK 03 24 50	Hex screw M8 x 50 mm w/nut
17	KK 01 23 24	Plate for clamp
18	KK 01 25 22	Plastic clamp for hose
19	KK 01 03 37	Bolt w/head D25.3 x 180 mm
20	KK 01 27 78	Hose 3/8" x 1000 mm, PM/RM-100 8 and 9 furrow
	KK 01 22 19	Hose 3/8" x 1600 mm, PM/RM-115 8 furrow





1028 Hydraulic front furrow width adjustment (PL/RL from 01.11.99, PL/RL and PM/RM before 01.08.00)

1	KK 01 03 35	Bolt 25.3 x 155 mm
2	KK 01 20 60	Threaded coupling 3/8" - 1/2"
3	KK 01 10 20	Roll pin D12 x 40 mm
4	KK 01 15 23	Hose 3/8" x 4500 mm
5	KK 01 15 85	Gasket ring 3/8"
6	KK 01 22 61	Threaded coupling 3/8" - 3/8"
7	KK 01 23 24	Plate
8	KK 01 25 22	Fix for hose
9	KK 03 24 45	Hex screw M8 x 45 mm w/nut
10	KK 12 41 57	Bushing
11	KK 35 24 96	Hydraulic cylinder D75 x 130 mm (Before 01.09.99.) (From 01.08.00) (see plate no. 445)
	KK 35 37 10	Hydraulic cylinder D75 x 130 mm w/stop cpl. (From 01.09.99) (Before 01.08.00) (see plate no. 1092)
	KK 35 39 05	Hydraulic cylinder D75 x 200 mm w/stop cpl. For wide wheel with settings. (From 15.01.02) (see plate no. 1195)
12	KK 01 21 14	Quick coupling
13	KK 01 15 65	Gasket ring





1	KK 35 35 80	Hydraulic cylinder D90 x 150 mm cpl. (see plate no. 1063)
2	KK 01 15 96	Hose band
3	KK 07 70 29	Bushing D44,5 x d35,5 x 24 mm (for PL/RL)
	KK 07 70 27	Bushing D44,5 x d35,5 x 46 mm (for PM/RM)
4	KK 01 03 19	Bolt w/head D25.3 x 120 mm (for PL/RL)
	KK 01 03 35	Bolt w/head D25.3 x 155 mm (for PM/RM)
5	KK 01 03 35	Bolt w/head D25.3 x 155 mm
6	KK 01 10 20	Roll pin D12 x 40 mm
7	KK 07 70 27	Bushing D44,5 x d35,5 x 46 mm
8	KK 01 15 85	Gasket ring 3/8"
9	KK 01 20 62	Banjo 3/8", H = 17
10	KK 01 20 59	Banjo bolt 3/8" x 31
11	KK 01 15 12	Hose 3/8", L = 4500 mm
12	KK 01 25 22	Fix for hose
13	KK 01 23 24	Plate
14	KK 03 24 45	Hex screw M8 x 45 mm w/nut
15	KK 01 20 60	Threaded coupling 3/8" - 1/2"
16	KK 01 15 65	Gasket ring 1/2"
17	KK 01 21 14	Quick coupling
18	KK 07 70 28	Bushing D35 x d26 x 73 mm (for PL/RL)
	KK 07 70 26	Bushing D35 x d26 x 118 mm (for PM/RM)
19	KK 07 70 26	Bushing D35 x d26 x 118 mm
20	KK 06 19 42	Fix for hose
21	KK 03 35 35	Hex screw M10 x 35 mm w/nut



Замовлення запчастин

(050)-407-68-47


(050)-407-68-45



1	KK 12 41 57	Bushing (From 01.08.00)
2	KK 01 03 35	Bolt 25.3 x 155 mm
3	KK 01 10 20	Roll pin D12 x 40 mm
4	KK 01 15 23	Hose 3/8" x 4500 mm
5	KK 01 15 85	Gasket ring 3/8"
6	KK 01 20 62	Banjo coupling 3/8" - 3/8"
7	KK 01 23 24	Plate
8	KK 01 25 22	Fix for hose
9	KK 03 24 45	Hex screw M8 x 45 mm w/nut
10	KK 35 35 34	Telescopic cylinder D95 x 445 mm (see plate no. 1027) (Before 01.08.00)
	KK 35 36 34	Telescopic cylinder D95 x 457 mm (see plate no. 1169) (From 01.08.00)
11	KK 01 21 14	Fast coupling plug
12	KK 01 15 65	Gasket ring
13	KK 01 20 60	Threaded coupling 3/8" - 1/2"
14	KK 01 20 59	Banjo bolt 3/8" x 31



Замовлення запчастин
(050)-407-68-47
(050)-407-68-45

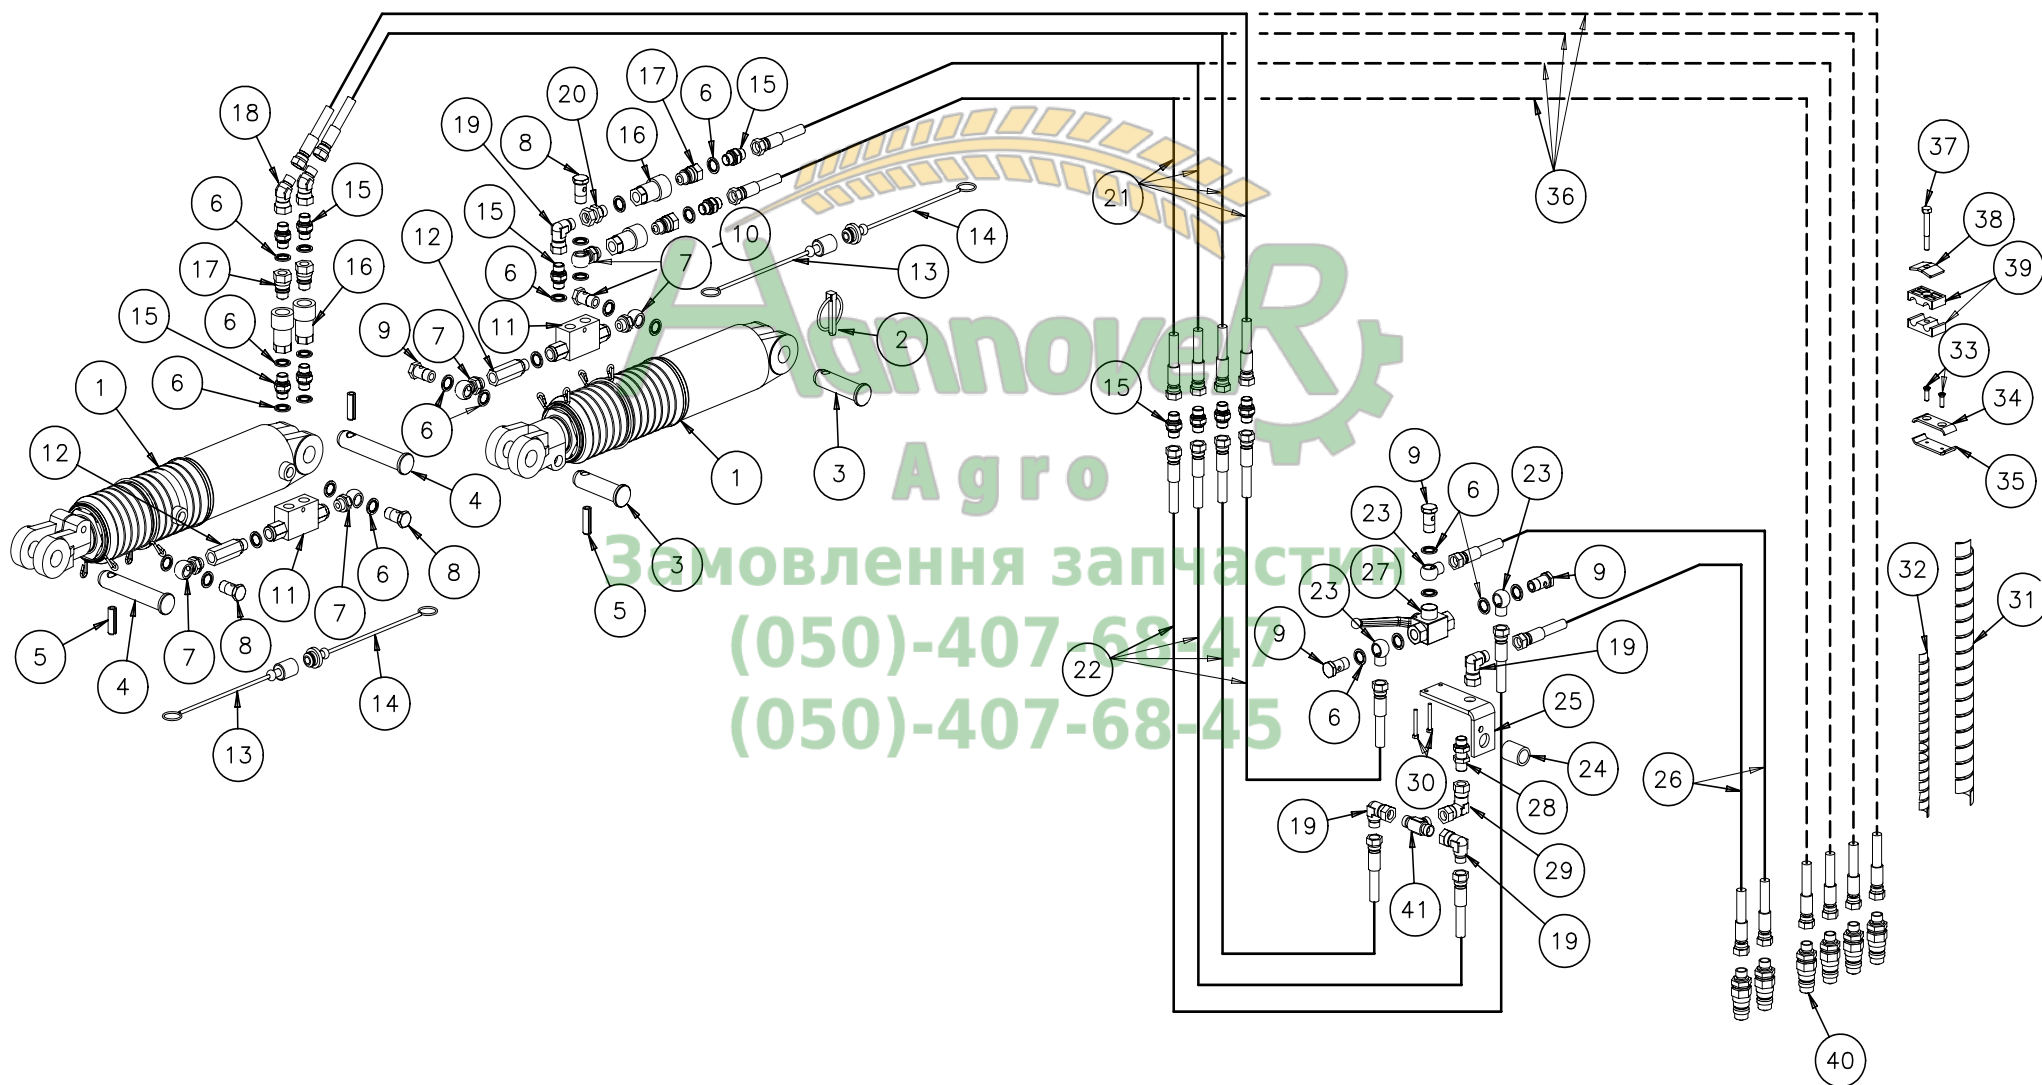


1	KK 35 38 04	Hydraulic cylinder D80 x 200 mm w/stop and bellow cpl. (see plate no. 1062)		KK 03 24 60	Hex screw M8 x 60 mm w/nut
2	KK 01 07 00	Ring pin D12		KK 03 24 75	Hex screw M8 x 75 mm w/nut
3	KK 01 03 28	Bolt w/head D25.3 x 78 mm		KK 03 24 80	Hex screw M8 x 80 mm w/nut
4	KK 01 03 19	Bolt w/head D25.3 x 120 mm	38	KK 01 23 24	Plate
5	KK 01 10 20	Pin D12 x 40 mm	39	KK 01 23 23	Plastic part
6	KK 01 15 85	Gasket ring 3/8"	40	KK 01 21 58	Quick coupling 1/2" - 3/8"
7	KK 01 25 48	Banjo 3/8" w/adjustable end	41	KK 01 21 20	T-coupling 3/8"
8	KK 01 20 59	Banjo bolt 3/8" x 31			
9	KK 01 20 82	Banjo bolt 3/8" x 31 w/1.4 choke	Not ill.	KK 01 25 09	Strip, green
10	KK 01 20 83	Banjo bolt 3/8" x 31 w/1.7 choke		KK 01 27 34	Strip, blue
11	KK 01 25 08	Lock valve 3/8", double		KK 01 27 35	Strip, red
12	KK 01 25 77	Threaded piece 3/8" - 3/8"		KK 01 35 29	Strip, yellow
13	KK 01 35 89	Dust cap, blue			
14	KK 01 35 90	Dust plug, blue			
15	KK 01 22 61	Threaded coupling 3/8" - 3/8"			
16	KK 01 27 06	Quick coupling 3/8", female			
17	KK 01 27 05	Quick coupling 3/8", male			
18	KK 01 25 26	Threaded coupling 3/8" - 3/8", 45° angle			
19	KK 01 20 56	Angle 3/8"			
20	KK 01 23 19	Swivel 3/8" - 3/8"			
21	KK 01 27 93	Hose 1/4", L = 4500 mm (only when using manual valve)			
22	KK 01 23 74	Hose 1/4", L = 750 mm (only when using manual valve, OL-version)			
23	KK 01 20 62	Banjo 3/8", H = 17 (only when using manual valve)			
24	KK 06 15 15	Bushing (only when using manual valve)			
25	KK 08 20 88	Bracket angle (only when using manual valve)			
26	KK 01 27 84	Hose 1/4", L = 2000 mm (only when using manual valve)			
27	KK 01 25 31	Ball valve 3/8" (only when using manual valve)			
28	KK 01 27 07	Bulkhead pipe 3/8" (only when using manual valve)			
29	KK 01 21 24	Angle 3/8" swivel - 3/8" swivel (only when using manual valve)			
30	KK 03 33 08	Hex screw M5 x 45 mm w/nut (only when using manual valve)			
31	KK 01 35 01	Hose band D32 x 400 mm			
32	KK 01 15 96	Hose band D12.5 x 250 mm			
33	KK 03 33 21	Countersunk screw M6 x 20 mm w/nut			
34	KK 01 35 44	Clamp 1/4", D7 mm			
35	KK 01 35 45	Clamp 1/4", D6 mm			
36	KK 01 26 62	Hose 1/4", L = 6500 mm (only when hoses go directly to tractor)			
	KK 01 26 54	Hose 1/4", L = 7500 mm (only when hoses go directly to tractor, OL-version)			
37	KK 03 24 45	Hex screw M8 x 45 mm w/nut			



1	KK 35 36 16	Cylinder tube (for D75 mm)
	KK 35 27 97	Cylinder tube (for D100 mm)
2	KK 01 30 53	Piston packing (for D75 mm)
	KK 01 19 08	Piston packing (for D100 mm)
3	KK 35 36 17	Piston rod w/piston (for D75 mm)
	KK 35 27 86	Piston rod w/piston (for D100 mm)
4	KK 01 30 52	O-ring (for D75 mm)
	KK 01 18 06	O-ring (for D100 mm)
5	KK 01 20 32	Packing for rod
6	KK 35 36 18	End cap w/packings (for D75 mm)
	KK 35 34 58	End cap w/packings (for D100 mm)
7	KK 01 20 39	Scraper
8	KK 01 17 83	O-ring
9	KK 35 27 96	Stop
10	KK 03 20 40	Screw M10 x 40 mm
11	KK 35 33 98	Clevis
Not ill.	KK 01 30 51	Packings cpl. (for D75 mm)
	KK 01 20 15	Packings cpl. (for D100 mm)
	KK 35 27 87	Cylinder D75 x 400 mm w/stop cpl.
	KK 35 27 79	Cylinder D100 x 400 mm w/stop cpl. (Before 15.05.99)



Замовлення запчастин
(050)-407-68-47
(050)-407-68-45

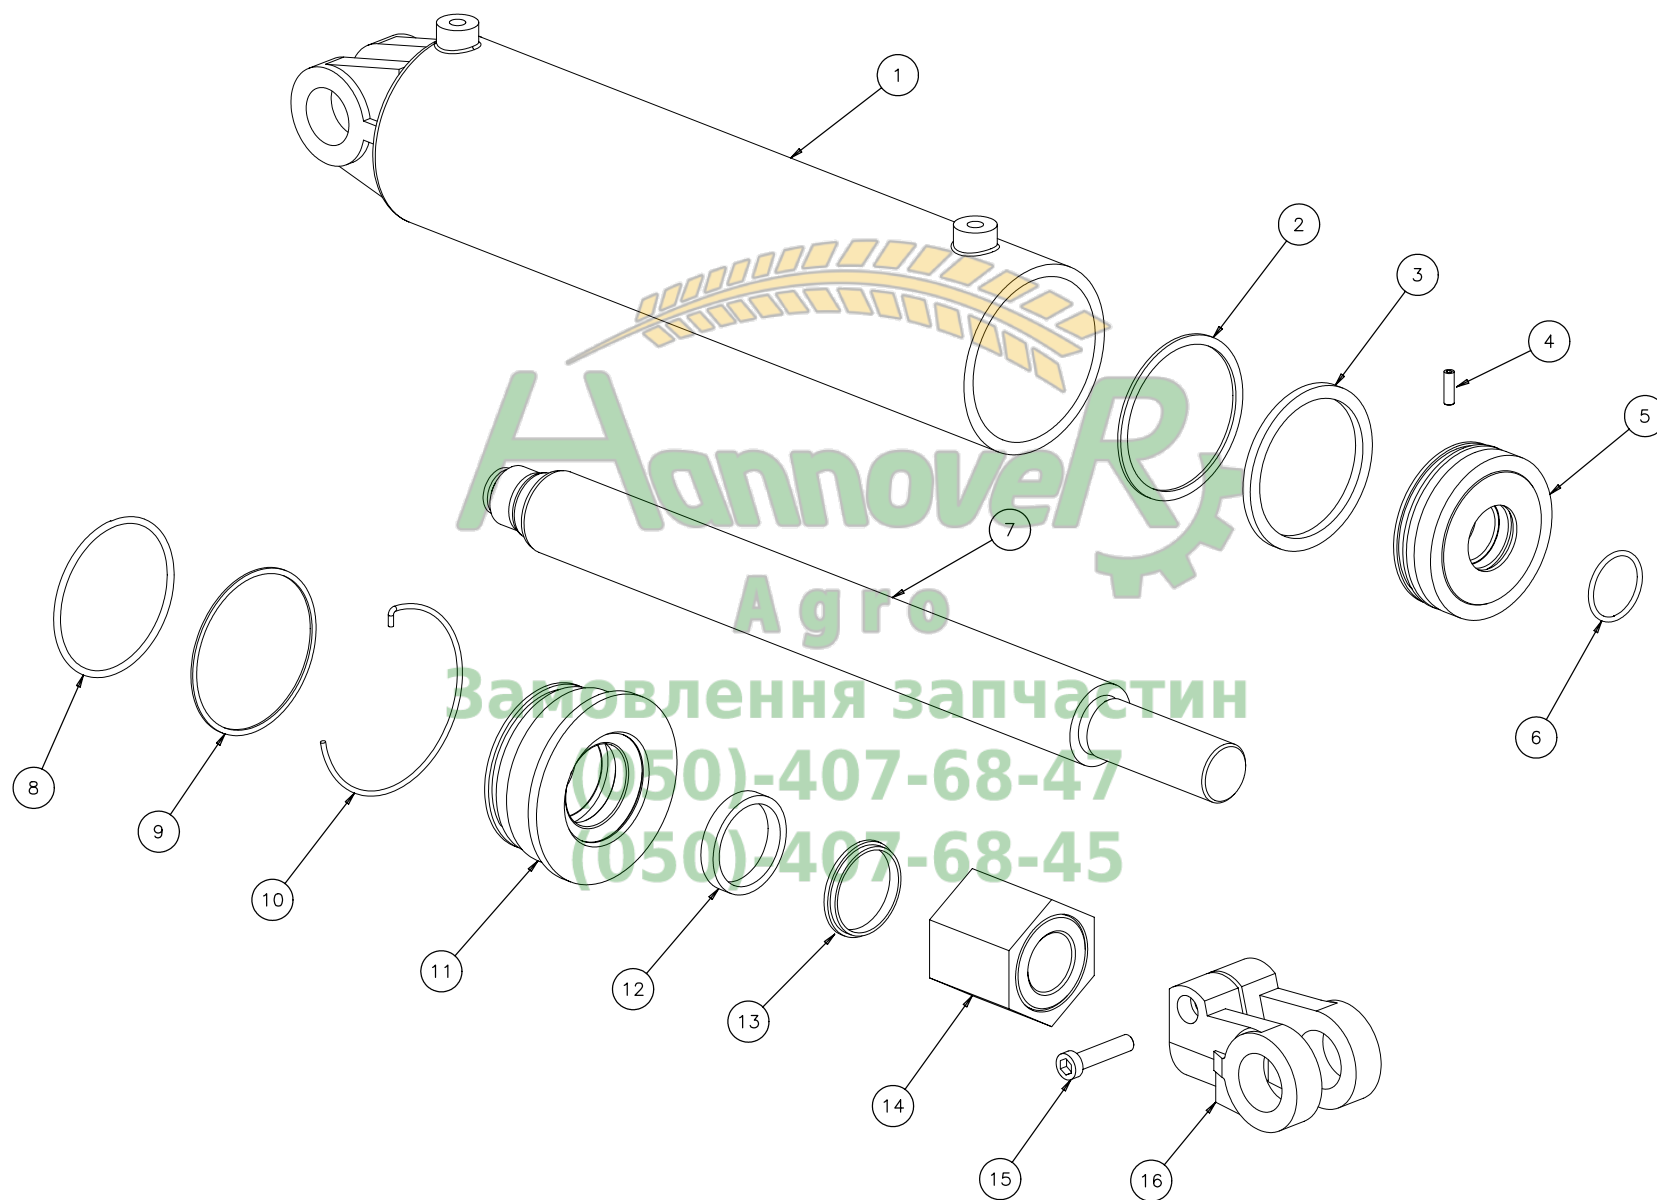

1	KK 35 37 98	Cylinder tube
2	KK 01 65 31	Sliding ring
3	KK 01 65 32	Packing
4	KK 03 20 06	Screw M6 x 20 mm
5	KK 35 37 83	Piston
6	KK 01 65 10	O-ring D40
7	KK 35 37 99	Piston rod
8	KK 01 17 19	O-ring D93
9	KK 01 17 24	Support
10	KK 35 37 95	Lock ring
11	KK 35 37 39	Rod cap
12	KK 01 17 25	Seal for piston rod
13	KK 01 17 27	Scraper
14	KK 35 37 85	Stopping nut
15	KK 03 20 16	Screw M10 x 45 mm
16	KK 35 37 73	Clevis

Not ill.	KK 01 36 05	Packings cpl.
	KK 35 38 13	Hydraulic cylinder D100 x 400 mm w/stop cpl.




Замовлення запчастин
(050)-407-68-47
(050)-407-68-45




1	KK 35 38 53	Cylinder tube
2	KK 01 19 08	Piston packing
3	KK 35 27 86	Piston rod
4	KK 01 18 88	Support ring
5	KK 01 18 12	O-ring D94
6	KK 35 38 52	Rod cap
7	KK 01 20 32	Piston rod packing
8	KK 01 20 39	Scraper
9	KK 01 17 83	O-ring D49,5
10	KK 35 27 96	Stop D100
11	KK 03 20 40	Cylinder screw M10 x 40 mm
12	KK 35 33 98	Clevis
Not ill.	KK 01 30 72	Packing set cpl.
	KK 35 38 34	Hydraulic cylinder D100 x 400 mm cpl.



Замовлення запчастин
(050)-407-68-47
(050)-407-68-45

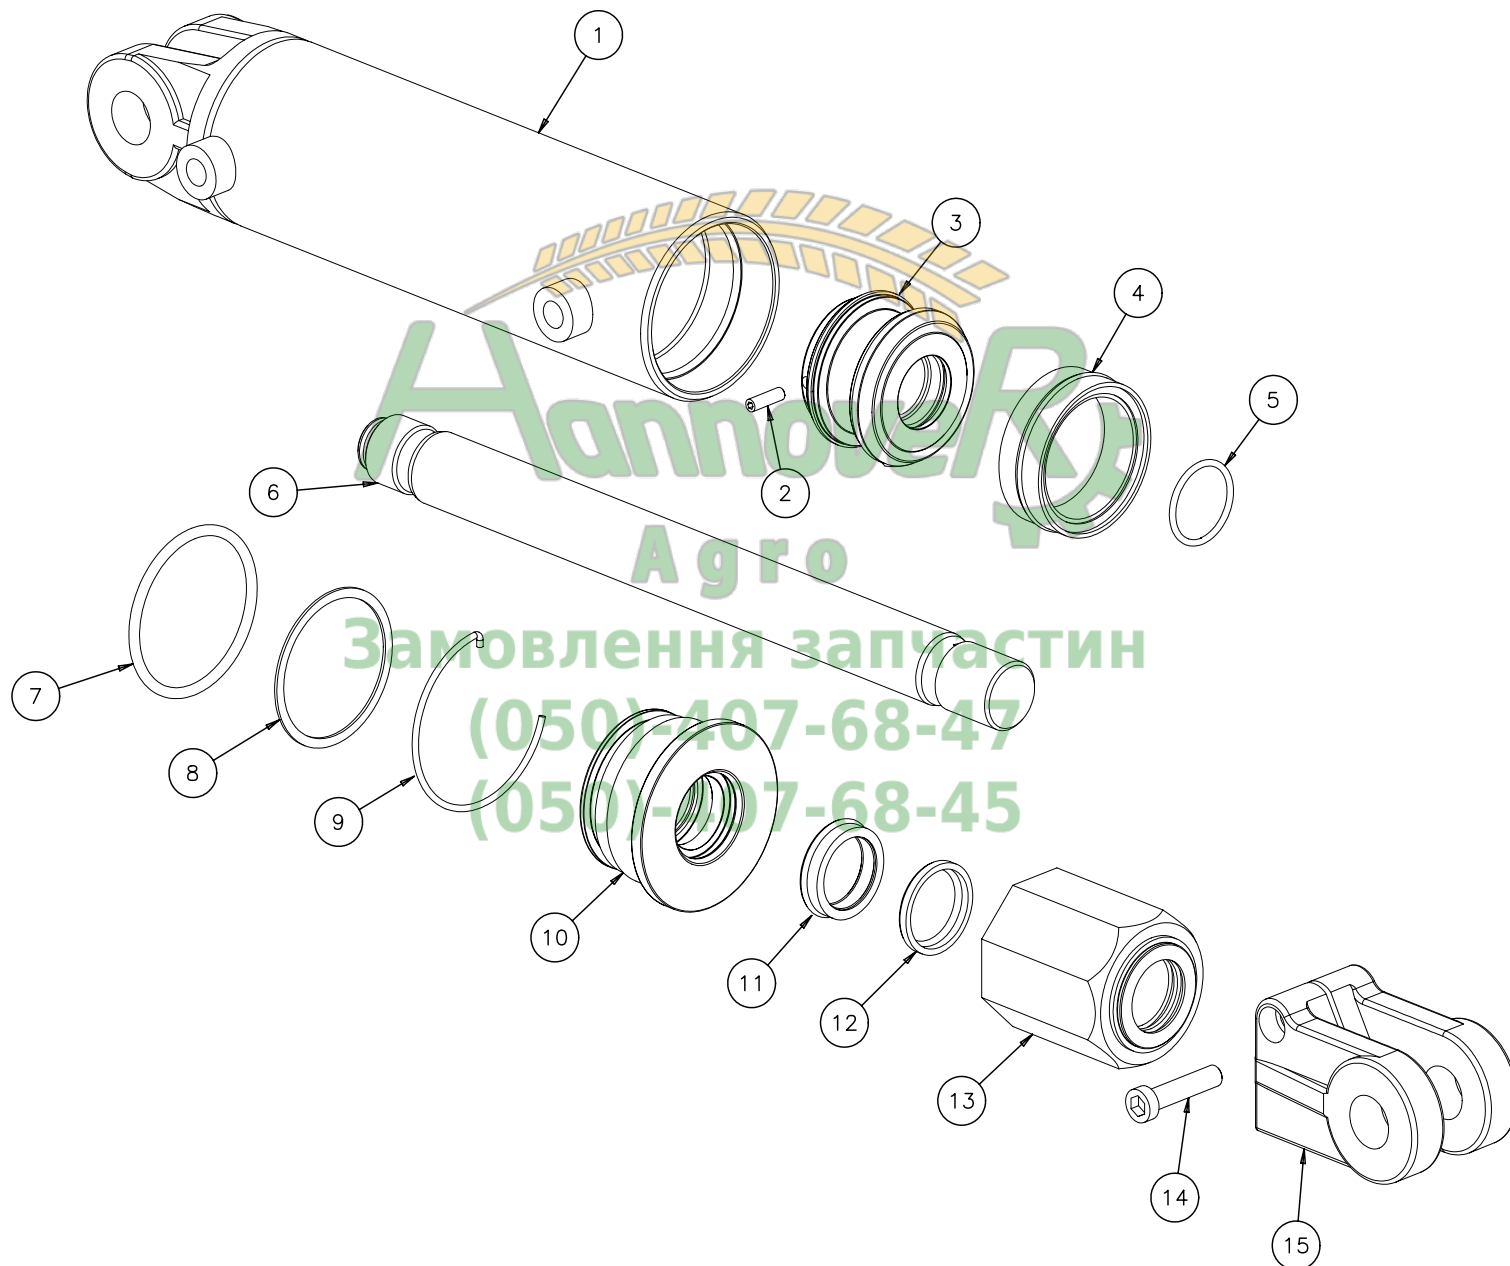

1	KK 35 37 32	Cylinder tube for art.no 353704 (cylinder D75 x 200 mm without stop) and 353705 (cylinder D75 x 200 mm w/stop)
	KK 35 37 35	Cylinder tube for art.no 353706 (cylinder D75 x 200 mm w/90° twisted end cap)
	KK 35 37 36	Cylinder tube for art.no 353707 (cylinder D75 x 400 mm w/90° twisted end cap)
2	KK 03 20 06	Screw w/inner hex M6 x 20 mm
3	KK 35 37 27	Piston
4	KK 01 17 36	Piston packing
5	KK 01 17 37	O-ring
6	KK 35 37 44	Piston rod for art.no 353705 (cylinder D75 x 200 mm w/stop)
	KK 35 37 43	Piston rod for art.no 353704 and 353706 (cylinders D75 x 200 mm without stop)
	KK 35 37 46	Piston rod for art.no 353707 (cylinder D75 x 400 mm w/twisted end cap)
7	KK 01 17 38	O-ring
8	KK 01 17 43	Ring
9	KK 01 17 46	Ring (Before 15.03.99)
	KK 35 37 93	Lock spring (From 15.03.99)
10	KK 35 37 26	Packing seal
11	KK 01 17 44	Piston rod packing
12	KK 01 17 45	Scraper
13	KK 35 37 45	Stop for art.no 353705 (cylinder D75 x 200 mm w/stop)
14	KK 03 20 16	Screw w/inner hex M10 x 45 mm
15	KK 35 37 28	Clevis
Not ill.	KK 35 37 29	Packings cpl.
	KK 35 37 04	Cylinder D75 x 200 mm without stop, cpl.
	KK 35 37 05	Cylinder D75 x 200 mm w/stop, cpl.
	KK 35 37 06	Cylinder D75 x 200 mm w/90° twisted end cap, cpl.
	KK 35 37 07	Cylinder D75 x 400 mm w/90° twisted end cap, cpl.

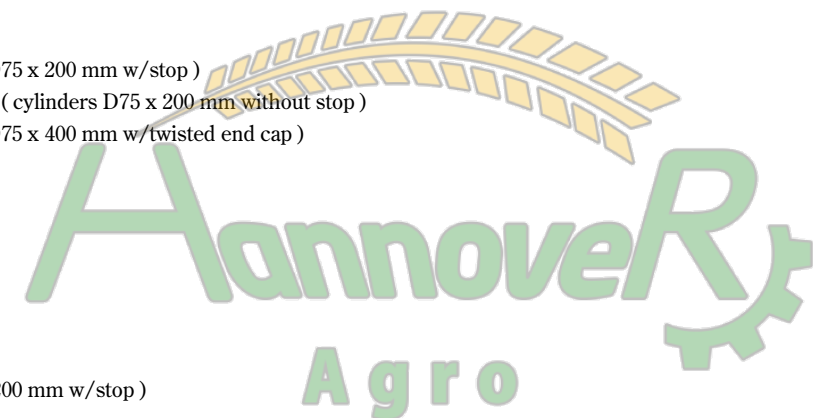

Замовлення запчастин

(050)-407-68-47

(050)-407-68-45



1	KK 35 21 53	Clevis
2	KK 01 19 12	Scraper seal
3	KK 01 19 51	Packing
4	KK 35 33 56	Rod cap w/packings
5	KK 01 18 76	Retaining ring
6	KK 01 18 24	O-ring
7	KK 35 27 84	Piston rod w/piston
8	KK 01 19 18	Packing
9	KK 35 27 85	Cylinder tube
Not ill.	KK 01 20 26	Packings set D80 mm cpl.
	KK 35 27 77	Support cylinder D80 x 240 mm cpl.



Замовлення запчастин
(050)-407-68-47
(050)-407-68-45




1	KK 35 33 71	Cylinder tube
2	KK 01 19 08	Piston packing
3	KK 35 33 72	Piston rod w/piston
4	KK 01 18 06	O-ring
5	KK 01 18 88	Support ring
6	KK 35 33 73	End cap
7	KK 01 19 51	Piston rod packing
8	KK 01 19 12	Scraper
9	KK 35 22 99	Stop
10	KK 35 33 92	Clevis
11	KK 03 20 40	Screw M10 x 40 mm

Not ill.	KK 01 20 27	Packing set cpl.
	KK 35 33 70	Hydraulic cylinder w/stop D100 x 215 mm cpl.



Замовлення запчастин
(050)-407-68-47
(050)-407-68-45

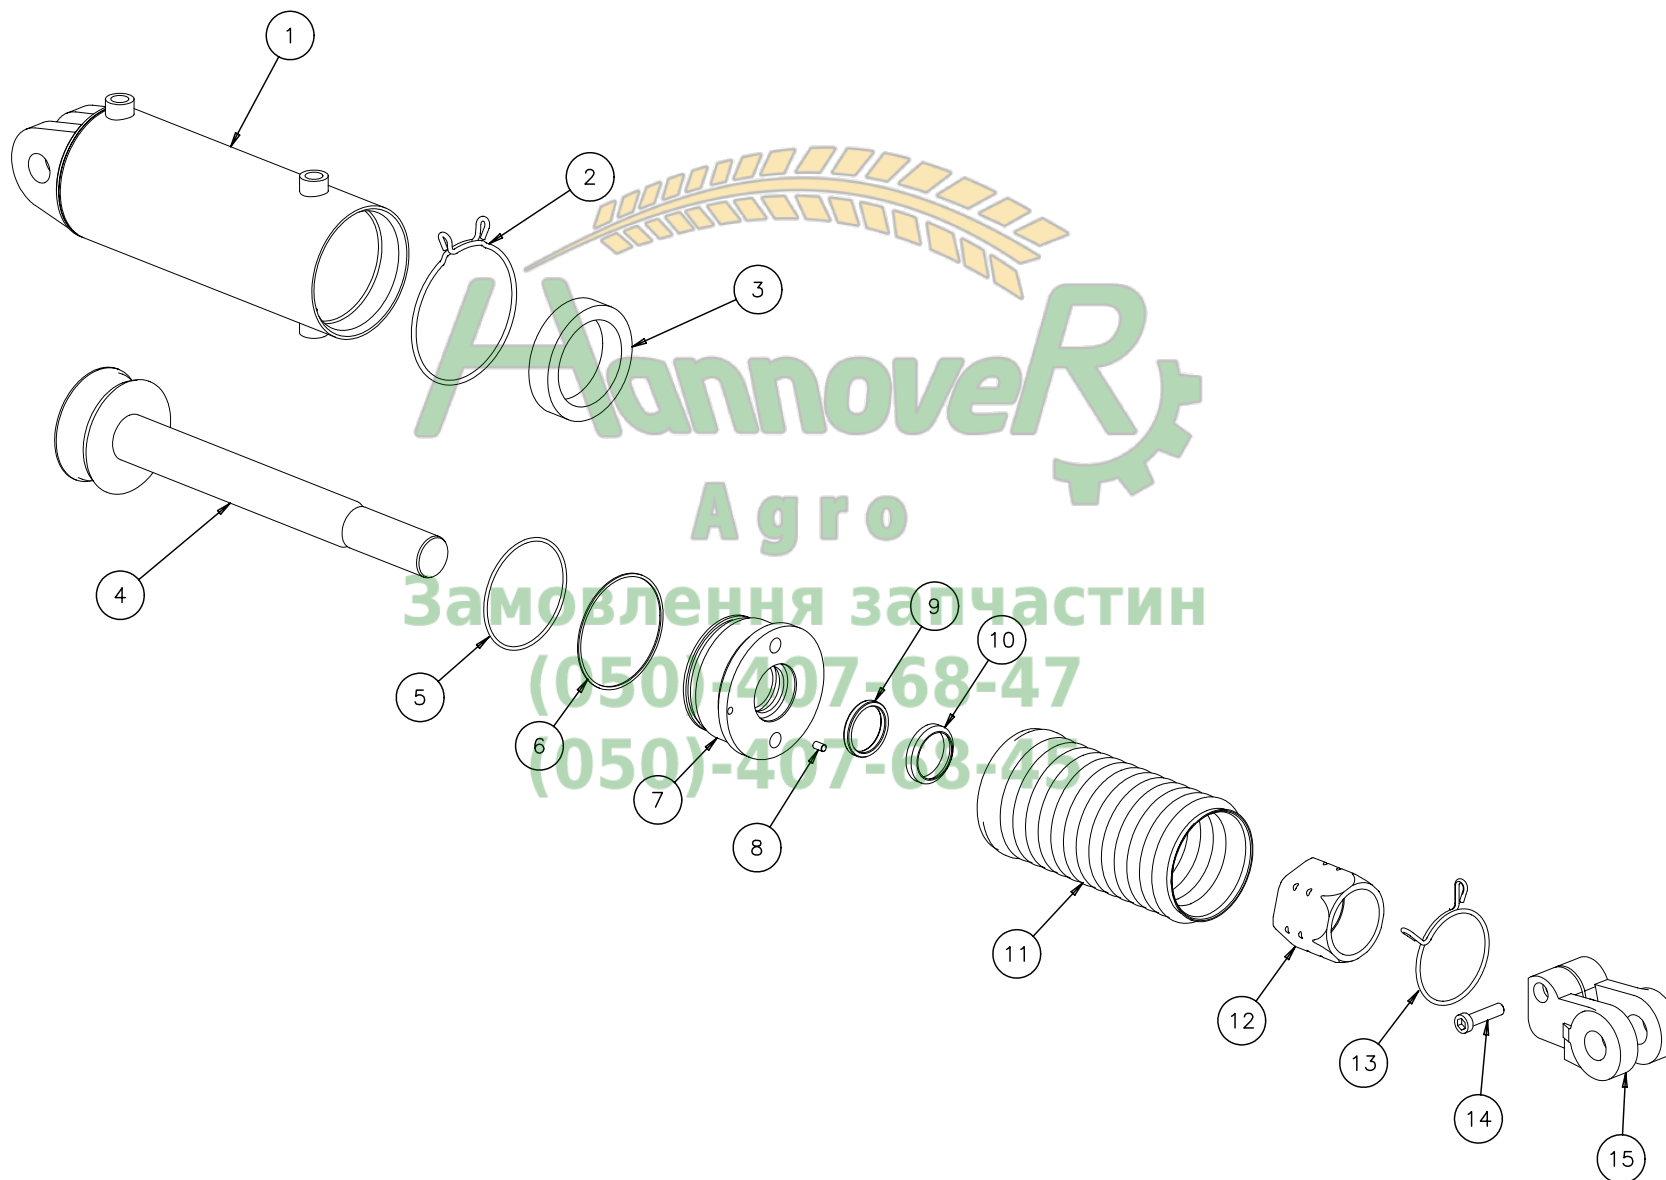

1	KK 35 38 51	Cylinder tube
2	KK 01 35 97	Thread clamp D110
3	KK 01 19 08	Piston packing set
4	KK 35 33 72	Piston rod
5	KK 01 18 06	O-ring
6	KK 01 18 88	Support ring
7	KK 35 38 50	End cap
8	KK 03 20 02	Screw M6 x 10 mm
9	KK 01 19 51	Piston rod packing
10	KK 01 19 12	Scraper
11	KK 01 35 95	Bellow
12	KK 35 36 27	Stop
13	KK 01 35 96	Thread clamp D80
14	KK 03 20 40	Screw M10 x 40 mm
15	KK 35 33 92	Clevis (for PB/RB plough)
	KK 35 27 74	Clevis w/garmax (for PX/RX plough)
Not ill.	KK 01 30 73	Packing set cpl.
	KK 35 38 37	Hydraulic cylinder D100 x 200 mm w/stop and bellow cpl.
	KK 35 38 38	Hydraulic cylinder D100 x 200 mm w/garmx, stop and bellow cpl.



Замовлення запчастин
(050)-407-68-47
(050)-407-68-45




1	KK 35 45 33	Cylinder tube
2	KK 01 20 12	Piston packing
3	KK 35 45 34	Piston rod w/piston
4	KK 01 17 55	O-ring D109.5
5	KK 35 45 35	End cap
6	KK 01 26 37	Seal for piston rod
7	KK 01 20 39	Scraper
8	KK 01 35 95	Bellow
9	KK 01 26 19	O-ring D50
10	KK 01 37 05	Spring ring
11	KK 01 35 94	Ring for bellow
12	KK 35 45 30	Stop
13	KK 35 35 61	Clevis
14	UH 82 52 35	Cylinder screw M8 x 35 mm

Not ill.	KK 01 30 57	Packings set
	KK 35 45 01	Hydraulic cylinder D115 x 190 mm w/stop and bellow cpl.




Замовлення запчастин
(050)-407-68-47
(050)-407-68-45

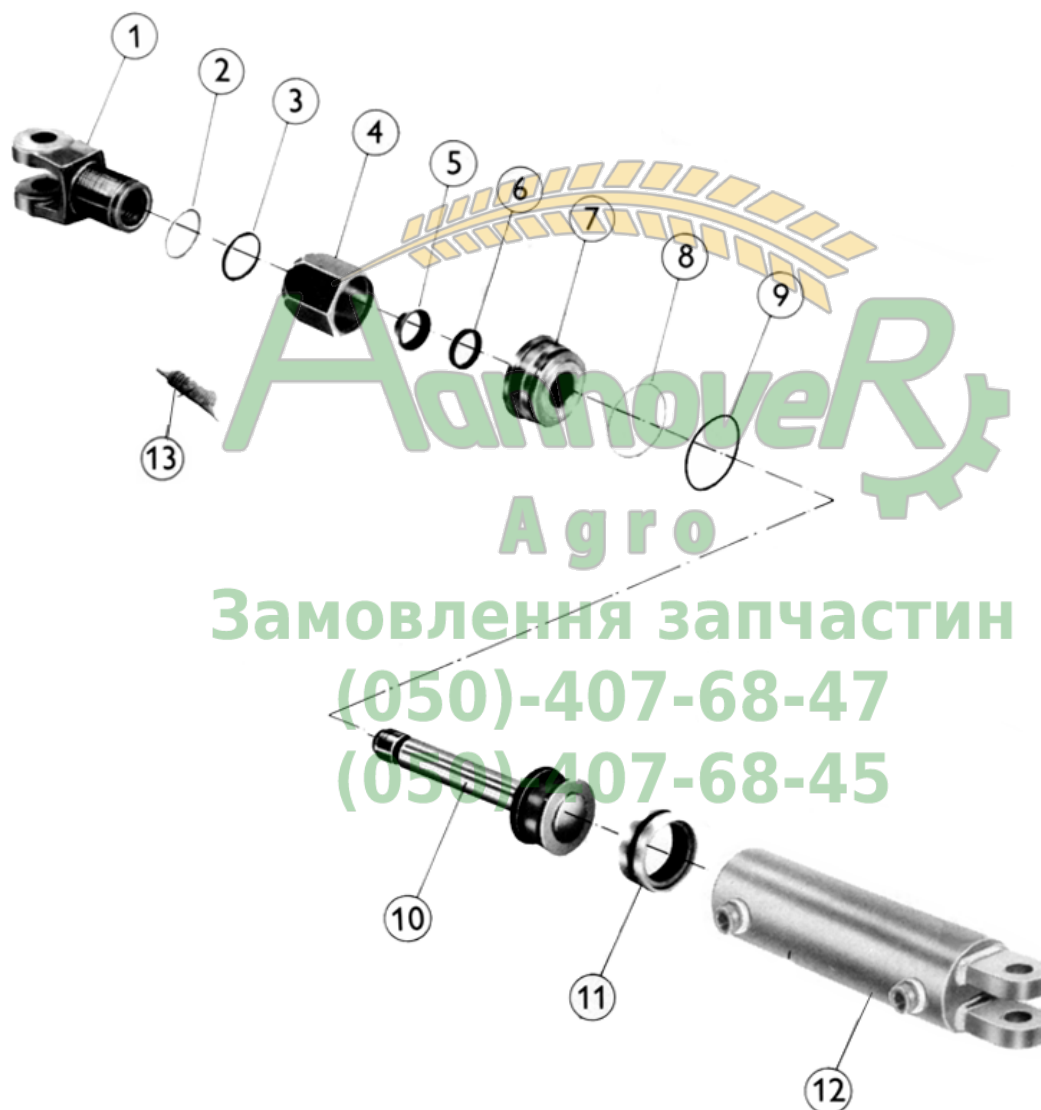

1	KK 35 33 53	Clevis
2	KK 01 18 78	Ring D45 x 2.5 x 1.3
3	KK 01 18 65	O - ring D40 x 4
4	KK 35 33 50	Stop
5	KK 01 19 13	Scraper D32/D44 x 7/10
6	KK 01 19 53	Piston rod packing D32/D40 x 6
7	KK 35 22 61	Endcap D75/D32 cpl.
8	KK 01 18 61	Ring Ø70 x 2.5 x 1.3
9	KK 01 18 02	O - ring D70 x 3 mm
10	KK 35 33 51	Piston rod w/piston D75/D32
11	KK 01 19 06	Piston packing D75/D55 x 22.4
12	KK 35 34 78	Cylinder tube w/clevis cap w/90° turned connectors
13	KK 06 02 21	Glue 3 ml "Loctite 271"
Not ill.	KK 01 20 25	Packings cpl. D75/D32
	KK 35 24 96	Cylinder D75 x 130 mm w/90° turned connectors cpl. (Before 01.09.99)



Замовлення запчастин
(050)-407-68-47
(050)-407-68-45

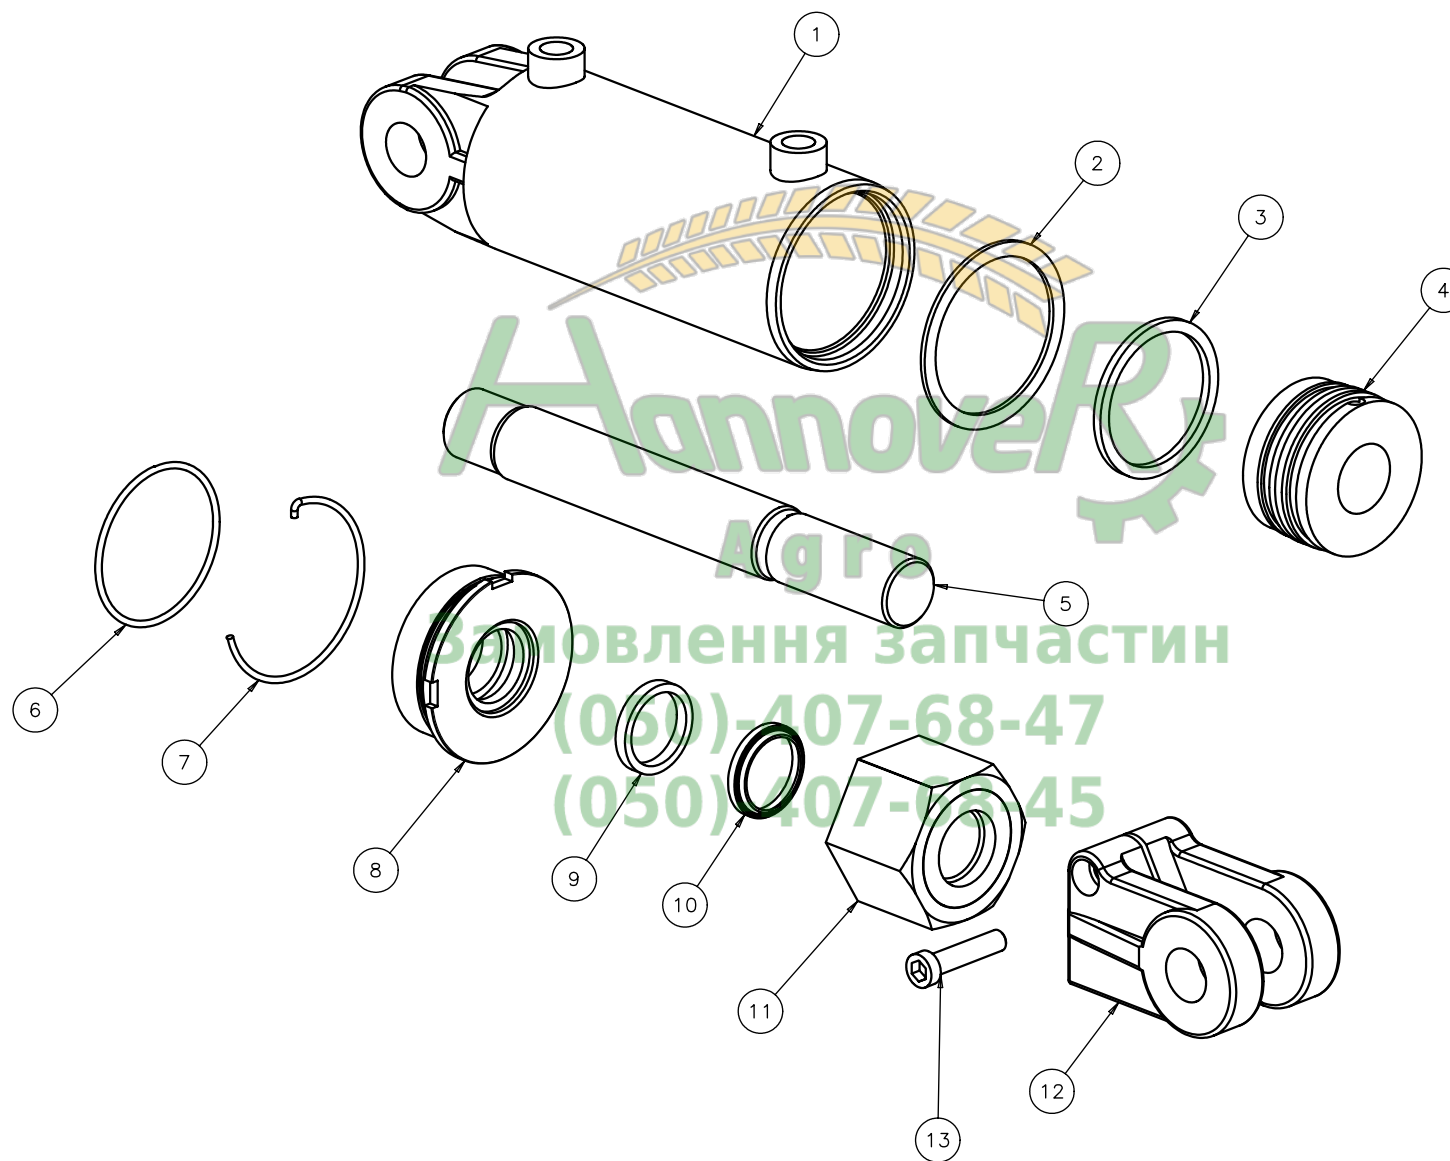


1	KK 35 37 96	Cylinder tube
2	KK 01 65 37	Sliding ring
3	KK 01 65 38	Piston packing
4	KK 35 38 20	Piston
5	KK 35 37 97	Piston rod
6	KK 01 65 36	O-ring
7	KK 35 37 93	Lock ring
8	KK 35 28 21	Rod cap
9	KK 01 65 35	Seal for piston rod
10	KK 01 17 45	Scraper
11	KK 35 38 22	Stop cpl.
12	KK 35 37 28	Clevis
13	KK 03 20 16	Hex screw M10 x 45 mm

Not ill.	KK 01 36 06	Packings cpl.
	KK 35 37 10	Hydraulic cylinder D75 x 130 mm w/90° turned connectors cpl. (From 01.09.99)




Замовлення запчастин
(050)-407-68-47
(050)-407-68-45

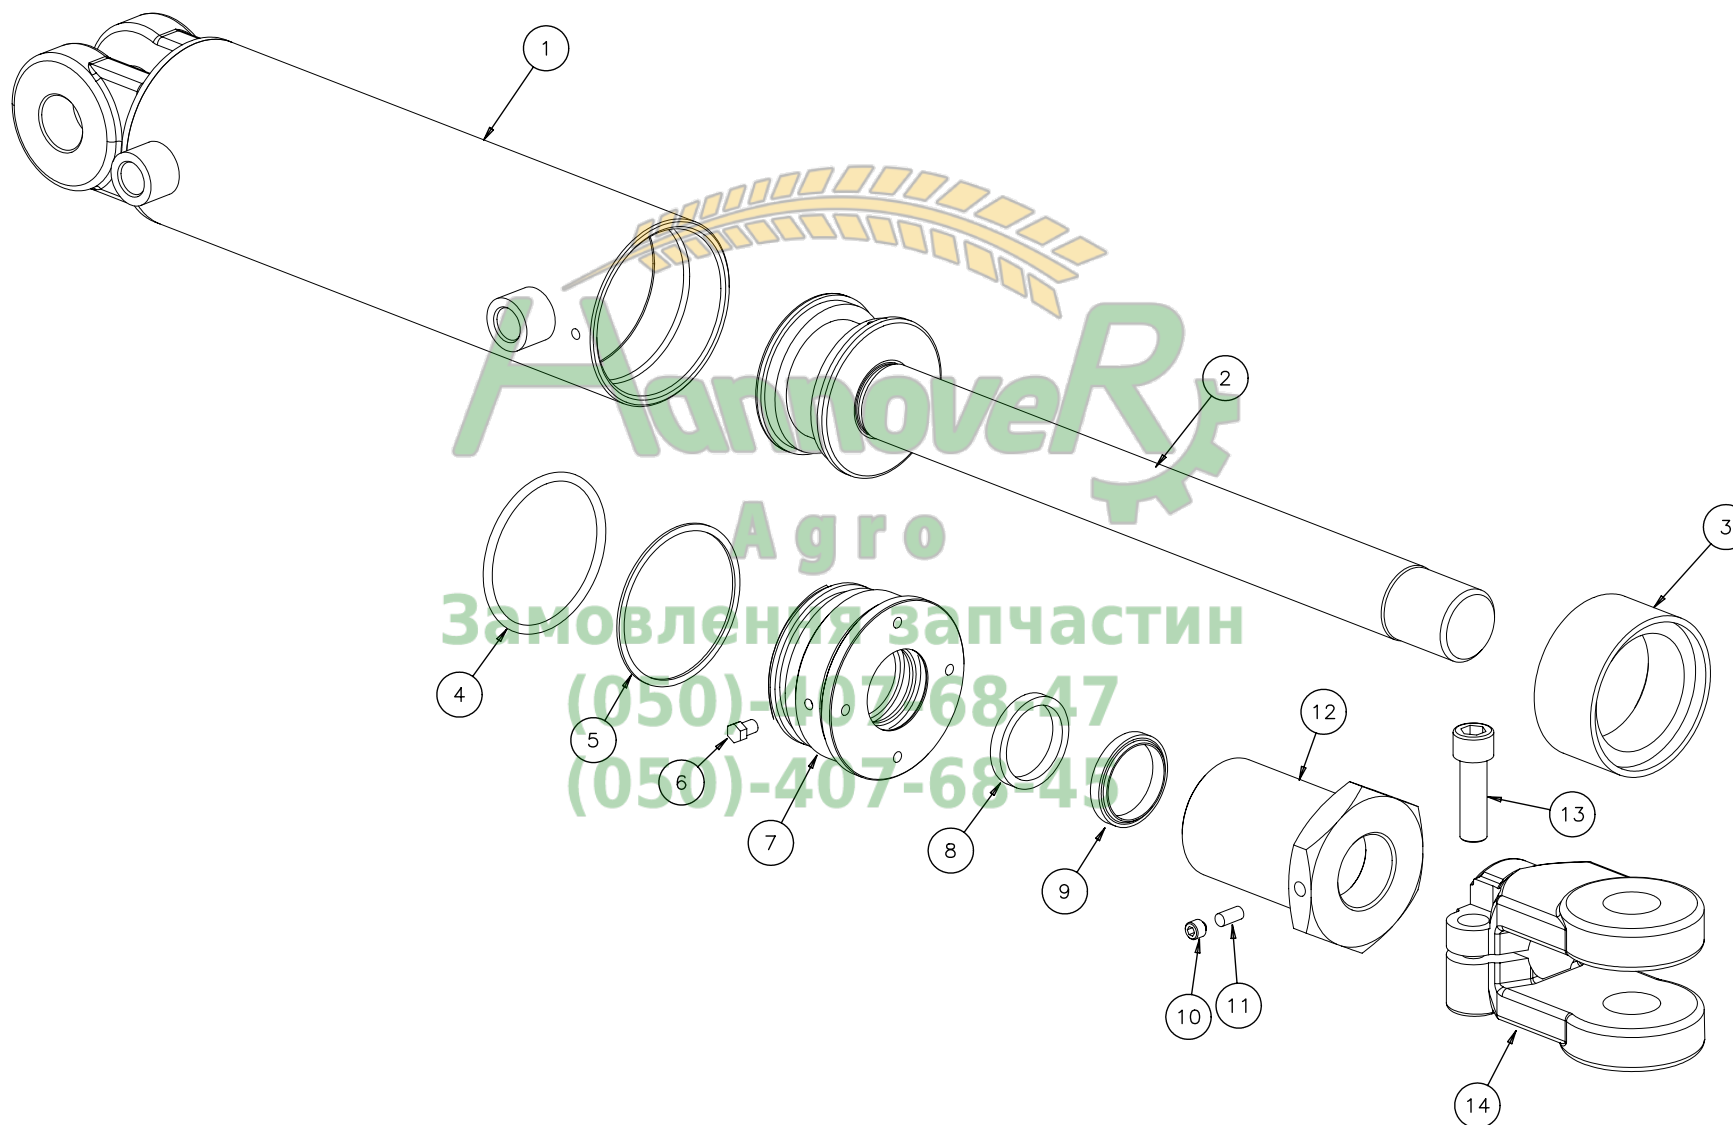

1	KK 35 39 38	Cylinder tube (for cylinder KK 35 39 04 and KK 35 39 05)
	KK 35 39 39	Cylinder tube (for cylinder KK 35 39 06)
2	KK 35 39 40	Piston rod (for cylinder KK 35 39 04 and KK 35 39 06)
	KK 35 39 41	Piston rod (for cylinder KK 35 39 05)
3	KK 01 30 93	Piston packing
4	KK 01 30 96	O-ring D67 x 4 mm
5	KK 01 30 95	Support ring
6	KK 03 33 06	Hex screw M6 x 8 mm
7	KK 35 39 27	Packing seal
8	KK 01 30 94	Piston rod packing
9	KK 01 30 92	Scraper
10	KK 03 21 10	Set screw M8 x 8 mm (for cylinder KK 35 39 05)
11	KK 35 39 46	Pin for stop (for cylinder KK 35 39 05)
12	KK 35 39 45	Stop (for cylinder KK 35 39 05)
13	UH 82 56 40	Cylinder screw M12 x 40 mm
14	KK 35 39 23	Clevis

Not ill.	KK 01 30 87	Packings cpl.
	KK 35 39 04	Hydraulic cylinder D75 x 200 mm cpl.
	KK 35 39 05	Hydraulic cylinder D75 x 200 mm w/stop cpl.
	KK 35 39 06	Hydraulic cylinder D75 x 200 mm w/90° twisted end cap cpl.




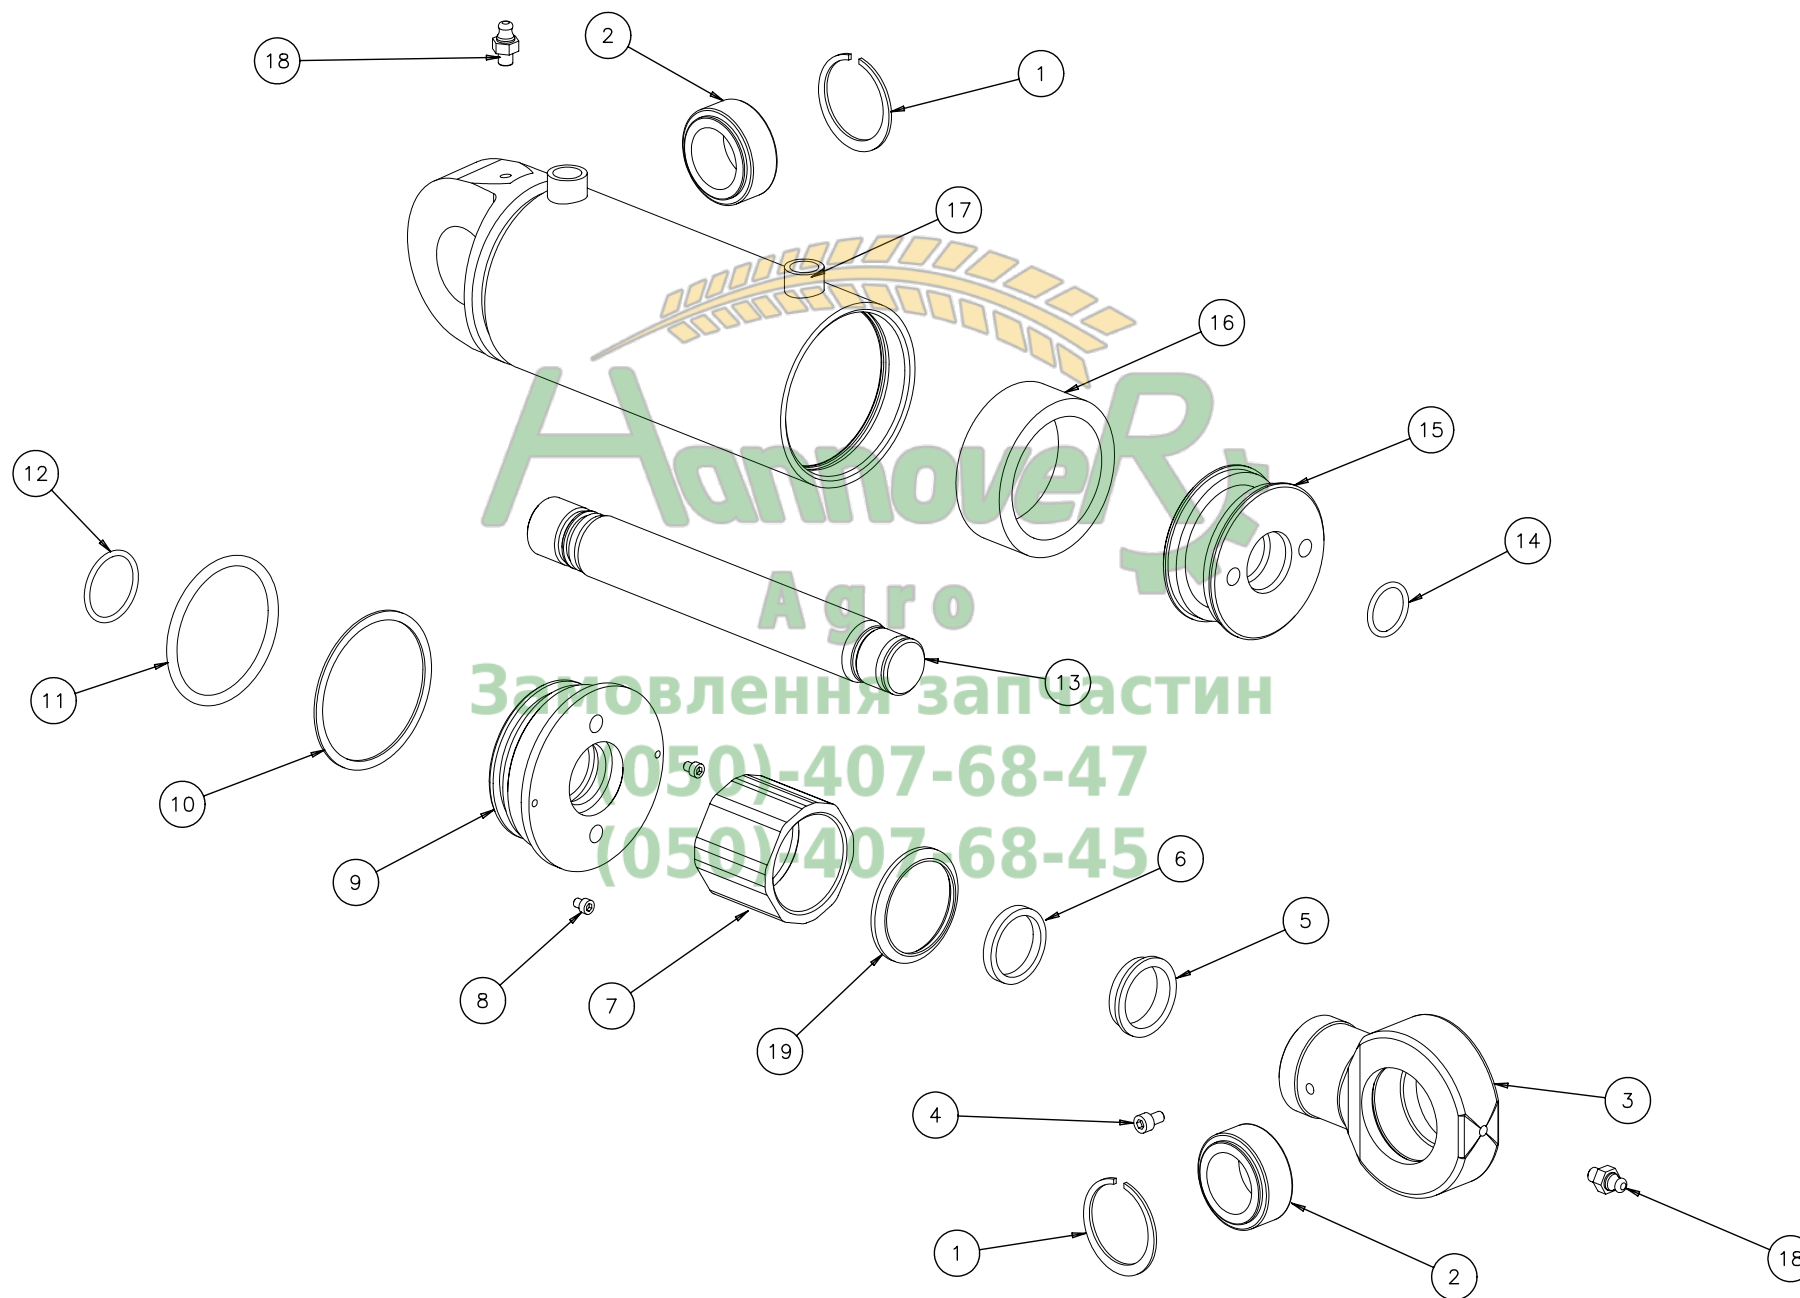

1	KK 01 12 61	Circlip
2	KK 01 12 23	Bearing
3	KK 35 35 96	Rod head
4	KK 03 20 02	Screw M6 x 10 mm
5	KK 01 65 22	Scraper
6	KK 01 65 23	Packing for piston rod
7	KK 35 35 97	Collar
8	KK 03 20 07	Screw M5 x 6 mm
9	KK 35 35 93	Rod cap
10	KK 01 65 25	Support ring
11	KK 01 65 24	O-ring D79.2 x D5.7
12	KK 01 17 37	O-ring D35 x D3
13	KK 35 35 95	Piston rod
14	KK 01 65 26	O-ring D28 x D3
15	KK 35 35 94	Piston
16	KK 01 65 27	Packing
17	KK 35 35 92	Cylinder tube
18	KK 02 99 18	Grease nipple
19	KK 35 36 77	Scraper plastic ring
Not ill.	KK 01 36 02	Packings cpl.
	KK 35 35 80	Turn-over cylinder D90 x 150 mm



Замовлення запчастин
(050)-407-68-47
(050)-407-68-45

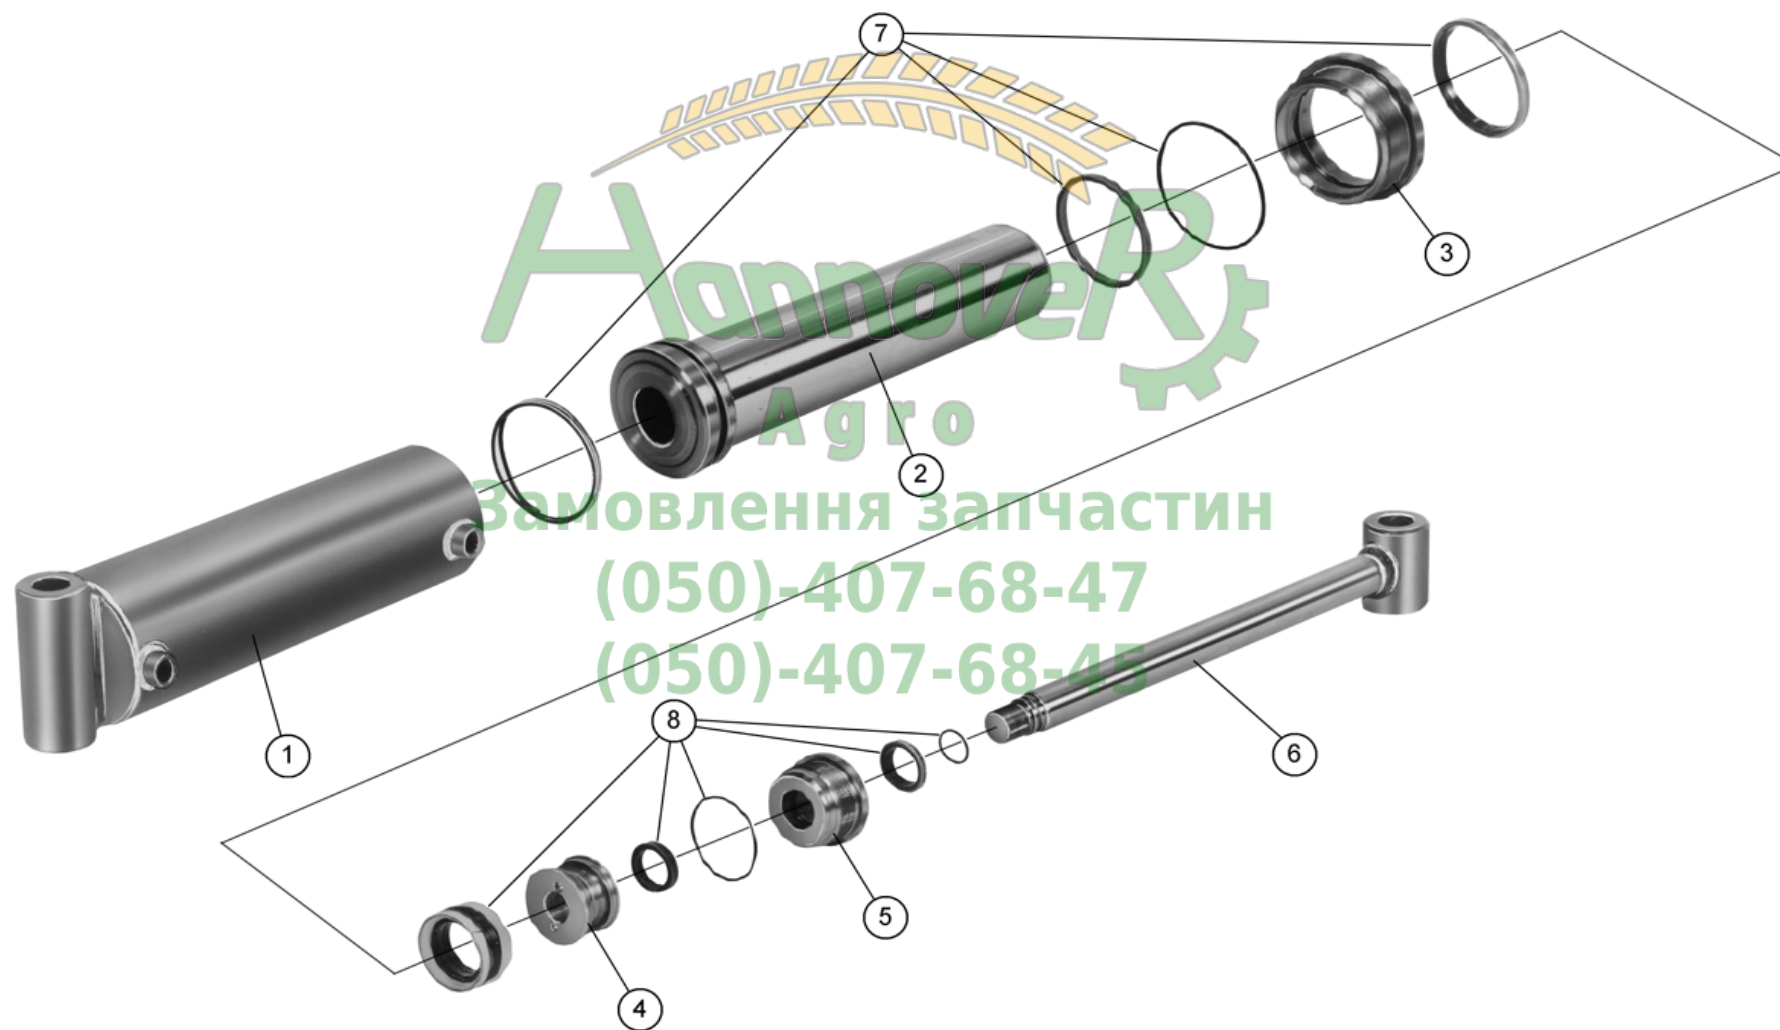

1	KK 35 35 62	Main cylinder tube
2	KK 35 35 63	Outer piston
3	KK 35 35 66	Outer bushing
4	KK 35 35 73	Inner piston
5	KK 35 35 65	Inner bushing
6	KK 35 35 64	Inner rod
7	KK 01 26 44	Packings cpl. for outer cylinder
8	KK 01 26 43	Packings cpl. for inner cylinder
Not ill.	KK 35 35 34	Telescopic cylinder D95 x 445 mm cpl.
	KK 01 26 42	Packings cpl. (012644 + 01 26 43)






1	KK 35 35 62	Main cylinder tube
2	KK 01 30 80	Support ring
3	KK 35 35 63	Piston, outer
4	KK 01 30 78	O-ring D85,32
5	KK 01 30 79	O-ring D94,93
6	KK 35 35 66	Rod cap, outer
7	KK 01 30 76	Scraper
8	KK 01 30 77	O-ring D76
9	KK 01 30 81	Rod gasket D80
10	KK 01 30 75	Simco D60
11	KK 35 35 73	Piston
12	KK 01 30 68	Piston packing
13	KK 01 17 93	O-ring D60
14	KK 35 35 65	Rod cap, inner
15	KK 01 19 62	Scraper
16	KK 01 30 70	O-ring D23
17	KK 35 36 88	Piston rod w/bearing

Not ill.	KK 01 26 43	Packing set cpl. (pos. 10, 12, 13, 15 and 16)
	KK 01 26 44	Packing set cpl. (pos. 2, 4, 5, 7, 8 and 9)
	KK 35 36 34	Telescopic cylinder D95 x 457 mm cpl.



Замовлення запчастин
(050)-407-68-47
(050)-407-68-45

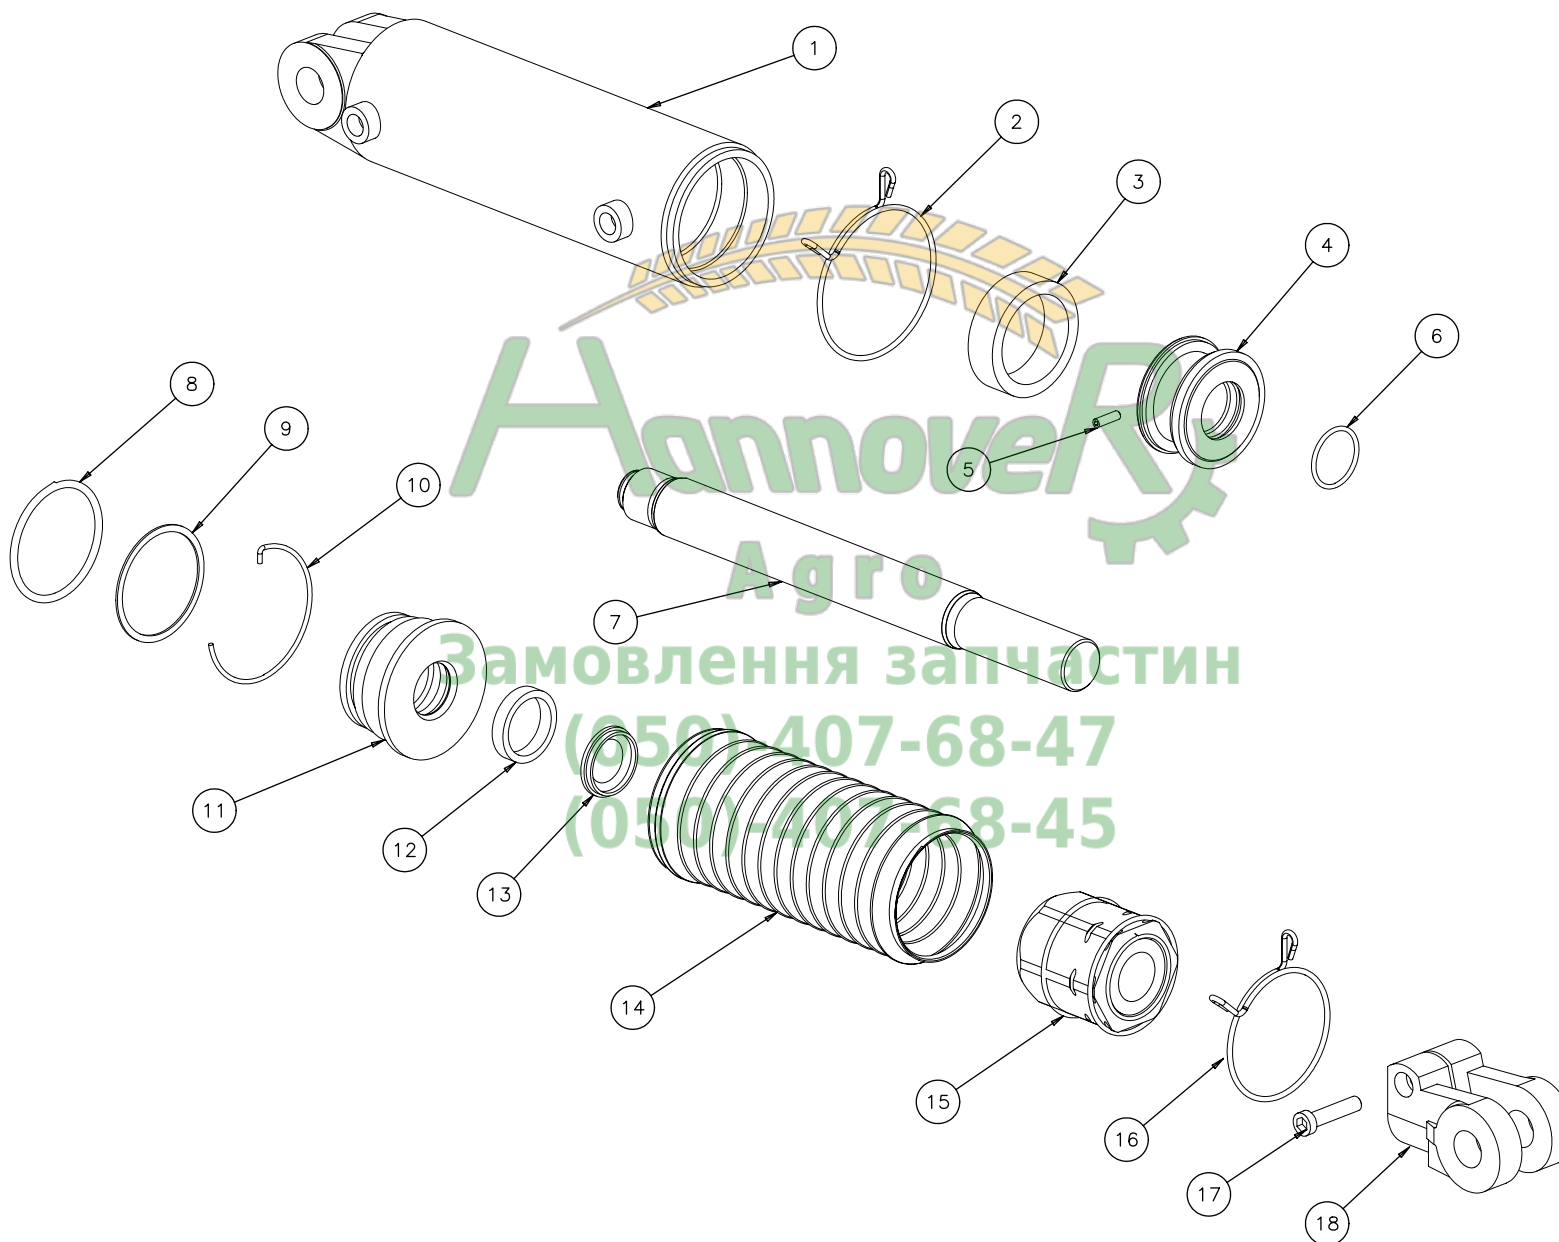


1	KK 35 37 74	Cylinder tube
2	KK 01 35 27	Thread clamp D95
3	KK 01 65 09	Piston packing set
4	KK 35 37 55	Piston
5	KK 03 20 06	Screw M6 x 20 mm
6	KK 01 65 10	O-ring D40
7	KK 35 37 75	Piston rod
8	KK 01 65 11	O-ring D75
9	KK 01 65 12	Support ring
10	KK 35 37 94	Lock ring
11	KK 35 37 54	End cap
12	KK 01 65 13	Piston rod packing
13	KK 01 65 14	Scraper
14	KK 01 35 25	Bellow
15	KK 35 37 76	Stopping nut
16	KK 01 35 26	Clamp D80
17	KK 03 20 16	Screw M10 x 45 mm
18	KK 35 37 51	Clevis

Not ill.	KK 01 36 03	Packings set cpl.
	KK 35 38 04	Hydraulic cylinder D80 x 200 mm cpl.



Замовлення запчастин
(050)-407-68-47
(050)-407-68-45

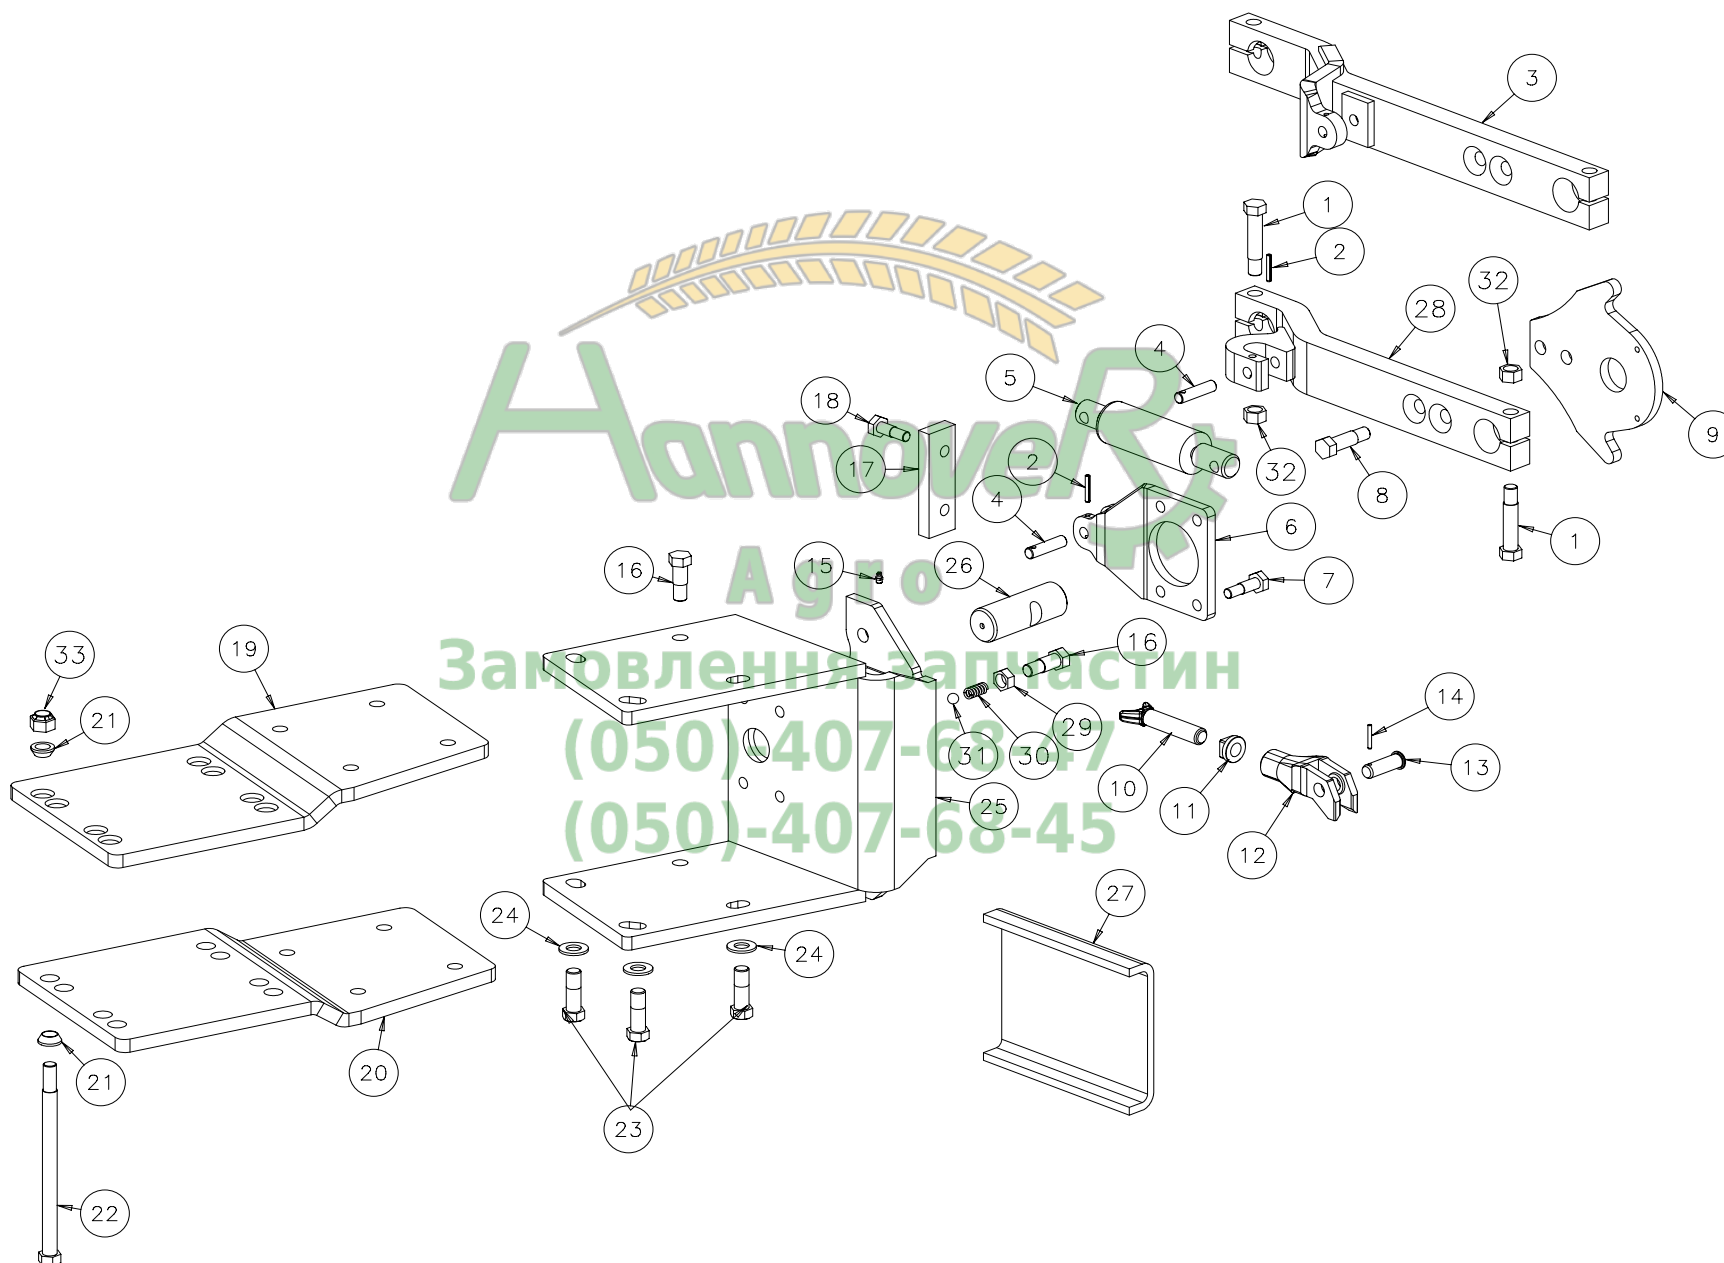

**582 Fix for wheel (From 01.09.95, serial no. PX223 and RX261 and
PM/RM from 01.04.00)**

1	KK 03 28 95	Hex screw M20 x 95 mm w/nut
2	KK 01 10 42	Roll pin D6 x 40 mm
3	KK 07 96 07	Arm for wheel (Before 15.01.02)
4	KK 07 96 71	Axle for shock absorber
5	KK 35 21 45	Shock absorber (for PX/RX)
	KK 35 35 77	Shock absorber (for PM/RM) (Before 01.01.01)
	KK 35 39 20	Shock absorber (for PM/RM) (From 01.01.01)
6	KK 07 96 42	Fix for shock absorber
7	KK 03 27 55	Hex screw M16 x 55 mm w/nut
8	KK 03 10 60	Countersunk screw M20 x 70 mm w/nut
9	KK 07 96 30	Plate (for PM/RM)
	KK 08 24 08	Plate (for PX/RX)
10	KK 08 80 63	Stop screw M24 x 120 mm
11	KK 06 18 99	Counter nut M24
12	KK 08 80 62	Clevis
13	KK 01 02 60	Axle
14	KK 01 10 02	Roll pin
15	KK 02 99 20	Grease nipple
16	KK 03 28 55	Hex screw M20 x 55 mm w/nut
17	KK 07 96 94	Plate (Before 15.01.02)
	KK 08 24 09	Plate (From 15.01.02)
18	KK 03 27 65	Hex screw M16 x 65 mm w/nut
19	KK 07 96 72	Plate, upper for wheel (for PX/RX)
20	KK 07 96 73	Plate, lower for wheel (for PX/RX)
21	KK 30 12 23	Cone (for PX/RX)
22	KK 03 52 29	Hex screw M20 x 290 mm w/lock nut (for PX/RX)
23	KK 03 28 60	Hex screw M20 x 60 mm w/nut
24	KK 01 29 60	Washer
25	KK 07 97 03	Fixing bracket for wheel (for PX/RX)
	KK 08 11 15	Fixing bracket for wheel (for PM/RM)
26	KK 07 96 36	Axle for wheel
27	KK 07 97 30	Plate (for PX/RX)
28	KK 08 24 05	Arm for wheel (From 15.01.02)
29	KK 01 58 34	Nut M20, H = 12 mm
30	KK 01 37 02	Spring
31	KK 01 05 89	Ball
32	KK 01 58 30	Nut M20
33	KK 01 60 00	Lock nut M20




527 Wheel 400 x 15.5", 400 x 22.5", 500 x 22.5", 500 x 26.6", 14.9 x 24" and 12.5 x 18"
(From 01.03.97)




527 Wheel 400 x 15.5", 400 x 22.5", 500 x 22.5", 500 x 26.6", 14.9 x 24" and 12.5 x 18"
(From 01.03.97)

1	KK 01 14 62	Axle D75 x 287
	KK 01 14 84	Axle D50 (for DA plough, middle section only)
2	KK 01 14 61	Hub
	KK 01 14 60	Hub without axle cpl.
3	KK 01 62 01	Bearing 32210
4	KK 01 14 68	Packing w/plate
7	KK 01 14 66	Plate for seal
9	KK 01 14 65	Crown nut
10	KK 01 14 64	Pin
11	KK 01 14 63	Cap for hub D90 mm ADR-65
12	KK 01 62 03	Bearing 30213
13	KK 02 99 20	Grease nipple M8 x 1
14	KK 01 14 79	Wheel bolt M18 x 1.5
15	KK 01 14 69	Nut for wheel M18 x 1.5
16	KK 01 13 44	Rim for tyre 400 x 15.5"
	KK 01 13 70	Rim for tyre 400 x 22.5"
	KK 01 14 53	Rim for tyre 500 x 22.5"
	KK 01 14 78	Rim for tyre 500 x 26.5"
17	KK 01 13 42	Tyre 400 x 15.5", 8 ply (also for DA plough, middle section)
	KK 01 14 16	Tyre 400 x 15.5", 14 ply (also for DA plough, middle section)
	KK 01 13 68	Tyre 400 x 22.5", 8 ply
	KK 01 14 14	Tyre 400 x 22.5", 14 ply
	KK 01 14 51	Tyre 500 x 22.5", 8 ply
	KK 01 14 76	Tyre 500 x 26.5", 8 ply
	KK 01 13 43	Inner tube to 400 x 15.5" tyre
	KK 01 13 69	Inner tube to 400 x 22.5" tyre
	KK 01 14 52	Inner tube to 500 x 22.5" tyre
	KK 01 14 77	Inner tube to 500 x 26.5" tyre
18	KK 01 14 72	Tyre 14.9 x 24", 8 ply
	KK 01 14 73	Inner tube to 14.9 x 24" tyre
19	KK 01 14 74	Rim for tyre 14.9 x 24"
20	KK 01 14 57	Rim for tyre 12.5/80 - 12/18
21	KK 01 14 59	Tyre 12.5/80 - 18/12
	KK 01 14 58	Inner tube for tyre 12.5/80 - 12/18




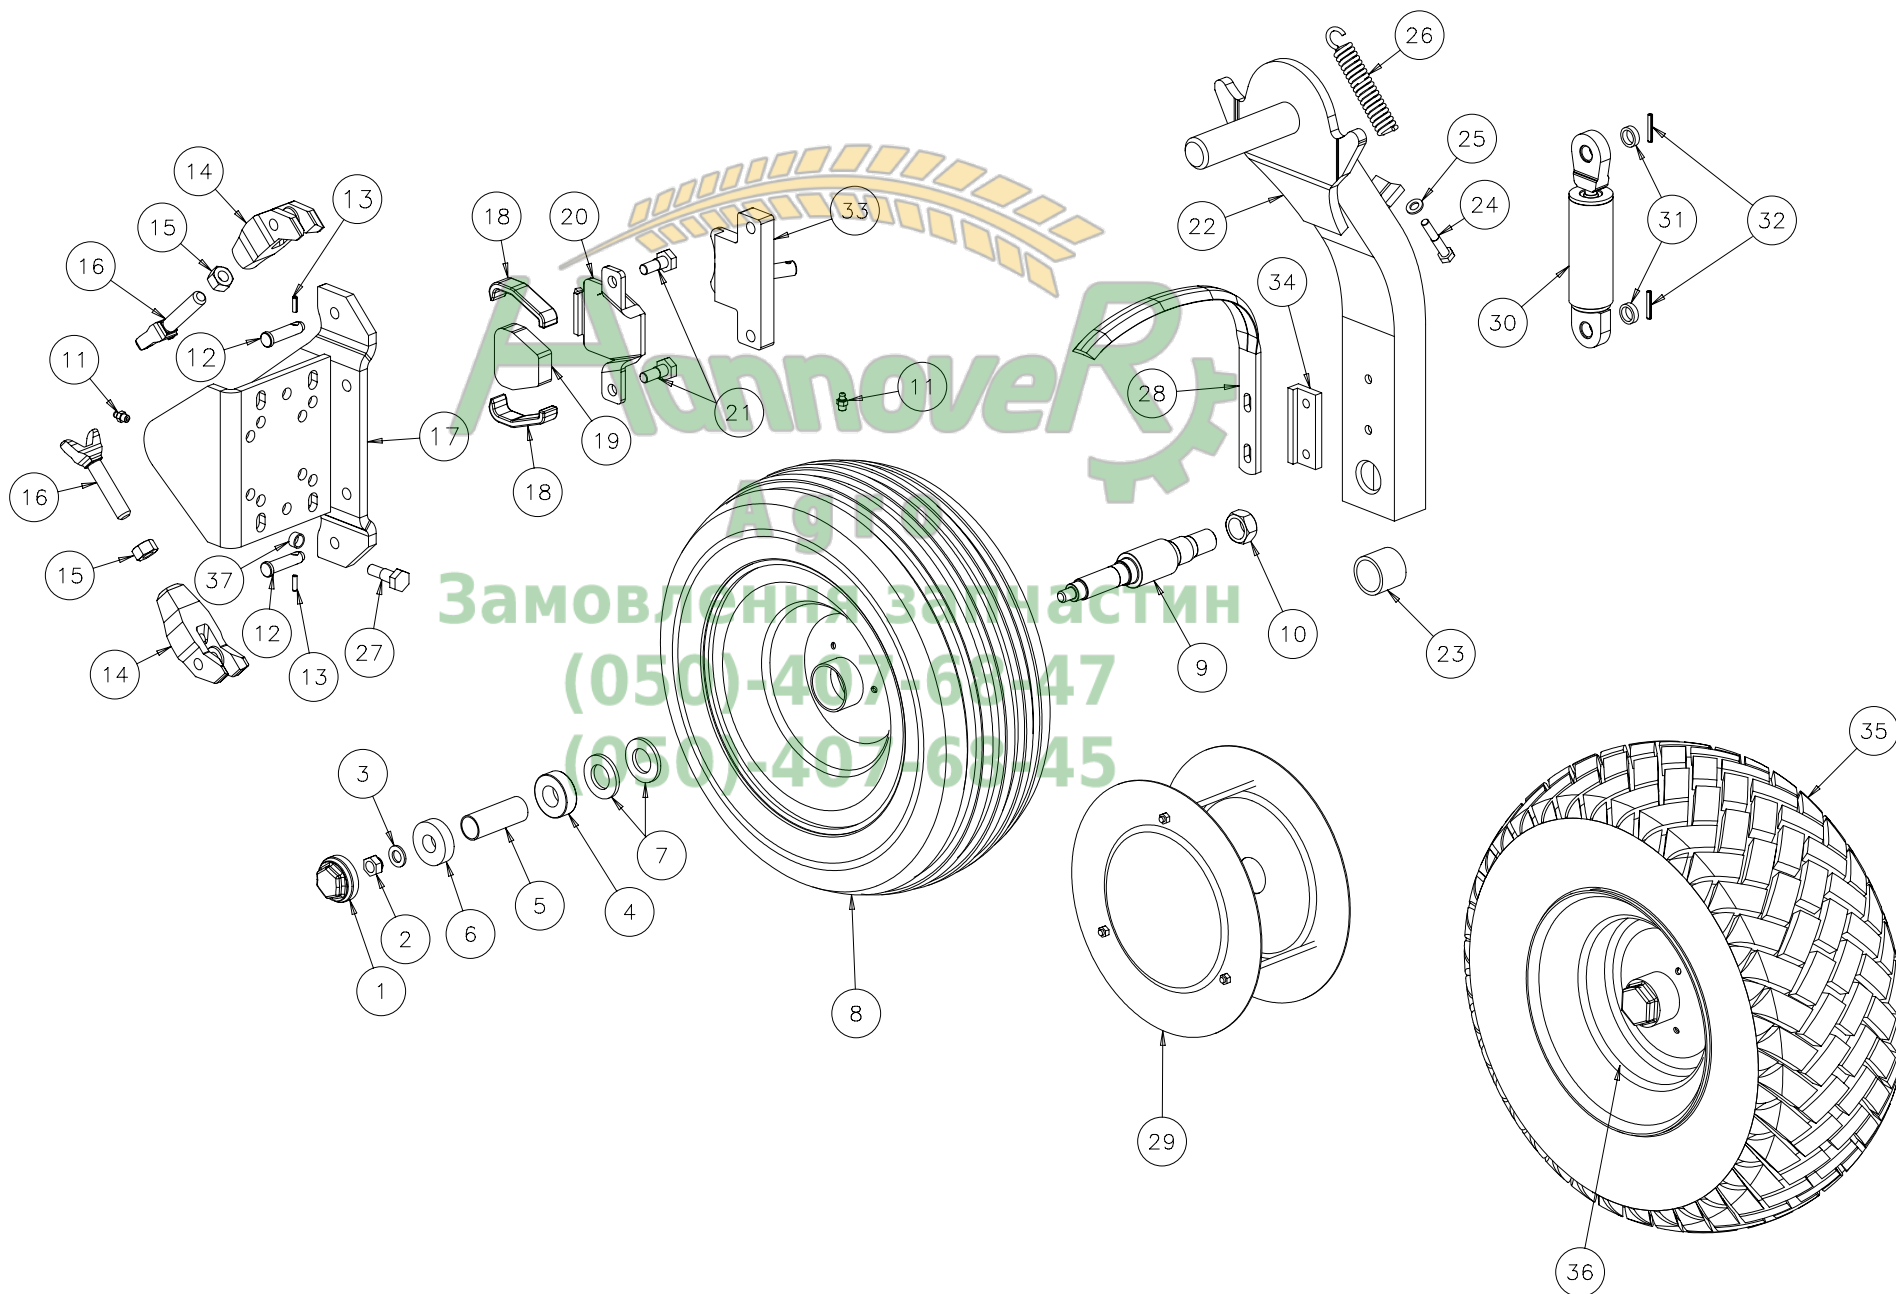

1	KK 01 11 57	End cap		KK 07 46 24	Scraper for wheel 26 x 12-12
2	KK 01 60 10	Nut M16		KK 07 46 17	Scraper for wheel 26 x 12-12 cpl.
3	KK 01 29 27	Washer	29	KK 01 14 01	Cover kit 200 x 14,5 cpl.
4	KK 01 12 00	Bearing		KK 01 14 02	Cover kit 26 x 12-12 cpl.
5	KK 01 00 31	Spacing tube for wheel 200 x 14.5	30	KK 35 35 40	Shock absorber
	KK 01 00 67	Spacing tube for wheel 26 x 12-12	31	KK 07 48 06	Bushing for shock absorber
6	KK 01 12 31	Bearing	32	KK 01 10 42	Roll pin for shock absorber
7	KK 01 08 06	Packing	33	KK 07 48 10	Bracket for wheelarm (for hydraulic shock absorber)
8	KK 01 13 03	Tyre 200 x 14.5	34	KK 07 40 48	Fixing for scraper
	KK 01 13 05	Inner tube for 200 x 14.5	35	KK 01 13 46	Tyre for wheel 26 x 12-12
	KK 01 13 31	Rim w/bearinga for 200 x 14.5		KK 01 13 49	Inner tube for wheel 26 x 12-12
9	KK 06 42 22	Axle for wheel LP-200 x 14,5	36	KK 01 14 19	Rim w/bearings for 26 x 12-12
	KK 06 42 23	Axle for wheel LP-26 x 12-12	37	KK 01 16 36	Bushing (From 01.06.99)
10	KK 01 60 37	Cone nut M30			
11	KK 02 99 20	Grease nipple	Not ill.	KK 03 26 95	Hex screw M12 x 95 mm w/nut (for scraper fixing)
12	KK 01 02 55	Bolt w/ head		KK 03 26 85	Hex screw M12 x 85 mm w/nut (for scraper fixing)
13	KK 01 10 61	Roll pin		KK 07 47 99	Screw and bushing set cpl. (From 01.06.99)
14	KK 06 40 30	Clevis		KK 07 48 17	Rubber wheel 200 x 14 .5, H = 700 cpl.
15	KK 01 58 32	Nut M20		KK 07 48 18	Rubber wheel 200 x 14 .5, H = 800 cpl.
16	KK 06 40 36	Stop screw		KK 07 48 19	Rubber wheel 26 x 12 - 12, H = 700 cpl.
	KK 06 40 39	Clevis cpl.		KK 07 48 20	Rubber wheel 26 x 12 - 12, H = 800 cpl.
17	KK 06 40 75	Support			
18	KK 06 40 86	Protection for damper block			
19	KK 06 40 87	Damper block			
20	KK 06 40 78	Holder for damper block			
21	KK 03 27 40	Hex screw M16 x 40 mm w/nut			
	KK 03 27 60	Hex screw M16 x 60 mm w/nut (for hydraulic shock absorber)			
22	KK 06 40 81	Wheel arm H = 700 mm			
	KK 07 48 01	Wheel arm for hydr. shock absorber H = 700 mm			
	KK 06 40 74	Wheel arm H = 800 mm			
	KK 07 48 02	Wheel arm for hydr. shock absorber H = 800 mm			
23	KK 06 40 73	Tube			
24	KK 03 36 70	Hex screw M12 x 70 mm			
25	KK 01 29 19	Washer			
26	KK 06 40 89	Spring			
27	KK 03 27 50	Hex screw M16 x 50 mm w/nut			
28	KK 07 40 47	Scraper blade for wheel 200 x 14.5			
	KK 07 40 49	Scraper for wheel 200 x 14.5 cpl.			

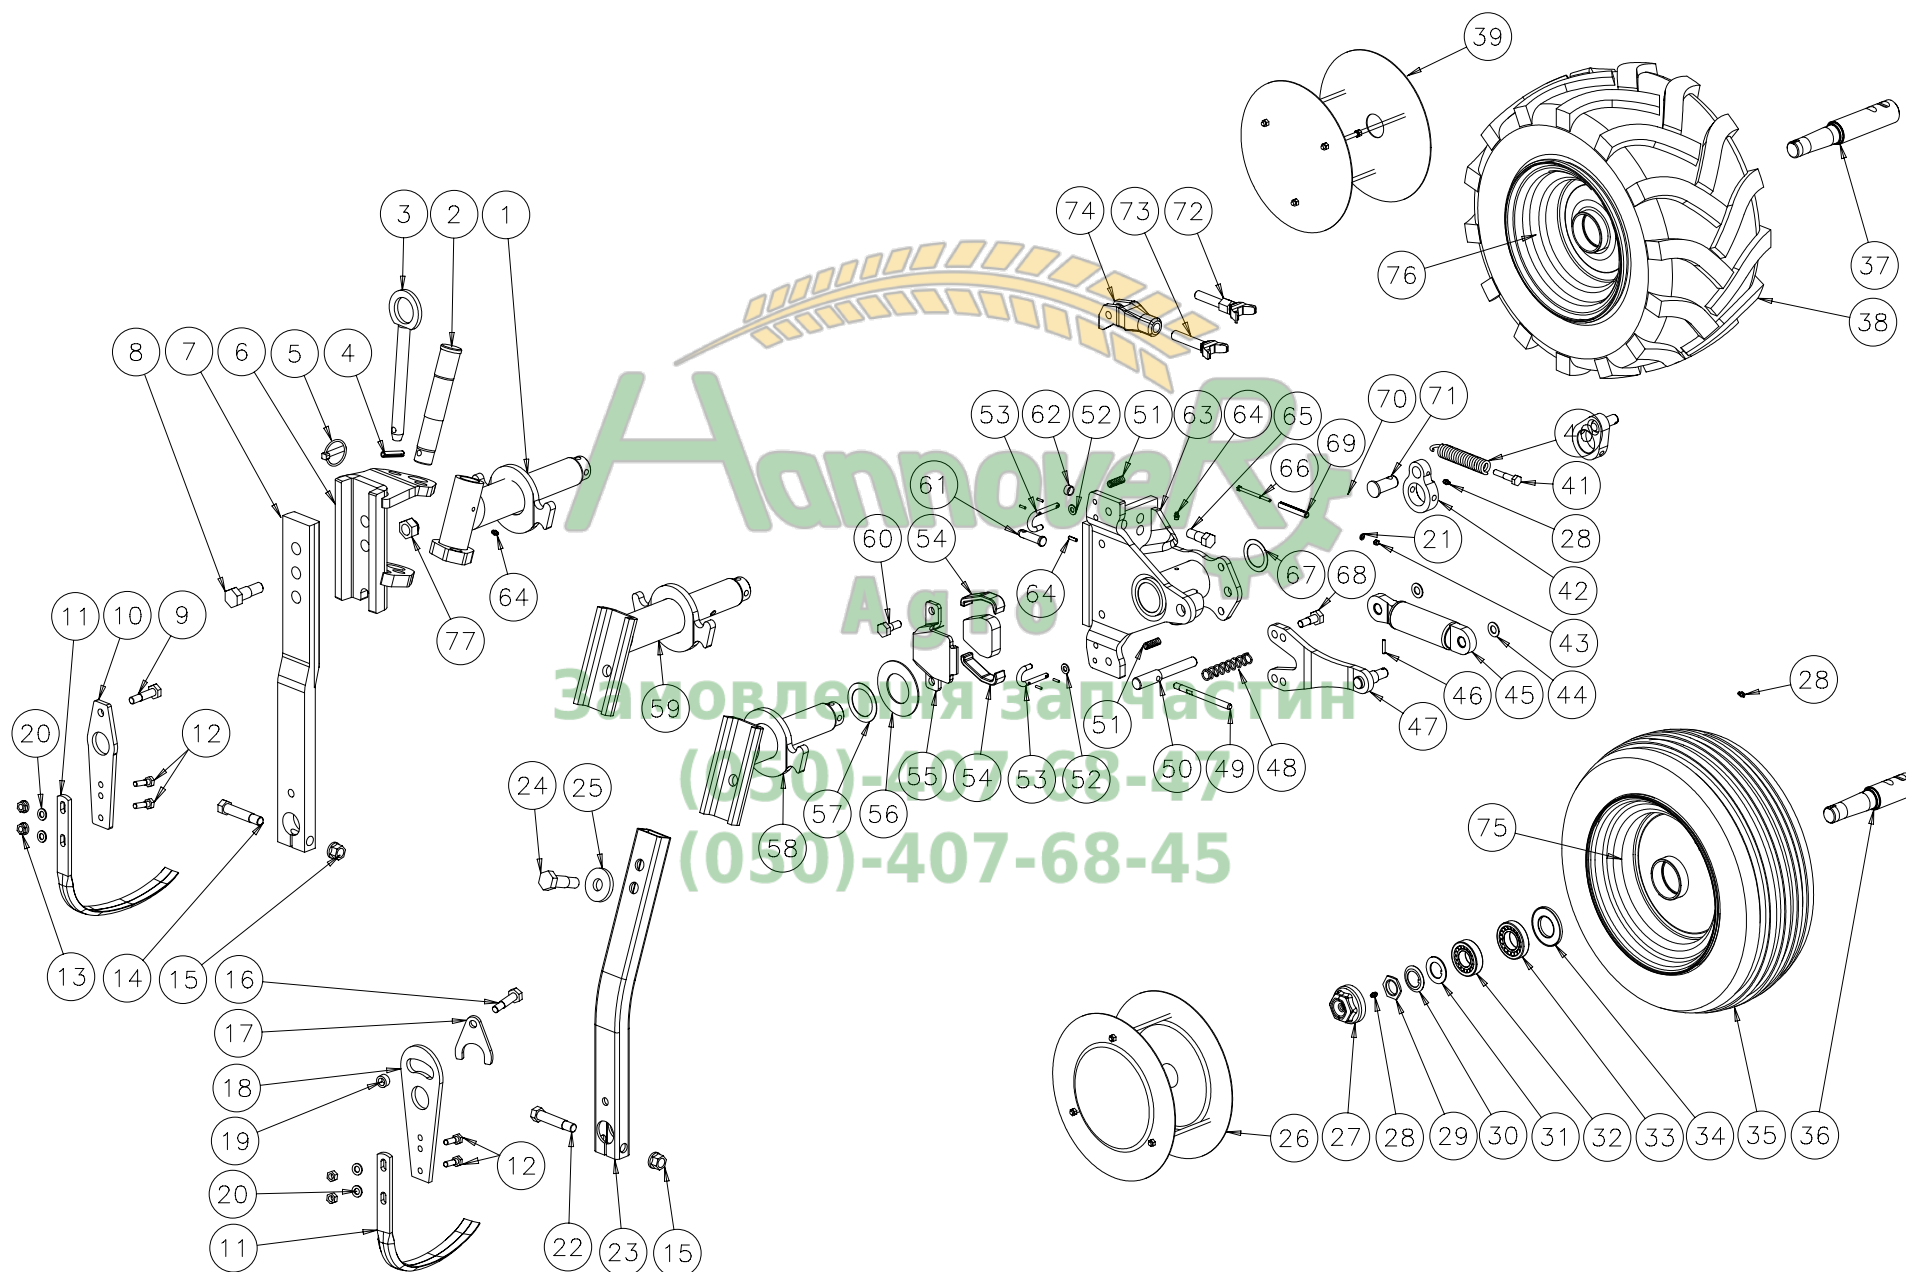

1	KK 07 48 56	Axle w/bearing cpl. (for depth/transport wheel)	28	KK 02 99 32	Grease nipple	50	KK 07 48 73	Axle
2	KK 07 48 75	Axle	29	KK 01 60 00	Lock nut M20 (Before 01.01.02)	51	KK 01 37 00	Spring
3	KK 07 48 93	Axle		KK 01 31 03	Lock nut KM6 M30 (Rebuilding kit EO/LO. Check dimension !)	52	KK 01 29 16	Washer
4	KK 01 10 48	Roll pin D12 x 60 mm		KK 01 31 09	Lock nut KM7 M35 (From 21.05.02)	53	KK 07 48 76	Lock
5	KK 01 07 00	Pin D12	30	KK 01 29 34	Lock washer (Before 21.05.02)	54	KK 06 40 86	Protection for damper block (From 01.05.00)
6	KK 07 48 64	Switch bracket		KK 01 31 04	Lock washer D42 x d30 x 3 (Rebuilding kit EO/LO. Check dimension !)	55	KK 06 40 79	Holder for damper block (From 01.05.00)
7	KK 07 48 65	Wheel arm (for depth/transport wheel)		KK 01 31 08	Lock washer D58 x d35 x 2,5 (From 21.05.02)	56	KK 01 30 04	Washer
8	KK 03 29 80	Hex screw M24 x 80 mm w/nut		KK 01 31 02	Washer MB6 (Rebuilding kit EO/LO. Check dimension !)	57	KK 01 29 56	Washer
9	KK 03 27 65	Hex screw M16 x 65 mm w/nut (From 01.04.01)	31	KK 01 31 10	Washer MB7 (From 21.05.02)	58	KK 07 48 41	Axle w/short bracket shaft cpl. (for depth wheel 200 x 14.5)
10	KK 07 48 44	Bracket for scraper (From 01.04.01)		KK 01 12 00	Bearing (Before 21.05.02)	59	KK 07 48 62	Axle w/bracket shaft cpl. (for depth wheel 26 x 12-12)
11	KK 07 48 38	Scraper (for wheel 200 x 14.5)	32	KK 01 05 91	Conical bearing (From 21.05.02)	60	KK 03 27 40	Hex screw M16 x 40 mm w/nut (From 01.05.00)
	KK 07 48 43	Scraper (for wheel 26 x 12-12) (Before 01.01.02)	33	KK 01 05 17	Bearing (Before 21.05.02)	61	KK 01 02 55	Bolt D16 x 51 mm
	KK 07 46 24	Scraper (for wheel 26 x 12-12) (From 01.01.02)	34	KK 01 12 15	Conical bearing (From 21.05.02)	62	KK 01 16 36	Bushing D20 x D16 x 10 mm
12	KK 03 26 40	Hex screw M12 x 40 mm w/nut	35	KK 01 11 68	Z - lamell	63	KK 07 48 50	Wheel bracket, rear mounted depth wheel
13	KK 01 60 38	Flange nut M12 (From 01.04.01)		KK 01 13 03	Tyre 200 x 14.5		KK 07 48 39	Wheel bracket, rear mounted depth wheel w/bearing
14	KK 03 28 07	Hex screw M20 x 100 mm w/nut		KK 01 13 05	Inner tube 200 x 14.5			
15	KK 01 60 12	Flange nut M20	36	KK 07 40 80	Axle 200 x 14.5 (Before 21.05.02)	64	KK 02 99 20	Grease nipple
16	KK 03 27 70	Hex screw M16 x 70 mm w/nut (for depth/transport wheel) (Before 01.04.01)	37	KK 08 41 10	Axle 200 x 14.5 (From 21.05.02)	65	KK 03 28 50	Hex screw M20 x 50 mm w/nut
	KK 03 27 75	Hex screw M16 x 75 mm w/nut (for depth wheel) (Before 01.04.01)	38	KK 07 40 93	Axle 26 x 12-12 (Before 27.05.02)	66	KK 03 23 90	Hex screw M6 x 90 mm
				KK 08 41 11	Axle 26 x 12-12 (From 27.05.02)	67	KK 01 29 55	Washer
				KK 01 13 46	Tyre 26 x 12-12 (Before 27.05.02)	68	KK 03 27 45	Hex screw M16 x 45 mm w/nut
				KK 01 31 00	Tyre 26 x 12-12 (From 27.05.02)	69	KK 01 10 52	Roll pin D12 x 80 mm
				KK 01 13 49	Inner tube 26 x 12-12	70	KK 07 48 67	Crank for shock absorber
17	KK 07 48 35	Clamp bracket (Before 01.04.01)	39	KK 01 14 02	Cover kit cpl.	71	KK 08 40 40	Rotation bolt (From 01.05.00)
18	KK 07 48 36	Bracket for scraper (Before 01.04.01)	40	KK 06 40 89	Spring (From 01.05.00)	72	KK 06 40 97	Crank screw cpl.
19	KK 10 68 63	Bushing (Before 01.04.01)	41	KK 03 26 65	Hex screw M12 x 60 mm (From 01.05.00)	73	KK 06 40 24	Stop screw
20	KK 01 29 19	Washer (Before 01.04.01)	42	KK 08 40 43	Crank (From 01.05.00)	74	KK 06 40 30	Clevis
21	KK 01 29 11	Washer 6,4 x 12,5 x 1,5 mm	43	KK 01 60 18	Lock nut M6	75	KK 01 13 79	Rim 200 x 14.5 (Before 21.05.02)
22	KK 03 28 90	Hex screw M20 x 90 mm w/nut	44	KK 01 29 31	Washer		KK 08 41 06	Rim 200 x 14.5 (From 21.05.02)
23	KK 07 48 66	Wheel arm (for depth wheel)	45	KK 35 36 30	Shock absorber	76	KK 01 14 19	Rim 26 x 12-12 (Before 27.05.02)
24	KK 03 29 80	Hex screw M24 x 80 mm w/nut	46	KK 01 10 35	Roll pin D6 x 30 mm		KK 08 41 07	Rim 26 x 12-12 (From 27.05.02)
25	KK 07 90 63	Washer	47	KK 07 48 70	Bracket arm for shock absorber		KK 07 48 86	Clamp w/fixing lug (200 mm tube)
26	KK 01 14 01	Cover kit cpl.	48	KK 35 60 42	Spring	77	KK 01 60 01	Lock nut M24
27	KK 01 11 57	Hub cap (Before 01.01.02)	49	KK 07 48 74	Handle			
	KK 01 31 05	Hub cap (From 21.05.02)						

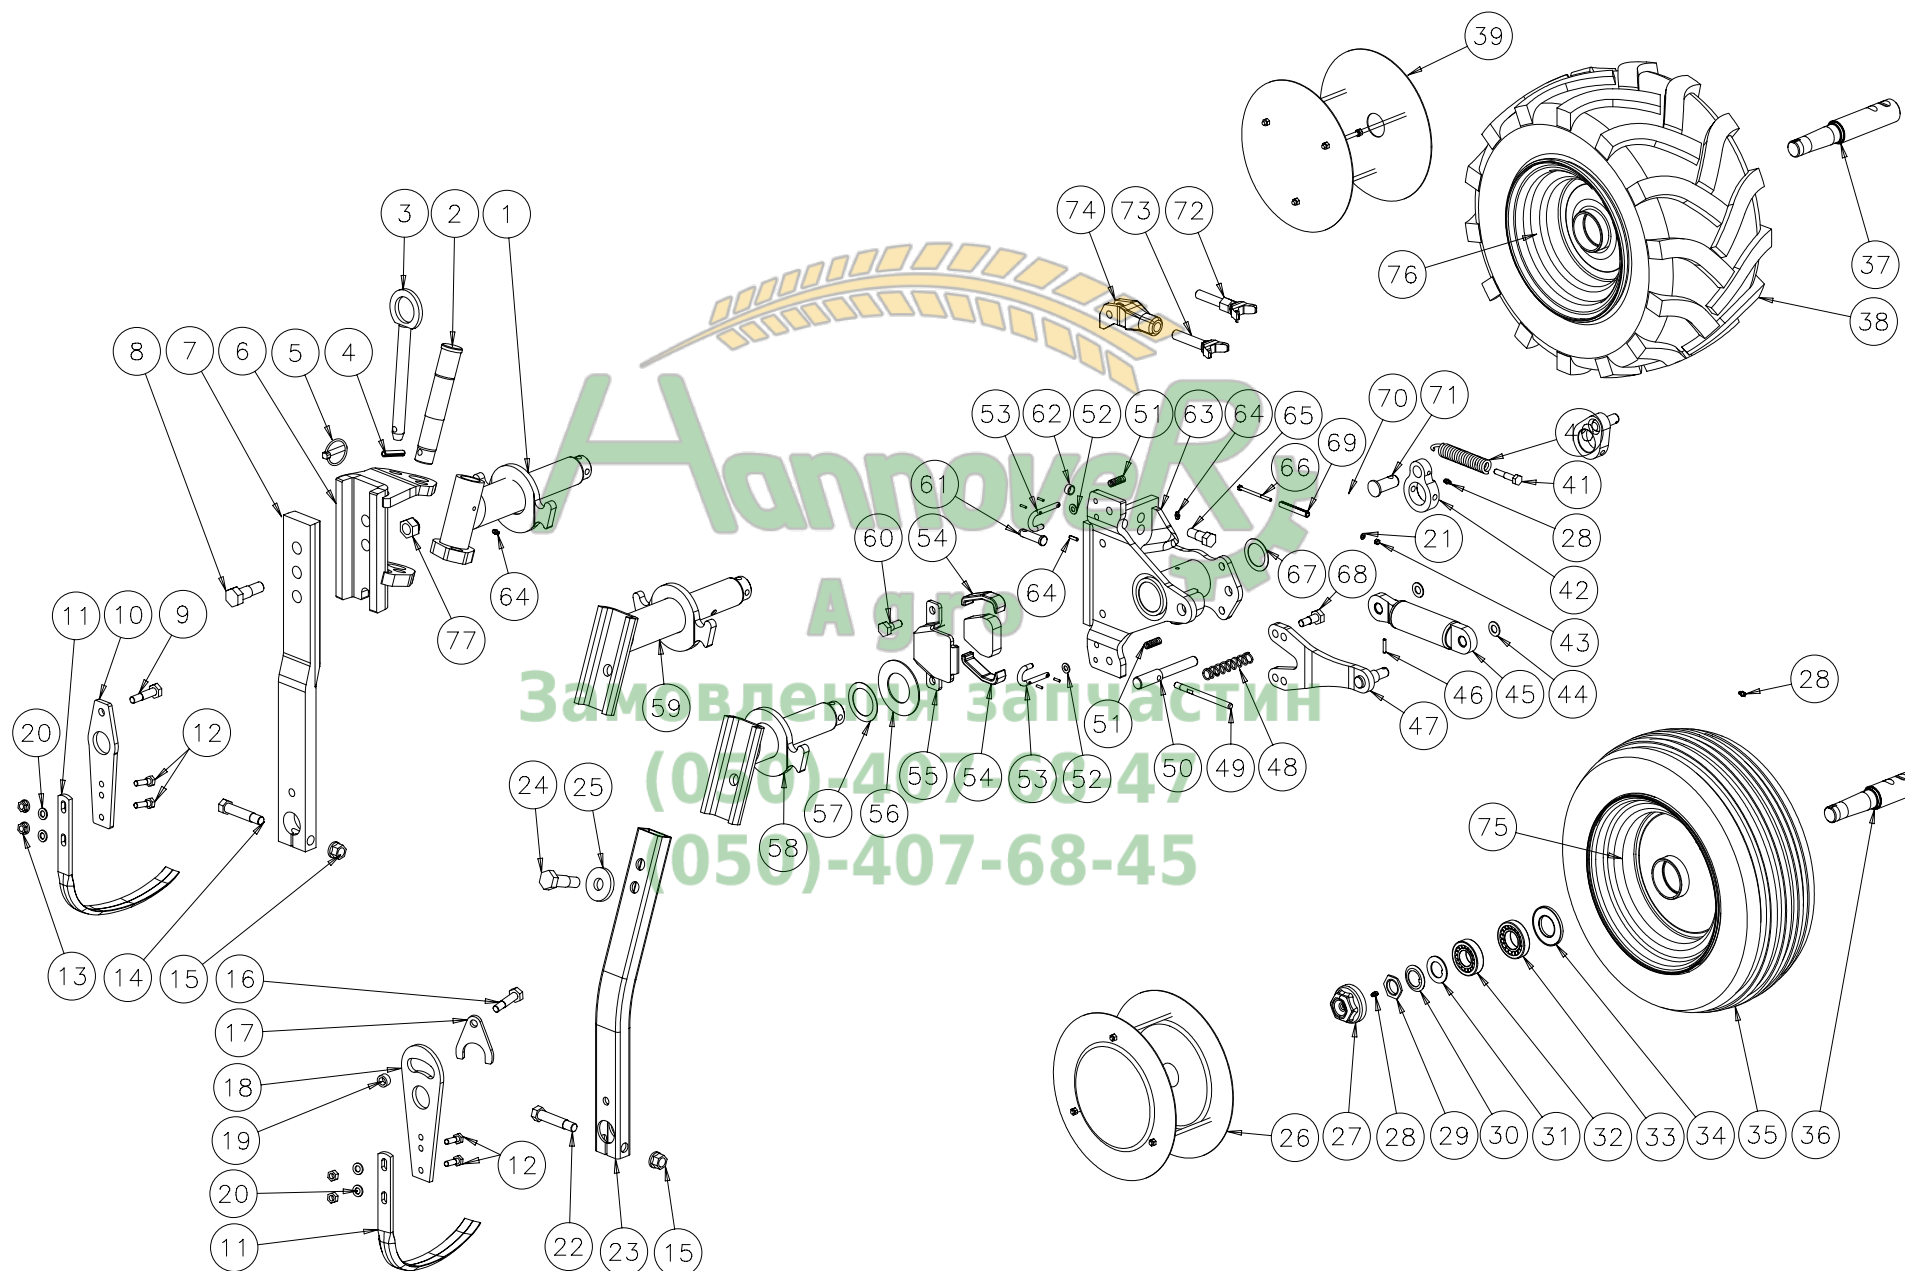

Not ill.	KK 06 40 47	Stop cpl.
	KK 08 40 00	Depth wheel 200 x 14.5 rear mounted without shock absorber cpl.
	KK 08 40 01	Depth wheel 200 x 14.5 rear mounted w/shock absorber cpl.
	KK 08 40 02	Depth wheel 26 x 12-12 rear mounted w/shock absorber cpl.
	KK 08 40 03	Depth wheel 200 x 14.5 frame mounted without shock absorber cpl.
	KK 08 40 10	Depth/transport wheel 200 x 14.5 rear mounted without shock absorber cpl.
	KK 08 40 11	Depth/transport wheel 200 x 14.5 rear mounted w/shock absorber cpl.
	KK 08 40 12	Depth/transport wheel 26 x 12-12 rear mounted w/shock absorber cpl.
	KK 08 40 13	Depth/transport wheel 200 x 14.5 frame mounted without shock absorber cpl.
	KK 08 41 00	Wheel 200 x 14.5 cpl. w/axle (From 21.05.02)
	KK 08 41 01	Wheel 26 x 12-12 cpl. w/axle (From 27.05.02)








Замовлення запчастин
(050)-407-68-47
(050)-407-68-45



1	KK 03 27 16	Hex screw M16 x 140 mm w/nut (VD, VX, ED and LD plough)	24	KK 07 48 90	Clamp (150 mm tube)
	KK 03 27 19	Hex screw M16 x 190 mm w/nut (EM/LM plough)		KK 07 48 87	Clamp (200 mm tube)
	KK 03 27 27	Hex screw M16 x 160 mm w/nut (ED/LD-HD plough)	25	KK 07 48 89	Clamp w/fixing lug (150 mm tube)
				KK 07 48 86	Clamp w/fixing lug (200 mm tube)
2	KK 01 03 15	Bolt D25.3 x 60 mm	26	KK 07 48 81	Plate, over (for ES and LS plough)
3	KK 07 08 05	Adjustable stay			
4	KK 01 10 20	Roll pin D12 x 40 mm			
5	KK 07 48 80	Wheel bracket, frame mounted wheel			
6	KK 07 48 85	Plate, lower (ED and LD plough)			
	KK 07 49 71	Plate, lower (ED/LD-HD, 200 tube)			
7	KK 07 48 84	Plate, upper (ED and LD plough)			
	KK 07 49 70	Plate, upper (ED/LD-HD, 200 tube)			
8	KK 07 48 88	Plate (for VD and VX plough)			
9	KK 07 48 91	Plate (for EM/LM plough)			
10	KK 07 48 82	Plate, under (for ES and LS plough)			
11	KK 01 30 05	Washer			
12	KK 01 16 14	Bushing D30 x D16 x 28 mm			
13	KK 03 27 65	Hex screw M16 x 65 mm w/nut			
14	KK 01 16 15	Bushing D40 x D24 x 15.5 mm			
15	KK 03 29 25	Hex screw M24 x 250 mm w/nut			
16	KK 03 29 20	Hex screw M24 x 200 mm w/nut			
17	KK 03 28 22	Hex screw M20 x 190 mm w/nut			
18	KK 03 28 36	Hex screw M20 x 240 mm w/nut			
19	KK 08 40 42	Pin (From 01.05.00)			
20	KK 06 82 51	Washer			
21	KK 08 40 84	Stop screw (for ES/LS ploughs only) (From 01.04.01)			
22	KK 07 48 46	Transportation support (for ES/LS ploughs only) (From 01.04.01)			
23	KK 06 18 99	Contra nut M24 (for ES/LS ploughs only) (From 01.04.01)			



Замовлення запчастин
(050)-407-68-47
(050)-407-68-45

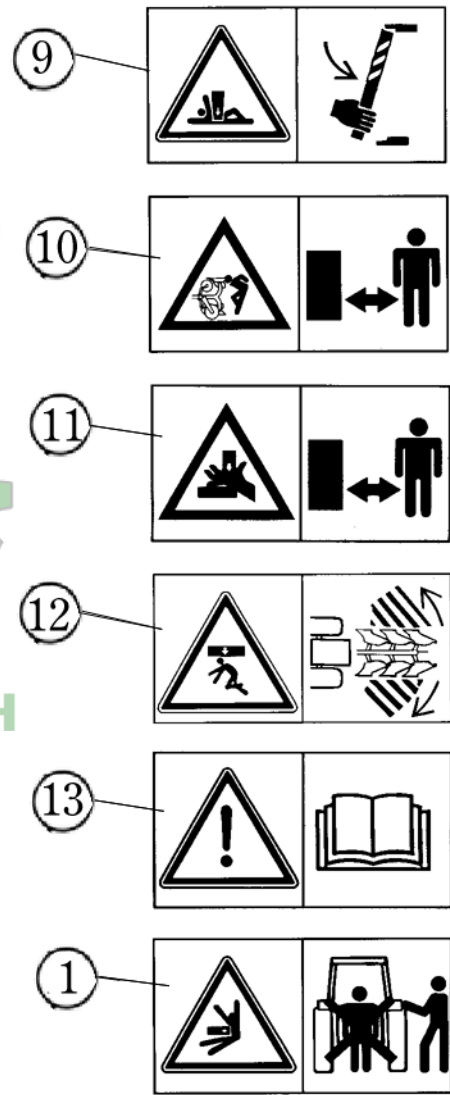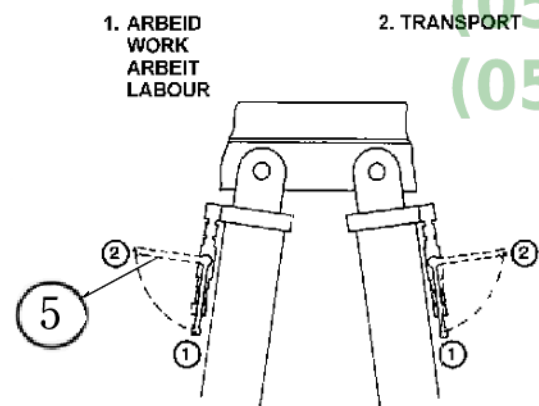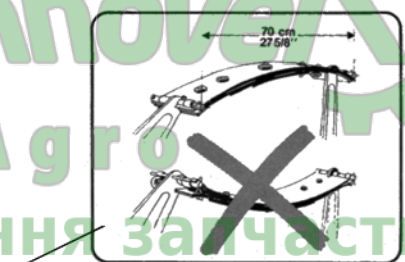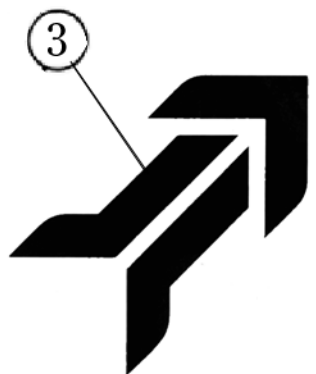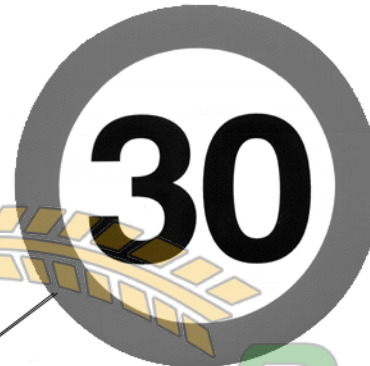

1	KK 70 98 41	Safty sign, danger, tractor/implement
2	KK 70 99 55	Kverneland PM-100
	KK 70 99 59	Kverneland RM-100
3	KK 70 97 37	Arrow
4	KK 70 97 79	Info., nuts
5	KK 70 93 04	Info., lock valves for transport
6	KK 70 97 81	Info., speed limit 30km/h
7	KK 70 92 34	Info., leaf spring
8	KK 70 98 31	Kverneland w/arrow
9	KK 70 98 43	Safty sign, parking support
10	KK 70 98 95	Safty sign, sharp edges
11	KK 70 98 23	Safty sign, crush danger
12	KK 70 98 42	Safty sign, reversible plough
13	KK 70 98 44	Safty sign, read instruction manual
Not ill.	KK 70 98 47	Patent label
	KK 70 99 80	Triangular reflexive foil
	KK 70 99 81	Rectangular reflexive foil



Замовлення запчастин
(050)-407-68-47
(050)-407-68-45

Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page
KK 01 00 31	95	KK 01 05 91	97	KK 01 12 23	83	KK 01 14 52	93	KK 01 15 85	59	KK 01 18 06	71	KK 01 20 39	65	KK 01 22 61	51
KK 01 00 67	95	KK 01 06 06	35	KK 01 12 31	95	KK 01 14 53	93	KK 01 15 96	43	KK 01 18 06	73	KK 01 20 39	75	KK 01 22 61	53
KK 01 01 53	37	KK 01 06 50	35	KK 01 12 59	27	KK 01 14 57	93	KK 01 15 96	55	KK 01 18 12	65	KK 01 20 56	59	KK 01 22 61	59
KK 01 01 55	11	KK 01 06 55	35	KK 01 12 59	29	KK 01 14 58	93	KK 01 15 96	59	KK 01 18 24	69	KK 01 20 59	47	KK 01 23 07	47
KK 01 01 55	13	KK 01 07 00	59	KK 01 12 59	31	KK 01 14 59	93	KK 01 16 14101		KK 01 18 61	77	KK 01 20 59	51	KK 01 23 07	49
KK 01 01 55	19	KK 01 07 00	97	KK 01 12 61	83	KK 01 14 60	93	KK 01 16 15101		KK 01 18 65	77	KK 01 20 59	55	KK 01 23 19	59
KK 01 01 55	7	KK 01 07 72	25	KK 01 12 66	25	KK 01 14 61	93	KK 01 16 36	95	KK 01 18 66	27	KK 01 20 59	57	KK 01 23 23	59
KK 01 01 56	11	KK 01 07 75	25	KK 01 12 66	27	KK 01 14 62	93	KK 01 16 36	97	KK 01 18 66	29	KK 01 20 59	59	KK 01 23 24	47
KK 01 01 56	13	KK 01 08 06	95	KK 01 12 66	29	KK 01 14 63	93	KK 01 16 68	35	KK 01 18 66	31	KK 01 20 60	47	KK 01 23 24	51
KK 01 01 56	19	KK 01 08 18	29	KK 01 12 66	31	KK 01 14 64	93	KK 01 16 82	35	KK 01 18 76	69	KK 01 20 60	51	KK 01 23 24	53
KK 01 01 56	7	KK 01 08 18	31	KK 01 12 77	47	KK 01 14 65	93	KK 01 16 82	39	KK 01 18 78	77	KK 01 20 60	53	KK 01 23 24	55
KK 01 01 68	37	KK 01 09 60	51	KK 01 12 92	25	KK 01 14 66	93	KK 01 16 82	41	KK 01 18 88	65	KK 01 20 60	55	KK 01 23 24	57
KK 01 01 68	39	KK 01 09 61	51	KK 01 13 03	95	KK 01 14 68	93	KK 01 16 91	35	KK 01 18 88	71	KK 01 20 60	57	KK 01 23 24	59
KK 01 02 55	95	KK 01 09 67	35	KK 01 13 03	97	KK 01 14 69	93	KK 01 16 91	41	KK 01 18 88	73	KK 01 20 62	47	KK 01 23 25	49
KK 01 02 55	97	KK 01 10 02	91	KK 01 13 05	95	KK 01 14 72	93	KK 01 16 91	43	KK 01 19 06	77	KK 01 20 62	49	KK 01 23 39	47
KK 01 02 60	91	KK 01 10 20101		KK 01 13 05	97	KK 01 14 73	93	KK 01 17 19	63	KK 01 19 08	61	KK 01 20 62	51	KK 01 23 74	59
KK 01 03 15101		KK 01 10 20	37	KK 01 13 31	95	KK 01 14 74	93	KK 01 17 24	63	KK 01 19 08	65	KK 01 20 62	55	KK 01 25 08	59
KK 01 03 19	55	KK 01 10 20	51	KK 01 13 42	93	KK 01 14 76	93	KK 01 17 25	63	KK 01 19 08	71	KK 01 20 62	57	KK 01 25 09	59
KK 01 03 19	59	KK 01 10 20	53	KK 01 13 43	93	KK 01 14 77	93	KK 01 17 27	63	KK 01 19 08	73	KK 01 20 62	59	KK 01 25 22	47
KK 01 03 23	41	KK 01 10 20	55	KK 01 13 44	93	KK 01 14 78	93	KK 01 17 36	67	KK 01 19 12	69	KK 01 20 68	47	KK 01 25 22	51
KK 01 03 28	41	KK 01 10 20	57	KK 01 13 46	95	KK 01 14 79	93	KK 01 17 37	67	KK 01 19 12	71	KK 01 20 69	47	KK 01 25 22	53
KK 01 03 28	59	KK 01 10 20	59	KK 01 13 46	97	KK 01 14 84	93	KK 01 17 37	83	KK 01 19 12	73	KK 01 20 82	59	KK 01 25 22	55
KK 01 03 35	37	KK 01 10 35	97	KK 01 13 49	95	KK 01 15 12	55	KK 01 17 38	67	KK 01 19 13	77	KK 01 20 83	59	KK 01 25 22	57
KK 01 03 35	53	KK 01 10 37	21	KK 01 13 49	97	KK 01 15 23	53	KK 01 17 43	67	KK 01 19 18	69	KK 01 20 84	47	KK 01 25 26	59
KK 01 03 35	55	KK 01 10 42	21	KK 01 13 68	93	KK 01 15 23	57	KK 01 17 44	67	KK 01 19 51	69	KK 01 20 85	47	KK 01 25 31	59
KK 01 03 35	55	KK 01 10 42	91	KK 01 13 69	93	KK 01 15 41	47	KK 01 17 45	67	KK 01 19 51	71	KK 01 21 14	47	KK 01 25 48	47
KK 01 03 35	57	KK 01 10 42	95	KK 01 13 70	93	KK 01 15 65	47	KK 01 17 45	79	KK 01 19 51	73	KK 01 21 14	51	KK 01 25 48	59
KK 01 03 37	51	KK 01 10 48	97	KK 01 13 79	97	KK 01 15 65	51	KK 01 17 46	67	KK 01 19 53	77	KK 01 21 14	53	KK 01 25 51	47
KK 01 04 13	51	KK 01 10 52	97	KK 01 14 01	95	KK 01 15 65	53	KK 01 17 50	27	KK 01 19 62	87	KK 01 21 14	55	KK 01 25 70	47
KK 01 05 17	97	KK 01 10 59	47	KK 01 14 01	97	KK 01 15 65	55	KK 01 17 50	29	KK 01 20 12	75	KK 01 21 14	57	KK 01 25 77	59
KK 01 05 32	27	KK 01 10 61	95	KK 01 14 02	95	KK 01 15 65	57	KK 01 17 50	31	KK 01 20 15	61	KK 01 21 16	51	KK 01 26 19	75
KK 01 05 32	29	KK 01 11 57	95	KK 01 14 02	97	KK 01 15 85	47	KK 01 17 55	75	KK 01 20 25	77	KK 01 21 20	59	KK 01 26 37	75
KK 01 05 32	31	KK 01 11 57	97	KK 01 14 14	93	KK 01 15 85	49	KK 01 17 83	61	KK 01 20 26	69	KK 01 21 24	59	KK 01 26 42	85
KK 01 05 72	27	KK 01 11 68	97	KK 01 14 16	93	KK 01 15 85	51	KK 01 17 83	65	KK 01 20 27	71	KK 01 21 58	59	KK 01 26 43	85
KK 01 05 72	29	KK 01 12 00	95	KK 01 14 19	95	KK 01 15 85	53	KK 01 17 93	87	KK 01 20 32	61	KK 01 21 85	35	KK 01 26 43	87
KK 01 05 72	31	KK 01 12 00	97	KK 01 14 19	97	KK 01 15 85	55	KK 01 18 02	77	KK 01 20 32	65	KK 01 22 19	51	KK 01 26 44	85
KK 01 05 89	91	KK 01 12 15	97	KK 01 14 51	93	KK 01 15 85	57	KK 01 18 06	61	KK 01 20 39	61	KK 01 22 61	47	KK 01 26 44	87

Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page
KK 01 26 54	59	KK 01 29 27	9	KK 01 31 00	97	KK 01 33 61	11	KK 01 58 17	17	KK 01 60 12	97	KK 02 97 27	21	KK 03 20 40	73
KK 01 26 55	47	KK 01 29 27	95	KK 01 31 02	97	KK 01 33 61	13	KK 01 58 17	17	KK 01 60 13	17	KK 02 97 27	21	KK 03 21 10	81
KK 01 26 55	49	KK 01 29 29	11	KK 01 31 03	97	KK 01 33 61	19	KK 01 58 17	17	KK 01 60 15	11	KK 02 97 70	35	KK 03 23 35	47
KK 01 26 62	59	KK 01 29 29	13	KK 01 31 04	97	KK 01 33 61	7	KK 01 58 17	17	KK 01 60 15	13	KK 02 99 18	83	KK 03 23 90	97
KK 01 27 00	47	KK 01 29 29	19	KK 01 31 05	97	KK 01 33 85	11	KK 01 58 17	19	KK 01 60 15	17	KK 02 99 20	21	KK 03 24 03	35
KK 01 27 05	59	KK 01 29 29	7	KK 01 31 08	97	KK 01 33 85	13	KK 01 58 17	27	KK 01 60 15	19	KK 02 99 20	25	KK 03 24 45	53
KK 01 27 06	59	KK 01 29 31	97	KK 01 31 09	97	KK 01 33 85	19	KK 01 58 25	17	KK 01 60 15	7	KK 02 99 20	27	KK 03 24 45	55
KK 01 27 07	59	KK 01 29 34	97	KK 01 31 10	97	KK 01 33 85	7	KK 01 58 25	17	KK 01 60 18	97	KK 02 99 20	29	KK 03 24 45	57
KK 01 27 23	47	KK 01 29 55	97	KK 01 32 28	11	KK 01 35 01	59	KK 01 58 25	17	KK 01 60 22	23	KK 02 99 20	31	KK 03 24 45	59
KK 01 27 30	47	KK 01 29 56	97	KK 01 32 28	13	KK 01 35 17	49	KK 01 58 25	19	KK 01 60 31	25	KK 02 99 20	35	KK 03 24 50	51
KK 01 27 34	59	KK 01 29 60	31	KK 01 32 28	13	KK 01 35 18	47	KK 01 58 25	19	KK 01 60 31	27	KK 02 99 20	41	KK 03 24 60	59
KK 01 27 35	59	KK 01 29 60	91	KK 01 32 28	15	KK 01 35 19	49	KK 01 58 25	19	KK 01 60 31	29	KK 02 99 20	43	KK 03 24 65	47
KK 01 27 73	47	KK 01 29 80	47	KK 01 32 28	17	KK 01 35 22	47	KK 01 58 25	33	KK 01 60 37	95	KK 02 99 20	91	KK 03 24 75	35
KK 01 27 78	47	KK 01 30 01	15	KK 01 32 28	19	KK 01 35 25	89	KK 01 58 25	37	KK 01 60 38	97	KK 02 99 20	93	KK 03 24 75	59
KK 01 27 78	51	KK 01 30 04	97	KK 01 32 28	7	KK 01 35 26	89	KK 01 58 25	39	KK 01 60 45	23	KK 02 99 20	95	KK 03 24 80	59
KK 01 27 80	51	KK 01 30 05	101	KK 01 32 28	9	KK 01 35 27	89	KK 01 58 25	43	KK 01 60 49	23	KK 02 99 20	97	KK 03 26 40	43
KK 01 27 81	51	KK 01 30 51	61	KK 01 32 34	13	KK 01 35 29	59	KK 01 58 30	15	KK 01 62 01	93	KK 02 99 27	35	KK 03 26 40	97
KK 01 27 84	59	KK 01 30 52	61	KK 01 32 34	15	KK 01 35 44	59	KK 01 58 30	27	KK 01 62 03	93	KK 02 99 32	97	KK 03 26 55	21
KK 01 27 93	59	KK 01 30 53	61	KK 01 32 34	5	KK 01 35 45	59	KK 01 58 30	27	KK 01 65 09	89	KK 03 10 30	29	KK 03 26 65	21
KK 01 27 96	47	KK 01 30 57	75	KK 01 32 34	9	KK 01 35 89	59	KK 01 58 30	37	KK 01 65 10	63	KK 03 10 30	31	KK 03 26 65	97
KK 01 28 73	39	KK 01 30 68	87	KK 01 33 32	13	KK 01 35 90	59	KK 01 58 30	39	KK 01 65 10	89	KK 03 10 60	91	KK 03 26 85	95
KK 01 29 06	33	KK 01 30 70	87	KK 01 33 32	15	KK 01 35 94	75	KK 01 58 30	45	KK 01 65 11	89	KK 03 13 40	25	KK 03 26 95	95
KK 01 29 11	97	KK 01 30 72	65	KK 01 33 32	15	KK 01 35 95	73	KK 01 58 30	91	KK 01 65 12	89	KK 03 17 30	25	KK 03 27 02	29
KK 01 29 13	21	KK 01 30 73	73	KK 01 33 32	17	KK 01 35 95	75	KK 01 58 32	5	KK 01 65 13	89	KK 03 17 40	25	KK 03 27 02	31
KK 01 29 16	97	KK 01 30 75	87	KK 01 33 32	5	KK 01 35 96	73	KK 01 58 32	95	KK 01 65 14	89	KK 03 20 02	73	KK 03 27 02	41
KK 01 29 19	13	KK 01 30 76	87	KK 01 33 32	9	KK 01 35 97	73	KK 01 58 34	13	KK 01 65 22	83	KK 03 20 02	83	KK 03 27 13	39
KK 01 29 19	15	KK 01 30 77	87	KK 01 33 32	9	KK 01 36 02	83	KK 01 58 34	15	KK 01 65 23	83	KK 03 20 06	63	KK 03 27 16	101
KK 01 29 19	5	KK 01 30 78	87	KK 01 33 33	13	KK 01 36 05	63	KK 01 58 34	9	KK 01 65 24	83	KK 03 20 06	67	KK 03 27 16	41
KK 01 29 19	9	KK 01 30 79	87	KK 01 33 33	7	KK 01 36 06	79	KK 01 58 34	91	KK 01 65 25	83	KK 03 20 06	89	KK 03 27 19	101
KK 01 29 19	95	KK 01 30 80	87	KK 01 33 33	9	KK 01 37 00	97	KK 01 58 41	33	KK 01 65 26	83	KK 03 20 07	83	KK 03 27 25	35
KK 01 29 19	97	KK 01 30 81	87	KK 01 33 46	11	KK 01 37 02	91	KK 01 58 41	45	KK 01 65 27	83	KK 03 20 16	63	KK 03 27 25	37
KK 01 29 22	13	KK 01 30 87	81	KK 01 33 46	13	KK 01 37 05	75	KK 01 60 00	91	KK 01 65 31	63	KK 03 20 16	67	KK 03 27 25	5
KK 01 29 22	15	KK 01 30 92	81	KK 01 33 46	15	KK 01 58 11	47	KK 01 60 00	97	KK 01 65 32	63	KK 03 20 16	79	KK 03 27 25	9
KK 01 29 22	17	KK 01 30 93	81	KK 01 33 46	19	KK 01 58 13	17	KK 01 60 01	39	KK 01 65 35	79	KK 03 20 16	89	KK 03 27 27	101
KK 01 29 22	5	KK 01 30 94	81	KK 01 33 46	7	KK 01 58 13	17	KK 01 60 01	97	KK 01 65 36	79	KK 03 20 40	61	KK 03 27 30	13
KK 01 29 22	9	KK 01 30 95	81	KK 01 33 46	7	KK 01 58 16	33	KK 01 60 04	27	KK 01 65 37	79	KK 03 20 40	65	KK 03 27 30	15
KK 01 29 27	5	KK 01 30 96	81	KK 01 33 46	9	KK 01 58 17	17	KK 01 60 10	95	KK 01 65 38	79	KK 03 20 40	71	KK 03 27 30	35

Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page
KK 03 27 30 41		KK 03 27 75 13		KK 03 28 45 23		KK 03 30 07 33		KK 03 32 86 17		KK 03 52 36 35		KK 06 15 15 23		KK 06 38 01 5	
KK 03 27 30 43		KK 03 27 75 19		KK 03 28 45 23		KK 03 30 16 17		KK 03 32 86 5		KK 05 07 06 21		KK 06 15 15 59		KK 06 40 24 97	
KK 03 27 35 13		KK 03 27 75 31		KK 03 28 45 35		KK 03 31 00 13		KK 03 32 86 9		KK 05 30 90 11		KK 06 16 37 37		KK 06 40 30 95	
KK 03 27 35 5		KK 03 27 75 7		KK 03 28 45 35		KK 03 31 00 15		KK 03 32 95 13		KK 05 30 90 13		KK 06 16 37 39		KK 06 40 30 97	
KK 03 27 35 9		KK 03 27 75 97		KK 03 28 45 37		KK 03 31 00 5		KK 03 32 95 17		KK 05 30 90 13		KK 06 18 99 101		KK 06 40 36 95	
KK 03 27 40 11		KK 03 27 85 31		KK 03 28 45 39		KK 03 31 00 9		KK 03 32 95 5		KK 05 30 90 15		KK 06 18 99 41		KK 06 40 39 95	
KK 03 27 40 13		KK 03 27 95 33		KK 03 28 45 39		KK 03 31 07 15		KK 03 32 95 9		KK 05 30 90 17		KK 06 18 99 91		KK 06 40 47 99	
KK 03 27 40 15		KK 03 28 03 23		KK 03 28 45 45		KK 03 31 07 17		KK 03 33 06 81		KK 05 30 90 19		KK 06 19 42 55		KK 06 40 73 95	
KK 03 27 40 19		KK 03 28 07 23		KK 03 28 50 23		KK 03 31 07 5		KK 03 33 08 59		KK 05 30 90 5		KK 06 20 20 23		KK 06 40 74 95	
KK 03 27 40 41		KK 03 28 07 97		KK 03 28 50 31		KK 03 31 07 9		KK 03 33 21 59		KK 05 30 90 7		KK 06 20 25 13		KK 06 40 75 95	
KK 03 27 40 7		KK 03 28 15 39		KK 03 28 50 39		KK 03 31 07 9		KK 03 33 32 5		KK 05 30 90 9		KK 06 20 25 9		KK 06 40 78 95	
KK 03 27 40 95		KK 03 28 15 45		KK 03 28 50 39		KK 03 31 08 15		KK 03 35 35 55		KK 05 33 87 13		KK 06 24 58 35		KK 06 40 79 97	
KK 03 27 40 97		KK 03 28 20 35		KK 03 28 50 43		KK 03 31 11 17		KK 03 35 40 27		KK 05 33 87 5		KK 06 25 00 35		KK 06 40 81 95	
KK 03 27 45 37		KK 03 28 21 37		KK 03 28 50 97		KK 03 31 16 17		KK 03 36 70 95		KK 05 33 87 9		KK 06 25 05 35		KK 06 40 86 95	
KK 03 27 45 39		KK 03 28 21 39		KK 03 28 55 21		KK 03 31 17 17		KK 03 42 25 33		KK 05 61 12 25		KK 06 25 06 35		KK 06 40 86 97	
KK 03 27 45 97		KK 03 28 21 45		KK 03 28 55 37		KK 03 31 18 13		KK 03 42 28 33		KK 05 61 14 25		KK 06 30 90 11		KK 06 40 87 95	
KK 03 27 50 11		KK 03 28 22 101		KK 03 28 55 45		KK 03 31 19 13		KK 03 42 50 33		KK 05 61 15 25		KK 06 30 90 13		KK 06 40 89 95	
KK 03 27 50 13		KK 03 28 22 37		KK 03 28 55 91		KK 03 31 73 15		KK 03 44 46 33		KK 05 61 16 25		KK 06 30 90 13		KK 06 40 89 97	
KK 03 27 50 17		KK 03 28 22 37		KK 03 28 60 21		KK 03 31 74 13		KK 03 50 20 21		KK 05 61 56 25		KK 06 30 90 15		KK 06 40 97 97	
KK 03 27 50 19		KK 03 28 22 39		KK 03 28 60 23		KK 03 31 75 15		KK 03 50 21 21		KK 05 68 73 33		KK 06 30 90 17		KK 06 42 22 95	
KK 03 27 50 35		KK 03 28 24 23		KK 03 28 60 23		KK 03 31 75 15		KK 03 50 31 25		KK 05 70 63 21		KK 06 30 90 19		KK 06 42 23 95	
KK 03 27 50 43		KK 03 28 24 39		KK 03 28 60 35		KK 03 31 75 17		KK 03 50 31 27		KK 05 70 64 21		KK 06 30 90 5		KK 06 43 17 35	
KK 03 27 50 7		KK 03 28 26 45		KK 03 28 60 91		KK 03 31 75 5		KK 03 50 48 23		KK 05 70 65 21		KK 06 30 90 7		KK 06 43 21 35	
KK 03 27 50 9		KK 03 28 28 37		KK 03 28 65 23		KK 03 31 75 9		KK 03 50 60 23		KK 05 70 66 21		KK 06 30 90 9		KK 06 43 60 35	
KK 03 27 50 95		KK 03 28 30 27		KK 03 28 90 97		KK 03 31 81 15		KK 03 50 72 23		KK 05 70 67 21		KK 06 30 91 15		KK 06 61 02 25	
KK 03 27 55 91		KK 03 28 30 39		KK 03 28 95 91		KK 03 31 85 15		KK 03 51 09 35		KK 05 70 68 21		KK 06 30 91 17		KK 06 61 08 25	
KK 03 27 60 95		KK 03 28 35 45		KK 03 29 00 41		KK 03 32 51 13		KK 03 51 43 41		KK 05 70 89 21		KK 06 30 91 5		KK 06 61 40 25	
KK 03 27 62 23		KK 03 28 36 101		KK 03 29 08 41		KK 03 32 51 15		KK 03 51 65 21		KK 06 01 08 21		KK 06 30 92 15		KK 06 61 42 25	
KK 03 27 65 101		KK 03 28 36 45		KK 03 29 20 101		KK 03 32 51 17		KK 03 51 75 29		KK 06 01 09 21		KK 06 30 92 17		KK 06 61 43 25	
KK 03 27 65 11		KK 03 28 37 35		KK 03 29 25 101		KK 03 32 51 5		KK 03 51 79 41		KK 06 01 19 21		KK 06 30 92 5		KK 06 61 45 25	
KK 03 27 65 13		KK 03 28 40 21		KK 03 29 26 35		KK 03 32 51 9		KK 03 51 79 41		KK 06 02 21 77		KK 06 33 88 13		KK 06 61 70 27	
KK 03 27 65 19		KK 03 28 40 23		KK 03 29 31 45		KK 03 32 56 13		KK 03 51 98 39		KK 06 06 24 25		KK 06 33 88 5		KK 06 61 75 25	
KK 03 27 65 7		KK 03 28 40 23		KK 03 29 80 97		KK 03 32 56 17		KK 03 52 09 21		KK 06 06 57 33		KK 06 33 88 9		KK 06 61 75 27	
KK 03 27 65 91		KK 03 28 40 27		KK 03 29 80 97		KK 03 32 56 5		KK 03 52 15 23		KK 06 07 03 21		KK 06 36 07 15		KK 06 61 75 29	
KK 03 27 65 97		KK 03 28 40 31		KK 03 30 04 13		KK 03 32 56 9		KK 03 52 16 23		KK 06 12 80 21		KK 06 36 07 7		KK 06 61 78 25	
KK 03 27 70 97		KK 03 28 43 35		KK 03 30 06 17		KK 03 32 86 13		KK 03 52 29 91		KK 06 12 91 21		KK 06 36 07 9		KK 06 61 78 27	
KK 03 27 75 11		KK 03 28 43 37		KK 03 30 06 33		KK 03 32 86 15		KK 03 52 35 35		KK 06 12 91 35		KK 06 38 01 5		KK 06 61 78 31	

Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page
KK 06 61 82 25		KK 06 87 50 43		KK 07 12 72 23		KK 07 30 43 5		KK 07 30 80 13		KK 07 32 37 9		KK 07 32 91 5		KK 07 34 40 9	
KK 06 61 82 27		KK 07 02 92 15		KK 07 12 73 23		KK 07 30 44 17		KK 07 30 80 15		KK 07 32 39 9		KK 07 32 91 9		KK 07 34 41 9	
KK 06 61 85 25		KK 07 02 93 15		KK 07 12 74 23		KK 07 30 44 5		KK 07 30 80 17		KK 07 32 40 9		KK 07 33 00 15		KK 07 34 64 13	
KK 06 61 89 25		KK 07 02 94 15		KK 07 12 75 23		KK 07 30 45 17		KK 07 30 80 9		KK 07 32 41 9		KK 07 33 00 17		KK 07 34 64 15	
KK 06 61 89 27		KK 07 03 88 9		KK 07 12 80 23		KK 07 30 45 5		KK 07 30 81 13		KK 07 32 42 9		KK 07 33 00 5		KK 07 34 65 13	
KK 06 61 90 25		KK 07 03 89 9		KK 07 12 81 23		KK 07 30 54 13		KK 07 30 81 15		KK 07 32 45 15		KK 07 33 00 9		KK 07 34 65 15	
KK 06 61 90 27		KK 07 03 90 5		KK 07 15 00 15		KK 07 30 54 15		KK 07 30 81 17		KK 07 32 46 15		KK 07 33 01 15		KK 07 34 70 13	
KK 06 68 11 33		KK 07 03 91 5		KK 07 15 08 23		KK 07 30 54 17		KK 07 30 81 9		KK 07 32 50 5		KK 07 33 01 17		KK 07 34 70 15	
KK 06 68 11 33		KK 07 03 92 9		KK 07 15 29 23		KK 07 30 54 9		KK 07 30 88 13		KK 07 32 51 5		KK 07 33 01 5		KK 07 34 71 13	
KK 06 68 12 33		KK 07 03 93 9		KK 07 17 34 35		KK 07 30 55 13		KK 07 30 88 15		KK 07 32 56 17		KK 07 33 01 9		KK 07 34 71 15	
KK 06 68 61 33		KK 07 03 94 5		KK 07 21 46 41		KK 07 30 55 15		KK 07 30 88 17		KK 07 32 56 5		KK 07 33 03 15		KK 07 36 07 15	
KK 06 68 68 33		KK 07 03 95 5		KK 07 30 00 5		KK 07 30 55 17		KK 07 30 88 5		KK 07 32 57 17		KK 07 33 04 15		KK 07 36 07 7	
KK 06 68 69 33		KK 07 03 96 9		KK 07 30 01 5		KK 07 30 55 9		KK 07 30 88 9		KK 07 32 57 5		KK 07 33 10 5		KK 07 36 07 9	
KK 06 68 73 33		KK 07 03 97 9		KK 07 30 02 17		KK 07 30 56 13		KK 07 30 89 13		KK 07 32 60 5		KK 07 33 10 9		KK 07 36 08 13	
KK 06 68 80 33		KK 07 03 98 9		KK 07 30 02 5		KK 07 30 56 15		KK 07 30 89 15		KK 07 32 61 5		KK 07 33 11 5		KK 07 36 08 15	
KK 06 68 81 33		KK 07 03 99 9		KK 07 30 03 17		KK 07 30 56 17		KK 07 30 89 17		KK 07 32 63 5		KK 07 33 11 9		KK 07 36 08 17	
KK 06 70 16 21		KK 07 06 39 33		KK 07 30 03 5		KK 07 30 56 9		KK 07 30 89 5		KK 07 32 64 5		KK 07 33 28 13		KK 07 36 08 5	
KK 06 70 25 21		KK 07 06 40 5		KK 07 30 04 17		KK 07 30 57 13		KK 07 30 89 9		KK 07 32 66 5		KK 07 33 29 13		KK 07 36 08 9	
KK 06 70 26 21		KK 07 06 40 9		KK 07 30 04 5		KK 07 30 57 15		KK 07 30 91 13		KK 07 32 66 9		KK 07 33 32 15		KK 07 36 09 13	
KK 06 70 31 21		KK 07 06 41 5		KK 07 30 05 17		KK 07 30 57 17		KK 07 30 91 15		KK 07 32 67 5		KK 07 33 33 15		KK 07 36 09 15	
KK 06 70 39 21		KK 07 06 41 9		KK 07 30 05 5		KK 07 30 57 9		KK 07 30 91 17		KK 07 32 67 9		KK 07 33 38 13		KK 07 36 09 17	
KK 06 70 39 41		KK 07 06 42 5		KK 07 30 06 17		KK 07 30 62 13		KK 07 30 91 5		KK 07 32 72 13		KK 07 33 39 13		KK 07 36 09 5	
KK 06 70 40 21		KK 07 06 42 9		KK 07 30 06 5		KK 07 30 62 15		KK 07 30 91 9		KK 07 32 72 15		KK 07 33 50 13		KK 07 36 09 9	
KK 06 70 51 21		KK 07 06 53 33		KK 07 30 07 17		KK 07 30 62 17		KK 07 30 92 13		KK 07 32 73 13		KK 07 33 51 13		KK 07 36 14 13	
KK 06 70 57 21		KK 07 08 05 101		KK 07 30 07 5		KK 07 30 62 9		KK 07 30 92 15		KK 07 32 73 15		KK 07 33 52 13		KK 07 36 14 15	
KK 06 70 59 21		KK 07 12 07 23		KK 07 30 08 5		KK 07 30 63 13		KK 07 30 92 17		KK 07 32 75 13		KK 07 33 53 13		KK 07 36 14 17	
KK 06 70 60 21		KK 07 12 08 23		KK 07 30 09 5		KK 07 30 63 15		KK 07 30 92 5		KK 07 32 75 15		KK 07 33 54 13		KK 07 36 14 7	
KK 06 70 68 21		KK 07 12 09 23		KK 07 30 16 15		KK 07 30 63 17		KK 07 30 92 9		KK 07 32 76 13		KK 07 34 06 5		KK 07 36 14 9	
KK 06 70 70 21		KK 07 12 11 23		KK 07 30 30 17		KK 07 30 63 9		KK 07 32 24 9		KK 07 32 76 15		KK 07 34 07 5		KK 07 36 15 13	
KK 06 70 75 21		KK 07 12 12 23		KK 07 30 30 5		KK 07 30 64 13		KK 07 32 25 9		KK 07 32 78 13		KK 07 34 11 5		KK 07 36 15 15	
KK 06 70 76 21		KK 07 12 28 23		KK 07 30 31 17		KK 07 30 64 15		KK 07 32 27 9		KK 07 32 79 13		KK 07 34 12 5		KK 07 36 15 17	
KK 06 70 77 21		KK 07 12 56 37		KK 07 30 31 5		KK 07 30 64 17		KK 07 32 28 9		KK 07 32 80 5		KK 07 34 14 5		KK 07 36 15 5	
KK 06 70 79 43		KK 07 12 56 39		KK 07 30 40 5		KK 07 30 64 9		KK 07 32 30 17		KK 07 32 81 5		KK 07 34 15 5		KK 07 36 15 9	
KK 06 70 80 21		KK 07 12 59 37		KK 07 30 41 5		KK 07 30 65 13		KK 07 32 30 9		KK 07 32 86 5		KK 07 34 17 9		KK 07 36 16 13	
KK 06 70 90 21		KK 07 12 59 39		KK 07 30 42 17		KK 07 30 65 15		KK 07 32 31 17		KK 07 32 87 5		KK 07 34 18 9		KK 07 36 16 17	
KK 06 70 92 21		KK 07 12 70 23		KK 07 30 42 5		KK 07 30 65 17		KK 07 32 31 9		KK 07 32 90 5		KK 07 34 35 9		KK 07 36 16 5	
KK 06 82 51 101		KK 07 12 71 23		KK 07 30 43 17		KK 07 30 65 9		KK 07 32 36 9		KK 07 32 90 9		KK 07 34 36 9		KK 07 36 16 9	

Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page
KK 07 36 34	11	KK 07 38 29	9	KK 07 48 64	97	KK 07 60 76	31	KK 07 68 58	33	KK 07 85 64	35	KK 08 12 08	37	KK 08 12 85	41
KK 07 36 34	13	KK 07 38 30	5	KK 07 48 65	97	KK 07 60 82	29	KK 07 68 59	33	KK 07 85 64	37	KK 08 12 09	41	KK 08 12 91	39
KK 07 36 34	19	KK 07 38 31	5	KK 07 48 66	97	KK 07 60 97	29	KK 07 68 72	33	KK 07 85 64	39	KK 08 12 10	37	KK 08 12 93	39
KK 07 36 34	7	KK 07 38 31	9	KK 07 48 67	97	KK 07 62 10	29	KK 07 69 43	33	KK 07 85 83	47	KK 08 12 11	37	KK 08 12 98	41
KK 07 36 35	11	KK 07 38 34	15	KK 07 48 70	97	KK 07 62 11	29	KK 07 69 44	33	KK 07 85 84	47	KK 08 12 12	37	KK 08 12 99	41
KK 07 36 35	13	KK 07 38 35	15	KK 07 48 73	97	KK 07 62 12	29	KK 07 70 23	23	KK 07 88 98	35	KK 08 12 13	39	KK 08 13 02	39
KK 07 36 35	19	KK 07 38 36	15	KK 07 48 74	97	KK 07 62 13	29	KK 07 70 24	23	KK 07 89 91	43	KK 08 12 14	35	KK 08 13 19	39
KK 07 36 35	7	KK 07 38 42	9	KK 07 48 75	97	KK 07 64 00	29	KK 07 70 26	55	KK 07 90 63	97	KK 08 12 14	37	KK 08 13 40	39
KK 07 38 00	13	KK 07 40 47	95	KK 07 48 76	97	KK 07 64 00	31	KK 07 70 26	55	KK 07 90 75	37	KK 08 12 14	39	KK 08 13 59	39
KK 07 38 00	5	KK 07 40 48	95	KK 07 48 80	101	KK 07 64 06	27	KK 07 70 27	55	KK 07 91 53	35	KK 08 12 14	39	KK 08 13 69	39
KK 07 38 00	9	KK 07 40 49	95	KK 07 48 81	101	KK 07 64 06	29	KK 07 70 27	55	KK 07 96 07	91	KK 08 12 15	35	KK 08 13 76	39
KK 07 38 01	13	KK 07 40 80	97	KK 07 48 82	101	KK 07 64 06	31	KK 07 70 28	55	KK 07 96 30	91	KK 08 12 15	37	KK 08 13 91	39
KK 07 38 01	5	KK 07 40 93	97	KK 07 48 84	101	KK 07 64 07	27	KK 07 70 29	55	KK 07 96 36	91	KK 08 12 16	35	KK 08 13 92	39
KK 07 38 01	9	KK 07 43 89	35	KK 07 48 85	101	KK 07 64 07	29	KK 07 70 31	35	KK 07 96 42	91	KK 08 12 16	37	KK 08 14 01	39
KK 07 38 03	15	KK 07 46 17	95	KK 07 48 86	101	KK 07 64 07	31	KK 07 70 39	35	KK 07 96 71	91	KK 08 12 16	37	KK 08 14 03	37
KK 07 38 03	5	KK 07 46 24	95	KK 07 48 86	97	KK 07 64 09	27	KK 07 70 90	45	KK 07 96 72	91	KK 08 12 17	35	KK 08 14 90	37
KK 07 38 03	5	KK 07 46 24	97	KK 07 48 87	101	KK 07 64 09	29	KK 07 70 91	45	KK 07 96 73	91	KK 08 12 18	35	KK 08 16 20	39
KK 07 38 04	9	KK 07 47 99	95	KK 07 48 88	101	KK 07 64 09	31	KK 07 70 92	45	KK 07 96 94	91	KK 08 12 19	35	KK 08 17 83	39
KK 07 38 04	9	KK 07 48 01	95	KK 07 48 89	101	KK 07 64 10	27	KK 07 71 37	35	KK 07 97 03	91	KK 08 12 23	39	KK 08 18 80	37
KK 07 38 05	15	KK 07 48 02	95	KK 07 48 90	101	KK 07 64 10	29	KK 07 71 72	41	KK 07 97 30	91	KK 08 12 29	41	KK 08 18 81	37
KK 07 38 05	9	KK 07 48 06	95	KK 07 48 91	101	KK 07 64 10	31	KK 07 71 91	35	KK 07 97 65	35	KK 08 12 30	37	KK 08 18 82	37
KK 07 38 07	5	KK 07 48 10	95	KK 07 48 93	97	KK 07 64 99	27	KK 07 72 07	35	KK 08 00 80	35	KK 08 12 33	R37	KK 08 18 83	39
KK 07 38 08	5	KK 07 48 17	95	KK 07 49 10	23	KK 07 64 99	29	KK 07 72 08	35	KK 08 10 44	35	KK 08 12 33	37	KK 08 18 84	39
KK 07 38 10	15	KK 07 48 18	95	KK 07 49 11	23	KK 07 64 99	31	KK 07 72 09	35	KK 08 10 98	35	KK 08 12 34	37	KK 08 18 85	39
KK 07 38 11	15	KK 07 48 19	95	KK 07 49 30	31	KK 07 65 15	31	KK 07 72 30	35	KK 08 11 09	41	KK 08 12 48	41	KK 08 18 86	35
KK 07 38 12	15	KK 07 48 20	95	KK 07 49 31	31	KK 07 65 27	31	KK 07 72 31	35	KK 08 11 15	91	KK 08 12 49	41	KK 08 18 87	35
KK 07 38 13	15	KK 07 48 35	97	KK 07 49 36	31	KK 07 65 75	29	KK 07 72 64	47	KK 08 11 17	37	KK 08 12 58	41	KK 08 18 88	35
KK 07 38 15	15	KK 07 48 36	97	KK 07 49 37	31	KK 07 65 75	31	KK 07 72 66	35	KK 08 11 28	37	KK 08 12 65	39	KK 08 18 89	39
KK 07 38 16	15	KK 07 48 38	97	KK 07 49 38	31	KK 07 68 12	33	KK 07 72 67	35	KK 08 11 29	37	KK 08 12 68	39	KK 08 20 88	59
KK 07 38 17	15	KK 07 48 39	97	KK 07 49 39	31	KK 07 68 13	33	KK 07 72 72	41	KK 08 11 38	45	KK 08 12 69	39	KK 08 21 38	37
KK 07 38 20	15	KK 07 48 41	97	KK 07 49 70	101	KK 07 68 17	33	KK 07 72 80	35	KK 08 11 50	35	KK 08 12 70	41	KK 08 21 39	35
KK 07 38 21	15	KK 07 48 43	97	KK 07 49 71	101	KK 07 68 18	33	KK 07 72 81	35	KK 08 11 55	45	KK 08 12 71	41	KK 08 21 71	47
KK 07 38 22	15	KK 07 48 44	97	KK 07 58 89	39	KK 07 68 25	33	KK 07 72 86	35	KK 08 11 59	45	KK 08 12 74	41	KK 08 21 77	35
KK 07 38 26	13	KK 07 48 46	101	KK 07 60 60	29	KK 07 68 26	33	KK 07 72 90	45	KK 08 11 82	41	KK 08 12 78	41	KK 08 21 81	45
KK 07 38 26	9	KK 07 48 50	97	KK 07 60 63	29	KK 07 68 33	33	KK 07 76 82	47	KK 08 11 94	41	KK 08 12 80	37	KK 08 21 82	45
KK 07 38 26	9	KK 07 48 56	97	KK 07 60 75	29	KK 07 68 34	33	KK 07 78 82	41	KK 08 11 98	41	KK 08 12 83	41	KK 08 21 83	45
KK 07 38 29	13	KK 07 48 62	97	KK 07 60 76	29	KK 07 68 58	33	KK 07 85 50	35	KK 08 12 04	35	KK 08 12 84	41	KK 08 21 84	45

Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page
KK 08 21 90	45	KK 08 32 21	17	KK 08 40 43	97	KK 08 61 10	27	KK 35 24 96	77	KK 35 35 62	87	KK 35 37 28	67	KK 35 38 38	73
KK 08 23 70	35	KK 08 32 22	17	KK 08 40 84	101	KK 08 61 11	27	KK 35 27 74	73	KK 35 35 63	85	KK 35 37 28	79	KK 35 38 50	73
KK 08 23 71	35	KK 08 32 23	17	KK 08 41 00	99	KK 08 61 12	27	KK 35 27 77	47	KK 35 35 63	87	KK 35 37 29	67	KK 35 38 51	73
KK 08 23 72	35	KK 08 32 24	17	KK 08 41 01	99	KK 08 61 13	27	KK 35 27 77	69	KK 35 35 64	85	KK 35 37 32	67	KK 35 38 52	65
KK 08 23 73	35	KK 08 32 28	5	KK 08 41 06	97	KK 08 61 14	27	KK 35 27 79	47	KK 35 35 65	85	KK 35 37 35	67	KK 35 38 53	65
KK 08 23 74	35	KK 08 32 29	5	KK 08 41 07	97	KK 08 61 15	27	KK 35 27 79	61	KK 35 35 65	87	KK 35 37 36	67	KK 35 39 04	81
KK 08 23 75	35	KK 08 32 35	17	KK 08 41 10	97	KK 08 68 01	33	KK 35 27 84	69	KK 35 35 66	85	KK 35 37 39	63	KK 35 39 05	53
KK 08 23 76	35	KK 08 32 35	7	KK 08 41 11	97	KK 08 80 28	43	KK 35 27 85	69	KK 35 35 66	87	KK 35 37 43	67	KK 35 39 05	81
KK 08 24 05	91	KK 08 33 00	17	KK 08 45 36	37	KK 08 80 62	91	KK 35 27 86	61	KK 35 35 73	85	KK 35 37 44	67	KK 35 39 06	81
KK 08 24 08	91	KK 08 33 01	17	KK 08 45 37	37	KK 08 80 63	91	KK 35 27 86	65	KK 35 35 73	87	KK 35 37 45	67	KK 35 39 20	91
KK 08 24 09	91	KK 08 34 06	17	KK 08 45 38	37	KK 08 82 67	43	KK 35 27 87	47	KK 35 35 77	91	KK 35 37 46	67	KK 35 39 23	81
KK 08 24 15	37	KK 08 34 07	17	KK 08 45 40	43	KK 08 82 68	43	KK 35 27 87	61	KK 35 35 80	55	KK 35 37 51	89	KK 35 39 27	81
KK 08 24 16	37	KK 08 34 08	17	KK 08 45 41	43	KK 08 84 37	39	KK 35 27 96	61	KK 35 35 80	83	KK 35 37 54	89	KK 35 39 38	81
KK 08 24 17	37	KK 08 34 09	17	KK 08 45 42	35	KK 08 84 38	39	KK 35 27 96	65	KK 35 35 92	83	KK 35 37 55	89	KK 35 39 39	81
KK 08 24 29	45	KK 08 34 15	17	KK 08 45 43	43	KK 08 84 39	45	KK 35 27 97	61	KK 35 35 93	83	KK 35 37 73	63	KK 35 39 40	81
KK 08 24 35	43	KK 08 34 16	17	KK 08 45 44	39	KK 08 84 53	43	KK 35 28 21	79	KK 35 35 94	83	KK 35 37 74	89	KK 35 39 41	81
KK 08 24 39	43	KK 08 34 17	17	KK 08 45 45	37	KK 08 84 55	43	KK 35 33 50	77	KK 35 35 95	83	KK 35 37 75	89	KK 35 39 45	81
KK 08 24 43	37	KK 08 34 18	17	KK 08 45 46	37	KK 08 84 56	43	KK 35 33 51	77	KK 35 35 96	83	KK 35 37 76	89	KK 35 39 46	81
KK 08 24 44	37	KK 08 38 02	17	KK 08 45 47	37	KK 08 84 60	39	KK 35 33 53	77	KK 35 35 97	83	KK 35 37 83	63	KK 35 45 01	51
KK 08 24 45	37	KK 08 38 03	17	KK 08 50 76	33	KK 08 84 61	39	KK 35 33 56	69	KK 35 36 16	61	KK 35 37 85	63	KK 35 45 01	75
KK 08 24 46	43	KK 08 38 04	17	KK 08 60 80	27	KK 08 84 62	39	KK 35 33 70	51	KK 35 36 17	61	KK 35 37 93	67	KK 35 45 30	75
KK 08 24 48	43	KK 08 38 05	17	KK 08 60 81	27	KK 10 68 63	97	KK 35 33 70	71	KK 35 36 18	61	KK 35 37 93	79	KK 35 45 33	75
KK 08 24 49	43	KK 08 38 06	17	KK 08 60 82	27	KK 12 41 57	53	KK 35 33 71	71	KK 35 36 27	73	KK 35 37 94	89	KK 35 45 34	75
KK 08 24 59	43	KK 08 38 07	17	KK 08 60 83	27	KK 12 41 57	57	KK 35 33 72	71	KK 35 36 30	97	KK 35 37 95	63	KK 35 45 35	75
KK 08 24 96	37	KK 08 38 08	17	KK 08 60 84	27	KK 19 54 15	41	KK 35 33 72	73	KK 35 36 34	57	KK 35 37 96	79	KK 35 60 42	97
KK 08 24 97	37	KK 08 38 09	5	KK 08 60 85	27	KK 30 12 23	91	KK 35 33 73	71	KK 35 36 34	87	KK 35 37 97	79	KK 36 11 66	37
KK 08 24 98	37	KK 08 38 10	5	KK 08 60 86	31	KK 35 11 48	37	KK 35 33 92	71	KK 35 36 77	83	KK 35 37 98	63	KK 36 11 74	37
KK 08 32 10	17	KK 08 40 00	99	KK 08 60 87	31	KK 35 11 70	37	KK 35 33 92	73	KK 35 36 88	87	KK 35 37 99	63	KK 36 11 75	37
KK 08 32 11	17	KK 08 40 01	99	KK 08 60 89	27	KK 35 11 72	37	KK 35 33 98	61	KK 35 37 04	67	KK 35 38 04	59	KK 70 92 34	103
KK 08 32 12	17	KK 08 40 02	99	KK 08 60 89	31	KK 35 11 73	37	KK 35 33 98	65	KK 35 37 05	67	KK 35 38 13	47	KK 70 93 04	103
KK 08 32 13	17	KK 08 40 03	99	KK 08 60 90	27	KK 35 21 45	91	KK 35 34 58	61	KK 35 37 06	47	KK 35 38 13	63	KK 70 97 37	103
KK 08 32 14	17	KK 08 40 10	99	KK 08 60 90	31	KK 35 21 53	69	KK 35 34 78	77	KK 35 37 06	67	KK 35 38 20	79	KK 70 97 79	103
KK 08 32 15	17	KK 08 40 11	99	KK 08 61 00	29	KK 35 22 46	47	KK 35 35 34	57	KK 35 37 07	67	KK 35 38 22	79	KK 70 97 81	103
KK 08 32 16	17	KK 08 40 12	99	KK 08 61 01	27	KK 35 22 48	51	KK 35 35 34	85	KK 35 37 10	53	KK 35 38 34	47	KK 70 98 23	103
KK 08 32 17	17	KK 08 40 13	99	KK 08 61 01	29	KK 35 22 61	77	KK 35 35 40	95	KK 35 37 10	79	KK 35 38 34	65	KK 70 98 31	103
KK 08 32 18	17	KK 08 40 40	97	KK 08 61 01	31	KK 35 22 99	71	KK 35 35 61	75	KK 35 37 26	67	KK 35 38 37	51	KK 70 98 41	103
KK 08 32 20	17	KK 08 40 42	101	KK 08 61 03	29	KK 35 24 96	53	KK 35 35 62	85	KK 35 37 27	67	KK 35 38 37	73	KK 70 98 42	103

Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page	Art. no	Page
KK 70 98 43103		KK 70 98 47103		KK 70 99 55103		KK 70 99 80103		UH 82 52 35 75							
KK 70 98 44103		KK 70 98 95103		KK 70 99 59103		KK 70 99 81103		UH 82 56 40 81							



Замовлення запчастин
(050)-407-68-47
(050)-407-68-45